

Lenovo Flex System Fabric CN4093 10 Gb Converged Scalable Switch

ISCLI—Industry Standard CLI Command Reference

For Lenovo Network Operating System 8.4

LenovoTM

Note: Before using this information and the product it supports, read the general information in the *Safety information and Environmental Notices and User Guide* documents on the *Lenovo Documentation CD* and the *Warranty Information* document that comes with the product.

Second Edition (July 2017)

© Copyright Lenovo 2017

Portions © Copyright IBM Corporation 2014.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Lenovo and the Lenovo logo are trademarks of Lenovo in the United States, other countries, or both.

Contents

Contents	. 3
Preface	15
Who Should Use This Book	.16
How This Book Is Organized	.17
Typographic Conventions	.18
Chapter 1. ISCLI Basics	21
ISCLI Command Modes	.22
Global Commands	.26
Command Line Interface Shortcuts	.28
CLI List and Range Inputs	.28
Command Abbreviation	.28
Tab Completion	.28
User Access Levels	.29
Idle Timeout	.30
Chapter 2. Information Commands	31
System Information	.33
CLI Display Information	.34
Error Disable and Recovery Information	.35
SNMPv3 System Information	.36
SNMPv3 USM User Table Information	.37
SNMPv3 View Table Information	.38
SNMPv3 Access Table Information	.39
SNMPv3 Group Table Information	.40
SNMPv3 Community Table Information	.40
SNMPv3 Target Address Table Information	.41
SNMPv3 Target Parameters Table Information	.42
SNMPv3 Notify Table Information	.43
SNMPv3 Dump Information	.44
General System Information	.45
Show Software Version Brief	.46
Show Recent Syslog Messages	.47
Show Security Audit Log Messages	.48
User Status	.49
LDAP Information	.50
Stacking Information	.51
Stacking Switch Information	.53
Attached Switches Information	.54
Stack Name Information	.54
Stack Backup Switch Information	.54
Stack Version Information	.55
Stack Packet Path Information	.55
Stack Push Status Information	.56
Layer 2 Information	.57

FDB Information	60
Show All FDB Information	61
Show FDB Multicast Address Information	62
Clearing Entries from the Forwarding Database	62
Link Aggregation Control Protocol Information.	63
Link Aggregation Control Protocol	63
Layer 2 Failover Information Commands	64
Layer 2 Failover Information	64
Hot Links Information.	66
Edge Control Protocol Information	67
LLDP Information	68
LLDP Remote Device Information.	69
Unidirectional Link Detection Information	70
UDLD Port Information	70
OAM Discovery Information	71
OAM Port Information.	71
vLAG Information	72
vLAG Aggregation Information.	72
vLAG Peer Gateway Information	73
vLAG VRRP Information.	74
802.1X Information	75
Spanning Tree Information.	77
RSTP/PVRST Information	82
Spanning Tree Bridge Information.	84
Spanning Tree Root Information	85
Multiple Spanning Tree Information.	86
LAG Information	88
VLAN Information	89
Layer 3 Information.	91
IP Routing Information	94
Show All IP Route Information	95
ARP Information	97
Show All ARP Entry Information	98
ARP Address List Information	98
Dynamic ARP Inspection Information	99
BGP Information	100
BGP Peer information	100
BGP Summary Information.	101
BGP Aggregation Information	101
Dump BGP Information	101
OSPF Information.	102
OSPF General Information	103
OSPF Interface Loopback Information	104
OSPF Interface Information.	104
OSPF Information Route Codes	104
OSPF Database Information	105
OSPFv3 Information	107
OSPFv3 Information Dump.	108
OSPFv3 Interface Information.	109
OSPFv3 Routes Information	109
OSPFv3 Database Information	110

Routing Information Protocol	111
RIP Routes Information	111
RIP Interface Information	111
IPv6 Routing Information	112
IPv6 Routing Table	113
IPv6 Neighbor Discovery Cache Information	114
IPv6 Neighbor Discovery Cache Information	114
IPv6 Neighbor Discovery Prefix Information	115
ECMP Static Route Information	116
ECMP Hashing Result	116
IGMP Information	117
IGMP Querier Information	119
IGMP Group Information	120
IGMP Multicast Router Information	121
IPMC Group Information	121
MLD information	122
MLD Mrouter Information	123
VRRP Information	124
Interface Information	125
IPv6 Interface Information	126
IPv6 Path MTU Information	127
IP Information	128
IKEv2 Information	129
IKEv2 Information Dump	130
IPsec Information	131
IPsec Manual Policy Information	132
DHCP Snooping Information	133
PIM Information	134
PIM Component Information	135
PIM Interface Information	135
PIM Neighbor Information	136
PIM Multicast Route Information Commands	137
PIM Multicast Route Information	138
Quality of Service Information	139
802.1p Information	140
WRED and ECN Information	141
Access Control List Information Commands	142
Access Control List Information	143
RMON Information Commands	144
RMON History Information	145
RMON Alarm Information	146
RMON Event Information	147
Link Status Information	148
Port Information	149
Port Transceiver Status	151
VM Ready Information	153
VMReady Information	155
VM OUI Information	155
VM Port Information	156
VM Portchannel Information	156

VM Information	157
VM Check Information	157
VM Group Information	158
VM Bandwidth Information	158
VM Profile Information	158
VMware Information	159
VMware Hello Information.	160
VMware Host Information	160
VMware VM Information	162
ESX Server - Switchport Mapping	162
EVB Information	163
EVB VSIType Information	164
EVB VMs Information	165
vNIC Information	166
Virtual NIC (vNIC) Information	167
vNIC Group Information	168
SLP Information	169
UFP Information	170
Port Information	171
CDCP Information	172
QoS Information	172
TLV Status Information	173
Virtual Port Information	174
VLAN Information	175
TLV Information	176
DCBX Information Commands	178
Converged Enhanced Ethernet Information	179
DCBX Information	180
DCBX Control Information.	181
DCBX Feature Information.	182
DCBX ETS Information	183
DCBX PFC Information	184
DCBX Application Protocol Information	185
ETS Information	187
PFC Information	188
FCoE Information	189
FIP Snooping Information	189
Fibre Channel Information.	191
Fabric Login Database Information	193
Fibre Channel Name Server Database Information	193
Fabric Configuration Status Database Information.	194
Fibre Channel Forwarding Information	194
NPV Traffic Information	195
Zone Status Information	195
FC Port Information.	196
Topology Information	197
Information Dump	198

Chapter 3. Statistics Commands.	.199
Forwarding Database Statistics	200
Port Statistics	201
802.1X Authenticator Statistics	203
802.1X Authenticator Diagnostics	204
Bridging Statistics	207
Ethernet Statistics	208
Interface Statistics	211
Interface Protocol Statistics	214
Link Statistics	214
RMON Statistics	215
QoS Queue Statistics	218
Link Aggregation Group (LAG) Statistics	222
Trunk Group Interface Statistics	222
Layer 2 Statistics	223
LACP Statistics	225
Hotlinks Statistics	226
LLDP Port Statistics	227
Spanning Tree Statistics	228
OAM Statistics	229
vLAG Statistics	230
vLAG ISL Statistics	230
vLAG Statistics	230
Layer 3 Statistics	232
IPv4 Statistics	236
IPv6 Statistics	239
IPv4 Route Statistics	244
IPv6 Route Statistics	245
ARP statistics	246
DHCP Statistics	247
DHCP Snooping Statistics	247
DNS Statistics	248
ICMP Statistics	249
TCP Statistics	251
UDP Statistics	253
IGMP Statistics	254
MLD Statistics	256
MLD Global Statistics	257
OSPF Statistics	259
OSPF Global Statistics	260
OSPFv3 Statistics	264
OSPFv3 Global Statistics	265
VRRP Statistics	268
PIM Statistics	269
Routing Information Protocol Statistics	270
Management Processor Statistics	271
Packet Statistics	272
MP Packet Statistics	272

Packet Statistics Log	277
Packet Log example	277
Packet Statistics Last Packet	278
Packet Statistics Dump	278
Logged Packet Statistics	279
TCP Statistics.	283
UDP Statistics	284
CPU Statistics	284
CPU Statistics History	286
Access Control List Statistics	287
ACL Statistics	288
ACL Meter Statistics	288
VMAP Statistics	288
Fibre Channel over Ethernet Statistics	289
SNMP Statistics	290
NTP Statistics	294
SLP Statistics.	296
Statistics Dump	297
Chapter 4. Configuration Commands	299
Viewing and Saving Changes	301
Saving the Configuration	301
System Configuration	302
System Error Disable and Recovery Configuration	306
Link Flap Dampening Configuration.	307
System Host Log Configuration.	308
SSH Server Configuration	311
RADIUS Server Configuration	313
TACACS+ Server Configuration	315
LDAP Server Configuration	319
NTP Server Configuration	321
NTP MD5 Key Commands	323
System SNMP Configuration	324
SNMPv3 Configuration	326
User Security Model Configuration	328
SNMPv3 View Configuration	329
View-based Access Control Model Configuration	330
SNMPv3 Group Configuration	331
SNMPv3 Community Table Configuration	332
SNMPv3 Target Address Table Configuration.	333
SNMPv3 Target Parameters Table Configuration	334
SNMPv3 Notify Table Configuration	335
System Access Configuration.	336
Management Network Configuration	338
User Access Control Configuration	339
System User ID Configuration	340
Strong Password Configuration	341
HTTPS Access Configuration	342
Custom Daylight Saving Time Configuration.	345
sFlow Configuration	346

- sFlow Port Configuration 346
- Port Configuration 347
 - Port Error Disable and Recovery Configuration 352
 - Port Link Configuration 353
 - Temporarily Disabling a Port 353
 - Unidirectional Link Detection Configuration 354
 - Port OAM Configuration 355
 - Port ACL Configuration 356
 - Port WRED Configuration 357
 - Port WRED Transmit Queue Configuration 358
 - Management Port Configuration 359
- Stacking Configuration 360
 - Stacking Switch Configuration 361
 - Management Interface Configuration 362
- Quality of Service Configuration 363
 - 802.1p Configuration 363
 - DSCP Configuration 364
 - Control Plane Protection 365
 - Weighted Random Early Detection Configuration 367
 - WRED Transmit Queue Configuration 367
- Access Control Configuration 369
 - Access Control List Configuration 370
 - Ethernet Filtering Configuration 371
 - IPv4 Filtering Configuration 372
 - TCP/UDP Filtering Configuration 373
 - Packet Format Filtering Configuration 374
 - ACL IPv6 Configuration 375
 - IPv6 Filtering Configuration 376
 - IPv6 TCP/UDP Filtering Configuration 377
 - IPv6 Metering Configuration 378
 - Management ACL Filtering Configuration 379
 - TCP/UDP Filtering Configuration 380
 - VMAP Configuration 381
 - ACL Group Configuration 386
 - ACL Metering Configuration 387
 - ACL Re-Mark Configuration 388
 - Re-Marking In-Profile Configuration 389
 - Re-Marking Out-Profile Configuration 389
 - IPv6 Re-Marking Configuration 390
 - IPv6 Re-Marking In-Profile Configuration 391
 - IPv6 Re-Marking Out-Profile Configuration 391
- Port Mirroring 392
 - Port Mirroring Configuration 393
- Layer 2 Configuration 394
 - 802.1X Configuration 395
 - 802.1X Global Configuration 395
 - 802.1X Guest VLAN Configuration 397
 - 802.1X Port Configuration 398

Spanning Tree Configuration	400
MSTP Configuration	403
RSTP/PVRST Configuration	406
Forwarding Database Configuration	410
Static Multicast MAC Configuration	412
Static FDB Configuration	413
LLDP Configuration	414
LLDP Port Configuration	415
LLDP Optional TLV configuration	416
Link Aggregation Group (LAG) Configuration	418
Link Aggregation Group (LAG) Hash Configuration	419
FCoE LAG Hash Configuration	420
Layer 2 LAG Hash	421
Layer 3 LAG Hash	422
Virtual Link Aggregation Control Protocol Configuration	423
vLAG Health Check Configuration	425
vLAG ISL Configuration	425
Link Aggregation Control Protocol Configuration	426
LACP Port Configuration	427
Layer 2 Failover Configuration	429
Failover Trigger Configuration	430
Auto Monitor Configuration	430
Failover Manual Monitor Port Configuration	431
Failover Manual Monitor Control Configuration	432
Hot Links Configuration	433
Hot Links Trigger Configuration	434
Hot Links Master Configuration	435
Hot Links Backup Configuration	436
VLAN Configuration	437
Protocol-Based VLAN Configuration	439
Private VLAN Configuration	441
Layer 3 Configuration	442
IP Interface Configuration	444
Default Gateway Configuration	446
IPv4 Static Route Configuration	448
IP Multicast Route Configuration	449
ARP Configuration	450
ARP Static Configuration	451
Dynamic ARP Inspection Configuration	452
IP Forwarding Configuration	453
Network Filter Configuration	454
Routing Map Configuration	455
IP Access List Configuration	457
Autonomous System Filter Path Configuration	458
Routing Information Protocol Configuration	459
RIP Interface Configuration	459
RIP Route Redistribution Configuration	461

Open Shortest Path First Configuration	462
Area Index Configuration	463
OSPF Summary Range Configuration	465
OSPF Interface Configuration	466
OSPF Virtual Link Configuration	468
OSPF Host Entry Configuration	469
OSPF Route Redistribution Configuration	470
OSPF MD5 Key Configuration	470
Open Shortest Path First Version 3 Configuration	471
OSPFv3 Area Index Configuration	473
OSPFv3 Summary Range Configuration	475
OSPFv3 AS-External Range Configuration	476
OSPFv3 Interface Configuration	477
OSPFv3 over IPsec Configuration	479
OSPFv3 Virtual Link Configuration	481
OSPFv3 Host Entry Configuration	483
OSPFv3 Redistribute Entry Configuration	483
OSPFv3 Redistribute Configuration	484
Border Gateway Protocol Configuration	485
BGP Peer Configuration	486
BGP Aggregation Configuration	488
BGP Neighbor Redistribution Configuration	490
Multicast Listener Discovery Protocol Configuration	491
MLD Interface Configuration	491
IGMP Configuration	493
IGMP Snooping Configuration	494
IGMPv3 Configuration	495
IGMP Relay Configuration	496
IGMP Filtering Configuration	496
IGMP Relay Multicast Router Configuration	498
IGMP Static Multicast Router Configuration	499
IGMP Advanced Configuration	500
IGMP Querier Configuration	501
IKEv2 Configuration	503
IKEv2 Proposal Configuration	503
IKEv2 Preshare Key Configuration	504
IKEv2 Identification Configuration	504
IPsec Configuration	505
IPsec Transform Set Configuration	505
IPsec Traffic Selector Configuration	506
IPsec Dynamic Policy Configuration	506
IPsec Manual Policy Configuration	507
Domain Name System Configuration	510
Bootstrap Protocol Relay Configuration	511
BOOTP Relay Broadcast Domain Configuration	511
VRRP Configuration	512
Virtual Router Configuration	514
Virtual Router Priority Tracking Configuration	516
Virtual Router Group Configuration	517
Virtual Router Group Priority Tracking Configuration	519
VRRP Interface Configuration	520
VRRP Tracking Configuration	521

Protocol Independent Multicast Configuration	522
PIM Component Configuration	523
RP Candidate Configuration	523
RP Static Configuration	523
PIM Interface Configuration	524
IPv6 Default Gateway Configuration	526
IPv6 Static Route Configuration.	527
IPv6 Neighbor Discovery Cache Configuration	528
IPv6 Neighbor Discovery Prefix Configuration	528
IPv6 Prefix Policy Table Configuration.	530
IPv6 Path MTU Configuration	531
IP Loopback Interface Configuration	532
DHCP Snooping	533
Converged Enhanced Ethernet Configuration	534
ETS Global Configuration	535
ETS Global Priority Group Configuration.	535
Priority Flow Control Configuration.	537
Global Priority Flow Control Configuration.	537
Port-level 802.1p PFC Configuration	538
DCBX Port Configuration	539
Fibre Channel Configuration.	540
FC Port Configuration	541
FC VLAN Configuration.	541
FC Zone Configuration	543
FC Zoneset Configuration	544
Fibre Channel over Ethernet Configuration	545
FIPS Port Configuration	546
Remote Monitoring Configuration	547
RMON History Configuration	547
RMON Event Configuration	548
RMON Alarm Configuration	549
VMReady	551
VM Policy Bandwidth Management.	552
VM Group Configuration	553
VM Check Configuration	556
VM Profile Configuration	557
VMWare Configuration	558
Miscellaneous VMready Configuration	559
Virtual NIC Configuration.	560
Virtual NIC Group Configuration.	560
vNIC Port Configuration.	562
UFP Configuration	563
Edge Virtual Bridge Configuration	566
Edge Virtual Bridge Profile Configuration	568
Switch Partition (SPAR) Configuration	569
Service Location Protocol Configuration.	571
Configuration Dump	572
Saving the Active Switch Configuration	573
Restoring the Active Switch Configuration.	574

Chapter 5. Operations Commands575
Operations-Level Port Commands	576
Operations-Level Port 802.1X Commands	577
Operations-Level VRRP Commands.	578
Operations-Level BGP Commands	579
Protected Mode Options	580
VMware Operations	582
VMware Distributed Virtual Switch Operations	584
VMware Distributed Port Group Operations	585
Edge Virtual Bridge Operations.	586
Feature on Demand Key Options	587
Chapter 6. Boot Options589
Stacking Boot Options	590
Scheduled Reboot.	593
Netboot Configuration	594
Flexible Port Mapping.	595
QSFP Port Configuration	596
SIOM Configuration	597
Configuring the Number of Spanning Tree Groups	598
Updating the Switch Software Image	599
Loading New Software to Your Switch.	599
Selecting a Software Image to Run.	600
Uploading a Software Image from Your Switch	600
Selecting a Configuration Block.	602
Rebooting the Switch	603
Using the Boot Management Menu	604
Boot Recovery Mode	605
Recover from a Failed Image Upgrade using TFTP.	606
Recovering from a Failed Image Upgrade using XModem Download	608
Physical Presence	610
Chapter 7. Maintenance Commands611
Forwarding Database Maintenance	613
Debugging Commands	615
IP Security Debugging.	618
vLAG Debugging.	619
ARP Cache Maintenance.	620
IP Route Manipulation	621
LLDP Cache Manipulation.	622
IGMP Group Maintenance	623
IGMP Multicast Routers Maintenance	624
IPv6 Neighbor Discovery Cache Manipulation	626
IPv6 Route Maintenance.	627
Stacking Maintenance	628
TFTP, SFTP or FTP System Dump Copy	629
Clearing Dump Information	630

Appendix A. Enterprise NOS System Log Messages	631
LOG_ALERT	632
LOG_CRIT	634
LOG_ERR	635
LOG_INFO	637
LOG_NOTICE	641
LOG_WARNING	645
Appendix B. Getting help and technical assistance.	649
Appendix C. Notices	651
Trademarks	653
Important Notes	654
Recycling Information.	655
Particulate Contamination.	656
Telecommunication Regulatory Statement	657
Electronic Emission Notices	658
Federal Communications Commission (FCC) Statement	658
Industry Canada Class A Emission Compliance Statement	658
Avis de Conformité à la Réglementation d'Industrie Canada	658
Australia and New Zealand Class A Statement	658
European Union - Compliance to the Electromagnetic Compatibility Directive	659
Germany Class A Statement	659
Japan VCCI Class A Statement	660
Japan Electronics and Information Technology Industries Association (JEITA) Statement	661
Korea Communications Commission (KCC) Statement	661
Russia Electromagnetic Interference (EMI) Class A Statement	661
People's Republic of China Class A electronic emission Statement	661
Taiwan Class A compliance Statement	661
Index	663

Preface

The *Lenovo Flex System Fabric SI4093 System Interconnect Module ISCLI Command Reference* describes how to configure and use the Enterprise NOS 8.4 software with your Lenovo Flex System Fabric CN4093 10 Gb Converged Scalable Switch (referred to as CN4093 throughout this document). This guide lists each command, together with the complete syntax and a functional description, from the IS Command Line Interface (ISCLI).

For documentation on installing the switches physically, see the *Installation Guide* for your CN4093. For details about the configuration and operation of the CN4093, see the *Lenovo N/OS 8.4 Application Guide*.

Who Should Use This Book

This book is intended for network installers and system administrators engaged in configuring and maintaining a network. The administrator should be familiar with Ethernet concepts, IP addressing, the Spanning Tree Protocol and SNMP configuration parameters.

How This Book Is Organized

[Chapter 1, “ISCLI Basics,”](#) describes how to connect to the switch and access the information and configuration commands. This chapter provides an overview of the command syntax, including command modes, global commands, and shortcuts.

[Chapter 2, “Information Commands,”](#) shows how to view switch configuration parameters.

[Chapter 3, “Statistics Commands,”](#) shows how to view switch performance statistics.

[Chapter 4, “Configuration Commands,”](#) shows how to configure switch system parameters, ports, VLANs, Spanning Tree Protocol, SNMP, Port Mirroring, IP Routing, Link Aggregation, and more.

[Chapter 5, “Operations Commands,”](#) shows how to use commands which affect switch performance immediately, but do not alter permanent switch configurations (such as temporarily disabling ports). The commands describe how to activate or deactivate optional software features.

[Chapter 6, “Boot Options,”](#) describes the use of the primary and alternate switch images, how to load a new software image, and how to reset the software to factory defaults.

[Chapter 7, “Maintenance Commands,”](#) shows how to generate and access a dump of critical switch state information, how to clear it, and how to clear part or all of the forwarding database.

[Appendix A, “Enterprise NOS System Log Messages,”](#) lists Enterprise NOS System Log Messages.

[Appendix B, “Getting help and technical assistance,”](#) contains information on how to get help, service, technical assistance, or more information about Lenovo products.

[Appendix C, “Notices,”](#) displays Lenovo legal information.

[“Index”](#) includes pointers to the description of the key words used throughout the book.

Typographic Conventions

The following table describes the typographic styles used in this book.

Table 1. *Typographic Conventions*

Typeface or Symbol	Meaning
plain fixed-width text	This type is used for names of commands, files, and directories used within the text. For example: View the <code>readme.txt</code> file. It also depicts on-screen computer output and prompts.
bold fixed-width text	This bold type appears in command examples. It shows text that must be typed in exactly as shown. For example: show sys-info
bold body text	This bold type indicates objects such as window names, dialog box names, and icons, as well as user interface objects such as buttons, and tabs.
<i>italicized body text</i>	This italicized type indicates book titles, special terms, or words to be emphasized.
angle brackets < >	Indicate a variable to enter based on the description inside the brackets. Do not type the brackets when entering the command. Example: If the command syntax is ping <IP address> you enter ping 192.32.10.12
braces { }	Indicate required elements in syntax descriptions where there is more than one option. You must choose only one of the options. Do not type the braces when entering the command. Example: If the command syntax is show portchannel {<1-128> hash information} you enter: show portchannel <1-128> or show portchannel hash or show portchannel information

Table 1. *Typographic Conventions*

Typeface or Symbol	Meaning
brackets []	<p>Indicate optional elements in syntax descriptions. Do not type the brackets when entering the command.</p> <p>Example: If the command syntax is show interface ip [<1-128>]</p> <p>you enter show interface ip</p> <p>or show interface ip <1-128></p>
vertical line	<p>Separates choices for command keywords and arguments. Enter only one of the choices. Do not type the vertical line when entering the command.</p> <p>Example: If the command syntax is show portchannel {<1-128> hash information}</p> <p>you must enter: show portchannel <1-128></p> <p>or show portchannel hash</p> <p>or show portchannel information</p>

Chapter 1. ISCLI Basics

Your CN4093 10 Gb Converged Scalable Switch (CN4093) is ready to perform basic switching functions right out of the box. Some of the more advanced features, however, require some administrative configuration before they can be used effectively.

This guide describes the individual ISCLI commands available for the CN4093.

The ISCLI provides a direct method for collecting switch information and performing switch configuration. Using a basic terminal, the ISCLI allows you to view information and statistics about the switch, and to perform any necessary configuration.

This chapter explains how to access the IS Command Line Interface (ISCLI) for the switch.

ISCLI Command Modes

The ISCLI has three major command modes listed in order of increasing privileges, as follows:

- **User EXEC mode**

This is the initial mode of access. By default, password checking is disabled for this mode, on console.

- **Privileged EXEC mode**

This mode is accessed from User EXEC mode. This mode can be accessed using the following command: **enable**

- **Global Configuration mode**

This mode allows you to make changes to the running configuration. If you save the configuration, the settings survive a reload of the CN4093. Several sub-modes can be accessed from the Global Configuration mode. For more details, see [Table 1](#). This mode can be accessed using the following command: **configure terminal**

Each mode provides a specific set of commands. The command set of a higher-privilege mode is a superset of a lower-privilege mode—all lower-privilege mode commands are accessible when using a higher-privilege mode.

[Table 1](#) lists the ISCLI command modes.

Table 1. ISCLI Command Modes

Command Mode/Prompt	Command used to enter or exit
User EXEC CN 4093>	Default mode, entered automatically on console Exit: exit or logout
Privileged EXEC CN 4093#	Enter Privileged EXEC mode, from User EXEC mode: enable Exit to User EXEC mode: disable Quit ISCLI: exit or logout
Global Configuration CN 4093(config)#	Enter Global Configuration mode, from Privileged EXEC mode: configure terminal Exit to Privileged EXEC: end or exit
Interface IP CN 4093(config-ip-if)#	Enter Interface IP Configuration mode, from Global Configuration mode: interface ip <interface number> Internal Management IP interface is reachable only by Management Module. Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end

Table 1. ISCLI Command Modes (continued)

Command Mode/Prompt	Command used to enter or exit
Interface Loopback CN 4093(config-ip-loopback)#	Enter Interface Loopback Configuration mode, from Global Configuration mode: interface loopback <1-5> Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
Interface Port CN 4093(config-if)#	Enter Port Configuration mode, from Global Configuration mode: interface port <port number or alias> Exit to Privileged EXEC mode: exit Exit to Global Configuration mode: end
Interface PortChannel CN 4093(config-PortChannel)#	Enter PortChannel Configuration mode, from Global Configuration mode: interface portchannel {<portchannel number> lacp <key>} Exit to Privileged EXEC mode: exit Exit to Global Configuration mode: end
VLAN CN 4093(config-vlan)#	Enter VLAN Configuration mode, from Global Configuration mode: vlan <VLAN number> Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
Router OSPF CN 4093(config-router-ospf)#	Enter OSPF Configuration mode, from Global Configuration mode: router ospf Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
Router OSPFv3 CN 4093(config-router-ospf3)#	Enter OSPFv3 Configuration mode, from Global Configuration mode: ipv6 router ospf Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
Router BGP CN 4093(config-router-bgp)#	Enter BGP Configuration mode, from Global Configuration mode: router bgp Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end

Table 1. ISCLI Command Modes (continued)

Command Mode/Prompt	Command used to enter or exit
Router RIP CN 4093(config-router-rip)#	Enter RIP Configuration mode, from Global Configuration mode: router rip Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
Route Map CN 4093(config-route-map)#	Enter Route Map Configuration mode, from Global Configuration mode: route-map <1-32> Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
Router VRRP CN 4093(config-vrrp)#	Enter VRRP Configuration mode, from Global Configuration mode: router vrrp Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
IKEv2 Proposal CN 4093(config-ikev2-prop)#	Enter IKEv2 Proposal Configuration mode, from Global Configuration mode: ikev2 proposal Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
MLD Configuration CN 4093(config-router-mld)#	Enter Multicast Listener Discovery Protocol Configuration mode, from Global Configuration mode: ipv6 mld Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
MST Configuration CN 4093(config-mst)#	Enter Multiple Spanning Tree Protocol Configuration mode, from Global Configuration mode: spanning-tree mst configuration Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
VSI Database CN 4093(conf-vsldb)#	Enter Virtual Station Interface Database Configuration mode, from Global Configuration mode: virt evb vsldb <VSIDB_number> Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end

Table 1. ISCLI Command Modes (continued)

Command Mode/Prompt	Command used to enter or exit
EVB Profile CN 4093(conf-evbprof)#	Enter Edge Virtual Bridging Profile Configuration mode, from Global Configuration mode: virt evb profile <1-16> Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
UFP Virtual Port Configuration CN 4093(config_ufp_vport)#	Enter Unified Fabric Port Virtual Port Configuration mode, from Global Configuration mode: ufp port <port no.> vport <1-4> Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
SPAR Configuration CN 4093(config-spar)#	Enter Switch Partition Configuration mode, from Global Configuration mode: spar <1-8> Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
FC Port Configuration CN 4093(config-fc)#	Enter Fibre Channel Port Configuration mode, from Global Configuration mode: interface fc <port alias or number> Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
FC Zone Configuration CN 4093(config-zone)#	Enter Fibre Channel Zone Configuration mode, from Global Configuration mode: zone name <1-64 characters> Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end
FC Zoneset Configuration CN 4093(config-zoneset)#	Enter Fibre Channel Zoneset Configuration mode, from Global Configuration mode: zoneset name <1-64 characters> Exit to Global Configuration mode: exit Exit to Privileged EXEC mode: end

Global Commands

Some basic commands are recognized throughout the ISCLI command modes. These commands are useful for obtaining online help, navigating through the interface, and for saving configuration changes.

For help on a specific command, type the command, followed by `help`.

Table 2. *Description of Global Commands*

Command	Action
<code>?</code>	Provides more information about a specific command or lists commands available at the current level.
<code>list</code>	Lists the commands available at the current level.
<code>exit</code>	Go up one level in the command mode structure. If already at the top level, exit from the command line interface and log out.
<code>copy running-config startup-config</code>	Write configuration changes to non-volatile flash memory.
<code>logout</code>	Exit from the command line interface and log out.
<code>ping</code>	<p>Use this command to verify station-to-station connectivity across the network. The format is as follows:</p> <pre>ping <host name> <IP address> [-n <tries (0-4294967295)>] [-w <msec delay (0-4294967295)>] [-l <length (0/32-65500/2080)>] [-s <IP source>] [-v <tos (0-255)>] [-f] [-t]</pre> <p>Where:</p> <ul style="list-style-type: none"> o -n: Sets the number of attempts (optional). o -w: Sets the number of milliseconds between attempts (optional). o -l: Sets the ping request payload size (optional). o -s: Sets the IP source address for the IP packet (optional). o -v: Sets the Type Of Service bits in the IP header. o -f: Sets the <i>don't fragment</i> bit in the IP header (only for IPv4 addresses). o -t: Pings continuously (same as -n 0). <p>Where the <i>IP address</i> or <i>hostname</i> specify the target device. Use of a hostname requires DNS parameters to be configured on the switch.</p> <p><i>Tries</i> (optional) is the number of attempts (1-32), and <i>msec delay</i> (optional) is the number of milliseconds between attempts.</p>

Table 2. Description of Global Commands (continued)

Command	Action
traceroute	<p>Use this command to identify the route used for station-to-station connectivity across the network. The format is as follows:</p> <p>traceroute {<hostname> <IP address>} [<max-hops (1-32)> [<msec-delay (1-4294967295)>]]</p> <p>Where <i>hostname/IP address</i> is the hostname or IP address of the target station, <i>max-hops</i> (optional) is the maximum distance to trace (1-32 devices), and <i>msec-delay</i> (optional) is the number of milliseconds to wait for the response.</p> <p>As with ping, the DNS parameters must be configured if specifying hostnames.</p>
telnet	<p>This command is used to form a Telnet session between the switch and another network device. The format is as follows:</p> <p>telnet {<hostname> <IP address>} [<port>]</p> <p>Where <i>IP address</i> or <i>hostname</i> specifies the target station. Use of a hostname requires DNS parameters to be configured on the switch.</p> <p><i>Port</i> is the logical Telnet port or service number.</p>
show history	This command displays the last ten issued commands.
show who	Displays a list of users who are currently logged in.
show line	Displays a list of users who are currently logged in, in table format.

Command Line Interface Shortcuts

The following shortcuts allow you to enter commands quickly and easily.

CLI List and Range Inputs

For VLAN and port commands that allow an individual item to be selected from within a numeric range, lists and ranges of items can now be specified. For example, the `vlan` command permits the following options:

CN 4093(config)# vlan 1,3,4095	(access VLANs 1, 3, and 4095)
CN 4093(config)# vlan 1-20	(access VLANs 1 through 20)
CN 4093(config)# vlan 1-5,90-99,4090-4095	(access multiple ranges)
CN 4093(config)# vlan 1-5,19,20,4090-4095	(access a mix of lists and ranges)

The numbers in a range must be separated by a dash: *<start of range>-<end of range>*

Multiple ranges or list items are permitted using a comma: *<range or item 1>, <range or item 2>*

Do not use spaces within list and range specifications.

Ranges can also be used to apply the same command option to multiple items. For example, to access multiple ports with one command:

CN 4093(config)# interface port 1-4	(access ports 1 through 4)
--	----------------------------

Command Abbreviation

Most commands can be abbreviated by entering the first characters which distinguish the command from the others in the same mode. For example, consider the following full command and a valid abbreviation:

CN 4093(config)# show mac-address-table interface port 12
--

or:

CN 4093(config)# sh ma i p 12

Tab Completion

By entering the first letter of a command at any prompt and pressing `<Tab>`, the ISCLI displays all available commands or options that begin with that letter. Entering additional letters further refines the list of commands or options displayed. If only one command fits the input text when `<Tab>` is pressed, that command is supplied on the command line, waiting to be entered.

User Access Levels

To enable better switch management and user accountability, three levels or *classes* of user access have been implemented on the CN4093. Levels of access to CLI, Web management functions, and screens increase as needed to perform various switch management tasks. Conceptually, access classes are defined as follows:

- **user**

Interaction with the switch is completely passive—nothing can be changed on the CN4093. Users may display information that has no security or privacy implications, such as switch statistics and current operational state information.

- **oper**

Operators can make temporary changes on the CN4093. These changes are lost when the switch is rebooted/reset. Operators have access to the switch management features used for daily switch operations. Because any changes an operator makes are undone by a reset of the switch, operators cannot severely impact switch operation.

- **admin**

Administrators are the only ones that may make permanent changes to the switch configuration—changes that are persistent across a reboot or reset of the switch. Administrators can access switch functions to configure and troubleshoot problems on the CN4093. Because administrators can also make temporary (operator-level) changes as well, they must be aware of the interactions between temporary and permanent changes.

Access to switch functions is controlled through the use of unique surnames and passwords. Once you are connected to the switch via local Telnet, remote Telnet, or SSH, you are prompted to enter a password. The default user names/password for each access level are listed in the following table.

Note: It is recommended that you change default switch passwords after initial configuration and as regularly as required under your network security policies.

Table 3. *User Access Levels*

User Account	Description and Tasks Performed	Password
User	The User has no direct responsibility for switch management. He or she can view all switch status information and statistics, but cannot make any configuration changes to the switch.	
Operator	The Operator can make temporary changes that are lost when the switch is rebooted/reset. Operators have access to the switch management features used for daily switch operations.	
Administrator	The superuser Administrator has complete access to all command modes, information, and configuration commands on the CN4093, including the ability to change both the user and administrator passwords.	admin

Note: With the exception of the “admin” user, access to each user level can be disabled by setting the password to an empty value.

Idle Timeout

By default, the switch will disconnect your Telnet session after ten minutes of inactivity. This function is controlled by the following command, which can be set from 1 to 60 minutes, or disabled when set to 0:

system idle <0-60>

Command mode: Global Configuration

Chapter 2. Information Commands

You can view configuration information for the switch in both the user and administrator command modes. This chapter discusses how to use the command line interface to display switch information.

Table 4. *Information Commands*

Command Syntax and Usage
<p>show interface status <i><port alias or number></i></p> <p>Displays configuration information about the selected port(s), including:</p> <ul style="list-style-type: none">o Port alias and numbero Port speedo Duplex mode (half, full, or auto)o Flow control for transmit and receive (no, yes, or both)o Link status (up, down, or disabled) <p>For details, see page 148.</p> <p>Command mode: All</p>
<p>show interface trunk <i><port alias or number></i></p> <p>Displays port status information, including:</p> <ul style="list-style-type: none">o Port alias and numbero Whether the port uses VLAN Tagging or noto Port VLAN ID (PVID)o Port nameo VLAN membershipo FDB Learning statuso Flooding status <p>For details, see page 149.</p> <p>Command mode: All</p>
<p>show interface transceiver</p> <p>Displays the status of the port transceiver module on each external port. For details, see page 151.</p> <p>Command mode: All</p>
<p>show software-key</p> <p>Displays the enabled software features.</p> <p>Command mode: All</p>

Table 4. *Information Commands (continued)*

Command Syntax and Usage
<p>show information-dump</p> <p>Dumps all switch information available (10K or more, depending on your configuration).</p> <p>If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump commands.</p> <p>Command mode: All</p>

System Information

The information provided by each command option is briefly described in [Table 5 on page 33](#), with pointers to where detailed information can be found.

Table 5. *System Information Commands*

Command Syntax and Usage
<p>show sys-info</p> <p>Displays system information, including:</p> <ul style="list-style-type: none">○ System date and time○ Switch model name and number○ Switch name and location○ Time of last boot○ MAC address of the switch management processor○ IP address of management interface○ Hardware version and part number○ Software image file and version number○ Configuration name○ Log-in banner, if one is configured○ Internal temperatures <p>For details, see page 45.</p> <p>Command mode: All</p>
<p>show logging [severity <0-7>] [reverse]</p> <p>Displays the current syslog configuration, followed by the most recent 2000 syslog messages, as displayed by the show logging messages command.</p> <p>For details, see page 47.</p> <p>Command mode: All</p>
<p>show access user</p> <p>Displays configured user names and their status.</p> <p>Command mode: Privileged EXEC</p>

CLI Display Information

These commands allow you to display information about the number of lines per screen displayed in the CLI.

Table 6. *CLI Display Information Options*

Command Syntax and Usage
show terminal-length Displays the number of lines per screen displayed in the CLI for the current session. A value of 0 means paging is disabled. Command mode: All
show line console length Displays the current line console length setting. For details, see page 302 . Command mode: All
show line vty length Displays the current line vty length setting. For details, see page 302 . Command mode: All

Error Disable and Recovery Information

These commands allow you to display information about the Error Disable and Recovery feature for interface ports.

Table 7. *Error Disable Information Commands*

Command Syntax and Usage
show errdisable [information] Displays all Error Disable and Recovery information. Command mode: All
show errdisable link-flap [information] Displays the current Link Flap Dampening parameters. The <code>information</code> option displays ports that have been disabled due to excessive link flaps. Command mode: All
show errdisable recovery Displays a list of ports with their Error Recovery status. Command mode: All
show errdisable timers Displays a list of active recovery timers, if applicable. Command mode: All

SNMPv3 System Information

SNMP version 3 (SNMPv3) is an extensible SNMP Framework that supplements the SNMPv2 framework by supporting the following:

- a new SNMP message format
- security for messages
- access control
- remote configuration of SNMP parameters

For more details on the SNMPv3 architecture please refer to RFC2271 to RFC2276.

Table 8. *SNMPv3 Commands*

Command Syntax and Usage
show snmp-server v3 user Displays User Security Model (USM) table information. To view the table, see page 37 . Command mode: All
show snmp-server v3 view Displays information about view, subtrees, mask and type of view. To view a sample, see page 38 . Command mode: All
show snmp-server v3 access Displays View-based Access Control information. To view a sample, see page 39 . Command mode: All
show snmp-server v3 group Displays information about the group, including the security model, user name, and group name. To view a sample, see page 40 . Command mode: All
show snmp-server v3 community Displays information about the community table information. To view a sample, see page 40 . Command mode: All
show snmp-server v3 target-address Displays the Target Address table information. To view a sample, see page 41 . Command mode: All
show snmp-server v3 target-parameters Displays the Target parameters table information. To view a sample, see page 42 . Command mode: All

Table 8. *SNMPv3 Commands (continued)*

Command Syntax and Usage
show snmp-server v3 notify Displays the Notify table information. To view a sample, see page 43 . Command mode: All
show snmp-server v3 Displays all the SNMPv3 information. To view a sample, see page 44 . Command mode: All

SNMPv3 USM User Table Information

The User-based Security Model (USM) in SNMPv3 provides security services such as authentication and privacy of messages. This security model makes use of a defined set of user identities displayed in the USM user table. The following command displays SNMPv3 user information:

show snmp-server v3 user

Command mode: All

The USM user table contains the following information:

- the user name
- a security name in the form of a string whose format is independent of the Security Model
- an authentication protocol, which is an indication that the messages sent on behalf of the user can be authenticated
- the privacy protocol

usmUser Table:	
User Name	Protocol
-----	-----
adminmd5	HMAC_MD5, DES PRIVACY
adminsha	HMAC_SHA, DES PRIVACY
v1v2only	NO AUTH, NO PRIVACY

Table 9. *USM User Table Information Parameters*

Field	Description
User Name	This is a string that represents the name of the user that you can use to access the switch.
Protocol	This indicates whether messages sent on behalf of this user are protected from disclosure using a privacy protocol. Enterprise NOS supports DES algorithm for privacy. The software also supports two authentication algorithms: MD5 and HMAC-SHA.

SNMPv3 View Table Information

The user can control and restrict the access allowed to a group to only a subset of the management information in the management domain that the group can access within each context by specifying the group's rights in terms of a particular MIB view for security reasons.

The following command displays the SNMPv3 View Table:

```
show snmp-server v3 view
```

Command mode: All

View Name	Subtree	Mask	Type
iso	1		included
v1v2only	1		included
v1v2only	1.3.6.1.6.3.15		excluded
v1v2only	1.3.6.1.6.3.16		excluded
v1v2only	1.3.6.1.6.3.18		excluded

Table 10. *SNMPv3 View Table Information Parameters*

Field	Description
View Name	Displays the name of the view.
Subtree	Displays the MIB subtree as an OID string. A view subtree is the set of all MIB object instances which have a common Object Identifier prefix to their names.
Mask	Displays the bit mask.
Type	Displays whether a family of view subtrees is included or excluded from the MIB view.

SNMPv3 Access Table Information

The access control subsystem provides authorization services.

The `vacmAccessTable` maps a group name, security information, a context, and a message type, which could be the read or write type of operation or notification into a MIB view.

The View-based Access Control Model defines a set of services that an application can use for checking access rights of a group. This group's access rights are determined by a read-view, a write-view and a notify-view. The read-view represents the set of object instances authorized for the group while reading the objects. The write-view represents the set of object instances authorized for the group when writing objects. The notify-view represents the set of object instances authorized for the group when sending a notification.

The following command displays SNMPv3 access information:

```
show snmp-server v3 access
```

Command mode: All

Group Name	Model	Level	ReadV	WriteV	NotifyV
v1v2grp	snmpv1	noAuthNoPriv	iso	iso	v1v2only
admingrp	usm	authPriv	iso	iso	iso

Table 11. *SNMPv3 Access Table Information*

Field	Description
Group Name	Displays the name of group.
Model	Displays the security model used, for example, SNMPv1, or SNMPv2 or USM.
Level	Displays the minimum level of security required to gain rights of access. For example, <code>noAuthNoPriv</code> , <code>authNoPriv</code> , or <code>authPriv</code> .
ReadV	Displays the MIB view to which this entry authorizes the read access.
WriteV	Displays the MIB view to which this entry authorizes the write access.
NotifyV	Displays the Notify view to which this entry authorizes the notify access.

SNMPv3 Group Table Information

A group is a combination of security model and security name that defines the access rights assigned to all the security names belonging to that group. The group is identified by a group name.

The following command displays SNMPv3 group information:

```
show snmp-server v3 group
```

Command mode: All

Sec Model	User Name	Group Name
snmpv1	v1v2only	v1v2grp
usm	adminmd5	admingrp
usm	adminsha	admingrp
usm	adminshaaes	admingrp

Table 12. *SNMPv3 Group Table Information Parameters*

Field	Description
Sec Model	Displays the security model used, which is any one of: USM, SNMPv1, SNMPv2, and SNMPv3.
User Name	Displays the name for the group.
Group Name	Displays the access name of the group.

SNMPv3 Community Table Information

This command displays the community table information stored in the SNMP engine. The following command displays SNMPv3 community information:

```
show snmp-server v3 community
```

Command mode: All

Index	Name	User Name	Tag
trap1	public	v1v2only	v1v2trap

Table 13. *SNMPv3 Community Table Information Parameters*

Field	Description
Index	Displays the unique index value of a row in this table.
Name	Displays the community string, which represents the configuration.
User Name	Displays the User Security Model (USM) user name.
Tag	Displays the community tag. This tag specifies a set of transport endpoints from which a command responder application accepts management requests and to which a command responder application sends an SNMP trap.

SNMPv3 Target Address Table Information

The following command displays SNMPv3 target address information:

```
show snmp-server v3 target-address
```

Command mode: All

This command displays the SNMPv3 target address table information, which is stored in the SNMP engine.

Name	Transport Addr	Port	Taglist	Params
trap1	47.81.25.66	162	v1v2trap	v1v2param

Table 14. *SNMPv3 Target Address Table Information Parameters*

Field	Description
Name	Displays the locally arbitrary, but unique identifier associated with this snmpTargetAddrEntry.
Transport Addr	Displays the transport addresses.
Port	Displays the SNMP UDP port number.
Taglist	This column contains a list of tag values which are used to select target addresses for a particular SNMP message.
Params	The value of this object identifies an entry in the snmpTargetParamsTable. The identified entry contains SNMP parameters to be used when generating messages to be sent to this transport address.

SNMPv3 Target Parameters Table Information

The following command displays SNMPv3 target parameters information:

```
show snmp-server v3 target-parameters
```

Command mode: All

Name	MP Model	User Name	Sec Model	Sec Level
v1v2param	snmpv2c	v1v2only	snmpv1	noAuthNoPriv

Table 15. *SNMPv3 Target Parameters Table Information*

Field	Description
Name	Displays the locally arbitrary, but unique identifier associated with this snmpTargetParamsEntry.
MP Model	Displays the Message Processing Model used when generating SNMP messages using this entry.
User Name	Displays the securityName, which identifies the entry on whose behalf SNMP messages will be generated using this entry.
Sec Model	Displays the security model used when generating SNMP messages using this entry. The system may choose to return an inconsistentValue error if an attempt is made to set this variable to a value for a security model which the system does not support.
Sec Level	Displays the level of security used when generating SNMP messages using this entry.

SNMPv3 Notify Table Information

The following command displays the SNMPv3 Notify table:

```
show snmp-server v3 notify
```

Command mode: All

Name	Tag
v1v2trap	v1v2trap

Table 16. *SNMPv3 Notify Table Information*

Field	Description
Name	The locally arbitrary, but unique identifier associated with this snmpNotifyEntry.
Tag	This represents a single tag value which is used to select entries in the snmpTargetAddrTable. Any entry in the snmpTargetAddrTable that contains a tag value equal to the value of this entry, is selected. If this entry contains a value of zero length, no entries are selected.

SNMPv3 Dump Information

The following command displays SNMPv3 information:

show snmp-server v3

Command mode: All

```
usmUser Table:
User Name                               Protocol
-----
adminmd5                                HMAC_MD5, DES PRIVACY
adminsha                                 HMAC_SHA, DES PRIVACY
v1v2only                                 NO AUTH, NO PRIVACY

vacmAccess Table:
Group Name Prefix Model Level Match ReadV WriteV NotifyV
-----
v1v2grp          snmpv1 noAuthNoPriv exact iso iso v1v2only
admingrp         usm authPriv exact iso iso iso

vacmViewTreeFamily Table:
View Name Subtree Mask Type
-----
iso        1 included
v1v2only   1 included
v1v2only   1.3.6.1.6.3.15 excluded
v1v2only   1.3.6.1.6.3.16 excluded
v1v2only   1.3.6.1.6.3.18 excluded

vacmSecurityToGroup Table:
All active SNMPv3 groups are listed below:
Sec Model User Name Group Name
-----
snmpv1    v1v2only v1v2grp
usm       adminmd5 admingrp
usm       adminsha admingrp

snmpCommunity Table:
Index Name User Name Tag
-----

snmpNotify Table:
Name Tag
-----

snmpTargetAddr Table:
Name Transport Addr Port Taglist Params
-----

snmpTargetParams Table:
Name MP Model User Name Sec Model Sec Level
-----
```

General System Information

The following command displays system information:

show sys-info

Command mode: All

```
System Information at 13:15:04 Tue Mar 17, 2015
Time zone: No timezone configured
Daylight Savings Time Status: Disabled

Lenovo Flex System Fabric CN4093 10Gb Converged Scalable Switch

Switch has been up for 0 days, 0 hours, 53 minutes and 20 seconds.
Last boot: 12:26:24 Tue Mar 17, 2015 (reset from console)

MAC address: 74:99:75:8a:94:00   IP (If 1) address: 0.0.0.0
Internal Management Port MAC Address: 74:99:75:8a:94:ef
Internal Management Port IP Address (if 128): 10.241.9.130
External Management Port MAC Address: 74:99:75:8a:94:fe
External Management Port IP Address (if 127):

Software Version 8.2.1 (FLASH image2), active configuration.
Boot kernel version 8.2.1

Chassis MTM                : 8721A1G
Chassis Serial Num         : 06MBGH4
Hardware Part Number       : 00FM512
Hardware Revision          : 05
Serial Number              : Y010CM319030
Manufacturing Date (WWYY)  : 1113
PCBA Part Number           : BAC-00107-01
PCBA Revision              : 0
PCBA Number                : 00
Board Revision             : 05
PLD Firmware Version       : 0.14

Temperature Warning        : 45 C (Warning at 70 C / Recover at 65 C)
Temperature Shutdown       : 44 C (Shutdown at 82 C / Recover at 77 C)
Temperature Inlet          : 34 C
Temperature Exhaust        : 44 C
Temperature Asic Max       : 50 C (Warning at 100 C / Shutdown at 108 C)
Temperature FCM Max        : 54 C

Power Consumption          : 102.960 W (12.232 V   8.417 A)

Switch is in I/O Module Bay 1
```

Note: The display of temperature will come up only if the temperature of any of the sensors exceeds the temperature threshold. There will be a warning from the software if any of the sensors exceeds this temperature threshold. The switch will shut down if the power supply overheats.

System information includes:

- System date and time
- Switch model
- Switch name and location
- Time of last boot
- MAC address of the switch management processor
- Software image file and version number, and configuration name.
- IP address of the management interface
- Hardware version and part number
- Log-in banner, if one is configured
- Internal temperatures

Show Software Version Brief

[Table 17](#) lists commands used for displaying specific entries from the general system information screen.

Table 17. *Specific System Information Options*

Command Syntax and Usage
show version brief Displays the software version number, image file, and configuration name. Command mode: All

Sample output for command **show version brief**:

Software Version 8.2.1 (FLASH image2), active configuration.
--

Displays the software version number, image file, and configuration name.

Show Recent Syslog Messages

The following command displays system log messages:

```
show logging [messages] [severity <0-7>] [reverse]
```

Command mode: All

```
Current syslog configuration:
 host 0.0.0.0 via MGT port, severity 7, facility 0
 host2 0.0.0.0 via MGT port, severity2 7, facility2 0
 console enabled
 severity level of console output 6
 severity level of write to flash 7
 syslogging all features
 Syslog source loopback interface not set
```

Date	Time	Criticality level	Message
Jul 8	17:25:41	NOTICE	system: link up on port INT1
Jul 8	17:25:41	NOTICE	system: link up on port INT8
Jul 8	17:25:41	NOTICE	system: link up on port INT7
Jul 8	17:25:41	NOTICE	system: link up on port INT2
Jul 8	17:25:41	NOTICE	system: link up on port INT1
Jul 8	17:25:41	NOTICE	system: link up on port INT4
Jul 8	17:25:41	NOTICE	system: link up on port INT3
Jul 8	17:25:41	NOTICE	system: link up on port INT6
Jul 8	17:25:41	NOTICE	system: link up on port INT5
Jul 8	17:25:41	NOTICE	system: link up on port EXT4
Jul 8	17:25:41	NOTICE	system: link up on port EXT1
Jul 8	17:25:41	NOTICE	system: link up on port EXT3
Jul 8	17:25:41	NOTICE	system: link up on port EXT2
Jul 8	17:25:41	NOTICE	system: link up on port INT3
Jul 8	17:25:42	NOTICE	system: link up on port INT2
Jul 8	17:25:42	NOTICE	system: link up on port INT4
Jul 8	17:25:42	NOTICE	system: link up on port INT3
Jul 8	17:25:42	NOTICE	system: link up on port INT6

Each syslog message has a severity level associated with it, included in text form as a prefix to the log message. One of eight different prefixes is used, depending on the condition for which the administrator is being notified.

- EMERG Indicates the system is unusable
- ALERT Indicates action should be taken immediately
- CRIT Indicates critical conditions
- ERR Indicates error conditions or errored operations
- WARNING Indicates warning conditions
- NOTICE Indicates a normal but significant condition
- INFO Indicates an information message
- DEBUG Indicates a debug-level message

The **severity** option filters only syslog messages with a specific severity level between 0 and 7, from EMERG to DEBUG correspondingly.

The **reverse** option displays the output in reverse order, from the newest entry to the oldest.

Show Security Audit Log Messages

The following commands display security audit log messages:

Table 18. Security Audit Log Information Commands

Command Syntax and Usage
<p>show sal [reverse]</p> <p>Displays the most recent security audit log messages. The <code>reverse</code> option displays the output in reverse order, from the newest entry to the oldest.</p> <p>Command mode: All except User EXEC</p>
<p>show sal sequence <sequence number or range></p> <p>Displays the security audit log messages associated with the specified sequence number or range.</p> <p>Command mode: All except User EXEC</p>
<p>show sal severity <1-6> [reverse]</p> <p>Displays only the security audit log messages with a specific severity level between 1 and 6, from FATAL to INFORMATION correspondingly. The <code>reverse</code> option displays the output in reverse order, from the newest entry to the oldest.</p> <p>Command mode: All except User EXEC</p>

Note: Security Audit Log commands are not available in Stacking mode.

Command sample output for `show sal`:

```

2014 Jul 16 12:40:39 2000:30:0:0:0:2:95 000004DC 0x00000004 Warning
1B33D6C833832DA17E020817F40A2000 2EBBCC63AF754E04A21449CE49BFF70A 4 : IP:
New Management IP Address 10.30.2.95 configured

2014 Jul 16 12:40:39 2000:30:0:0:0:2:95 000004DD 0x00000004 Warning
1B33D6C833832DA17E020817F40A2000 2EBBCC63AF754E04A21449CE49BFF70A 4 : IP:
New Management Gateway 10.30.1.1 configured

2014 Jul 16 12:42:40 2000:30:0:0:0:2:95 000004DE 0x00000004 Warning
1B33D6C833832DA17E020817F40A2000 2EBBCC63AF754E04A21449CE49BFF70A 4 : IP:
New Management IP Address 10.30.2.95 configured

2014 Jul 16 12:42:40 2000:30:0:0:0:2:95 000004DF 0x00000004 Warning
1B33D6C833832DA17E020817F40A2000 2EBBCC63AF754E04A21449CE49BFF70A 4 : IP:
New Management Gateway 10.30.1.1 configured

```

Each security audit log message has a severity level associated with it, included in text form as a prefix to the log message. One of six different prefixes is used, depending on the condition for which the administrator is being notified.

- FATAL Indicates the system is unusable
- CRITICAL Indicates critical conditions
- MAJOR Indicates action should be taken immediately
- MINOR Indicates error conditions or errored operations
- WARNING Indicates warning conditions
- INFORMATION Indicates an information message

User Status

The following command displays user status information:

show access user

Command mode: All except User EXEC

```
Username:
user    - disabled - offline
oper    - disabled - offline
admin   - enabled  - online    1 session.
Current User ID table:
1: name USERID , ena, cos admin , password valid, offline

Current strong password settings:
strong password status: disabled
```

This command displays the status of the configured usernames.

LDAP Information

The following command displays LDAP server configuration information, for LDAP configured in LIOM mode:

show ldap-server

Command mode: All except User EXEC

```
Current LDAP settings:
Primary LDAP Server (null) via MGT port
Secondary LDAP Server (null) via MGT port
Current LDAP server (null)
LDAP port 389, Retries 3, Timeout 5, LDAP server OFF, Backdoor access
disabled
LDAP domain name
LDAP user attribute uid
```

For LDAP configured in SIOM mode in CMM tool, use the following command to display LDAP server configuration information:

show ldap-server siom-configure

Command mode: All except User EXEC

```
LDAP VPD DATA:
LDAP Search Order:                                LOCAL ONLY

CMM Bind Method: Login prompt
CMM Root DN: dc=ibmbase,dc=com
CMM Client DN:
CMM Client Password is empty.
CMM Connect type:                                LDAPS

CMM user attribute name: uid
CMM group attribute name: memberOf
CMM permission attribute name: ibm-chassisRole
CMM Server IP Address: fe80::211:25ff:fec3:e4b0:636
External Bind Method: Login prompt
External Root DN:
External Client DN:
External Client Password:
External Connect type:                            clear text

External user attribute name:
External group attribute name: memberOf
External permission attribute name: ibmChassisRole
External Server 1 IP Address: :0
External Server 2 IP Address: :0
External Server 3 IP Address: :0
External Server 4 IP Address: :0
AOM Mode: Disabled
SIOM Mode enabled
```

Stacking Information

Table 19 lists the Stacking information options.

Table 19. *Stacking Information Commands*

Command Syntax and Usage
<p>show sys-info swn <attached switch number (1-16)></p> <p>Displays system information for the specified attached switch, including:</p> <ul style="list-style-type: none">o System date and timeo Switch model name and numbero Switch name and locationo Time of last booto MAC address of the switch management processoro IP address of management interfaceo Hardware version and part numbero Software image file and version numbero Configuration nameo Log-in banner, if one is configuredo Internal temperatureso Fan statuso Power supply status <p>Note: This command is available only on the master switch.</p> <p>Command mode: All</p>
<p>show processes [cpu memory thread] swn <attached switch number (1-8)></p> <p>Displays process information for the specified attached switch, including:</p> <ul style="list-style-type: none">o CPU usageo memory usageo thread statistics
<p>show stack switch</p> <p>Displays information about each switch in the stack, including:</p> <ul style="list-style-type: none">o Configured Switch Number (csnum)o Attached Switch Number (asnum) when run on master switcho MAC addresso Stacking stateo UUIDo Bay number <p>Command mode: All</p>

Table 19. *Stacking Information Commands*

Command Syntax and Usage
show stack attached-switches Displays information about each attached switch in the stack. Available only on the master switch. Command mode: All
show stack link Displays link information for each switch in the stack, listed by attached switch number. Command mode: All
show stack name Displays the name of the stack. Command mode: All
show stack backup Displays the csnum (configured switch number) of the backup switch. Command mode: All
show stack version Displays the firmware version number for all attached switches. Command mode: All
show stack path-map [csnum <1-8>] Displays the path used to send known unicast packets from one switch of the stack to another. Command mode: All
show stack push-status Displays the status of the most recent firmware and configuration file push from the master to member switches. Command mode: All
show stack dynamic Displays all stacking information. Command mode: All

Stacking Switch Information

The following command displays Stacking switch information:

show stack switch

Command mode: All

```
Stack name: STK
Local switch is the master.

Local switch:
  csnum           - 1
  MAC             - 74:99:75:21:8d:00
  UUID           - 534c8ca1605846299148305adc9a1f6d
  Bay Number     - 1
  Switch Type    - 14
  Chassis Type   - 6 (Flex Enterprise)
  Switch Mode (cfg) - Master
  Priority       - 250
  Stack MAC      - 74:99:75:21:8d:1f

Master switch:
  csnum           - 1
  MAC             - 74:99:75:21:8d:00
  UUID           - 534c8ca1605846299148305adc9a1f6d
  Bay Number     - 1

Backup switch:
  csnum           - 5
  MAC             - 74:99:75:21:8c:00
  UUID           - 98c587636548429aba5010f8c62d4e27
  Bay Number     - 1

Configured Switches:
-----
csnum           UUID                               Bay      MAC                               asnum
-----
C1  534c8ca1605846299148305adc9a1f6d  1  74:99:75:21:8d:00  A1
C2  534c8ca1605846299148305adc9a1f6d  2  08:17:f4:84:34:00  A3
C3  534c8ca1605846299148305adc9a1f6d  3  08:17:f4:0a:2d:00  A2
C4  534c8ca1605846299148305adc9a1f6d  4  74:99:75:1c:77:00  A4
C5  98c587636548429aba5010f8c62d4e27  1  74:99:75:21:8c:00  A5

Attached Switches in Stack:
-----
asnum           UUID                               Bay      MAC                               csnum  State
-----
A1  534c8ca1605846299148305adc9a1f6d  1  74:99:75:21:8d:00  C1  IN_STACK
A2  534c8ca1605846299148305adc9a1f6d  3  08:17:f4:0a:2d:00  C3  IN_STACK
A3  534c8ca1605846299148305adc9a1f6d  2  08:17:f4:84:34:00  C2  IN_STACK
A4  534c8ca1605846299148305adc9a1f6d  4  74:99:75:1c:77:00  C4  IN_STACK
A5  98c587636548429aba5010f8c62d4e27  1  74:99:75:21:8c:00  C5  IN_STACK
```

Stack switch information includes the following:

- Stack name
- Details about the local switch from which the command was issued
- Configured switch number and MAC of the Stack Master and Stack Backup
- Configured switch numbers and their associated assigned switch numbers
- Attached switch numbers and their associated configured switch numbers

Attached Switches Information

The following command displays information about attached switches, when run on master switch:

show stack attached-switches

Command mode: All

```
Attached Switches in Stack
-----
asnum          UUID                      Bay    MAC                      cnum  State
-----
A1  534c8ca1605846299148305adc9a1f6d  1  74:99:75:21:8d:00  C1  IN_STACK
A2  534c8ca1605846299148305adc9a1f6d  3  08:17:f4:0a:2d:00  C3  IN_STACK
A3  534c8ca1605846299148305adc9a1f6d  2  08:17:f4:84:34:00  C2  IN_STACK
A4  534c8ca1605846299148305adc9a1f6d  4  74:99:75:1c:77:00  C4  IN_STACK
A5  98c587636548429aba5010f8c62d4e27  1  74:99:75:21:8c:00  C5  IN_STACK
```

Stack Name Information

The following command displays the name of the stack:

show stack name

Command mode: All

```
Stack name: STK
```

Stack Backup Switch Information

The following command displays the cnum (configured switch number) for the backup switch:

show stack backup

Command mode: All

```
Current config Backup unit number = 5
```

Stack Version Information

The following command displays firmware version information for each switch in the stack:

show stack version

Command mode: All

Switch Firmware Versions:						
asnum	csnum	MAC	S/W	Version	Serial #	
A1	C1	74:99:75:21:8d:00	image1	8.3.7.49	Y250CM28Y653	
A2	C2	34:40:b5:73:8a:00	image1	8.3.7.49	Y010CM223620	
A3	C4	34:40:b5:77:65:00	image1	8.3.7.49	Y250VT21X302	
A4	C5	74:99:75:1c:68:00	image1	8.3.7.49	Y010CM28E870	
A5	C3	74:99:75:21:8c:00	image1	8.3.7.49	Y250CM28Y639	
A6	C6	08:17:f4:5f:39:00	image1	8.3.7.49	Y010CM003E00	

Stack Packet Path Information

The following command displays information about the path used to send known unicast packets between the switches of a stack.

show stack path-map

Command mode: All

Packet path Information:									
To->	Swu 1	Swu 2	Swu 3	Swu 4	Swu 5	Swu 6	Swu 7	Swu 8	
Swu 1	0	1:45	1:45	1:49	1:49	0	0	0	
Swu 2	2:61	0	2:61	2:57	2:57	0	0	0	
Swu 3	3:57	3:61	0	3:57	3:61	0	0	0	
Swu 4	4:57	4:61	4:57	0	4:61	0	0	0	
Swu 5	5:45	5:49	5:49	5:45	0	0	0	0	
Swu 6	0	0	0	0	0	0	0	0	
Swu 7	0	0	0	0	0	0	0	0	
Swu 8	0	0	0	0	0	0	0	0	

Stack Push Status Information

The following command displays the status of the most recent firmware and configuration file push from the master to member switches:

show stack push-status

Command mode: All

```
Image 1 transfer status info:
  Switch 08:17:f4:0a:2d:00:
    not received - file not sent or transfer in progress
  Switch 08:17:f4:84:34:00:
    not received - file not sent or transfer in progress
  Switch 74:99:75:1c:77:00:
    not received - file not sent or transfer in progress
  Switch 74:99:75:21:8c:00:
    not received - file not sent or transfer in progress

Image 2 transfer status info:
  Switch 08:17:f4:0a:2d:00:
    not received - file not sent or transfer in progress
  Switch 08:17:f4:84:34:00:
    not received - file not sent or transfer in progress
  Switch 74:99:75:1c:77:00:
    not received - file not sent or transfer in progress
  Switch 74:99:75:21:8c:00:
    not received - file not sent or transfer in progress

Boot image transfer status info:
  Switch 08:17:f4:0a:2d:00:
    not received - file not sent or transfer in progress
  Switch 08:17:f4:84:34:00:
    not received - file not sent or transfer in progress
  Switch 74:99:75:1c:77:00:
    not received - file not sent or transfer in progress
  Switch 74:99:75:21:8c:00:
    not received - file not sent or transfer in progress

Config file transfer status info:
  Switch 08:17:f4:0a:2d:00:
    last receive successful
  Switch 08:17:f4:84:34:00:
    last receive successful
  Switch 74:99:75:1c:77:00:
    last receive successful
  Switch 74:99:75:21:8c:00:
    last receive successful
```

Layer 2 Information

The following commands display Layer 2 information.

Table 20. *Layer 2 Information Commands*

Command Syntax and Usage
<p>show dot1x information</p> <p>Displays 802.1X Information. For details, see page 75.</p> <p>Command mode: All</p>
<p>show spanning-tree</p> <p>Displays Spanning Tree information, including the status (on or off), Spanning Tree mode (RSTP, PVRST, or MSTP), and VLAN membership.</p> <p>In addition to seeing if spanning tree groups (STGs) are enabled or disabled, you can view the following STG bridge information:</p> <ul style="list-style-type: none">o Priorityo Hello intervalo Maximum age valueo Forwarding delayo Aging time <p>You can also see the following port-specific STG information:</p> <ul style="list-style-type: none">o Port alias and priorityo Costo State <p>For details, see page 77.</p> <p>Command mode: All</p>
<p>show spanning-tree stp <STP instance or range> information</p> <p>Displays information about a specific Spanning Tree Group. For details, see page 82.</p> <p>Command mode: All</p>

Table 20. *Layer 2 Information Commands (continued)*

Command Syntax and Usage
<p>show spanning-tree mst <i><MST instance or range></i> [information]</p> <p>Displays Multiple Spanning Tree Protocol (MSTP) information for the specified instance, including the MSTP digest and VLAN membership. MSTP port information includes:</p> <ul style="list-style-type: none">o Port number and priorityo Costo Stateo Roleo Designated bridge and porto Type <p>For details, see page 86.</p> <p>Command mode: All</p>
<p>show spanning-tree mst configuration</p> <p>Displays the current MSTP settings.</p> <p>Command mode: All</p>
<p>show portchannel information</p> <p>Displays the state of each port in the various Link Aggregation Groups (LAGs). For details, see page 88.</p> <p>Command mode: All</p>
<p>show vlan</p> <p>Displays VLAN configuration information for all configured VLANs, including:</p> <ul style="list-style-type: none">o VLAN Numbero VLAN Nameo Statuso Port membership of the VLAN <p>For details, see page 89.</p> <p>Command mode: All</p>
<p>show failover trigger [<i><trigger number></i>]information</p> <p>Displays Layer 2 Failover information. For details, see page 64.</p> <p>Command mode: All</p>

Table 20. *Layer 2 Information Commands (continued)*

Command Syntax and Usage
show hotlinks information Displays Hot Links information. For details, see page 66 . Command mode: All
show layer2 information Dumps all Layer 2 switch information available (10K or more, depending on your configuration). If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump commands. Command mode: All

FDB Information

The forwarding database (FDB) contains information that maps the media access control (MAC) address of each known device to the switch port where the device address was learned. The FDB also shows which other ports have seen frames destined for a particular MAC address.

Note: The master forwarding database supports up to 128K MAC address entries on the MP per switch.

Table 21. *FDB Information Commands*

Command Syntax and Usage
<p>show mac-address-table</p> <p>Displays all entries in the Forwarding Database.</p> <p>Command mode: All</p> <p>For more information, see page 61.</p>
<p>show mac-address-table address <MAC address></p> <p>Displays a single database entry by its MAC address. You are prompted to enter the MAC address of the device. Enter the MAC address using the format, xx:xx:xx:xx:xx:xx. For example, 08:00:20:12:34:56.</p> <p>You can also enter the MAC address using the format, xxxxxxxxxxxx. For example, 080020123456.</p> <p>Command mode: All</p>
<p>show mac-address-table all</p> <p>Displays both unicast (static and dynamic) and multicast (static) entries in the Forwarding Database.</p> <p>Command mode: All</p>
<p>show mac-address-table configured-static</p> <p>Displays all configured static MAC entries in the FDB.</p> <p>Command mode: All</p>
<p>show mac-address-table interface port <port alias or number></p> <p>Displays all FDB entries for a particular port.</p> <p>Command mode: All</p>
<p>show mac-address-table multicast</p> <p>Displays all Multicast MAC entries in the FDB.</p> <p>Command mode: All</p>
<p>show mac-address-table portchannel <LAG number></p> <p>Displays all FDB entries for a particular Link Aggregation Group (LAG).</p> <p>Command mode: All</p>
<p>show mac-address-table private-vlan <VLAN number></p> <p>Displays all FDB entries on a single private VLAN.</p> <p>Command mode: All</p>

Table 21. *FDB Information Commands (continued)*

Command Syntax and Usage
<p>show mac-address-table state {unknown forward trunk} Displays all FDB entries for a particular state. Command mode: All</p>
<p>show mac-address-table static Displays all static MAC entries in the FDB. Command mode: All</p>
<p>show mac-address-table vlan <VLAN number> Displays all FDB entries on a single VLAN. Command mode: All</p>

Show All FDB Information

The following command displays Forwarding Database information:

show mac-address-table

Command mode: All

MAC address	VLAN	Port	Trnk	State	Permanent
-----	----	----	----	-----	-----
00:04:38:90:54:18	1	EXT4		FWD	
00:09:6b:9b:01:5f	1	INT13		FWD	
00:09:6b:ca:26:ef	4095	MGT1		FWD	
00:0f:06:ec:3b:00	4095	MGT1		FWD	
00:11:43:c4:79:83	1	EXT4		FWD	P

An address that is in the forwarding (FWD) state, means that it has been learned by the switch. When in the aggregation (TRK) state, the port field represents the Link Aggregation Group (LAG) number. If the state for the port is listed as unknown (UNK), the MAC address has not yet been learned by the switch, but has only been seen as a destination address.

When an address is in the unknown state, no outbound port is indicated, although ports that reference the address as a destination will be listed under “Reference ports”.

Show FDB Multicast Address Information

The following commands display Multicast Forwarding Database information:

Table 22. Multicast FDB Information Commands

Command Syntax and Usage
show mac-address-table multicast Displays all Multicast MAC entries in the FDB. Command mode: All
show mac-address-table multicast address <MAC address> Displays a single FDB multicast entry by its MAC address. You are prompted to enter the MAC address of the device. Enter the MAC address using the format, xx:xx:xx:xx:xx:xx. For example, 03:00:20:12:34:56. You can also enter the MAC address using the format, xxxxxxxxxxxx. For example, 030020123456. Command mode: All
show mac-address-table multicast interface port <port alias or number> Displays all FDB multicast entries for a particular port. Command mode: All
show mac-address-table multicast vlan <VLAN number> Displays all FDB multicast entries on a single VLAN. Command mode: All

Clearing Entries from the Forwarding Database

To clear the entire FDB, refer to [“Forwarding Database Maintenance”](#) on page 613.

Link Aggregation Control Protocol Information

Use these commands to display LACP status information about each port on the CN4093.

Table 23. *LACP Information Commands*

Command Syntax and Usage	
show lacp aggregator <aggregator ID>	Displays detailed information about the LACP aggregator. Command mode: All
show lacp information	Displays a summary of LACP information. For details, see page 63 . Command mode: All
show interface port <port alias or number> lacp information	Displays LACP information about the selected port. Command mode: All

Link Aggregation Control Protocol

The following command displays LACP information:

show lacp information

Command mode: All

port	mode	adminkey	operkey	selected	prio	aggr	trunk	status	minlinks
1	active	1000	1000	individual	32768	--	--	down	1
2	active	2000	2000	suspended	32768	--	--	down	1
3	active	3000	2000	yes	32768	1	65*	up	1
4	active	3000	2000	suspended	32768	--	65*	down	1
...									

(*) LACP PortChannel is statically bound to the admin key

LACP dump includes the following information for each external port in the CN4093:

- **mode** Displays the port's LACP mode (active, passive, or off).
- **adminkey** Displays the value of the port's *adminkey*.
- **operkey** Shows the value of the port's operational key.
- **selected** Indicates whether the port has been selected to be part of a Link Aggregation Group (LAG).
- **prio** Shows the value of the port priority.
- **aggr** Displays the aggregator associated with each port.
- **trunk** This value represents the LACP LAG number.
- **status** Displays the status of LACP on the port (up, down or standby).
- **minlinks** Displays the minimum number of active links in the LACP LAG.

Layer 2 Failover Information Commands

The following command displays Layer 2 Failover information:

Table 24. *Layer 2 Failover Information Commands*

Command Syntax and Usage
show failover trigger <trigger number> [information] Displays detailed information about the selected Layer 2 Failover trigger. Command mode: All
show failover trigger [information] Displays a summary of Layer 2 Failover information. For details, see page 64 . Command mode: All

Layer 2 Failover Information

The following command displays Layer 2 Failover information:

show failover trigger

Command mode: All

```
trunk 1
  EXT2      Operational
  EXT3      Operational

Control State: Auto Disabled
Member      Status
-----
  INT1      Operational
  INT2      Operational
  INT3      Operational
  INT4      Operational

Trigger 2 Manual Monitor: Enabled
Trigger 2 limit: 0
Monitor State: Down
Member      Status
-----
adminkey 62
  EXT20     Failed
Control State: Auto Disabled
Member      Status
-----
Physical ports
  INTC1     Failed
Virtual ports
  INTB1.2   Failed
  INTB2.2   Failed
  INTB3.2   Failed
  INTB4.2   Failed
  INTB5.2   Failed
...
```


A monitor port's Failover status is **Operational** only if all the following conditions hold true:

- Port link is up.
- If Spanning-Tree is enabled, the port is in the **Forwarding** state.
- If the port is a member of an LACP Link Aggregation Group (LAG), the port is aggregated.

If any of these conditions are not true, the monitor port is considered to be failed.

A control port is considered to be operational if the monitor trigger state is **Up**. Even if a port's link status is **Down**, Spanning-Tree status is **Blocking**, and the LACP status is **Not Aggregated**, from a teaming perspective the port status is **Operational**, since the trigger is **Up**.

A control port's status is displayed as **Failed** when the monitor trigger state is **Down** or when the controlled port is a vPort which is not properly configured (UFP feature is not enabled in switch, port is not configured as a UFP port, vport is not enabled or physical port is not enabled).

Hot Links Information

The following command displays Hot Links information:

show hotlinks information

Command mode: All

```
Hot Links Info: Trigger

Current global Hot Links setting: ON
Hot Links BPDU flood: disabled
Hot Links FDB update: disabled
FDB update rate (pps): 500

Current Trigger 12 setting: enabled
name "TG-12", preempt enabled, fdelay 30 sec

Active state: None

Master settings:
    port EXT2
Backup settings:
    port EXT3
```

Hot Links information includes the following:

- Hot Links status (on or off)
- Status of BPDU flood option
- Status of FDB send option
- Status and configuration of each Hot Links trigger

Edge Control Protocol Information

The following commands display Edge Control Protocol (ECP) information.

Table 25. *ECP Information Options*

Command Syntax and Usage
show ecp channels Displays all Edge Control Protocol (ECP) channels. Command mode: All
show ecp retransmit-interval Displays Edge Control Protocol (ECP) retransmit interval. Command mode: All
show ecp upper-layer-protocols Displays all registered Upper-Level Protocols (ULPs). Command mode: All

LLDP Information

The following commands display LLDP information.

Table 26. *LLDP Information Commands*

Command Syntax and Usage
show lldp [information] Displays LLDP information. Command mode: All
show lldp port [<port number or range>] Displays Link Layer Discovery Protocol (LLDP) port information. Command mode: All
show lldp port <1-16> tlv evb Displays Edge Virtual Bridge (EVB) type-length-value (TLV) information. Command mode: All
show lldp port <1-16> vport <1-4> tlv evb Displays Edge Virtual Bridge (EVB) type-length-value (TLV) information for the specific virtual port. Command mode: All
show lldp receive Displays information about the LLDP receive state machine. Command mode: All
show lldp remote-device [<1-256> detail] port [<port number or range>]] Displays information received from LLDP-capable devices. To view a sample display, see page 69 . Command mode: All
show lldp transmit Displays information about the LLDP transmit state machine. Command mode: All

LLDP Remote Device Information

The following command displays LLDP remote device information:

```
show lldp remote-device [<1-256>|detail|port [<port number>]]
```

Command mode: All

```
LLDP Remote Devices Information
Legend(possible values in DMAC column) :
NB   - Nearest Bridge           - 01-80-C2-00-00-0E
NnTB - Nearest non-TPMR Bridge - 01-80-C2-00-00-03
NCB  - Nearest Customer Bridge - 01-80-C2-00-00-00
Total number of current entries: 1

LocalPort|Index|Remote Chassis ID|Remote Port|Remote System Name|DMAC
-----|-----|-----|-----|-----|-----
EXTM     | 1    |74 99 75 df 88 00|2          |G8052-11          |NB
```

LLDP remote device information provides a summary of information about remote devices connected to the switch. To view detailed information about a device, as shown below, follow the command with the index number of the remote device. To view detailed information about all devices, use the `detail` option.

```
Local Port Alias: EXT1
Remote Device Index      : 15
Remote Device TTL       : 99
Remote Device RxChanges : false
Chassis Type            : Mac Address
Chassis Id             : 00-18-b1-33-1d-00
Port Type              : Locally Assigned
Port Id                : 23
Port Description       : EXT1

System Name            :
System Description    : Lenovo Networking Operating System
RackSwitch G8264, Lenovo Networking OS: version 7.8.0.24,
Boot image: version 7.8.0.24

System Capabilities Supported : bridge, router
System Capabilities Enabled  : bridge, router

Remote Management Address:
Subtype                  : IPV4
Address                  : 10.100.120.181
Interface Subtype       : ifIndex
Interface Number        : 128
Object Identifier       :
```

Unidirectional Link Detection Information

The following commands show unidirectional link detection information.

Table 27. *UDLD Information Commands*

Command Syntax and Usage
show interface port <port alias or number> udld Displays UDLD information about the selected port. Command mode: All
show udld Displays all UDLD information. Command mode: All

UDLD Port Information

The following command displays UDLD information for the selected port:

show interface port <port alias or number> **udld**

Command mode: All

```
UDLD information on port EXT1
Port enable administrative configuration setting: Enabled
Port administrative mode: normal
Port enable operational state: link up
Port operational state: advertisement
Port bidirectional status: bidirectional
Message interval: 15
Time out interval: 5
Neighbor cache: 1 neighbor detected

Entry #1
Expiration time: 31 seconds
Device Name:
Device ID: 00:da:c0:00:04:00
Port ID: EXT1
```

UDLD information includes the following:

- Status (enabled or disabled)
- Mode (normal or aggressive)
- Port state (link up or link down)
- Bi-directional status (unknown, unidirectional, bidirectional, TX-RX loop, neighbor mismatch)

OAM Discovery Information

The following commands display OAM Discovery information.

Table 28. *OAM Discovery Information Commands*

Command Syntax and Usage
show interface port <port alias or number> oam Displays OAM information about the selected port. Command mode: All
show oam Displays all OAM information. Command mode: All

OAM Port Information

The following command displays OAM information for the selected port:

show interface port <port alias or number> **oam**

Command mode: All

<pre>OAM information on port EXT1 State enabled Mode active Link up Satisfied Yes Evaluating No Remote port information: Mode active MAC address 00:da:c0:00:04:00 Stable Yes State valid Yes Evaluating No</pre>
--

OAM port display shows information about the selected port and the peer to which the link is connected.

vLAG Information

The following table lists the information commands for Virtual Link Aggregation Group (vLAG) protocol.

Table 29. *vLAG Information Options*

Command Syntax and Usage
show vlag adminkey <1-65535> Displays vLAG LACP information. Command mode: All
show vlag peer-gateway Displays the current state of the vLAG peer gateway. For details, see page 73 . Command mode: All
show vlag portchannel <LAG number> Displays vLAG static Link Aggregation Group (LAG) information. Command mode: All
show vlag isl Displays vLAG Inter-Switch Link (ISL) information. Command mode: All
show vlag information Displays all vLAG information. Command mode: All
show vlag vrrp Displays current vLAG related VRRP information. Command mode: All

vLAG Aggregation Information

The following command displays vLAG information for the Link Aggregation Group (LAG):

show vlag portchannel <LAG number>

Command mode: All

vLAG is enabled on trunk 3 Protocol - Static Current settings: enabled ports: 60 Current L2 trunk hash settings: smac Current L3 trunk hash settings: sip dip Current ingress port hash: disabled Current L4 port hash: disabled

vLAG Peer Gateway Information

The following command displays the current state of the vLAG peer gateway.

show vlag peer-gateway

Command mode: All

```
Current peer gateway state: disabled
```

vLAG VRRP Information

The following command displays vLAG related VRRP information:

show vlag vrrp

Command mode: All

```
vLAG VRRP mode: Active
vLAG related VRRP information:
  1: vrid  1, local role master, peer role backup
 10: vrid  1, local role backup, peer role backup
100: vrid  1, local role backup, peer role master
```

```
vLAG VRRP mode: Passive
vLAG related VRRP information:
  1: vrid  1, local role master, peer role init
 10: vrid  1, local role backup, peer role init
100: vrid  1, local role backup, peer role init
```

802.1X Information

The following command displays 802.1X information:

show dot1x information

Command mode: All

```

System capability : Authenticator
System status    : disabled
Protocol version : 1
Guest VLAN status : disabled
Guest VLAN       : none

```

Port	Auth Mode	Auth Status	Authenticator PAE State	Backend Auth State	Assigned VLAN
*INT1	force-auth	unauthorized	initialize	initialize	none
*INT2	force-auth	unauthorized	initialize	initialize	none
INT3	force-auth	unauthorized	initialize	initialize	none
*INT4	force-auth	unauthorized	initialize	initialize	none
*INT5	force-auth	unauthorized	initialize	initialize	none
*INT6	force-auth	unauthorized	initialize	initialize	none
*INT7	force-auth	unauthorized	initialize	initialize	none
INT8	force-auth	unauthorized	initialize	initialize	none
INT9	force-auth	unauthorized	initialize	initialize	none
*INT10	force-auth	unauthorized	initialize	initialize	none
*INT11	force-auth	unauthorized	initialize	initialize	none
*INT12	force-auth	unauthorized	initialize	initialize	none
EXT1	force-auth	unauthorized	initialize	initialize	none
EXT2	force-auth	unauthorized	initialize	initialize	none
*EXT3	force-auth	unauthorized	initialize	initialize	none
*EXT4	force-auth	unauthorized	initialize	initialize	none
*EXT11	force-auth	unauthorized	initialize	initialize	none

* - Port down or disabled

Note: The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of Lenovo Switch that you are using and the firmware versions and options that are installed.

The following table describes the IEEE 802.1X parameters.

Table 30. 802.1X Parameter Descriptions

Parameter	Description
Port	Displays each port's alias.
Auth Mode	Displays the Access Control authorization mode for the port. The Authorization mode can be one of the following: <ul style="list-style-type: none"> o force-unauth o auto o force-auth
Auth Status	Displays the current authorization status of the port, either authorized or unauthorized.

Table 30. 802.1X Parameter Descriptions (continued)

Parameter	Description
Authenticator PAE State	Displays the Authenticator Port Access Entity State. The PAE state can be one of the following: <ul style="list-style-type: none">○ initialize○ disconnected○ connecting○ authenticating○ authenticated○ aborting○ held○ forceAuth
Backend Auth State	Displays the Backend Authorization State. The Backend Authorization state can be one of the following: <ul style="list-style-type: none">○ initialize○ request○ response○ success○ fail○ timeout○ idle

Spanning Tree Information

The following command displays Spanning Tree information:

show spanning-tree

Command mode: All

Note: Based on the Spanning Tree mode enabled, the command output differs:

- VLAN Rapid Spanning Tree mode (pvrst):

```

Max PVRST Instances: 256
Pvst+ compatibility mode enabled
-----
Spanning Tree Group 2: On (PVRST)
VLANs: 4000

Current Root:          Path-Cost  Port  Hello  MaxAge  FwdDel
8002 74:99:75:bd:b6:00      0      0      2      20      15

Parameters:  Priority  Hello  MaxAge  FwdDel  Aging  Topology  Change  Counts
              32770    2      20      15      300           0

   Port  Prio  Cost  State Role Designated Bridge      Des Port Type
-----
EXT13   128  4990!+ DISC  DESG 8002-74:99:75:bd:b6:00  8036 P2P
EXT14   128  4990!+ DISC  DESG 8002-74:99:75:bd:b6:00  8036 P2P
EXT15   128  4990!+ DISC  DESG 8002-74:99:75:bd:b6:00  8036 P2P
EXT16   128  4990!+ DISC  DESG 8002-74:99:75:bd:b6:00  8036 P2P
EXT17   128  4990!+ DISC  DESG 8002-74:99:75:bd:b6:00  8047 P2P
EXT20   128  4990!+ DISC  DESG 8002-74:99:75:bd:b6:00  8047 P2P
EXT21   128  4990!+ DISC  DESG 8002-74:99:75:bd:b6:00  8047 P2P
EXT22   128  4990!+ DISC  DESG 8002-74:99:75:bd:b6:00  8047 P2P
! = Automatic path cost.
+ = Portchannel cost, not the individual port cost.
-----

Spanning Tree Group 32: On (PVRST)
VLANs: 1

Current Root:          Path-Cost  Port  Hello  MaxAge  FwdDel
8020 74:99:75:bd:b6:00      0      0      2      20      15

Parameters:  Priority  Hello  MaxAge  FwdDel  Aging  Topology  Change  Counts
              32800    2      20      15      300           0

   Port  Prio  Cost  State Role Designated Bridge      Des Port Type
-----

Note: There is no active STP port in Spanning Tree Group 32.
-----

Spanning Tree Group 128: Off (PVRST), FDB aging timer 300
VLANs: 4095

   Port  Prio  Cost  State Role Designated Bridge      Des Port Type
-----
MGT1    0      0  FWD  *
* = STP turned off for this port.

```

- Rapid Spanning Tree mode (rstp)

```

Max PVRST Instances: 256
Pvst+ compatibility mode enabled

-----
Spanning Tree Group 1: On (RSTP)
VLANs: 1 4000 4095

Current Root:          Path-Cost  Port  Hello  MaxAge  FwdDel
0000 74:99:75:bd:c4:00    990   EXT15   2      20      15

Parameters:  Priority  Hello  MaxAge  FwdDel  Aging  Topology  Change Counts
              32768    2      20      15      300    1

      Port  Prio  Cost  State Role Designated Bridge      Des Port Type
-----
EXT13      128   4990!+ DISC  DESG 8002-74:99:75:bd:b6:00    8036 P2P
EXT14      128   4990!+ DISC  DESG 8002-74:99:75:bd:b6:00    8036 P2P
EXT15      128    990!+ FWD  ROOT 0000-74:99:75:bd:c4:00    8046 P2P
EXT16      128   4990!+ DISC  DESG 8002-74:99:75:bd:b6:00    8036 P2P
EXT17      128   4990!+ DISC  DESG 8002-74:99:75:bd:b6:00    8047 P2P
EXT20      128   4990!+ DISC  DESG 8002-74:99:75:bd:b6:00    8047 P2P
EXT21      128   4990!+ DISC  DESG 8002-74:99:75:bd:b6:00    8047 P2P
EXT22      128   4990!+ DISC  DESG 8002-74:99:75:bd:b6:00    8047 P2P
MGT1       0      0      FWD  *
* = STP turned off for this port.
! = Automatic path cost.
+ = Portchannel cost, not the individual port cost.

```

• Multiple Spanning Tree mode (mstp)

```

Max PVRST Instances: 256
Pvst+ compatibility mode enabled

Mstp Digest: 0x5e5b21c3e2cb4f144cab50e88b9bdea

Common Internal Spanning Tree:

VLANs MAPPED: 2-3999 4001-4094
VLANs: 4095

Current Root:          Path-Cost  Port  MaxAge  FwdDel
0000 74:99:75:bd:c4:00      0    EXT15    20     15

Cist Regional Root:    Path-Cost
0000 74:99:75:bd:c4:00      990

Parameters:  Priority  MaxAge  FwdDel  Hops
              4096      20      15      20
  Port  Prio  Cost  State Role Designated Bridge  Des Port Hello Type
-----
EXT13   128   200!+ FWD  DESG 1000-74:99:75:bd:b6:00  8056  2  P2P
EXT14   128   200!+ FWD  DESG 1000-74:99:75:bd:b6:00  8056  2  P2P
EXT15   128   990!+ FWD  ROOT 0000-74:99:75:bd:c4:00  8046  2  P2P
EXT16   128   200!+ FWD  DESG 1000-74:99:75:bd:b6:00  8056  2  P2P
EXT17   128   200!+ FWD  DESG 1000-74:99:75:bd:b6:00  8066  2  P2P
EXT20   128   200!+ FWD  DESG 1000-74:99:75:bd:b6:00  8066  2  P2P
EXT21   128   200!+ FWD  DESG 1000-74:99:75:bd:b6:00  8066  2  P2P
EXT22   128   200!+ FWD  DESG 1000-74:99:75:bd:b6:00  8066  2  P2P
MGT1    0       0  FWD  *
* = STP turned off for this port.
! = Automatic path cost.
+ = Portchannel cost, not the individual port cost.

-----
Spanning Tree Group 2: On (MSTP)
VLANs MAPPED: 4000
VLANs: 4000

Current Root:          Path-Cost  Port
8000 74:99:75:bd:b6:00      0      0

Parameters:  Priority  Aging  Topology Change Counts
              32768    300      3

  Port  Prio  Cost  State Role Designated Bridge  Des Port Type
-----
EXT13   128   200!+ FWD  DESG 1000-74:99:75:bd:b6:00  8056  P2P
EXT14   128   200!+ FWD  DESG 1000-74:99:75:bd:b6:00  8056  P2P
EXT15   128   990!+ FWD  ROOT 0000-74:99:75:bd:c4:00  8046  P2P
EXT16   128   200!+ FWD  DESG 1000-74:99:75:bd:b6:00  8056  P2P
EXT17   128   200!+ FWD  DESG 1000-74:99:75:bd:b6:00  8066  P2P
EXT20   128   200!+ FWD  DESG 1000-74:99:75:bd:b6:00  8066  P2P
EXT21   128   200!+ FWD  DESG 1000-74:99:75:bd:b6:00  8066  P2P
EXT22   128   200!+ FWD  DESG 1000-74:99:75:bd:b6:00  8066  P2P
! = Automatic path cost.
+ = Portchannel cost, not the individual port cost.

```

In addition to seeing if Common Internal Spanning Tree (CIST) is enabled or disabled, you can view the following CIST bridge information:

Table 31. *CIST Parameter Descriptions*

Parameter	Description
CIST Root	The CIST Root shows information about the root bridge for the Common Internal Spanning Tree (CIST). Values on this row of information refer to the CIST root.
CIST Regional Root	The CIST Regional Root shows information about the root bridge for this MSTP region. Values on this row of information refer to the regional root.
Priority (bridge)	The bridge priority parameter controls which bridge on the network will become the STP root bridge.
MaxAge	The maximum age parameter specifies, in seconds, the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it reconfigure the STP network.
FwdDel	The forward delay parameter specifies, in seconds, the amount of time that a bridge port has to wait before it changes from discarding to learning and from learning state to forwarding state.
Hops	The maximum number of bridge hops a packet can traverse before it is dropped. The default value is 20.

The following port-specific CIST information is also displayed:

Table 32. *CIST Parameter Descriptions*

Parameter	Description
Prio (port)	The port priority parameter helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment.
Cost	The port path cost parameter is used to help determine the designated port for a segment. Generally speaking, the faster the port, the lower the path cost. A setting of 0 indicates that the cost will be set to the appropriate default after the link speed has been auto negotiated.
State	The state field shows the current state of the port. The state field can be either Discarding (DISC), Learning (LRN), or Forwarding (FWD).
Role	The Role field shows the current role of this port in the Spanning Tree. The port role can be one of the following: Designated (DESG), Root (ROOT), Alternate (ALTN), Backup (BKUP), Disabled (DSB), Master (MAST), or Unknown (UNK).

Table 32. *CIST Parameter Descriptions (continued)*

Parameter	Description
Designated Bridge	The Designated Bridge shows information about the bridge connected to each port, if applicable. Information includes the priority (in hexadecimal notation) and MAC address of the Designated Bridge.
Designated Port	The port ID of the port on the Designated Bridge to which this port is connected.
Hello	The hello time parameter specifies, in seconds, how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge hello value.
Type	Type of link connected to the port, and whether the port is an edge port. Link type values are AUTO , P2P , or SHARED .

RSTP/PVRST Information

The following command displays RSTP/PVRST information:

```
show spanning-tree stp <STP instance or range> information
```

Command mode: All

```
Spanning Tree Group 1: On (RSTP)
VLANs: 1

Current Root:          Path-Cost  Port Hello MaxAge FwdDel
ffff 00:13:0a:4f:7d:d0    0    EXT4    2    20    15

Parameters:  Priority  Hello  MaxAge  FwdDel  Aging
              61440    2      20      15      300

Port  Prio  Cost    State  Role Designated Bridge      Des Port  Type
-----
INT1   0      0      DSB *
INT2   0      0      DSB *
INT3   0      0      FWD *
INT4   0      0      DSB *
INT5   0      0      DSB *
INT6   0      0      DSB *
INT7   0      0      DSB *
INT8   0      0      DSB *
INT9   0      0      DSB *
INT10  0      0      DSB *
INT11  0      0      DSB *
INT12  0      0      DSB *
INT13  0      0      DSB *
INT14  0      0      DSB *
EXT1  128    2000   FWD  DESG 8000-00:11:58:ae:39:00  8011    P2P
EXT2  128    2000   DISC BKUP 8000-00:11:58:ae:39:00  8011    P2P
EXT3  128    2000   FWD  DESG 8000-00:11:58:ae:39:00  8013    P2P
EXT4  128    20000  DISC BKUP 8000-00:11:58:ae:39:00  8013    Shared
...
* = STP turned off for this port.
```

Note: The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of Flex System unit that you are using and the firmware versions and options that are installed.

You can configure the switch software to use the IEEE 802.1D (2004) Rapid Spanning Tree Protocol (RSTP), Per VLAN Rapid Spanning Tree Protocol (PVRST) or IEEE 802.1Q (2003) Multiple Spanning Tree Protocol (MSTP).

If RSTP/PVRST is turned on, you can view the following bridge information for the Spanning Tree Group:

Table 33. *RSTP/PVRST Bridge Parameter Descriptions*

Parameter	Description
Current Root	The Current Root shows information about the root bridge for the Spanning Tree. Information includes the priority (in hexadecimal notation) and the MAC address of the root.
Priority (bridge)	The Bridge Priority parameter controls which bridge on the network will become the STP root bridge.
Hello	The Hello Time parameter specifies, in seconds, how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge hello value.
MaxAge	The Maximum Age parameter specifies, in seconds, the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it reconfigures the STP network.
FwdDel	The Forward Delay parameter specifies, in seconds, the amount of time that a bridge port has to wait before it changes from discarding to learning and from learning state to forwarding state.
Aging	The Aging Time parameter specifies, in seconds, the amount of time the bridge waits without receiving a packet from a station before removing the station from the Forwarding Database.

The following port-specific information is also displayed:

Table 34. *RSTP/PVRST Port Parameter Descriptions*

Parameter	Description
Prio (port)	The Port Priority parameter helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment.
Cost	The port Path Cost parameter is used to help determine the designated port for a segment. Generally speaking, the faster the port, the lower the path cost. A setting of 0 indicates that the cost will be set to the appropriate default after the link speed has been auto negotiated.
State	The State field shows the current state of the port. The State field in RSTP mode can be one of the following: Discarding (DISC), Learning (LRN), Forwarding (FWD), or Disabled (DSB).

Table 34. RSTP/PVRST Port Parameter Descriptions (continued)

Parameter	Description
Role	The Role field shows the current role of this port in the Spanning Tree. The port role can be one of the following: Designated (DESG), Root (ROOT), Alternate (ALTN), Backup (BKUP), Disabled (DSB).
Designated Bridge	The Designated Bridge shows information about the bridge connected to each port, if applicable. Information includes the priority (in hexadecimal notation) and MAC address of the Designated Bridge.
Designated Port	The port ID of the port on the Designated Bridge to which this port is connected.
Type	Type of link connected to the port, and whether the port is an edge port. Link type values are AUTO, P2P, or SHARED.

Spanning Tree Bridge Information

The following command displays Spanning Tree bridge information:

show spanning-tree [vlan <VLAN ID>] bridge

Command mode: All

Vlan	Priority	Hello	MaxAge	FwdDel	Protocol
-----	-----	-----	-----	-----	-----
1	61440	2	20	15	PVRST

Table 35. Bridge Parameter Descriptions

Parameter	Description
VLANs	VLANs that are part of the Spanning Tree Group.
Priority	The bridge priority parameter controls which bridge on the network will become the STP root bridge. The lower the value, the higher the priority.
Hello	The hello time parameter specifies, in seconds, how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge hello value.
MaxAge	The maximum age parameter specifies, in seconds, the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it reconfigure the STP network.
FwdDel	The forward delay parameter specifies, in seconds, the amount of time that a bridge port has to wait before it changes from discarding to learning and from learning state to forwarding state.
Protocol	The STP protocol run by the Spanning Tree Group.

Spanning Tree Root Information

The following command displays information about the root switches in every STP group:

show spanning-tree root

Command mode: All

Instance	Root ID	Path-Cost	Hello	MaxAge	FwdDel	Root Port
1	8001 08:17:f4:32:95:00	0	2	20	15	0
3	8003 08:17:f4:32:95:00	0	2	20	15	0
6	8001 08:17:f4:fb:d8:00	20000	2	20	15	27
17	8011 08:17:f4:32:95:00	0	2	20	15	0

Table 36. Bridge Parameter Descriptions

Parameter	Description
Instance	Spanning Tree instance
Root ID	Indicates the root switch MAC address and port number.
Path-Cost	The port path cost is used to help determine the designated port for a segment. Port path cost is based on the port speed.
Hello	The hello time parameter specifies, in seconds, how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge hello value.
MaxAge	The maximum age parameter specifies, in seconds, the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it reconfigure the STP network.
FwdDel	The forward delay parameter specifies, in seconds, the amount of time that a bridge port has to wait before it changes from discarding to learning and from learning state to forwarding state.
Root Port	Port number allocated to the STP instance on the root switch.

Multiple Spanning Tree Information

The following command displays Multiple Spanning Tree (MSTP) information:

show spanning-tree mst <MST instance or range> information

Command mode: All

```

Mstp Digest: 0x5e5b21c3e2cb4f144cabc50e88b9bdea
-----
Spanning Tree Group 2: On (MSTP)
VLANs MAPPED: 4000
VLANs: 4000

Current Root:          Path-Cost  Port
8000 74:99:75:bd:b6:00      0      0

Parameters: Priority Aging Topology Change Counts
              32768    300              3

      Port   Prio   Cost   State Role Designated Bridge      Des Port Type
-----
EXT13      128    200!+ FWD   DESG 1000-74:99:75:bd:b6:00  8056 P2P
EXT14      128    200!+ FWD   DESG 1000-74:99:75:bd:b6:00  8056 P2P
EXT15      128    990!+ FWD   ROOT 0000-74:99:75:bd:c4:00   8046 P2P
EXT16      128    200!+ FWD   DESG 1000-74:99:75:bd:b6:00  8056 P2P
EXT17      128    200!+ FWD   DESG 1000-74:99:75:bd:b6:00  8066 P2P
EXT20      128    200!+ FWD   DESG 1000-74:99:75:bd:b6:00  8066 P2P
EXT21      128    200!+ FWD   DESG 1000-74:99:75:bd:b6:00  8066 P2P
EXT22      128    200!+ FWD   DESG 1000-74:99:75:bd:b6:00  8066 P2P
! = Automatic path cost.
+ = Portchannel cost, not the individual port cost.

```

The following port-specific MSTP information is also displayed:

Table 37. MSTP Parameter Descriptions

Parameter	Description
Prio (port)	The port priority parameter helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment.
Cost	The port path cost parameter is used to help determine the designated port for a segment. Generally speaking, the faster the port, the lower the path cost. A setting of 0 indicates that the cost will be set to the appropriate default after the link speed has been auto negotiated.
State	The state field shows the current state of the port. The state field can be either Discarding (DISC), Learning (LRN), or Forwarding (FWD).

Table 37. *MSTP Parameter Descriptions (continued)*

Parameter	Description
Role	The Role field shows the current role of this port in the Spanning Tree. The port role can be one of the following: Designated (DESG), Root (ROOT), Alternate (ALTN), Backup (BKUP), Disabled (DSB), Master (MAST), or Unknown (UNK).
Designated Bridge	The Designated Bridge shows information about the bridge connected to each port, if applicable. Information includes the priority (in hexadecimal notation) and MAC address of the Designated Bridge.
Designated Port	The port ID of the port on the Designated Bridge to which this port is connected.
Type	Type of link connected to the port, and whether the port is an edge port. Link type values are AUTO, P2P, or SHARED.

LAG Information

The following command displays Link Aggregation Group (LAG) information:

show portchannel information

Command mode: All

```
Trunk group 1: Enabled
Protocol - Static
Port state:
  EXT1: STG 1 forwarding
  EXT2: STG 1 forwarding
```

When LAGs are configured, you can view the state of each port in the various LAGs.

Note: If Spanning Tree Protocol on any port in the LAG is set to forwarding, the remaining ports in the LAG will also be set to forwarding.

VLAN Information

The following commands display VLAN information.

Table 38. *VLAN Information Commands*

Command Syntax and Usage
show vlan <VLAN number> [information] Displays general VLAN information.
show vlan private-vlan [type] Displays private VLAN information. The <code>type</code> option lists only the VLAN type for each private VLAN: <code>community</code> , <code>isolated</code> or <code>primary</code> . Command mode: All
show vlan information Displays information about all VLANs, including: <ul style="list-style-type: none">○ VLAN number and name○ Port membership○ VLAN status (enabled or disabled)○ Protocol VLAN status○ Private VLAN status○ Spanning Tree membership○ VMAP configuration○ Virtual ports Command mode: All
show protocol-vlan <protocol number> Displays protocol VLAN information. Command mode: All

The following command displays VLAN information:

show vlan [<VLAN number>]

Command mode: All

VLAN	Name	Status	MGT	Ports
1	Default VLAN	ena	dis	INTA1-EXT22
10	VLAN 10	ena	dis	empty
4095	Mgmt VLAN	ena	ena	EXTM MGT1

Primary	Secondary	Type	Ports	vPorts
-----	-----	-----	-----	-----

Note: The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of Lenovo Switch that you are using and the firmware versions and options that are installed.

This information display includes all configured VLANs and all member ports that have an active link state. Port membership is represented in slot/port format.

VLAN information includes:

- VLAN Number
- VLAN Type
- VLAN Name
- Status
- Management status of the VLAN
- Port membership of the VLAN
- Protocol-based VLAN information
- Private VLAN configuration

Layer 3 Information

The following commands display Layer 3 information.

Table 39. *Layer 3 Information Commands*

Command Syntax and Usage
show arp Displays Address Resolution Protocol (ARP) information. For details, see page 97 . Command mode: All
show interface ip [<i><interface number></i>] Displays IPv4 interface information. For details, see page 125 . Command mode: All
show ikev2 Displays IKEv2 information. For more information options, see page 129 . Command mode: All
show ip bgp information [<i><IPv4 address></i>] [<i><IPv4 mask></i>] Displays Border Gateway Protocol (BGP) information. For details, see page 101 . Command mode: All
show ip dhcp snooping Displays DHCP Snooping information. For details, see page 133 . Command mode: All
show ip dns Displays the current Domain Name System settings. Command mode: All
show ip ecmp Displays ECMP static route information. For details, see page 116 . Command mode: All
show ip gateway <1-4> Displays the current gateway settings. Command mode: All
show ip igmp Displays IGMP Information. For more IGMP information options, see page 117 . Command mode: All

Table 39. *Layer 3 Information Commands (continued)*

Command Syntax and Usage
show ip information Displays all IP information. Command mode: All
show ip interface brief Displays IP Information. For details, see page 128 . IP information, includes: <ul style="list-style-type: none">o IP interface information: Interface number, IP address, subnet mask, VLAN number, and operational status.o Default gateway information: Metric for selecting which configured gateway to use, gateway number, IP address, and health status.o IP forwarding settings, network filter settings, route map settings. Command mode: All
show ip ospf information Displays OSPF information. For more OSPF information options, see page 102 . Command mode: All
show ip pim component [<1-2>] Displays Protocol Independent Multicast (PIM) component information. For more PIM information options, see page 134 . Command mode: All
show ip rip interface Displays RIP user's configuration. For details, see page 111 . Command mode: All
show ip route Displays all routes configured on the switch. For details, see page 95 . Command mode: All
show ip slp Displays information about the Service Location Protocol (SLP) configuration. For command options, see page 169 . Command mode: All
show ip vrrp information Displays VRRP information. For details, see page 124 . Command mode: All
show ipsec manual-policy Displays information about manual key management policy for IP security. For more information options, see page 131 . Command mode: All

Table 39. Layer 3 Information Commands (continued)

Command Syntax and Usage
<p>show ipv6 gateway6 <1,3-4></p> <p>Displays the current IPv6 default gateway configuration.</p> <p>Command mode: All</p>
<p>show ipv6 interface [<interface number>]</p> <p>Displays IPv6 interface information. For details, see page 126.</p> <p>Command mode: All</p>
<p>show ipv6 mld groups</p> <p>Displays Multicast Listener Discovery (MLD) information. For more MLD information options, see page 122.</p> <p>Command mode: All</p>
<p>show ipv6 neighbors</p> <p>Displays IPv6 Neighbor Discovery cache information. For more information options, see page 114.</p> <p>Command mode: All</p>
<p>show ipv6 ospf information</p> <p>Displays OSPFv3 information. For more OSPFv3 information options, see page 107.</p> <p>Command mode: All</p>
<p>show ipv6 pmtu [<destination IPv6 address>]</p> <p>Displays IPv6 Path MTU information. For details, see page 127.</p> <p>Command mode: All</p>
<p>show ipv6 prefix</p> <p>Displays IPv6 Neighbor Discovery prefix information. For details, see page 115.</p> <p>Command mode: All</p>
<p>show ipv6 route</p> <p>Displays IPv6 routing information. For more information options, see page 112.</p> <p>Command mode: All</p>
<p>show layer3</p> <p>Dumps all Layer 3 switch information available (10K or more, depending on your configuration).</p> <p>If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump commands.</p> <p>Command mode: All</p>

IP Routing Information

Using the commands listed below, you can display all or a portion of the IP routes currently held in the switch.

Table 40. *Route Information Commands*

Command Syntax and Usage
show ip route [all] Displays all routes configured in the switch. For more information, see page 95 . Command mode: All
show ip route address <IP address> Displays a single route by destination IP address. Command mode: All
show ip route ecmp hash Displays the current ECMP hashing mechanism. Command mode: All
show ip route gateway <IP address> Displays routes to a single gateway. Command mode: All
show ip route interface <interface number> Displays routes on a single interface. Command mode: All
show ip route static Displays static routes configured on the switch. Command mode: All
show ip route tag {address bgp broadcast fixed martian multicast ospf rip static} Displays routes of a single tag. For a description of IP routing tags, see Table 42 on page 95 . Command mode: All
show ip route type {broadcast direct indirect local martian multicast} Displays routes of a single type. For a description of IP routing types, see Table 41 on page 95 . Command mode: All

Show All IP Route Information

The following command displays IP route information:

show ip route

Command mode: All

Destination	Mask	Gateway	Type	Tag	Metric	If
* 12.0.0.0	255.0.0.0	11.0.0.1	direct	fixed	128	
* 12.0.0.1	255.255.255.255	11.0.0.1	local	addr	128	
* 12.255.255.255	255.255.255.255	11.255.255.255	broadcast	broadcast	128	
* 12.0.0.0	255.0.0.0	12.0.0.1	direct	fixed	12	
* 12.0.0.1	255.255.255.255	12.0.0.1	local	addr	12	
* 255.255.255.255	255.255.255.255	12.255.255.255	broadcast	broadcast	2	
* 224.0.0.0	224.0.0.0	0.0.0.0	martian	martian		
* 224.0.0.5	255.255.255.255	0.0.0.0	multicast	addr		

The following table describes the Type parameters.

Table 41. IP Routing Type Parameters

Parameter	Description
indirect	The next hop to the host or subnet destination will be forwarded through a router at the Gateway address.
direct	Packets will be delivered to a destination host or subnet attached to the switch.
local	Indicates a route to one of the switch's IP interfaces.
broadcast	Indicates a broadcast route.
martian	The destination belongs to a host or subnet which is filtered out. Packets to this destination are discarded.
multicast	Indicates a multicast route.

The following table describes the Tag parameters.

Table 42. IP Routing Tag Parameters

Parameter	Description
fixed	The address belongs to a host or subnet attached to the switch.
static	The address is a static route which has been configured on the CN4093 10 Gb Converged Scalable Switch.
address	The address belongs to one of the switch's IP interfaces.
rip	The address was learned by the Routing Information Protocol (RIP).
ospf	The address was learned by Open Shortest Path First (OSPF).
bgp	The address was learned via Border Gateway Protocol (BGP).

Table 42. *IP Routing Tag Parameters (continued)*

Parameter	Description
broadcast	Indicates a broadcast address.
martian	The address belongs to a filtered group.
multicast	Indicates a multicast address.

ARP Information

The ARP information includes IP address and MAC address of each entry, address status flags (see [Table 44 on page 98](#)), VLAN and port for the address, and port referencing information.

Table 43. *ARP Information Commands*

Command Syntax and Usage
<p>show [ip] arp [all]</p> <p>Displays all ARP entries, including:</p> <ul style="list-style-type: none">o IP address and MAC address of each entryo Address status flag (see below)o The VLAN and port to which the address belongso The elapsed time (in seconds) since the ARP entry was learned <p>For more information, see page 98.</p> <p>Command mode: All</p>
<p>show [ip] arp find <IP address></p> <p>Displays a single ARP entry by IP address.</p> <p>Command mode: All</p>
<p>show ip arp inspection</p> <p>Displays the current Dynamic ARP Inspection (DAI) configuration settings. For details, see page 99.</p> <p>Command mode: All</p>
<p>show [ip] arp interface port <port alias or number></p> <p>Displays the ARP entries on a single port.</p> <p>Command mode: All</p>
<p>show [ip] arp reply</p> <p>Displays the ARP address list: IP address, IP mask, MAC address, and VLAN flags.</p> <p>Command mode: All</p>
<p>show [ip] arp static</p> <p>Displays all static ARP entries.</p> <p>Command mode: All</p>
<p>show [ip] arp vlan <VLAN number></p> <p>Displays the ARP entries on a single VLAN.</p> <p>Command mode: All</p>

Show All ARP Entry Information

The following command displays ARP information:

show arp

Command mode: All

IP address	Flags	MAC address	VLAN	Age	Port
12.20.1.1		00:15:40:07:20:42	4095	0	INT8
12.20.20.16		00:30:13:e3:44:14	4095	2	INT8
12.20.20.18		00:30:13:e3:44:14	4095	2	INT6
12.20.23.111		00:1f:29:95:f7:e5	4095	6	INT6

The Port field shows the target port of the ARP entry.

The Flags field is interpreted as follows:

Table 44. ARP Dump Flag Parameters

Flag	Description
P	Permanent entry created for switch IP interface.
R	Indirect route entry.
U	Unresolved ARP entry. The MAC address has not been learned.

ARP Address List Information

The following command displays owned ARP address list information:

show arp reply

Command mode: All

IP address	IP mask	MAC address	VLAN	Pass-Up
205.178.18.66	255.255.255.255	00:70:cf:03:20:04		P
205.178.50.1	255.255.255.255	00:70:cf:03:20:06	1	
205.178.18.64	255.255.255.255	00:70:cf:03:20:05	1	

Dynamic ARP Inspection Information

The following commands display Dynamic ARP Inspection (DAI) information:

Table 45. *Dynamic ARP Inspection Information Options*

Command Syntax and Usage
show ip arp inspection Displays the current DAI configuration settings. Command mode: All
show ip arp inspection interfaces [<i><port alias or number></i>] Displays the current DAI configuration settings for the selected interfaces. Command mode: All
show ip arp inspection vlan [<i><VLAN ID (1-4094)></i>] Displays the current DAI configuration settings for the selected VLANs. Command mode: All

show ip arp inspection interfaces [*<port alias or number>*]

Command mode: All

Interface	Trust State
-----	-----
1	Trusted
2	Trusted
3	Untrusted
4	Untrusted
...	

show ip arp inspection vlan [*<VLAN ID (1-4094)>*]

Command mode: All

Vlan	Configuration
----	-----
2	Enabled

BGP Information

The following commands display BGP information.

Table 46. *BGP Peer Information Commands*

Command Syntax and Usage
show ip bgp aggregate-address Displays BGP peer routes. See page 101 for a sample output. Command mode: All
show ip bgp information Displays the BGP routing table. See page 101 for a sample output. Command mode: All
show ip bgp neighbor information Displays BGP peer information. See page 100 for a sample output. Command mode: All
show ip bgp neighbor summary Displays peer summary information such as AS, message received, message sent, up/down, state. See page 101 for a sample output. Command mode: All

BGP Peer information

Following is an example of the information provided by the following command:

show ip bgp neighbor information

Command mode: All

<pre>BGP Peer Information: 3: 2.1.1.1 , version 4, TTL 225 Remote AS: 100, Local AS: 100, Link type: IBGP Remote router ID: 3.3.3.3, Local router ID: 1.1.201.5 BGP status: idle, Old status: idle Total received packets: 0, Total sent packets: 0 Received updates: 0, Sent updates: 0 Keepalive: 60, Holdtime: 180, MinAdvTime: 60 LastErrorCode: unknown(0), LastErrorSubcode: unspecified(0) Established state transitions: 1 4: 2.1.1.4 , version 4, TTL 225 Remote AS: 100, Local AS: 100, Link type: IBGP Remote router ID: 4.4.4.4, Local router ID: 1.1.201.5 BGP status: idle, Old status: idle Total received packets: 0, Total sent packets: 0 Received updates: 0, Sent updates: 0 Keepalive: 60, Holdtime: 180, MinAdvTime: 60 LastErrorCode: unknown(0), LastErrorSubcode: unspecified(0) Established state transitions: 1</pre>
--

BGP Summary Information

Following is an example of the information provided by the following command:

show ip bgp neighbor summary

Command mode: All

BGP Peer Summary Information:							
Peer	V	AS	MsgRcvd	MsgSent	Up/Down	State	
1: 205.178.23.142	4	142	113	121	00:00:28	established	
2: 205.178.15.148	0	148	0	0	never	connect	

BGP Aggregation Information

Following is an example of the information provided by the following command:

show ip bgp aggregate-address

Command mode: All

Current BGP aggregation settings:	
1: addr 4.2.0.0, mask 255.0.0.0, enabled	
2: addr 5.5.0.0, mask 255.255.0.0, enabled	

Dump BGP Information

Following is an example of the information provided by the following command:

show ip bgp information [<IPv4 network> <IPv4 mask>]

Command mode: All

Status codes: * valid, > best, i - internal							
Origin codes: i - IGP, e - EGP, ? - incomplete							
Network	Mask	Next Hop	Metr	LcPrf	Wght	Path	
*> 1.1.1.0	255.255.255.0	0.0.0.0			0	?	
*> 10.100.100.0	255.255.255.0	0.0.0.0			0	?	
*> 10.100.120.0	255.255.255.0	0.0.0.0			0	?	

The 13.0.0.0 is filtered out by rrmmap; or, a loop detected.

The IPv4 network and mask options restrict the output to a specific network in the BGP routing table.

OSPF Information

The following commands display OSPF information.

Table 47. *OSPF Information Commands*

Command Syntax and Usage
show ip ospf area <0-2> Displays area information for a particular area index. Command mode: All
show ip ospf area information Displays area information for all areas. Command mode: All
show ip ospf area-virtual-link information Displays information about all the configured virtual links. Command mode: All
show ip ospf general-information Displays general OSPF information. See page 103 for a sample output. Command mode: All
show ip ospf information Displays OSPF information. Command mode: All
show ip ospf interface <interface number> Displays OSPF information for a particular IP interface. See page 104 for a sample output. Command mode: All
show ip ospf interface loopback <1-5> Displays loopback information for a particular interface. If no parameter is supplied, it displays loopback information for all the interfaces. See page 104 for a sample output. Command mode: All
show ip ospf neighbor Displays the status of all the current neighbors. Command mode: All
show ip ospf routes Displays OSPF routing table. See page 109 for a sample output. Command mode: All

Table 47. *OSPF Information Commands (continued)*

Command Syntax and Usage
show ip ospf summary-range <0-2> Displays the list of summary ranges belonging to non-NSSA areas. Command mode: All
show ip ospf summary-range-nssa <0-2> Displays the list of summary ranges belonging to NSSA areas. Command mode: All

OSPF General Information

The following command displays general OSPF information:

show ip ospf general-information

Command mode: All

```
OSPF Version 2
Router ID: 10.10.10.1
Started at 1663 and the process uptime is 4626
Area Border Router: yes, AS Boundary Router: no
LS types supported are 6
External LSA count 0
External LSA checksum sum 0x0
Number of interfaces in this router is 2
Number of virtual links in this router is 1
16 new lsa received and 34 lsa originated from this router
Total number of entries in the LSDB 10
Database checksum sum 0x0
Total neighbors are 1, of which
                                2 are >=INIT state,
                                2 are >=EXCH state,
                                2 are =FULL state
Number of areas is 2, of which 3-transit 0-nssa
  Area Id : 0.0.0.0
  Authentication : none
  Import ASEextern : yes
  Number of times SPF ran : 8
  Area Border Router count : 2
  AS Boundary Router count : 0
  LSA count : 5
  LSA Checksum sum : 0x2237B
  Summary : noSummary
```

OSPF Interface Loopback Information

The following command displays OSPF interface loopback information:

```
show ip ospf interface loopback <interface number>
```

Command mode: All

```
Ip Address 5.5.5.5, Area 0.0.0.1, Passive interface, Admin Status UP
Router ID 1.1.1.2, State Loopback, Priority 1
Designated Router (ID) 0.0.0.0, Ip Address 0.0.0.0
Backup Designated Router (ID) 0.0.0.0, Ip Address 0.0.0.0
Timer intervals, Hello 10, Dead 40, Wait 40, Retransmit 5, Transit delay 1
Neighbor count is 0 If Events 1, Authentication type none
```

OSPF Interface Information

The following command displays OSPF interface information:

```
show ip ospf interface <interface number>
```

Command mode: All

```
Ip Address 10.10.12.1, Area 0.0.0.1, Admin Status UP
Router ID 10.10.10.1, State DR, Priority 1
Designated Router (ID) 10.10.10.1, Ip Address 10.10.12.1
Backup Designated Router (ID) 10.10.14.1, Ip Address 10.10.12.2
Timer intervals, Hello 10, Dead 40, Wait 1663, Retransmit 5,
Neighbor count is 1 If Events 4, Authentication type none
```

OSPF Information Route Codes

The following command displays OSPF route information:

```
show ip ospf routes
```

Command mode: All

```
Codes: IA - OSPF inter area,
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
IA 10.10.0.0/16 via 200.1.1.2
IA 40.1.1.0/28 via 20.1.1.2
IA 80.1.1.0/24 via 200.1.1.2
IA 100.1.1.0/24 via 20.1.1.2
IA 140.1.1.0/27 via 20.1.1.2
IA 150.1.1.0/28 via 200.1.1.2
E2 172.18.1.1/32 via 30.1.1.2
E2 172.18.1.2/32 via 30.1.1.2
E2 172.18.1.3/32 via 30.1.1.2
E2 172.18.1.4/32 via 30.1.1.2
E2 172.18.1.5/32 via 30.1.1.2
E2 172.18.1.6/32 via 30.1.1.2
E2 172.18.1.7/32 via 30.1.1.2
E2 172.18.1.8/32 via 30.1.1.2
```


OSPF Database Information

The following commands display OSPF Database information.

Table 48. *OSPF Database Information Commands*

<p>Command Syntax and Usage</p>
<p>show ip ospf database</p> <p>Displays all the LSAs.</p> <p>Command mode: All</p>
<p>show ip ospf database advertising-router <router ID></p> <p>Takes advertising router as a parameter. Displays all the Link State Advertisements (LSAs) in the LS database that have the advertising router with the specified router ID, for example: 20.1.1.1.</p> <p>Command mode: All</p>
<p>show ip ospf database asbr-summary [advertising-router <router ID> link-state-id <A.B.C.D> self]</p> <p>Displays ASBR summary LSAs. The use of this command is as follows:</p> <ul style="list-style-type: none"> o asbr-summary advertising-router 20.1.1.1 displays ASBR summary LSAs having the advertising router 20.1.1.1. o asbr-summary link-state-id 10.1.1.1 displays ASBR summary LSAs having the link state ID 10.1.1.1. o asbr-summary self displays the self advertised ASBR summary LSAs. o asbr-summary with no parameters displays all the ASBR summary LSAs. <p>Command mode: All</p>
<p>show ip ospf database database-summary</p> <p>Displays the following information about the LS database in a table format:</p> <ul style="list-style-type: none"> o Number of LSAs of each type in each area. o Total number of LSAs for each area. o Total number of LSAs for each LSA type for all areas combined. o Total number of LSAs for all LSA types for all areas combined. <p>No parameters are required.</p> <p>Command mode: All</p>
<p>show ip ospf database external [advertising-router <router ID> link-state-id <A.B.C.D> self]</p> <p>Displays the AS-external (type 5) LSAs with detailed information of each field of the LSAs.</p> <p>Command mode: All</p>
<p>show ip ospf database network [advertising-router <router ID> link-state-id <A.B.C.D> self]</p> <p>Displays the network (type 2) LSAs with detailed information of each field of the LSA.network LS database.</p> <p>Command mode: All</p>

Table 48. *OSPF Database Information Commands (continued)*

Command Syntax and Usage
<p>show ip ospf database nssa</p> <p>Displays the NSSA (type 7) LSAs with detailed information of each field of the LSAs.</p> <p>Command mode: All</p>
<p>show ip ospf database router [advertising-router <router ID> link-state-id <A.B.C.D> self]</p> <p>Displays the router (type 1) LSAs with detailed information of each field of the LSAs.</p> <p>Command mode: All</p>
<p>show ip ospf database self</p> <p>Displays all the self-advertised LSAs. No parameters are required.</p> <p>Command mode: All</p>
<p>show ip ospf database summary [advertising-router <router ID> link-state-id <A.B.C.D> self]</p> <p>Displays the network summary (type 3) LSAs with detailed information of each field of the LSAs.</p> <p>Command mode: All</p>

OSPFv3 Information

The following commands display OSPFv3 information.

Table 49. *OSPFv3 Information Options*

Command Syntax and Usage
show ipv6 ospf area <area index (0-2)> Displays the area information. Command mode: All
show ipv6 ospf areas Displays the OSPFv3 Area Table. Command mode: All
show ipv6 ospf area-range information Displays OSPFv3 summary ranges. Command mode: All
show ipv6 ospf area-virtual-link Displays information about all the configured virtual links. Command mode: All
show ipv6 ospf border-routers Displays OSPFv3 routes to an ABR or ASBR. Command mode: All
show ipv6 ospf host Displays OSPFv3 host configuration information. Command mode: All
show ipv6 ospf information Displays all OSPFv3 information. To view a sample display, see page 108 . Command mode: All
show ipv6 ospf interface <interface number> Displays interface information for a particular interface. If no parameter is supplied, it displays information for all the interfaces. To view a sample display, see page 109 . Command mode: All
show ipv6 ospf neighbor <nbr router-id (A.B.C.D)> Displays the status of a neighbor with a particular router ID. If no router ID is supplied, it displays the information about all the current neighbors. Command mode: All

Table 49. *OSPFv3 Information Options*

Command Syntax and Usage
<p>show ipv6 ospf redist-config</p> <p>Displays OSPFv3 redistribution information to be applied to routes learned from the route table.</p> <p>Command mode: All</p>
<p>show ipv6 ospf request-list <nbr router-id (A.B.C.D)></p> <p>Displays the OSPFv3 request list. If no router ID is supplied, it displays the information about all the current neighbors.</p> <p>Command mode: All</p>
<p>show ipv6 ospf retrans-list <nbr router-id (A.B.C.D)></p> <p>Displays the OSPFv3 retransmission list. If no router ID is supplied, it displays the information about all the current neighbors.</p> <p>Command mode: All</p>
<p>show ipv6 ospf routes</p> <p>Displays OSPFv3 routing table. To view a sample display, see page 109.</p> <p>Command mode: All</p>
<p>show ipv6 ospf summary-prefix <area index (0-2)></p> <p>Displays the OSPFv3 external summary-address configuration information.</p> <p>Command mode: All</p>

OSPFv3 Information Dump

The following command displays OSPFv3 information:

show ipv6 ospf information

Command mode: All

<pre> Router Id: 1.0.0.1 ABR Type: Standard ABR SPF schedule delay: 5 secs Hold time between two SPFs: 10 secs Exit Overflow Interval: 0 Ref BW: 100000 Ext Lsdb Limit: none Trace Value: 0x00008000 As Scope Lsa: 2 Checksum Sum: 0xfe16 Passive Interface: Disable Nssa Asbr Default Route Translation: Disable Autonomous System Boundary Router Redistributing External Routes from connected, metric 10, metric type asExtType1, no tag set Number of Areas in this router 1 Area 0.0.0.0 Number of interfaces in this area is 1 Number of Area Scope Lsa: 7 Checksum Sum: 0x28512 Number of Indication Lsa: 0 SPF algorithm executed: 2 times </pre>
--

OSPFv3 Interface Information

The following command displays OSPFv3 interface information:

show ipv6 ospf interface

Command mode: All

```
OspfV3 Interface Information
Interface Id: 1      Instance Id: 0      Area Id: 0.0.0.0
Local Address: fe80::222:ff:fe7d:5d00  Router Id: 1.0.0.1
Network Type: BROADCAST  Cost: 1      State: BACKUP

Designated Router Id: 2.0.0.2      local address:
fe80::218:b1ff:fea1:6c01

Backup Designated Router Id: 1.0.0.1      local address:
fe80::222:ff:fe7d:5d00

Transmit Delay: 1 sec  Priority: 1      IfOptions: 0x0
Timer intervals configured:
Hello: 10, Dead: 40, Retransmit: 5
Hello due in 6 sec
Neighbor Count is: 1, Adjacent neighbor count is: 1
Adjacent with neighbor 2.0.0.2
```

OSPFv3 Routes Information

The following command displays OSPFv3 route information:

show ipv6 ospf routes

Command mode: All

Dest/ Prefix-Length	NextHop/ IfIndex	Cost	Rt. Type	Area
3ffe::10:0:0:0 /80	fe80::290:69ff fe90:b4bf /vlan1	30	interArea	0.0.0.0
3ffe::20:0:0:0 /80	fe80::290:69ff fe90:b4bf /vlan1	20	interArea	0.0.0.0
3ffe::30:0:0:0 /80	:: /vlan2	10	intraArea	0.0.0.0
3ffe::60:0:0:6 /128	fe80::211:22ff fe33:4426 /vlan2	10	interArea	0.0.0.0

OSPFv3 Database Information

The following commands display OSPFv3 Database information.

Table 50. *OSPFv3 Database Information Options*

Command Syntax and Usage
show ipv6 ospf database [detail hex] Displays all the LSAs. Command mode: All
show ipv6 ospf database as-external [detail hex] Displays AS-External LSAs database information. If no parameter is supplied, it displays condensed information. Command mode: All
show ipv6 ospf database inter-prefix [detail hex] Displays Inter-Area Prefix LSAs database information. If no parameter is supplied, it displays condensed information. Command mode: All
show ipv6 ospf database inter-router [detail hex] Displays Inter-Area router LSAs database information. If no parameter is supplied, it displays condensed information. Command mode: All
show ipv6 ospf database intra-prefix [detail hex] Displays Intra-Area Prefix LSAs database information. If no parameter is supplied, it displays condensed information. Command mode: All
show ipv6 ospf database link [detail hex] Displays Link LSAs database information. If no parameter is supplied, it displays condensed information. Command mode: All
show ipv6 ospf database network [detail hex] Displays Network LSAs database information. If no parameter is supplied, it displays condensed information. Command mode: All
show ipv6 ospf database router [detail hex] Displays the Router LSAs with detailed information of each field of the LSAs. If no parameter is supplied, it displays condensed information. Command mode: All
show ipv6 ospf database nssa [detail hex] Displays Type-7 (NSSA) LSA database information. If no parameter is supplied, it displays condensed information. Command mode: All

Routing Information Protocol

The following commands display Routing Information Protocol (RIP) information.

Table 51. *Routing Information Protocol Commands*

Command Syntax and Usage
show ip rip routes Displays RIP routes. For more information, see page 111 . Command mode: All
show interface ip <interface number> rip Displays RIP user's configuration. For more information, see page 111 . Command mode: All

RIP Routes Information

The following command displays RIP route information:

show ip rip routes

Command mode: All

```
>> IP Routing#  
  
30.1.1.0/24 directly connected  
3.0.0.0/8 via 30.1.1.11 metric 4  
4.0.0.0/16 via 30.1.1.11 metric 16  
10.0.0.0/8 via 30.1.1.2 metric 3  
20.0.0.0/8 via 30.1.1.2 metric 2
```

This table contains all dynamic routes learned through RIP, including the routes that are undergoing garbage collection with metric = 16. This table does not contain locally configured static routes.

RIP Interface Information

The following command displays RIP user information:

show ip rip interface <interface number>

Command mode: All

```
RIP USER CONFIGURATION :  
  RIP: ON, update 30  
  RIP on Interface 49 : 101.1.1.10, enabled  
  version 2, listen enabled, supply enabled, default none  
  poison disabled, split horizon enabled, trigg enabled, mcast  
  enabled, metric 1  
  auth none, key none
```

IPv6 Routing Information

[Table 52](#) describes the IPv6 Routing information options.

Table 52. *IPv6 Routing Information Commands*

Command Syntax and Usage
show ipv6 route Displays all IPv6 routing information. For more information, see page 113 . Command mode: All
show ipv6 route address <i><IPv6 address></i> Displays a single route by destination IP address. Command mode: All
show ipv6 route gateway <i><default gateway address></i> Displays routes to a single gateway. Command mode: All
show ipv6 route interface <i><interface number></i> Displays routes on a single interface. Command mode: All
show ipv6 route static Displays all static IPv6 routes. Command mode: All
show ipv6 route type { <i>connected static ospf</i> } Displays routes of a single type. Command mode: All
show ipv6 route summary Displays a summary of IPv6 routing information, including inactive routes. Command mode: All

IPv6 Routing Table

The following command displays IPv6 routing information:

show ipv6 route

Command mode: All

```
IPv6 Routing Table - 3 entries
Codes : C - Connected, S - Static
        O - OSPF
        D - Data Gateway from RA
        M - Management Gateway, E - Ext-Management Gateway
        N - Management Gateway from RA
        F - Ext-Management Gateway from RA

S  ::/0 [1/20]
   via 2001:2:3:4::1, Interface 2
C  2001:2:3:4::/64 [1/1]
   via ::, Interface 2
C  fe80::20f:6aff:feec:f701/128 [1/1]
   via ::, Interface 2
```

Note: The first number inside the brackets represents the metric and the second number represents the preference for the route.

IPv6 Neighbor Discovery Cache Information

The following commands display IPv6 Neighbor Discovery Cache information.

Table 53. *IPv6 Neighbor Discovery Cache Information Commands*

Command Syntax and Usage
show ipv6 neighbors Shows all IPv6 Neighbor Discovery cache entries. For more information, see page 114 . Command mode: All
show ipv6 neighbors find <IPv6 address> Shows a single IPv6 Neighbor Discovery cache entry by IP address. Command mode: All
show ipv6 neighbors interface port <port alias or number> Shows IPv6 Neighbor Discovery cache entries on a single port. Command mode: All
show ipv6 neighbors static Displays static IPv6 Neighbor Discovery cache entries. Command mode: All
show ipv6 neighbors vlan <VLAN number> Shows IPv6 Neighbor Discovery cache entries on a single VLAN. Command mode: All

IPv6 Neighbor Discovery Cache Information

The following command displays a summary of IPv6 Neighbor Discovery cache information:

show ipv6 neighbors

Command mode: All

IPv6 Address	Age	Link-layer Addr	State	IF	VLAN	Port

2001:2:3:4::1	10	00:50:bf:b7:76:b0	Reachable	2	1	EXT1
fe80::250:bfff:feb7:76b0	0	00:50:bf:b7:76:b0	Stale	2	1	EXT2

IPv6 Neighbor Discovery Prefix Information

The following command displays a summary of IPv6 Neighbor Discovery prefix information:

show ipv6 prefix

Command mode: All

```
Codes: A - Address , P - Prefix-Advertisement
       D - Default , N - Not Advertised
       [L] - On-link Flag is set
       [A] - Autonomous Flag is set

AD 10:: 64 [LA] Valid lifetime 2592000 , Preferred lifetime 604800
P 20:: 64 [LA] Valid lifetime 200 , Preferred lifetime 100
```

Neighbor Discovery prefix information includes information about all configured prefixes.

The following command displays IPv6 Neighbor Discovery prefix information for an interface:

show ipv6 prefix interface *<interface number>*

Command mode: All

ECMP Static Route Information

The following command displays Equal Cost Multi-Path (ECMP) route information:

show ip ecmp

Command mode: All

Current ecmp static routes:				
Destination	Mask	Gateway	If	GW Status
10.10.1.1	255.255.255.255	100.10.1.1	1	up
		200.20.2.2	1	down
10.20.2.2	255.255.255.255	10.233.3.3	1	up
10.20.2.2	255.255.255.255	10.234.4.4	1	up
10.20.2.2	255.255.255.255	10.235.5.5	1	up

ECMP route information shows the status of each ECMP route configured on the switch.

ECMP Hashing Result

The following command displays the status of ECMP hashing on each switch:

show ip route ecmp hash

Command mode: All

ECMP Hash Mechanism: dipsip

IGMP Information

The following commands display IGMP information:

Table 54. *IGMP Information Commands*

Command Syntax and Usage
show ip igmp Displays the current IGMP configuration parameters. Command mode: All
show ip igmp filtering Displays current IGMP Filtering parameters. Command mode: All
show ip igmp groups Displays information for all multicast groups. For a command sample output, see page 120 . Command mode: All
show ip igmp groups address <IP address> Displays a single IGMP multicast group by its IP address. Command mode: All
show ip igmp groups detail <IP address> Displays details about an IGMP multicast group, including source and timer information. Command mode: All
show ip igmp groups interface port <port alias or number> Displays all IGMP multicast groups on a single port. Command mode: All
show ip igmp groups portchannel <trunk number> Displays all IGMP multicast groups on a single Link Aggregation Group (LAG). Command mode: All
show ip igmp groups vlan <VLAN number> Displays all IGMP multicast groups on a single VLAN. Command mode: All
show ip igmp ipmcgrp Displays information for all IPMC groups. For details, see page 121 . Command mode: All
show ip igmp mrouter [information] Displays IGMP Multicast Router information. For details, see page 121 . Command mode: All

Table 54. IGMP Information Commands (continued)

Command Syntax and Usage
show ip igmp mrouter dynamic Displays IGMP Multicast Router dynamic information. Command mode: All
show ip igmp mrouter interface port <port alias or number> Displays IGMP Multicast Router information the specified interface. Command mode: All
show ip igmp mrouter portchannel <trunk number> Displays IGMP Multicast Router information the specified portchannel. Command mode: All
show ip igmp mrouter static Displays IGMP Multicast Router static information. Command mode: All
show ip igmp mrouter vlan <VLAN number> Displays IGMP Multicast Router information for the specified VLAN. Command mode: All
show ip igmp profile <1-16> Displays information about the current IGMP filter. Command mode: All
show ip igmp querier vlan <VLAN number> Displays IGMP Querier information. For details, see page 119 . Command mode: All
show ip igmp snoop Displays IGMP Snooping information. Command mode: All

IGMP Querier Information

The following command displays IGMP Querier information:

```
show ip igmp querier vlan <VLAN number>
```

Command mode: All

```
Current IGMP Querier information:
IGMP Querier information for vlan 1:
Other IGMP querier - none
Switch-querier enabled, current state: Querier
Switch-querier type: Ipv4, address 1.1.1.1,
Switch-querier general query interval: 125 secs,
Switch-querier max-response interval: 100 'tenths of secs',
Switch-querier startup interval: 31 secs, count: 2
Switch-querier robustness: 2
IGMP configured version is v3
IGMP Operating version is v3
```

IGMP Querier information includes:

- VLAN number
- Querier status
 - Other IGMP querier—none
 - IGMP querier present, address: (IP or MAC address)
- Querier election type (IPv4 or MAC) and address
- Query interval
- Querier startup interval
- Maximum query response interval
- Querier robustness value
- Other IGMP querier present, interval (minutes:seconds)
- IGMP Querier current state: Querier/Non-Querier
- IGMP version number

IGMP Group Information

The following command displays IGMP Group information:

show ip igmp groups

Command mode: All

```
Total entries: 5 Total IGMP groups: 2
Note: The <Total IGMP groups> number is computed as
the number of unique (Group, Vlan) entries!
Note: Local groups (224.0.0.x) are not snooped/relayed and will not
appear.
```

Source	Group	VLAN	Port	Version	Mode	Expires	Fwd
10.1.1.1	232.1.1.1	2	4	V3	INC	4:16	Yes
10.1.1.5	232.1.1.1	2	4	V3	INC	4:16	Yes
*	232.1.1.1	2	4	V3	INC	-	No
10.10.10.43	235.0.0.1	9	1	V3	EXC	2:26	No
*	235.0.0.1	9	1	V3	EXC	-	Yes

IGMP Group information includes:

- IGMP source address
- IGMP Group address
- VLAN and port
- IGMP version
- IGMPv3 filter mode
- Expiration timer value
- IGMP multicast forwarding state

IGMP Multicast Router Information

The following command displays Mrouter information:

```
show ip igmp mrouter information
```

Command mode: All

```
Total entries: 3
Total number of dynamic mroouters: 2
Total number of installed static mroouters: 1
```

SrcIP	VLAN	Port	Version	Expires	MRT	QRV	QQIC
10.1.1.1	3	EXT4	V3	4:09	128	2	125
10.1.1.5	2	EXT6	V2	4:09	125	-	-
*	9	EXT7	V2	static	-	-	-

IGMP Mrouter information includes:

- Source IP address
- VLAN and port where the Mrouter is connected
- IGMP version
- Mrouter expiration
- Maximum query response time
- Querier's Robustness Variable (QRV)
- Querier's Query Interval Code (QQIC)

IPMC Group Information

The following command displays IGMP IPMC group information:

```
show ip igmp ipmcgrp
```

Command mode: All

```
Total number of displayed ipmc groups: 4
Legend(possible values in Type column):
SH - static host      DR - dynamic registered
SP - static primary  DU - dynamic unregistered
SB - static backup   M - mrouter
0 - other
```

Source	Group	Vlan	Port	Type	Timeleft
*	232.0.0.1	1	-	DU	6 sec
*	232.0.0.2	1	-	DU	6 sec
*	232.0.0.3	1	-	DU	6 sec
*	232.0.0.4	1	-	DU	6 sec

IGMP IPMC Group information includes:

- IGMPv3 source address
- Multicast group address
- VLAN and port
- Type of IPMC group
- Expiration timer value

MLD information

[Table 55](#) describes the commands used to view Multicast Listener Discovery (MLD) information.

Table 55. *MLD Information Commands*

Command Syntax and Usage
show ipv6 mld groups Displays MLD multicast group information. Command mode: All
show ipv6 mld groups address <IPv6 address> Displays group information for the specified IPv6 address. Command mode: All
show ipv6 mld groups interface port <port alias or number> Displays MLD groups on a single interface port. Command mode: All
show ipv6 mld groups portchannel <LAG number> Displays groups on a single port channel. Command mode: All
show ipv6 mld groups vlan <VLAN number> Displays groups on a single VLAN. Command mode: All
show ipv6 mld mrouter Displays all MLD Mrouter ports. See page 123 for sample output. Command mode: All

MLD Mrouter Information

The following command displays MLD Mrouter information:

```
show ipv6 mld mrouter
```

Command mode: All

```
Source: fe80:0:0:0:200:14ff:fea8:40c9
Port/Vlan: 26/4
Interface: 3
QRV: 2  QQIC:125
Maximum Response Delay: 1000
Version: MLDv2 Expires:1:02
```

The following table describes the MLD Mrouter information displayed in the output.

Table 56. *MLD Mrouter*

Statistic	Description
Source	Displays the link-local address of the reporter.
Port/Vlan	Displays the port/vlan on which the general query is received.
Interface	Displays the interface number on which the general query is received.
QRV	Displays the Querier's robustness variable value.
QQIC	Displays the Querier's query interval code.
Maximum Response Delay	Displays the configured maximum query response time.
Version	Displays the MLD version configured on the interface.
Expires	Displays the amount of time that must pass before the multicast router decides that there are no more listeners for a multicast address or a particular source on a link.

VRRP Information

Virtual Router Redundancy Protocol (VRRP) support on CN4093 10 Gb Converged Scalable Switch provides redundancy between routers in a LAN. This is accomplished by configuring the same virtual router IP address and ID number on each participating VRRP-capable routing device. One of the virtual routers is then elected as the master, based on a number of priority criteria, and assumes control of the shared virtual router IP address. If the master fails, one of the backup virtual routers will assume routing authority and take control of the virtual router IP address.

The following command displays VRRP information:

show ip vrrp information

Command mode: All

```
VRRP information:
 1: vrid 2, 205.178.18.210, if 1, renter, prio 100, master
 2: vrid 1, 205.178.18.202, if 1, renter, prio 100, backup
 3: vrid 3, 205.178.18.204, if 1, renter, prio 100, master
```

When virtual routers are configured, you can view the status of each virtual router using this command. VRRP information includes:

- Virtual router number
- Virtual router ID and IP address
- Interface number
- Ownership status
 - owner identifies the preferred master virtual router. A virtual router is the owner when the IP address of the virtual router and its IP interface are the same.
 - renter identifies virtual routers which are not owned by this device.
- Priority value. During the election process, the virtual router with the highest priority becomes master.
- Activity status
 - master identifies the elected master virtual router.
 - backup identifies that the virtual router is in backup mode.
 - holdoff identifies that the virtual router is in holdoff state.
 - init identifies that the virtual router is waiting for a startup event. For example, once it receives a startup event, it transitions to master if its priority is 255, (the IP address owner), or transitions to backup if it is not the IP address owner.

Interface Information

The following command displays interface information:

show interface ip

Command mode: All

```
Interface information:
 126:   IP6 fd55:faaf:e1ab:1022:7699:75ff:fe91:a6ef/64   , vlan 4095, up
        fe80::7699:75ff:fe91:a6ef
 128:   IP4 9.37.78.51      255.255.252.0   9.37.79.255 , vlan 4095, up
```

For each interface, the following information is displayed:

- IPv4 interface address and subnet mask
- IPv6 address and prefix
- VLAN assignment
- Status (up, down, disabled)

IPv6 Interface Information

The following command displays IPv6 interface information:

show ipv6 interface [*<interface number>*]

Command mode: All

```
Interface information:
 2: IP6 2001:0:0:0:225:3ff:febb:bb15/64          , vlan 1, up
    fe80::225:3ff:febb:bb15
Link local address:
  fe80::225:3ff:febb:bb15
Global unicast address(es):
 2001::225:3ff:febb:bb15/64
Anycast address(es):
 Not Configured.
Joined group address(es):
 ff02::1
 ff02::2
 ff02::1:ffbb:bb15
MTU is 1500
ICMP redirects are enabled
ND DAD is enabled, Number of DAD attempts: 1
ND router advertisement is disabled
```

For each interface, the following information is displayed:

- IPv6 interface address and prefix
- VLAN assignment
- Status (up, down, disabled)
- Path MTU size
- Status of ICMP redirects
- Status of Neighbor Discovery (ND) Duplicate Address Detection (DAD)
- Status of Neighbor Discovery router advertisements

IPv6 Path MTU Information

The following command displays IPv6 Path MTU information:

show ipv6 pmtu [*<destination IPv6 address>*]

Command mode: All

```
Path MTU Discovery info:
Max Cache Entry Number : 10
Current Cache Entry Number: 2
Cache Timeout Interval : 10 minutes
Destination Address      Since      PMTU
5000:1::3                00:02:26  1400
FE80::203:A0FF:FED6:141D 00:06:55  1280
```

Path MTU Discovery information provides information about entries in the Path MTU cache. The PMTU field indicates the maximum packet size in octets that can successfully traverse the path from the switch to the destination node. It is equal to the minimum link MTU of all the links in the path to the destination node.

IP Information

The following command displays Layer 3 information:

show ip interface brief

Command mode: All

```
IP information:
  AS number 0

Interface information:
126: IP6 0:0:0:0:0:0:0:0/0          , vlan 4095, up
      fe80::200:ff:fe00:ef
128: IP4 9.43.95.121      255.255.255.0   9.43.95.255,   vlan 4095, up

Loopback interface information:

Default gateway information: metric strict
  4: 9.43.95.254,      FAILED

Default IP6 gateway information:

Current BOOTP relay settings: OFF
Global servers:
-----
Server 1 address 0.0.0.0
Server 2 address 0.0.0.0
Server 3 address 0.0.0.0
Server 4 address 0.0.0.0
Server 5 address 0.0.0.0

Current IP forwarding settings: ON, dirbr disabled, icmprd disabled

Current network filter settings:
  none

Current route map settings:
RIP is disabled.

OSPF is disabled.

OSPFv3 is disabled.

BGP is disabled.
```

IP information includes:

- IP interface information: Interface number, IP address, subnet mask, broadcast address, VLAN number, and operational status.
- Default gateway information: Metric for selecting which configured gateway to use, gateway number, IP address, and health status.
- BootP relay settings.
- IP forwarding settings, including the forwarding status of directed broadcasts, and the status of ICMP re-directs.
- Network filter settings, if applicable.
- Route map settings, if applicable.

IKEv2 Information

The following table lists commands that display information about IKEv2.

Table 57. *IKEv2 Information Commands*

Command Syntax and Usage
show ikev2 Displays all IKEv2 information. See page 130 for sample output. Command mode: All
show ikev2 ca-cert Displays the CA certificate. Command mode: All
show ikev2 host-cert Displays the host certificate. Command mode: All
show ikev2 identity Displays IKEv2 identity information. Command mode: All
show ikev2 preshare-key Displays the IKEv2 preshare key. Command mode: All
show ikev2 proposal Displays the IKEv2 proposal. Command mode: All
show ikev2 retransmit-interval Displays the IKEv2 retransmit interval. Command mode: All
show ikev2 sa Displays the IKEv2 SA. Command mode: All

IKEv2 Information Dump

The following command displays IKEv2 information:

show ikev2

Command mode: All

```
IKEv2 retransmit time:      20
IKEv2 cookie notification:  disable
IKEv2 authentication method: Pre-shared key
IKEv2 proposal:
Cipher:                      3des
Authentication:              sha1
DH Group:                    dh-2
Local preshare key:         lenovo123
IKEv2 choose IPv6 address as ID type
No SAD entries.
```

IKEv2 information includes:

- IKEv2 retransmit time, in seconds.
- Whether IKEv2 cookie notification is enabled.
- The IKEv2 proposal in force. This includes the encryption algorithm (cipher), the authentication algorithm type, and the Diffie-Hellman (DH) group, which determines the strength of the key used in the key exchange process. Higher DH group numbers are more secure but require additional time to compute the key.
- The local preshare key.
- Whether IKEv2 is using IPv4 or IPv6 addresses as the ID type.
- Security Association Database (SAD) entries, if applicable.

IPsec Information

The following table describes the commands used to display information about IPsec.

Table 58. *IPsec Information Commands*

Command Syntax and Usage
show ipsec dynamic-policy <1-10> Displays dynamic policy information. Command mode: All
show ipsec manual-policy <1-10> Displays manual policy information. See page 132 for sample output. Command mode: All
show ipsec sa Displays all security association information. Command mode: All
show ipsec spd Displays all security policy information. Command mode: All
show ipsec traffic-selector <1-10> Displays IPsec traffic selector information. Command mode: All
show ipsec transform-set <1-10> Displays IPsec transform set information. Command mode: All

IPsec Manual Policy Information

The following command displays IPsec manual key management policy information:

show ipsec manual-policy

Command mode: All

```
IPsec manual policy 1 -----
IP Address:                2002:0:0:0:0:0:151
Associated transform ID:    1
Associated traffic selector ID: 1
IN-ESP SPI:                9900
IN-ESP encryption KEY:     3456789abcdef012
IN-ESP authentication KEY: 23456789abcdef0123456789abcdef0123456789
OUT-ESP SPI:               7700
OUT-ESP encryption KEY:    6789abcdef012345
OUT-ESP authentication KEY: 56789abcdef0123456789abcdef0123456789abc
Applied on interface:
interface 1
```

IPsec manual policy information includes:

- The IP address of the remote peer
- The transform set ID associated with this policy
- Traffic selector ID associated with this policy
- ESP inbound SPI
- ESP inbound encryption key
- ESP inbound authentication key
- ESP outbound SPI
- ESP outbound encryption key
- ESP outbound authentication key
- The interface to which this manual policy has been applied

DHCP Snooping Information

The following command displays DHCP Snooping information:

show ip dhcp snooping

Command mode: All

```
DHCP Snooping is configured on the following VLANs:
empty
Insertion of option 82 information is Disable
Interface    Trusted    Rate limit (pps)
-----
          1         No          none
          5         No          none
          6         No          none
          7         No          none
          8         No          none
          9         No          none
         10         No          none
         11         No          none
         12         No          none
         13         No          none
         14         No          none
         15         No          none
...

```

The following command displays the DHCP binding table:

show ip dhcp snooping binding

Command mode: All

Mac Address	IP Address	Lease(seconds)	Type	VLAN	Interface
00:00:01:00:02:01	10.0.0.1	1600	dynamic	100	port 1
02:1c:5f:d1:18:9c	210.38.197.63	86337	Static	127	1
06:51:4d:e6:16:2d	194.116.155.190	86337	Static	105	1
08:69:0f:1d:ba:3d	40.90.17.26	86337	Static	150	1
08:a2:6d:00:36:56	40.194.18.213	86337	Static	108	1
0e:a7:f8:a2:74:2c	130.254.47.129	86337	Static	171	1
0e:b7:64:02:97:7c	35.92.27.110	86337	Static	249	1

Total number of bindings: 7

The DHCP Snooping binding table displays information for each entry in the table. Each entry has a MAC address, an IP address, the lease time, the interface to which the entry applies and the VLAN to which the interface belongs.

PIM Information

The following commands display PIM information.

Table 59. *PIM Information Options*

Command Syntax and Usage
<p>show ip pim bsr [<i><component ID></i>] Displays information about the PIM bootstrap router (BSR). Command mode: All</p>
<p>show ip pim component [<i><component ID (1-2)></i>] Displays PIM component information. For details, see page 135. Command mode: All</p>
<p>show ip pim elected-rp [group <i><multicast group address></i>] Displays a list of the elected Rendezvous Points. Command mode: All</p>
<p>show ip pim interface [<i><interface number></i> detail port <i><port number></i>] Displays PIM interface information. To view sample output, see page 135. Command mode: All</p>
<p>show ip pim mroute [<i><component ID></i> count flags group <i><multicast group address></i> interface {<i><interface number></i> port <i><port number></i>} source <i><multicast source address></i>] Displays information about PIM multicast routes. For more information about displaying PIM multicast route information, see page 137. Command mode: All</p>
<p>show ip pim neighbor [<i><interface number></i> port <i><port number></i>] Displays PIM neighbor information. To view sample output, see page 136. Command mode: All</p>
<p>show ip pim neighbor-filters Displays information about PIM neighbor filters. Command mode: All</p>
<p>show ip pim rp-candidate [<i><component ID></i>] Displays a list of the candidate Rendezvous Points configured. Command mode: All</p>
<p>show ip pim rp-set [<i><RP IP address></i>] Displays a list of the Rendezvous Points learned. Command mode: All</p>
<p>show ip pim rp-static [<i><component ID></i>] Displays a list of the static Rendezvous Points configured. Command mode: All</p>

PIM Component Information

The following command displays Protocol Independent Multicast (PIM) component information:

show ip pim component [*<component ID>*]

Command mode: All

```
PIM Component Information
-----
Component-Id: 1
  PIM Mode: sparse,   PIM Version: 2
  Elected BSR: 1.1.1.1
  Candidate RP Holdtime: 100
```

```
PIM Component Information
-----
Component-Id: 1
  PIM Mode: dense,   PIM Version: 2
  Graft Retry Count: 1
```

PIM component information includes the following:

- Component ID
- Mode (sparse, dense)
- PIM Version
- Elected Bootstrap Router (BSR) address
- Candidate Rendezvous Point (RP) hold time, in seconds

PIM Interface Information

The following command displays information about PIM interfaces:

show ip pim interface

Command mode: All

Address	IfName/IfId	Ver/Mode	Nbr Count	Qry Interval	DR-Address	DR-Prio
40.0.0.3	net4/4	2/Sparse	1	30	40.0.0.3	1
50.0.0.3	net5/5	2/Sparse	0	30	50.0.0.3	1

PIM interface information includes the following for each PIM interface:

- IP address
- Name and ID
- Version and mode
- Neighbor count
- Query interval
- Designated Router address
- Designated Router priority value

PIM Neighbor Information

The following command displays PIM neighbor information:

show ip pim neighbor

Command mode: All

Neighbour Address	IfName/Idx	Uptime/Expiry	Ver	DRPri/Mode	CompId	Override Interval	Lan Delay
40.0.0.2	net4/4	00:00:37/79	v2	1/S	1	0	0
40.0.0.4	net1/160	00:03:41/92	v2	32/S	2	0	0

PIM neighbor information includes the following:

- Neighbor IP address, interface name, and interface ID
- Name and ID of interface used to reach the PIM neighbor
- Up time (the time since this neighbor became the neighbor of the local router)
- Expiry Time (the minimum time remaining before this PIM neighbor expires)
- Version number
- Designated Router priority and mode
- Component ID
- Override interval
- LAN delay interval

PIM Multicast Route Information Commands

The following commands display PIM Multicast Route information.

Table 60. PIM Multicast Route Information Options

Command Syntax and Usage
<p>show ip pim mroute</p> <p>Displays information about all PIM multicast routes.</p> <p>Command mode: All</p>
<p>show ip pim mroute [<component ID>]</p> <p>Displays PIM multicast routes for the selected component.</p> <p>Command mode: All</p>
<p>show ip pim mroute count</p> <p>Displays a count of PIM multicast routes of each type.</p> <p>Command mode: All</p>
<p>show ip pim mroute flags [s] [r] [w]</p> <p>Displays PIM multicast routes based on the selected entry flags. Enter flags in any combination:</p> <ul style="list-style-type: none"> o S: Shortest Path Tree (SPT) bit o R: Rendezvous Point Tree (RPT) bit o W: Wildcard bit <p>Command mode: All</p>
<p>show ip pim mroute group <multicast group IP address></p> <p>Displays PIM multicast routes for the selected multicast group.</p> <p>Command mode: All</p>
<p>show ip pim mroute interface <interface number></p> <p>Displays PIM multicast routes for the selected incoming IP interface.</p> <p>Command mode: All</p>
<p>show ip pim mroute source <multicast source IP address></p> <p>Displays PIM multicast routes for the selected source IP address.</p> <p>Command mode: All</p>

PIM Multicast Route Information

The following command displays PIM multicast route information:

show ip pim mroute

Command mode: All

```
IP Multicast Routing Table
-----
Route Flags S: SPT Bit W: Wild Card Bit R: RPT Bit
Timers: Uptime/Expires

(8.8.8.111, 224.2.2.100) ,00:42:03/00:01:11
Incoming Interface : net44 ,RPF nbr : 44.44.44.1 ,Route Flags : S
Outgoing InterfaceList :
    net17, Forwarding/Sparse ,00:42:03/---

(*, 224.2.2.100) ,00:45:15/--- ,RP : 88.88.88.2
Incoming Interface : net5 ,RPF nbr : 5.5.5.2 ,Route Flags : WR
Outgoing InterfaceList :
    net17, Forwarding/Sparse ,00:45:15/---

Total number of (*,G) entries : 1
Total number of (S,G) entries : 1
```

Quality of Service Information

The following commands display Quality of Service information.

Table 61. *QoS Information Options*

Command Syntax and Usage
show qos dscp Displays the current DSCP parameters. Command mode: All
show qos protocol-packet-control information protocol Displays of mapping of protocol packet types to each packet queue number. The status indicates whether the protocol is running or not running. Command mode: All
show qos protocol-packet-control information queue [all] Displays of mapping of protocol packet types to each packet queue number. The status indicates whether the protocol is running or not running. Command mode: All
show qos transmit-queue Displays mapping of 802.1p value to Class of Service queue number, and COS queue weight value. Command mode: All
show qos transmit-queue information Displays all 802.1p information. For details, see page 140 . Command mode: All
show qos random-detect Displays WRED ECN information. Command mode: All

802.1p Information

The following command displays 802.1p information:

show qos transmit-queue information

Command mode: All

```

Current priority to COS queue information:
Priority  COSq  Weight
-----  -
    0      0      1
    1      1      2
    2      2      3
    3      3      4
    4      4      5
    5      5      7
    6      6     15
    7      7      0

Current port priority information:
Port  Priority  COSq  Weight
-----  -
INT1      0      0      1
INT2      0      0      1
...
MGT1      0      0      1
MGT2      0      0      1
EXT1      0      0      1
EXT2      0      0      1
EXT3      0      0      1
EXT4      0      0      1
...

```

The following table describes the IEEE 802.1p priority-to-COS queue information.

Table 62. *802.1p Priority-to-COS Queue Parameter Descriptions*

Parameter	Description
Priority	Displays the 802.1p Priority level.
COSq	Displays the Class of Service queue.
Weight	Displays the scheduling weight of the COS queue.

The following table describes the IEEE 802.1p port priority information.

Table 63. *802.1p Port Priority Parameter Descriptions*

Parameter	Description
Port	Displays the port alias.
Priority	Displays the 802.1p Priority level.
COSq	Displays the Class of Service queue.
Weight	Displays the scheduling weight.

WRED and ECN Information

The following command displays WRED and ECN information:

show qos random-detect

Command mode: All

```
Current wred and ecn configuration:
Global ECN: Disable
Global WRED: Disable

--WRED--TcpMinThr--TcpMaxThr--TcpDrate--NonTcpMinThr--NonTcpMaxThr--NonTcpDrate--
TQ0:  Dis      0      0      0      0      0      0
TQ1:  Dis      0      0      0      0      0      0
TQ2:  Dis      0      0      0      0      0      0
TQ3:  Dis      0      0      0      0      0      0
TQ4:  Dis      0      0      0      0      0      0
TQ5:  Dis      0      0      0      0      0      0
TQ6:  Dis      0      0      0      0      0      0
TQ7:  Dis      0      0      0      0      0      0
...
```

Access Control List Information Commands

The following commands display Access Control List information.

Table 64. *ACL Information Options*

Command Syntax and Usage
show access-control group [<i><1-640></i>] Displays ACL group information. Command mode: All
show access-control list [<i><1-640></i>] Displays ACL list information. For details, see page 143 . Command mode: All
show access-control list6 [<i><1-128></i>] Displays IPv6 ACL list information. Command mode: All
show access-control list <i><1-640></i> log Displays the current IPv4 ACL log state. Command mode: All
show access-control vmap [<i><1-128></i>] Displays VMAP information. Command mode: All

Access Control List Information

The following command displays Access Control List (ACL) information:

```
show access-control list <1-640>
```

Command mode: All

```
Current ACL information:
-----
Filter 2 profile:
Ethernet
- VID          : 2/0xffff
Meter
- Set to disabled
- Set committed rate : 64
- Set max burst size : 32
Re-Mark
- Set use of TOS precedence to disabled
Actions        : Permit
Statistics     : enabled
```

Access Control List (ACL) information includes configuration settings for each ACL and ACL Group.

Table 65. *ACL Parameter Descriptions*

Parameter	Description
Filter <i>x</i> profile	Indicates the ACL number.
Meter	Displays the ACL meter parameters.
Re-Mark	Displays the ACL re-mark parameters.
Actions	Displays the configured action for the ACL.
Statistics	Displays the status of ACL statistics configuration (enabled or disabled).

RMON Information Commands

The following table describes the Remote Monitoring (RMON) Information commands.

Table 66. *RMON Information commands*

Command Syntax and Usage
show rmon Displays all RMON information. Command mode: All
show rmon alarm [<i><alarm group number></i>] Displays RMON Alarm information. For details, see page 146 . Command mode: All
show rmon event [<i><event group number></i>] Displays RMON Event information. For details, see page 147 . Command mode: All
show rmon history [<i><history group number></i>] Displays RMON History information. For details, see page 145 . Command mode: All

RMON History Information

The following command displays RMON History information:

show rmon history

Command mode: All

RMON History group configuration:				
Index	IFOID	Interval	Rbnum	Gbnum
1	1.3.6.1.2.1.2.2.1.1.24	30	5	5
2	1.3.6.1.2.1.2.2.1.1.22	30	5	5
3	1.3.6.1.2.1.2.2.1.1.20	30	5	5
4	1.3.6.1.2.1.2.2.1.1.19	30	5	5
5	1.3.6.1.2.1.2.2.1.1.24	1800	5	5
Index	Owner			
1	dan			

The following table describes the RMON History Information parameters.

Table 67. RMON History Parameter Descriptions

Parameter	Description
Index	Displays the index number that identifies each history instance.
IFOID	Displays the MIB Object Identifier.
Interval	Displays the time interval for each sampling bucket.
Rbnum	Displays the number of requested buckets, which is the number of data slots into which data is to be saved.
Gbnum	Displays the number of granted buckets that may hold sampled data.
Owner	Displays the owner of the history instance.

RMON Alarm Information

The following command displays RMON Alarm information:

show rmon alarm

Command mode: All

```

RMON Alarm group configuration:
-----
Index  Interval  Sample  Type      rLimit    fLimit    last value
-----
   1    1800     abs     either      0         0         7822

Index  rEvtIdx  fEvtIdx  OID
-----
   1     0       0       1.3.6.1.2.1.2.2.1.10.1

Index  Owner
-----
   1   dan
  
```

The following table describes the RMON Alarm Information parameters.

Table 68. RMON Alarm Parameter Descriptions

Parameter	Description
Index	Displays the index number that identifies each alarm instance.
Interval	Displays the time interval over which data is sampled and compared with the rising and falling thresholds.
Sample	Displays the method of sampling the selected variable and calculating the value to be compared against the thresholds, as follows: <ul style="list-style-type: none"> o <code>abs</code>—absolute value, the value of the selected variable is compared directly with the thresholds at the end of the sampling interval. o <code>delta</code>—delta value, the value of the selected variable at the last sample is subtracted from the current value, and the difference compared with the thresholds.
Type	Displays the type of alarm, as follows: <ul style="list-style-type: none"> o <code>falling</code>—alarm is triggered when a falling threshold is crossed. o <code>rising</code>—alarm is triggered when a rising threshold is crossed. o <code>either</code>—alarm is triggered when either a rising or falling threshold is crossed.
rLimit	Displays the rising threshold for the sampled statistic.
fLimit	Displays the falling threshold for the sampled statistic.
Last value	Displays the last sampled value.

Table 68. *RMON Alarm Parameter Descriptions (continued)*

Parameter	Description
rEvtIdx	Displays the rising alarm event index that is triggered when a rising threshold is crossed.
fEvtIdx	Displays the falling alarm event index that is triggered when a falling threshold is crossed.
OID	Displays the MIB Object Identifier for each alarm index.
Owner	Displays the owner of the alarm instance.

RMON Event Information

The following command displays RMON Alarm information:

show rmon event

Command mode: All

```

RMON Event group configuration:
Index Type      Last Sent          Description
-----
  1  both  0D: 0H: 1M:20S  Event_1
  2  none  0D: 0H: 0M: 0S  Event_2
  3  log   0D: 0H: 0M: 0S  Event_3
  4  trap  0D: 0H: 0M: 0S  Event_4
  5  both  0D: 0H: 0M: 0S  Log and trap event for Link Down
 10  both  0D: 0H: 0M: 0S  Log and trap event for Link Up
 11  both  0D: 0H: 0M: 0S  Send log and trap for icmpInMsg
 15  both  0D: 0H: 0M: 0S  Send log and trap for icmpInEchos

Index          Owner
-----
  1  dan
    
```

The following table describes the RMON Event Information parameters.

Table 69. *RMON Event Parameter Descriptions*

Parameter	Description
Index	Displays the index number that identifies each event instance.
Type	Displays the type of notification provided for this event, as follows: none, log, trap, both.
Last sent	Displays the time that passed since the last switch reboot, when the most recent event was triggered. This value is cleared when the switch reboots.
Description	Displays a text description of the event.
Owner	Displays the owner of the alarm instance.

Link Status Information

The following command displays link information:

show interface status [*<port alias or number>*]

Command mode: All

Alias	Port	Speed	Duplex	Flow Ctrl		Link	Name
				--TX--	--RX--		
INTA1	1	1G/10G	full	yes	yes	down	INTA1
INTA2	2	1G/10G	full	yes	yes	down	INTA2
INTA3	3	1G/10G	full	yes	yes	down	INTA3
INTA4	4	1G/10G	full	yes	yes	down	INTA4
...							
INTA14	14	1G/10G	full	yes	yes	down	INTA14
INTB1	15	1G/10G	full	yes	yes	down	INTB1
INTB2	16	1G/10G	full	yes	yes	down	INTB2
INTB3	17	1G/10G	full	yes	yes	down	INTB3
INTB4	18	1G/10G	full	yes	yes	down	INTB4
...							
INTC14	42	1G/10G	full	yes	yes	down	INTC14
EXT1	43	1G/10G	full	no	no	down	EXT1
EXT2	44	1G/10G	full	no	no	down	EXT2
EXT3	45	10000	full	no	no	up	EXT3
EXT4	46	1G/10G	full	no	no	down	EXT4
...							
EXT20	62	10000	full	no	no	disabled	EXT20
EXT21	63	10000	full	no	no	disabled	EXT21
EXT22	64	10000	full	no	no	disabled	EXT22
EXTM	65	1000	full	yes	yes	up	EXTM
MGT1	66	1000	full	no	no	up	MGT1

Note: The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of Lenovo Switch that you are using and the firmware versions and options that are installed.

Use this command to display link status information about each port on the CN4093, including:

- Port alias and port number
- Port speed and Duplex mode (half, full, any)
- Flow control for transmit and receive (no, yes, or both)
- Link status (up, down, or disabled)

Port Information

The following command displays port information:

```
show interface trunk <port alias or number>
```

Command mode: All

Alias	Port	Tag Trk	Type	RMON	Lrn	Fld	PVID NVLAN	DESCRIPTION	VLAN(s)
INTA1	1	n	Internal	d	e	e	4081#	INTA1	4081
INTA2	2	n	Internal	d	e	e	4081#	INTA2	4081
INTA3	3	n	Internal	d	e	e	4081#	INTA3	4081
INTA4	4	n	Internal	d	e	e	4081#	INTA4	4081
INTA5	5	n	Internal	d	e	e	4081#	INTA5	4081
INTA6	6	n	Internal	d	e	e	4081#	INTA6	4081
INTA7	7	n	Internal	d	e	e	4081#	INTA7	4081
INTA8	8	n	Internal	d	e	e	4081#	INTA8	4081
INTA9	9	n	Internal	d	e	e	4081#	INTA9	4081
INTA10	10	n	Internal	d	e	e	4081#	INTA10	4081
INTA11	11	n	Internal	d	e	e	4081#	INTA11	4081
INTA12	12	n	Internal	d	e	e	4081#	INTA12	4081
INTA13	13	n	Internal	d	e	e	4081#	INTA13	4081
INTA14	14	n	Internal	d	e	e	4081#	INTA14	4081
INTB1	15	n	Internal	d	e	e	4082#	INTB1	4082
INTB2	16	n	Internal	d	e	e	4082#	INTB2	4082
INTB3	17	n	Internal	d	e	e	4082#	INTB3	4082
INTB4	18	n	Internal	d	e	e	4082#	INTB4	4082
INTB5	19	n	Internal	d	e	e	4082#	INTB5	4082
INTB6	20	n	Internal	d	e	e	4082#	INTB6	4082
INTB7	21	n	Internal	d	e	e	4082#	INTB7	4082
INTB8	22	n	Internal	d	e	e	4082#	INTB8	4082
INTB9	23	n	Internal	d	e	e	4082#	INTB9	4082
INTB10	24	n	Internal	d	e	e	4082#	INTB10	4082
INTB11	25	n	Internal	d	e	e	4082#	INTB11	4082
INTB12	26	n	Internal	d	e	e	4082#	INTB12	4082
INTB13	27	n	Internal	d	e	e	4082#	INTB13	4082
INTB14	28	n	Internal	d	e	e	4082#	INTB14	4082
INTC1	29	n	Internal	d	e	e	4083#	INTC1	4083
INTC2	30	n	Internal	d	e	e	4083#	INTC2	4083
INTC3	31	n	Internal	d	e	e	4083#	INTC3	4083
INTC4	32	n	Internal	d	e	e	4083#	INTC4	4083
INTC5	33	n	Internal	d	e	e	4083#	INTC5	4083
INTC6	34	n	Internal	d	e	e	4083#	INTC6	4083
...									
EXT21	63	n	External	d	e	e	1	EXT21	1
EXT22	64	n	External	d	e	e	1	EXT22	1
EXTM	65	n	Mgmt	d	e	e	4095	EXTM	4095
MGT1	66	y	Mgmt	d	e	e	4095	MGT1	4095

* = PVID/Native-VLAN is tagged.

= PVID is ingress tagged.

Trk = Trunk mode

NVLAN = Native-VLAN

Note: The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of Lenovo Switch that you are using and the firmware versions and options that are installed.

Port information includes:

- Port alias and number
- Whether the port uses VLAN tagging or not (y or n)
- Whether the port uses PVID/Native-VLAN tagging or not (y or n)
- Whether the port uses PVID ingress tagging or not (y or n)
- Whether the port is internal, external or used for management
- Whether the port has Remote Monitoring (RMON) enabled
- Whether the port has FDB Learning enabled (**Lrn**)
- Whether the port has Port Flooding enabled (**Fld**)
- Port VLAN ID (PVID/Native-VLAN)
- Port description
- VLAN membership

Port Transceiver Status

The following command displays the status of the transceiver module on each external port:

show interface transceiver

Command mode: All

Port	Link	Transceiver	Vendor	Part	Approve
EXT1 SFP+ 1	<	NO Device	Installed	>	
EXT2 SFP+ 2	Down	CU SFP	IBM-Finisar	78P3177-N81713	Approved
EXT3 Q10G 3.1	<	NO Device	Installed	>	
EXT4 Q10G 3.2	<	NO Device	Installed	>	
EXT5 Q10G 3.3	<	NO Device	Installed	>	
EXT6 Q10G 3.4	<	NO Device	Installed	>	
EXT7 Q10G 4.1	<	NO Device	Installed	>	
EXT8 Q10G 4.2	<	NO Device	Installed	>	
EXT9 Q10G 4.3	<	NO Device	Installed	>	
EXT10 Q10G 4.4	<	NO Device	Installed	>	
EXT11 FLEX 1	<	NO Device	Installed	>	
EXT12 FLEX 2	<	NO Device	Installed	>	
EXT13 FLEX 3	Down	3m ACTX	IBM-Amphenol	46K6183-L36836B	Accepted
EXT14 FLEX 4	<	NO Device	Installed	>	
EXT15 FLEX 5	<	NO Device	Installed	>	
EXT16 FLEX 6	<	NO Device	Installed	>	
EXT17 FLEX 7	<	NO Device	Installed	>	
EXT18 FLEX 8	LINK	3m DAC	BLADE NETWORKS	BN-SP-CBL-3M	Accepted
EXT19 FLEX 9	<	NO Device	Installed	>	
EXT20 FLEX 10	LINK	1m DAC	BLADE NETWORKS	BN-SP-CBL-1M	Accepted
EXT21 FLEX 11	<	NO Device	Installed	>	
EXT22 FLEX 12	<	NO Device	Installed	>	

This command displays information about the transceiver module on each port, as follows:

- Port number and media type
- Link status
- Transceiver detail
- Vendor information
- Part number
- Approval state

Use the following command to display extended transceiver information:

show interface port <port number> **transceiver details**

Command mode: All

Port	TX	Link	TXFlt	Volts	DegsC	TXuW	RXuW	Transceiver	Approve
55	FLEX	3 Ena	Down	-N/A-	-N/A-	-N/A-	-N/A-	3m ACTX	Accepted
IBM-Amphenol Part:46K6183-L36836B Date:111231 S/N:YL11FY1CY40G									

This command displays detailed information about the transceiver module, as follows:

- Port number and media type
- TX: Transmission status
- TXflt: Transmission fault indicator
- Volts: Power usage, in volts
- DegsC: Temperature, in degrees centigrade
- TXuW: Transmit power, in micro-watts
- RXuW: Receive power, in micro-watts
- Media type (LX, LR, SX, SR)
- Approval status: One of the following:
 - Accepted: You can use this transceiver at your own risk.
 - Approved: This transceiver is on the list of officially supported transceivers.

The optical power levels shown for transmit and receive functions for the transceiver must fall within the expected range defined in the IEEE 802-3-2008 specification for each transceiver type. For convenience, the expected range values are summarized in the following table.

Table 70. *Expected Transceiver Optical Power Levels*

Transceiver Type	Tx Minimum	Tx Maximum	Rx Minimum	Rx Maximum
SFP SX	112μW	1000μW	20μW	1000μW
SFP LX	70.8μW	501μW	12.6μW	501μW
SFP+ SR	186μW	794μW	102μW	794μW
SFP+ LR	151μW	891μW	27.5μW	891μW

Note: Power level values in the IEEE specification are shown in dBm, but have been converted to mW in this table to match the unit of measure shown in the display output.

VM Ready Information

The following command display information about Virtual Machines (VMs).

Table 71. *Virtual Machines Information Options*

Command Syntax and Usage
show virt Displays the current virtualization parameters. For a sample output, see page 155 . Command mode: All
show virt oui Displays all the configured MAC OUIs. For a sample output, see page 155 . Command mode: All
show virt port <port alias or number> Displays VM Ready information for the selected port. For a sample output, see page 156 . Command mode: All
show virt portchannel <portchannel group member> Displays Virtual Machine information for the selected portchannel. For a sample output, see page 156 . Command mode: All
show virt vm [-v -r] Displays all VM Ready information. <ul style="list-style-type: none">o -v displays verbose informationo -r rescans the data center For a sample output, see page 157 . Command mode: All
show virt vmcheck Displays the current VM Check settings. For a sample output, see page 157 . Command mode: All
show virt vmgroup [<1-4096>] Displays the current VM Group parameters. For a sample output, see page 158 . Command mode: All

Table 71. *Virtual Machines Information Options*

Command Syntax and Usage
<p>show virt</p> <p>Displays the current virtualization parameters. For a sample output, see page 155.</p> <p>Command mode: All</p>
<p>show virt oui</p> <p>Displays all the configured MAC OUIs. For a sample output, see page 155.</p> <p>Command mode: All</p>
<p>show virt vmpolicy vmbandwidth [<MAC address> <UUID> <name> <IP address> <index number>]</p> <p>Displays the current VM bandwidth management parameters. For a sample output, see page 158.</p> <p>Command mode: All</p>
<p>show virt vmprofile [<profile name>]</p> <p>Displays the current VM Profile parameters. For a sample output, see page 158.</p> <p>Command mode: All</p>

VMReady Information

The following command displays the current virtualization options:

show virt

Command mode: All

```
VMready is currently enabled

Current Hello setting: disabled

Current VMware-specific settings
-----

ESX/ESXi-to-vCenter heartbeat UDP port number: 902

Current VM profiles:
-----
      None

VM group 1 current configuration:Current VM group's secure mode: Disabled
Current Group Ports: 13 17
Current Group vPorts: : empty
VLAN: 2
VLAN Tagging: Disabled
Current GROUP VMAP Config is empty

VM group 2 current configuration: empty
...
```

VM OUI Information

The following command displays all the configured MAC OUIs:

show virt oui

Command mode: All

```
      VM MAC OUI      Vendor Name
      -----
      00:50:56        VMware
      00:0c:29        VMware
      00:05:69        VMware
      00:0f:4b        VirtualIron
      00:03:ff        Microsoft
      00:15:5d        Microsoft
      00:1c:42        Parallels
      00:16:3e        Xen
      00:80:27        Sun

      Number of MAC OUI entries: 9
```

VM Port Information

The following command displays VM information for a specific port:

show virt port <port alias or number>

Command mode: All

IP Address	VMAC Address	Index	Port	VM Group	(Profile)	Check status
3.3.3.2	00:50:56:a5:32:f7	0	23			
40.40.31.1	00:50:56:a5:4e:9f	1	23	30	test30	

Number of entries: 2

VM Portchannel Information

The following command displays VM information for a specific portchannel:

show virt portchannel <1-128>

Command mode: All

IP Address	VMAC Address	Index	Port	VM Group	(Profile)	Check status
5.5.5.2	00:50:56:a5:17:07	2	ST 5			
0.0.0.0	00:50:56:a5:4b:03	4	ST 5			
5.5.5.3	00:50:56:af:20:6f	3	ST 5			

Number of entries: 3
0.0.0.0 indicates IP address not yet available
ST: Server Trunk

VM Information

The following command displays VM information:

```
show virt vm
```

Command mode: All

IP Address	VMAC Address	Index	Port	VM Group(Profile)	Check Status
*127.31.46.50	00:50:56:4e:62:f5	4	INTA3		
*127.31.46.10	00:50:56:4f:f2:85	2	INTA4		
+127.31.46.51	00:50:56:72:ec:86	1	INTA3		
+127.31.46.11	00:50:56:7c:1c:ca	3	INTA4		
127.31.46.25	00:50:56:9c:00:c8	5	INTA4		
127.31.46.15	00:50:56:9c:21:2f	0	INTA4		
127.31.46.35	00:50:56:9c:29:29	6	INTA3		
Number of entries: 7					
* indicates VMware ESX Service Console Interface					
+ indicates VMware ESX/ESXi VMKernel or Management Interface					

VM information includes the following for each Virtual Machine (VM):

- State of the Virtual Machine (~ indicates the VM is inactive/idle)
- IP address
- MAC address
- Index number assigned to the VM
- Server port on which the VM was detected
- VM group that contains the VM, if applicable
- VM Check status for the corresponding VM

VM Check Information

The following command displays VM Check information:

```
show virt vmcheck
```

Command mode: All

Action to take for spoofed VMs: Basic: Oper disable the link Advanced: Install ACL to drop traffic
Maximum number of acls that can be used for mac spoofing: 50
Trusted ports by configuration: empty

VM Group Information

The following command displays VM Group parameters:

```
show virt vmgroup [<1-4096>]
```

Command mode: All

```
VM group 1 current configuration:
Current VM group's secure mode: Disabled
Current Group Ports: 13 17
Current Group vPorts: : empty
VLAN: 2
Tagging/Trunk-mode: Disabled
Current GROUP VMAP Config is empty
```

VM Bandwidth Information

The following command displays VM bandwidth management parameters:

```
show virt vmpolicy vmbwidth
```

Command mode: All

```
Bandwidth Profile for VM 00:50:56:a5:32:f7 is enabled.
-----
TX:
  Rate:           1024
  Burst:          2048
  ACL:            127
```

VM Profile Information

The following command displays VM Profile parameters:

```
show virt vmprofile
```

Command mode: All

```
VM profile "test30":
  VLAN ID: 30
  Traffic shaping not enabled.
  VM Groups: 30
```

VMware Information

Use these commands to display information about Virtual Machines (VMs) and VMware hosts in the data center. These commands require the presence of a configured Virtual Center.

Table 72. *VMware Information Options*

Command Syntax and Usage
show virt vmware hosts Displays a list of VMware hosts. For a sample output, see page 165 . Command mode: All
show virt vmware hello Displays VMware hello settings. For a sample output, see page 164 . Command mode: All
show virt vmware showhost {<host UUID> <host IP address> <host name>} Displays detailed information about a specific VMware host. For a sample output, see page 165 . Command mode: All
show virt vmware showvm {<VM UUID> <VM IP address> <VM name>} Displays detailed information about a specific Virtual Machine (VM). For a sample output, see page 162 . Command mode: All
show virt vmware switchport-mapping Displays ESX Server - switchport mapping. For a sample output, see page 162 . Command mode: All
show virt vmware vms Displays a list of VMs. For a sample output, see page 162 . Command mode: All

VMware Hello Information

The following command displays VM hello parameters:

```
show virt vmware hello
```

Command mode: All

```
Current Settings:
Hello Disabled
Hello timer: 23 seconds
Hello ports: 13
Hello address: 10.36.30.1
```

VMware Host Information

The following command displays VM host information:

```
show virt vmware hosts
```

Command mode: All

UUID	Name(s), IP Address
80a42681-d0e5-5910-a0bf-bd23bd3f7803	127.12.41.30
3c2e063c-153c-dd11-8b32-a78dd1909a69	127.12.46.10
64f1fe30-143c-dd11-84f2-a8ba2cd7ae40	127.12.44.50
c818938e-143c-dd11-9f7a-d8defa4b83bf	127.12.46.20
fc719af0-093c-dd11-95be-b0adac1bcf86	127.12.46.30
009a581a-143c-dd11-be4c-c9fb65ff04ec	127.12.46.40

VM host information includes the following:

- UUID associated with the VMware host.
- Name or IP address of the VMware host.

The following command displays information for a specific VM host:

```
show virt vmware showhost {<host UUID>|<host IP address>|<host name>}
```

Command mode: All

```
Vswitches available on the host:

    vSwitch0
    vSwitch1

Host physical nics:

Device      vSwitch          MAC Address
-----
vmnic0     None             5c:f3:fc:49:f0:e4
vmnic1     vSwitch0        5c:f3:fc:49:f0:e6
vmnic2     None             00:00:c9:da:f5:d8
vmnic3     vSwitch1        00:00:c9:da:f5:dc
vusb0      None             5e:f3:fc:4f:f0:e7

Port Groups and their vSwitches on the host:

    Lenovo_test          vSwitch0
    VM Network           vSwitch0
    Management Network   vSwitch0
    Lenovo_Default       vSwitch1
    Lenovo_test30        vSwitch1
    Lenovo_test40        vSwitch1
    VM Network 2         vSwitch1
    Lenovo_test50        vSwitch1
    Lenovo_unu           vSwitch1

Detailed information about host and VM interfaces on this hypervisor:
-----
MAC Address      5c:f3:fc:49:f0:e6
Port             N/A
Type            VM Kernel
IP Address       10.241.32.131
Host Name        10.241.32.131
Host UUID        cab9df06-8fd7-3ecf-a4ba-f373ed60ad9d
vSwitch         vSwitch0
Port Group       Management Network
VLAN ID          0
...
```

VMware VM Information

The following command displays information for a specific Virtual Machine (VM):

```
show virt vmware showvm {<VM UUID>|<VM IP address>|<VM name>}
```

Command mode: All

```
MAC Address      00:50:56:a5:32:f7
Port             23
Type            Virtual Machine
VM vCenter Name arch131_nfs_3
VM OS hostname  Not Available
VM IP Address   3.3.3.2
VM UUID        422547ad-0ef7-5992-1184-63aa9030377e
Current VM Host 10.241.32.131
vSwitch         vSwitch1
Port Group      Lenovo_Default
VLAN ID        0
```

The following command displays the UUIDs and the names of all the VMware VMs:

```
show virt vmware vms
```

Command mode: All

```
Rescanning data center. Please wait.
UUID                               Name(s), IP Address
-----
42312c26-2a75-c05b-eed2-6d837ac46fdd  SNSC
4225801c-dfdb-061d-65e4-4e4860d6fbcf  arch2_06
42253440-6de7-7416-8a29-fb462114ead0  arch2_05
422f49df-bf88-e4d5-6cee-047a626029aa  arch2_4_clone
4225a4f2-3422-038f-77b5-6134f5fd00b6  arch_clone
422fddf6-b9c3-fb52-9eed-fb7ccab48ab8  WIN_iperf
422573e7-f2a1-373a-87ec-7f78d8313cca  linux
422f08f6-c3b1-a641-a44a-f2698a850f3c  IxVM008, localhost, 10.241.30.208
422f15d2-5e6e-88ef-689e-9af8e4c69c34  IxVM007, localhost, 10.241.30.207
422f54d3-55b5-3731-e8f1-62abac8a0911  IxVM006, localhost, 10.241.30.206
422f42d0-329e-aec2-99c8-2724aa26db7a  IxVM005, localhost, 10.241.30.205
...
```

VMware VM information includes the following:

- UUID associated with the VMware VM.
- Name or IP address of the VMware VM.

ESX Server - Switchport Mapping

The following command displays ESX Server - switchport mapping:

```
show virt vmware switchport-mapping
```

Command mode: All

```
ST 5 ==> 10.241.32.133 vmnic4
ST 5 ==> 10.241.32.133 vmnic5
23 ==> 10.241.32.131 vmnic3
```

EVB Information

The following commands display Edge Virtual Bridge (EVB) Virtual Station Interface (VSI) discovery and configuration information.

Table 73. *EVB Information Options*

Command Syntax and Usage
show virt evb profile [ports] Displays all EVB profile parameters. The <code>ports</code> option also display port parameters. Command mode: All
show virt evb profile <1-16> [ports] Displays the selected EVB profile parameters. The <code>ports</code> option also display port parameters. Command mode: All
show virt evb vdp vm Displays all active Virtual Machines (VMs). For a sample output, see page 165 . Command mode: All
show virt evb vdp tlv Displays all active Virtual Station Interface (VSI) Discovery and Configuration Protocol (VDP) type-length-values (TLVs). Command mode: All
show virt evb vsidb <VSI_database_number> Displays Virtual Station Interface database information. Command mode: All
show virt evb vsitypes [mgrid <0-255> typeid <1-16777215> version <0-255>] Displays the current Virtual Station Interface Type database parameters. For a sample output, see page 164 . Command mode: All

EVB VSIType Information

The following command displays VSITypes database parameters:

```
show virt evb vsitypes
```

Command mode: All

```
Time Since Last Poll: 0 days 0 hours 0 minutes 14 seconds
Time Since Last Update: 14 days 16 hours 29 minutes 18 seconds

Total number of VSIType entries : 69

INDEX : 1
-----
Name :
Type ID : 9
Version : 1
Manager ID : 1
VLAN : 9, 50
TxRate : 10000000
TxBurst : 64
RxRate : 10000000
RxBurst : 64
ACL Index: 1
    SRC MAC : 00:00:00:00:00:00
    SRC MAC MASK : 00:00:00:00:00:00
    DST MAC : ff:ff:ff:ff:ff:ff
    DST MAC MASK : ff:ff:ff:ff:ff:ff
    VLAN : 0 (0x000)
    Ether Type : 0x0800 (IPv4)
    SRC IP : 0.0.0.0
    SRC IP MASK : 0.0.0.0
    DST IP : 0.0.0.0
    DST IP MASK : 0.0.0.0
    TOS : 0 (0x00)
    ACL Action : deny
ACL Index: 2
    SRC MAC : 00:00:00:00:00:00
    SRC MAC MASK : 00:00:00:00:00:00
    DST MAC : ff:ff:ff:ff:ff:ff
    DST MAC MASK : ff:ff:ff:ff:ff:ff
    VLAN : 0 (0x000)
    Ether Type : 0x0000
    ACL Action : permit
...

INDEX : 2
-----
Name :
Type ID : 20
Version : 1
Manager ID : 1
VLAN : 10, 11, 12, 13, 14, 15, 16, 20
TxRate : 10000000
TxBurst : 64
RxRate : 10000000
RxBurst : 64
```

```

ACL Index: 1
    SRC MAC : 00:00:00:00:00:00
    SRC MAC MASK : 00:00:00:00:00:00
    DST MAC : ff:ff:ff:ff:ff:ff
    DST MAC MASK : ff:ff:ff:ff:ff:ff
    VLAN : 0 (0x000)
    Ether Type : 0x0800 (IPv4)
    SRC IP : 0.0.0.0
    SRC IP MASK : 0.0.0.0
    DST IP : 0.0.0.0
    DST IP MASK : 0.0.0.0
    TOS : 0 (0x00)
    ACL Action : deny
ACL Index: 2
    SRC MAC : 00:00:00:00:00:00
    SRC MAC MASK : 00:00:00:00:00:00
    DST MAC : ff:ff:ff:ff:ff:ff
    DST MAC MASK : ff:ff:ff:ff:ff:ff
    VLAN : 0 (0x000)
    Ether Type : 0x0000
    ACL Action : permit

```

EVB VMs Information

The following command displays all active VMs:

```
show virt evb vdp vm
```

Command mode: All

```

Total number of VM Association entries : 2
TypeId      MAC          Vlan Port TxACL RxEntry ACLs
-----
9           00:50:56:95:30:ec 50  13.1 250    251 252 253 254 255 256
70          00:50:56:a5:6e:e7 70  13.1 232    226 227 228 229 230 231

```

vNIC Information

The following commands display information about Virtual NICs (vNICs).

Table 74. *vNIC Information Options*

Command Syntax and Usage
show vnic information-dump Displays all vNIC information. Command mode: All
show vnic vnic Displays information about each vNIC. Command mode: All
show vnic vnicgroup <1-32> Displays information about each vNIC Group, including: <ul style="list-style-type: none">o Status (enabled or disabled)o VLAN assigned to the vNIC Groupo Uplink Failover status (enabled or disabled)o Link status for each vNIC (up, down, or disabled)o Port link status for each port associated with the vNIC Group (up, down, or disabled) Command mode: All

Virtual NIC (vNIC) Information

The following command displays Virtual NIC (vNIC) information:

```
show vnic vnic
```

Command mode: All

vNIC	vNICGroup	Vlan	MaxBandwidth	Type	MACAddress	Link
INTA1.1	1	100	25	Default	00:00:c9:c6:d0:2a	up
INTA1.2	#	*	0	FCoE	00:00:c9:c6:d0:2b	up
INTA1.3	3	300	25	Default	00:00:c9:c6:d0:2c	up
INTA1.4	4	400	25	Default	00:00:c9:c6:d0:2d	up
INTA2.1	1	100	25	Default	00:00:c9:c6:cf:72	up
INTA2.2	#	*	0	FCoE	00:00:c9:c6:cf:73	up
INTA2.3	3	300	25	Default	00:00:c9:c6:cf:74	up
INTA2.4	4	400	25	Default	00:00:c9:c6:cf:75	up
INTA3.1	1	100	25	Default	00:00:c9:e3:09:5c	up
INTA3.3	3	300	25	Default	00:00:c9:e3:09:5e	up
INTA3.4	4	400	25	Default	00:00:c9:e3:09:5f	up
INTA4.2	#	*	0	FCoE	00:00:c9:b2:55:6f	up
INTA9.2	#	*	0	FCoE	00:00:c9:c6:cf:33	up

= Not added to any vNIC group
* = Not added to any vNIC group or no vlan set for its vNIC group

vNIC information includes the following for each vNIC:

- vNIC ID
- vNIC Group that contains the vNIC
- VLAN assigned to the vNIC Group
- Maximum bandwidth allocated to the vNIC
- MAC address of the vNIC, if applicable
- Link status (up, down, or disabled)

vNIC Group Information

The following command displays vNIC Group information:

```
show vnic vnicgroup <1-32>
```

Command mode: All

```
vNIC Group 1: enabled
-----
VLAN          : 100
Failover      : disabled

vNIC          Link
-----
INTA1.1      up
INTA2.1      up
INTA3.1      up

Port          Link
-----

UplinkPort   Link
-----
EXT6         up
```

vNIC Group information includes the following for each vNIC Group:

- Status (enabled or disabled)
- VLAN assigned to the vNIC Group
- Uplink Failover status (enabled or disabled)
- Link status for each vNIC (up, down, or disabled)
- Port link status for each port associated with the vNIC Group (up, down, or disabled)

SLP Information

The following commands display information about Service Location Protocol settings:

Table 75. *SLP Information Options*

Command Syntax and Usage
show ip slp directory-agents Lists all detected Directory Agents (DAs). Command mode: All
show ip slp information Displays the SLP version, whether SLP is enabled or disabled and whether DA auto-discovery is enabled or disabled. Command mode: All
show ip slp user-agents Lists all detected User Agents (UAs). Command mode: All

UFP Information

The following commands display information about Unified Fabric Port (UFP) settings.

Table 76. *UFP Information Options*

Command Syntax and Usage
<p>show ufp [port <port_no.>] [vport <1-8>] [network qos evb]</p> <p>Displays the UFP network and QoS settings applied on all ports or on specified physical and virtual ports.</p> <ul style="list-style-type: none">o network filters only UFP network settingso qos filters only QoS network settingso evb filters only EVB profile settings <p>Command mode: All</p>
<p>show ufp information {cdcp qos tlvstat} [port <port_no.>]</p> <p>Displays global or port-specific UFP information on:</p> <ul style="list-style-type: none">o cdcp displays S-Channel Discovery and Configuration Protocol (CDCP) information. CDCP allows hypervisor hosts to create on-demand S-channels with the switch. For details, see page 172.o qos displays bandwidth allocation between virtual ports. For details, see page 172.o tlvstat displays status for Type-Length-Values transmitted on UFP-enabled physical ports. For details, see page 173. <p>Command mode: All</p>
<p>show ufp information getvlan <2-4094></p> <p>Displays state, operating mode and VLAN related information for physical and virtual ports associated to a specified VLAN ID.</p> <p>Command mode: All</p>
<p>show ufp information port [<port_no.>]</p> <p>Displays UFP status for all physical ports or only for a specified physical port. Information includes whether the UFP is enabled on the physical port, how many virtual ports are enabled and the link stats for each virtual port. For details, see page 171.</p> <p>Command mode: All</p>
<p>show ufp information qos [port <port_no.>] [vport <1-8>]</p> <p>Displays bandwidth allocation between virtual ports for all physical ports or specified physical and virtual ports. For details, see page 172.</p> <p>Command mode: All</p>

Table 76. UFP Information Options

<p>Command Syntax and Usage</p> <p>show ufp information vport [port <port_no.>] [vport <1-8>]</p> <p>Displays state, operating mode and VLAN related information for all virtual ports, for virtual ports belonging to a specified physical port or for a single virtual port. For details, see page 174.</p> <p>Command mode: All</p>
<p>show ufp information vlan [<1-4094>]</p> <p>Displays ports and vports associated to all configured VLANs or to a specified VLAN ID. For details, see page 175.</p> <p>Command mode: All</p>

Port Information

The following command displays UFP port information:

show ufp information port

Command mode: All

Alias	Port	state	vPorts	link up	link down	mismatch	disabled
-----	----	-----	-----	-----	-----	-----	-----
INTA4	4	ena	4	1 3 4		2	

Port information includes the following for each physical port:

- Port alias
- Port number
- UFP state
- Number of virtual ports enabled
- Link status on each channel (up, down or disabled)

CDCP Information

The following command displays S-Channel Discovery and Configuration Protocol information:

show ufp information cdc

Command mode: All

```
INT1  : Channel Request
INT2  : Channel Request
INT3  : TxSVIDs
INT4  : TxSVIDs
INT5  : Disable
INT6  : Disable
INT7  : Disable
INT8  : Disable
INT9  : Disable
INT10 : Disable
INT11 : Disable
INT12 : Disable
INT13 : Disable
INT14 : Disable
```

CDCP information includes the following for each physical port:

- Whether there is a channel set up
- CDCP communication status for active channels

QoS Information

The following command displays Quality of Service information:

show ufp information qos

Command mode: All

```
Global UFP QoS mode: UFP QoS BW

Port | Vport | Mode | Minbw% | Maxbw% | Prio | HstCtrl
-----|-----|-----|-----|-----|-----|-----
INTA6 | 3     | ETS  |         |         | 3    | Dis
      | 4     | ETS  |         |         | 0    | Dis
-----|-----|-----|-----|-----|-----|-----
INTA8 | 1     | BW   | 30     | 100    |      | 
      | 2     | BW   | 30     | 100    |      | 
      | 3     | BW   | 10     | 100    |      | 
      | 4     | BW   | 10     | 100    |      | 
-----|-----|-----|-----|-----|-----|-----
INTA10| 1     | ETS  |         |         | 0    | Dis
      | 2     | ETS  |         |         | 3    | Dis
      | 3     | ETS  |         |         | 2    | Dis
      | 4     | ETS  |         |         | 0    | Dis
      | 5     | ETS  |         |         | 4    | Dis
      | 6     | ETS  |         |         | 5    | Dis
      | 7     | ETS  |         |         | 6    | Dis
      | 8     | ETS  |         |         | 7    | Dis
...  
```

QoS information includes the following:

- Physical port number
- Virtual port number
- Minimum guaranteed bandwidth allocated
- Maximum bandwidth achievable
- ETS or Bandwidth mode
- 802.1p priority associated to the vport
- Host control

TLV Status Information

The following command displays Type-Length-Values information:

```
show ufp information tlvstat
```

Command mode: All

INT1	:	Success
INT2	:	Success
INT3	:	Disabled
INT4	:	Disabled
INT5	:	Disabled
INT6	:	Disabled
INT7	:	Disabled
INT8	:	Disabled
INT9	:	Disabled
INT10	:	Disabled
INT11	:	Disabled
INT12	:	Disabled
INT13	:	Disabled
INT14	:	Disabled

TLV status information includes the following:

- Physical port alias
- Type-Length-Values status

Virtual Port Information

The following command displays virtual port information:

```
show ufp information vport
```

Command mode: All

vPort	state	mode	svid	defvlan	deftag	evb	VLANs
INTA1.1	dis	tunnel	0	0	dis	dis	
INTA1.2	dis	tunnel	0	0	dis	dis	
INTA1.3	dis	tunnel	0	0	dis	dis	
INTA1.4	dis	tunnel	0	0	dis	dis	
...							
INTA14.4	dis	tunnel	0	0	dis	dis	
INTB1.1	dis*	access	4002	100	dis	dis	100
INTB1.2	up	fcoe	2500	2500	dis	dis	2500
INTB1.3	dis*	trunk	4004	300	dis	dis	300 500
INTB1.4	dis	tunnel	0	0	dis	dis	
INTB2.1	dis*	access	4002	100	dis	dis	100
INTB2.2	up	fcoe	2500	2500	dis	dis	2500
INTB2.3	dis*	trunk	4004	300	dis	dis	300 500
INTB2.4	dis	tunnel	0	0	dis	dis	
INTB3.1	dis*	access	4002	100	dis	dis	100
INTB3.2	up	fcoe	2500	2500	dis	dis	2500
INTB3.3	dis*	trunk	4004	300	dis	dis	300 500
INTB3.4	dis	tunnel	0	0	dis	dis	

Virtual port information includes the following for each virtual port:

- Virtual port number
- Channel status
- Operating mode (trunk, access, tunnel, auto or FCoE)
- S-channel VLAN ID
- Default VLAN ID
- Default VLAN ID tagging enforcement
- EVB profile
- VLANs the virtual port is associated with

VLAN Information

The following command displays VLAN information:

show ufp information vlan

Command mode: All

```
VLAN
----
 100

vPort list:
  INTB1.1  INTB2.1  INTB3.1  INTB4.1  INTB5.1  INTB6.1
  INTB7.1  INTB8.1  INTB9.1  INTB10.1 INTB11.1 INTB12.1

EXT Port list:
  EXT3     EXT4     EXT8     EXT9

INT Port list:
  INTB13

UFP Port list:
  INTB1  INTB2  INTB3  INTB4  INTB5  INTB6  INTB7  INTB8
  INTB9  INTB10 INTB11 INTB12

VMR Port list:
```

VLAN information includes the following for each VLAN:

- VLAN ID
- Associated virtual ports
- Associated external ports
- Associated internal ports
- Associated UFP ports

TLV Information

The following commands display TLV information:

show ufp {receive|transmit} cap port <port_no.>

Command mode: All

```
UFP Capability Discovery TLV Received on port INT2:
  tlv      : Type 127 Length 7 OUI 00-18-b1 Subtype 1
  version  : Max 1 Oper 1
  cna      : Req 1 Oper 1 Res 0x00
  switch   : Cap 1 Oper 1 Res 0x00
```

UFP Capability Discovery TLV information includes the following:

- TLV type and length
- Lenovo Organizationally Unique Identifier
- TLV Subtype
- Max Version and Operation Version
- UFP CNA Status which include UFP Request and UFP Operation
- UFP Switch Status which includes UFP Capable and UFP Operation

show ufp {receive|transmit} cdcv port <port_no.>

Command mode: All

```
CDCV TLV Transmitted on port INT2:
  tlv      : Type 127 Length 23 OUI 00-80-c2 Subtype 14
  local    : Role 0 SComp 1 Channel Cap 5
  SCID 1   : SVID 1
  SCID 2   : SVID 4002
  SCID 3   : SVID 4003
  SCID 4   : SVID 0
  SCID 5   : SVID 0
```

UFP Channel Discovery and Configuration Protocol TLV includes the following:

- TLV type and length
- Lenovo Organizationally Unique Identifier
- TLV Subtype
- Role bit
- S-Component bit
- Channel Cap
- Corresponding index/SVID pairs

show ufp transmit linkdown port <port alias or number>

Command mode: All

```
UFP LINK-DOWN TLV transmitted on port INTA8:
Header : Type 2 Length 3 Flags 0x0 Status 0x0
SCID : 5
```

show ufp receive linkup port <port alias or number>

Command mode: All

```
UFP LINK-UP TLV received on port INTA9:
Header : Type 3 Length 4 Flags 0x1 Status 0x0
SCID : 6 9
```

show ufp receive prop port <port alias or number>

Command mode: All

```
UFP NIC-PROPS TLV transmitted on port INTA9:
Header : Type 1 Length 17 Flags 0x0 Status 0x0
Props : Channel Type 1 SCHED Type 0 Res 0x0 Num VLAN 0
SCID 6 SVID 4006 iSCSI 0 Host Pri 0 FCoE 0 TC 7 Min BW 0 Max BW
0
SCID 9 SVID 4009 iSCSI 0 Host Pri 0 FCoE 0 TC 2 Min BW 0 Max BW
0
```

DCBX Information Commands

The following commands display DCBX information.

Table 77. *DCBX Information Commands*

Command Syntax and Usage
show dcbx receive <i><port alias or number></i> Displays the Type-Length-Value (TLV) list received in the DCBX TLV. Command mode: All
show dcbx transmit <i><port alias or number></i> Displays the Type-Length-Value (TLV) list transmitted in the DCBX TLV. Command mode: All

Converged Enhanced Ethernet Information

Table 78 describes the Converged Enhanced Ethernet (CEE) information options.

Table 78. *CEE Information Options*

Command Syntax and Usage
show cee global {ets pfc} [information] Displays global ETS or PFC information. Command mode: All
show cee [information] Displays all CEE information. Command mode: All
show cee iscsi Displays the current ISCSI TLV parameters. Command mode: All
show cee port <port alias or number> Displays CEE information for the specified port. Command mode: All

DCBX Information

Table 79 describes the Data Center Bridging Capability Exchange (DCBX) protocol information options.

Table 79. *DCBX Information Options*

Command Syntax and Usage
<p>show cee information dcbx port <port alias or number> Displays all DCBX information. Command mode: All</p>
<p>show cee information dcbx port <port alias or number> app_proto Displays information about the DCBX Application Protocol state machine on the selected port. For details, see page 185. Command mode: All</p>
<p>show cee information dcbx port <port alias or number> control Displays information about the DCBX Control state machine for the selected port. For details, see page 181. Command mode: All</p>
<p>show cee information dcbx port <port alias or number> ets Displays information about the DCBX ETS state machine. For details, see page 183. Command mode: All</p>
<p>show cee information dcbx port <port alias or number> feature Displays information about the DCBX Feature state machine for the selected port. For details, see page 182. Command mode: All</p>
<p>show cee information dcbx port <port alias or number> pfc Displays information about the DCBX PFC state machine. For details, see page 184. Command mode: All</p>

DCBX Control Information

The following command displays DCBX control information:

```
show cee information dcbx port <port alias or number> control
```

Command mode: All

DCBX Port Control State-machine Info						
=====						
Alias	Port	OperStatus	OperVer	MaxVer	SeqNo	AckNo

INTA1	1	enabled	0	0	0	0
INTA2	2	enabled	0	0	4	2
INTA3	3	enabled	0	0	0	0
INTA4	4	enabled	0	0	1	1
...						

DCBX control information includes the following:

- Port alias and number
- DCBX status (enabled or disabled)
- Operating version negotiated with the peer device
- Maximum operating version supported by the system
- Sequence number that changes each time a DCBX parameter in one or more DCB feature TLVs changes
- Sequence number of the most recent DCB feature TLV that has been acknowledged

DCBX Feature Information

The following command displays DCBX feature information:

show cee information dcbx port <port alias or number> **feature**

Command mode: All

```

DCBX Port Feature State-machine Info
=====
Alias  Port  Type   AdmState Will  Advrt OpVer  MxVer PrWill SeqNo Err OperMode Syncd
-----
INTA2  2     ETS    enabled No   Yes   0     0     Yes   1    No  enabled  Yes
INTA2  2     PFC    enabled No   Yes   0     0     Yes   1    No  enabled  Yes
INTA2  2     AppProt disabled No   Yes   0     0     Yes   1    No  disabled  Yes
...

```

The following table describes the DCBX feature information.

Table 80. DCBX Feature Information Fields

Parameter	Description
Alias	Displays each port's alias.
Port	Displays each port's number.
Type	Feature type.
AdmState	Feature status (Enabled or Disabled).
Will	Willing flag status (Yes/True or No/Untrue).
Advrt	Advertisement flag status (Yes/True or No/Untrue).
OpVer	Operating version negotiated with the peer device.
MxVer	Maximum operating version supported by the system.
PrWill	Peer's Willing flag status (Yes/True or No/Untrue).
SeqNo	Sequence number that changes each time a DCBX parameter in one or more DCB feature TLVs changes.
Err	Error condition flag (Yes or No). Yes indicates that an error occurred during the exchange of configuration data with the peer.
OperMode	Operating status negotiated with the peer device (enabled or disabled).
Syncd	Synchronization status between this port and the peer (Yes or No).

DCBX ETS Information

The following command displays DCBX ETS information:

```
show cee information dcbx port <port alias or number> ets
```

Command mode: All

```

DCBX Port Priority Group - Priority Allocation Table
=====
Alias  Port  Priority  PgIdDes  PgIdOper  PgIdPeer
-----
INTA2  2    0         PGID0    PGID0     PGID0
INTA2  2    1         PGID0    PGID0     PGID0
INTA2  2    2         PGID0    PGID0     PGID0
INTA2  2    3         PGID1    PGID1     PGID1
INTA2  2    4         PGID2    PGID2     PGID0
INTA2  2    5         PGID2    PGID2     PGID0
INTA2  2    6         PGID2    PGID2     PGID0
INTA2  2    7         PGID2    PGID2     PGID0

DCBX Port Priority Group - Bandwidth Allocation Table
=====
Alias  Port  PrioGrp  BwDes  BwOper  BwPeer
-----
INTA2  2    0         10    10     50
INTA2  2    1         50    50     50
INTA2  2    2         40    40     0

```

The following table describes the DCBX ETS information.

Table 81. DCBX Feature Information Fields

Parameter	Description
DCBX Port Priority Group - Priority Allocation Table	
Alias	Displays each port's alias.
Port	Displays each port's number.
PgIdDes	Priority Group ID configured on this switch.
PgIdOper	Priority Group negotiated with the peer (operating Priority Group).
PgIdPeer	Priority Group ID configured on the peer.
DCBX Port Priority Group - Bandwidth Allocation Table	
BwDes	Bandwidth allocation configured on this switch.
BwOper	Bandwidth allocation negotiated with the peer (operating bandwidth).
BwPeer	Bandwidth allocation configured on the peer.

DCBX PFC Information

The following command displays DCBX Priority Flow Control (PFC) information:

```
show cee information dcbx port <port alias or number> pfc
```

Command mode: All

DCBX Port Priority Flow Control Table					
Alias	Port	Priority	EnableDesr	EnableOper	EnablePeer
INTA2	2	0	disabled	disabled	disabled
INTA2	2	1	disabled	disabled	disabled
INTA2	2	2	disabled	disabled	disabled
INTA2	2	3	enabled	enabled	enabled
INTA2	2	4	disabled	disabled	disabled
INTA2	2	5	disabled	disabled	disabled
INTA2	2	6	disabled	disabled	disabled
INTA2	2	7	disabled	disabled	disabled

DCBX PFC information includes the following:

- Port alias and number
- 802.1p value
- **EnableDesr**: Status configured on this switch
- **EnableOper**: Status negotiated with the peer (operating status)
- **EnablePeer**: Status configured on the peer

DCBX Application Protocol Information

The following command displays DCBX Application Protocol information:

show cee information dcbx port <port alias or number> **app-proto**

Command mode: All

```

DCBX Application Protocol Table
=====

FCoE Priority Information
=====
Protocol ID           : 0x8906
Selector Field        : 0
Organizationally Unique ID: 0x1b21

Alias  Port Priority EnableDesr EnableOper EnablePeer
-----
INTA2  2   0      disabled  disabled  disabled
INTA2  2   1      disabled  disabled  disabled
INTA2  2   2      disabled  disabled  disabled
INTA2  2   3      enabled   disabled  enabled
INTA2  2   4      disabled  disabled  disabled
INTA2  2   5      disabled  disabled  disabled
INTA2  2   6      disabled  disabled  disabled
INTA2  2   7      disabled  disabled  disabled

FIP Snooping Priority Information
=====
Protocol ID           : 0x8914
Selector Field        : 0
Organizationally Unique ID: 0x1b21

Alias  Port Priority EnableDesr EnableOper EnablePeer
-----
INTA2  2   0      disabled  disabled  disabled
INTA2  2   1      disabled  disabled  disabled
INTA2  2   2      disabled  disabled  disabled
INTA2  2   3      enabled   disabled  disabled
INTA2  2   4      disabled  disabled  disabled
INTA2  2   5      disabled  disabled  disabled
INTA2  2   6      disabled  disabled  disabled
INTA2  2   7      disabled  disabled  disabled

```

The following table describes the DCBX Application Protocol information.

Table 82. DCBX Application Protocol Information Fields

Parameter	Description
Protocol ID	Identifies the supported Application Protocol.
Selector Field	Specifies the Application Protocol type, as follows: <ul style="list-style-type: none"> o 0 = Ethernet Type o 1 = TCP socket ID
Organizationally Unique ID	DCBX TLV identifier

Table 82. *DCBX Application Protocol Information Fields (continued)*

Parameter	Description
Alias	Port alias
Port	Port number
Priority	802.1p value
EnableDesr	Status configured on this switch
EnableOper	Status negotiated with the peer (operating status)
EnablePeer	Status configured on the peer

ETS Information

Table 83 describes the Enhanced Transmission Selection (ETS) information options.

Table 83. *ETS Information Options*

Command Syntax and Usage
show cee global ets [information] Displays global ETS information. Command mode: All
show cee global ets priority-group <0-7, 15> Displays the current global ETS Priority Group parameters. Command mode: All

The following command displays ETS information:

show cee global ets information

Command mode: All

Global ETS information:		
Number of COSq: 8		
Mapping of 802.1p Priority to Priority Groups:		
Priority	PGID	COSq
-----	----	----
0	0	0
1	0	0
2	0	0
3	1	1
4	2	2
5	2	2
6	2	2
7	2	2
Bandwidth Allocation to Priority Groups:		
PGID	PG%	Description
----	----	-----
0	10	
1	50	
2	40	

Enhanced Transmission Selection (ETS) information includes the following:

- Number of Class of Service queues (COSq) configured
- 802.1p mapping to Priority Groups and Class of Service queues
- Bandwidth allocated to each Priority Group

PFC Information

Table 84 describes the Priority Flow Control (PFC) information options.

Table 84. PFC Information Options

Command Syntax and Usage
show cee global pfc [information] Displays global PFC information. Command mode: All
show cee global pfc priority <priority value> Displays the current global PFC 802.1p priority parameters. Command mode: All
show cee port <port alias or number> pfc [information] Displays PFC information on the specified port. Command mode: All
show cee port <port alias or number> pfc priority <priority value> Displays the current PFC 802.1p priority parameters for the specified port. Command mode: All

The following command displays PFC information for a port:

show cee port <port alias or number> pfc information

Command mode: All

```
Global PFC Information:
PFC - ON
Priority  State  Description
-----  -
0        Dis
1        Dis
2        Dis
3        Ena
4        Dis
5        Dis
6        Dis
7        Dis
-----
State - indicates whether PFC is Enabled/Disabled on a particular priority
```

FCoE Information

Table 85 describes the Fibre Channel over Ethernet (FCoE) information options.

Table 85. *FCoE Information Options*

Command Syntax and Usage
show fcoe information Displays all current FCoE information. Command mode: All

FIP Snooping Information

Table 86 describes the Fibre Channel Initialization Protocol (FIP) Snooping information options.

Table 86. *FIP Snooping Information Options*

Command Syntax and Usage
show fcoe fips [information] Displays FIP Snooping information for all ports. Command mode: All
show fcoe fips fcf Displays FCF information for all FCFs learned. Command mode: All
show fcoe fips fcoe Displays FCoE connections established on the switch. Command mode: All
show fcoe fips port <port alias or number> [information] Displays FIP Snooping (FIPS) information for the selected port, including a list of current FIPS ACLs. Command mode: All
show fcoe fips vlans Displays VLAN information. Command mode: All

The following command displays FIP Snooping information for the selected port:

show fcoe fips port *<port alias or number>* **information**

Command mode: All

```
FIP Snooping on port INTA2:
This port has been configured to automatically detect FCF.
It has currently detected to have 0 FCF connecting to it.
FIPS ACLs configured on this port:
SMAC 00:c0:dd:13:9b:6f, action deny.
SMAC 00:c0:dd:13:9b:70, action deny.
SMAC 00:c0:dd:13:9b:6d, action deny.
SMAC 00:c0:dd:13:9b:6e, action deny.
DMAC 00:c0:dd:13:9b:6f, ethertype 0x8914, action permit.
DMAC 00:c0:dd:13:9b:70, ethertype 0x8914, action permit.
DMAC 00:c0:dd:13:9b:6d, ethertype 0x8914, action permit.
DMAC 00:c0:dd:13:9b:6e, ethertype 0x8914, action permit.
SMAC 0e:fc:00:01:0a:00, DMAC 00:c0:dd:13:9b:6d, ethertype 0x8906, vlan
1002, action permit.
DMAC 01:10:18:01:00:01, Ethertype 0x8914, action permit.
DMAC 01:10:18:01:00:02, Ethertype 0x8914, action permit.
Ethertype 0x8914, action deny.
Ethertype 0x8906, action deny.
SMAC 0e:fc:00:00:00:00, SMAC mask ff:ff:ff:00:00:00, action deny.
```

FIP Snooping port information includes the following:

- Fibre Channel Forwarding (FCF) mode
- Number of FCF links connected to the port
- List of FIP Snooping ACLs assigned to the port

Fibre Channel Information

These commands allow you to display Fibre Channel information.

Table 87. *Fibre Channel Information Commands*

Command Syntax and Usage
show flogi database [<i><switch_number></i>] Displays fabric login database information. For details, see page 193 . Command mode: All
show fcalias [<i><switch_number></i>] Displays the current FC alias - PWWN (port World Wide Name) mapping. Command mode: All
show fcdomain [<i><switch_number></i>] Displays the current configuration of FC domains. Command mode: All
show fcns database [<i><switch_number></i>] Displays FC name server database information. For details, see page 193 . Command mode: All
show fdmi database [<i><switch_number></i>] Displays fibre channel management interface database information. Command mode: All
show fcs database [<i><switch_number></i>] Displays fabric configuration status database information. For details, see page 194 . Command mode: All
show fcoe database [<i><switch_number></i>] Displays Fibre Channel over Ethernet database information. Command mode: All
show fcf [<i><switch_number></i>] Displays Fibre Channel forwarding information. For details, see page 194 . Command mode: All
show npv status [<i><switch_number></i>] Displays N_Port Virtualization information. Command mode: All
show npv flogi-table [<i><switch_number></i>] Displays the contents of the NPV fabric login table. Command mode: All

Table 87. Fibre Channel Information Commands

Command Syntax and Usage
show npv traffic-map [<switch_number>] Displays NPV source-destination traffic mapping. For details, see page 195 . Command mode: All
show npv auto-disruptive-load-balance [<switch_number>] Displays all VLANs that have automated disruptive load balance enabled. Command mode: All
show zone [<switch_number>] Lists all FC zones. Command mode: All
show zone status [<switch_number>] Displays FC zone status information. For details, see page 195 . Command mode: All
show zone name <zone name> [<switch_number>] Displays information for the specified FC zone. Command mode: All
show zoneset [<switch_number>] Lists all FC zonesets. Command mode: All
show zoneset name <zoneset name> [<switch_number>] Displays information for the specified FC zoneset. Command mode: All
show zoneset active [<switch_number>] Displays the currently active FC zoneset. Command mode: All
show interface fc information [<switch_number>] Displays FC port information. For details, see page 196 . Command mode: All
show interface fc port <port no.> [<switch_number>] Displays FC information for the specified ports. Command mode: All
show topology [<switch_number>] Displays port and corresponding node information for each switch member of the fabric or only for a specific switch member. For details, see page 197 . Command mode: All

Table 87. Fibre Channel Information Commands

Command Syntax and Usage
show steering [<i><switch_number></i>] Displays frame steering information for each switch member of the fabric or only for a specific switch member. Command mode: All
show fabric Display the FC fabric information. Command mode: All
show lsdb Display the link state db information of the FC fabric. Command mode: All

Fabric Login Database Information

The following command displays a list of the storage devices present in the FC fabric login database:

show flogi database

Command mode: All

Port	FCID	Port-WWN	Node-WWN
EXT1	010c00	20:00:00:11:0d:64:f5:00	20:00:00:11:0d:64:f5:00
EXT2	010c01	20:01:00:11:0d:64:f4:00	20:01:00:11:0d:64:f4:00
Total number of entries = 2			

Fibre Channel Name Server Database Information

The following command displays information about the FC name server database:

show fcns database

Command mode: All

FCID	TYPE	PWWN
010100	N	20:02:00:11:0d:8a:10:00
010400	N	20:3a:00:80:e5:2d:1a:30
010c00	N	10:00:00:00:27:1a:13:f0
010c01	N	10:00:00:00:27:1a:13:f7
010c02	N	10:00:00:00:27:1f:61:5d
010c03	N	10:00:00:00:27:1f:61:3f
010c04	N	10:00:00:00:27:1f:61:44
010c05	N	10:00:00:00:27:1f:61:34
010c06	N	10:00:00:00:27:1f:61:23
010c07	N	10:00:00:00:27:1f:8e:18
...		
01140d	N	10:00:00:00:27:1f:61:4a
Total number of entries = 72		

Fabric Configuration Status Database Information

The following command displays information about the fabric configuration:

show fcs database

Command mode: All

```
Fabric Name      : 10:00:74:99:75:22:48:00
Switch Domain Id : 1
Switch Mgmt Id   : 010000
Switch WWN       : 10:00:74:99:75:22:48:00
Switch Ports:
```

```
-----
Port           PWWN
-----
55      20:02:74:99:75:22:48:00
63      00:00:00:00:00:00:00:00
64      00:00:00:00:00:00:00:00
```

Fibre Channel Forwarding Information

The following command displays information about Fibre Channel forwarding:

show fcf

Command mode: All

```
=====
FCF:1 in VLAN: 1002    NPV-Gw
FC-MAP      : 0x0efc00
Priority     : 128
FKA-Adv     : 8

FC Port     : 55 60 63 64
=====
FCF:2 in VLAN: 1003    NPV-Gw
FC-MAP      : 0x0efc01
Priority     : 128
FKA-Adv     : 8

FC Port     : 56 59
=====
FCF:3 in VLAN: 1004    Fabric
FC-MAP      : 0x0efc02
Priority     : 128
FKA-Adv     : 8

FC Port     : 53 54 57 58 61 62
```

NPV Traffic Information

The following command displays information about NPV source-destination traffic mapping:

show npv traffic-map

Command mode: All

VLAN	Source Ports	NP-Uplink Dest Ports
1002		55, 60, 63, 64
1003		56, 59

Zone Status Information

The following command displays status information about FC zones:

show zone status

Command mode: All

Default-Zone	: Permit
FC Zoning Limits :--	
MAX ZONES per ZONESET	: 64
MAX MEMBERS per ZONE	: 20
MAX ZONESETS	: 4
MAX ZONES	: 200
MAX ALIASES	: 200
MAX MEMBERS	: 1000

FC Port Information

The following command displays information about FC ports:

show interface fc information

Command mode: All

Alias	Port	Admin State	Oper State	Login Status	Config Type	Running Type	Link Status	Link Speed
-----	-----	-----	-----	-----	-----	-----	-----	-----
EXT11	53	Online	Online	LoggedIn	F	F	Active	4Gb/s
EXT12	54	Online	Offline	NotLoggedIn	F	F	Active	4Gb/s
EXT13	55	Online	Offline	NotLoggedIn	F	Unknown	Inactive	Unknown
EXT14	56	Online	Offline	NotLoggedIn	F	Unknown	Inactive	Unknown
EXT15	57	Down	Downed	NotLoggedIn	Eth	Eth	Inactive	Unknown
EXT16	58	Down	Downed	NotLoggedIn	Eth	Eth	Inactive	Unknown
EXT17	59	Down	Downed	NotLoggedIn	Eth	Eth	Inactive	Unknown
EXT18	60	Down	Downed	NotLoggedIn	Eth	Eth	Inactive	Unknown
EXT19	61	Down	Downed	NotLoggedIn	Eth	Eth	Inactive	Unknown
EXT20	62	Down	Downed	NotLoggedIn	Eth	Eth	Inactive	Unknown
EXT21	63	Down	Downed	NotLoggedIn	Eth	Eth	Inactive	Unknown
EXT22	64	Online	Downed	NotLoggedIn	Eth	Eth	Inactive	Unknown

Fibre Channel port information includes the following:

Table 88. Fibre Channel Port Information Descriptions

Parameter	Description
Alias	Port alias
Port	Port number
Admin State	Configured state of the port (online, offline, or down)
Oper State	Current operational state of the port (online, offline, or downed)
Login Status	Login status of the port on the FC fabric (LoggedIn or NotLoggedIn)
Config Type	Configured FC port type, as follows: <ul style="list-style-type: none"> o E (Expansion port) **not supported o F (Fabric port) o Eth (Ethernet port)
Running Type	Current operational FC port type, as follows: <ul style="list-style-type: none"> o E (Expansion port) **not supported o F (Fabric port) o Eth (Ethernet port) o Unknown
Link Status	Current status of the port link (Active or Inactive)
Link Speed	Current operational link speed.

The following command displays information specific FC ports:

show interface fc port <port no.>

Command mode: All

```
Port Number: EXT11
-----
AdminState           Online
ConfigType           F
EPortIsolationReason NotApplicable
LinkSpeed             Auto
LinkState             Inactive
LoginStatus           NotLoggedIn
OperationalState     Offline
RunningType          Unkn
Port Number: EXT12
-----
AdminState           Online
ConfigType           F
EPortIsolationReason NotApplicable
LinkSpeed             Auto
LinkState             Inactive
LoginStatus           NotLoggedIn
OperationalState     Offline
RunningType          Unkn
Port Number: EXT13
-----
AdminState           Online
ConfigType           Eth
EPortIsolationReason NotApplicable
LinkSpeed             10000
LinkState             Inactive
LoginStatus           NotLoggedIn
OperationalState     Offline
RunningType          Eth
```

Topology Information

The following command displays a list of the ports and corresponding nodes for each switch member of the fabric:

show topology

Command mode: All

```
Information for Switch Unit 1:
(This is the local swunit)
Switch Domain Id   : 1
Switch Mgmt Id     : 010000
Fabric Name        : 10:00:6c:ae:8b:d6:11:c1
Switch WWN         : 10:00:6c:ae:8b:d6:11:c1
Switch Ports Online:
-----
Port              LocalPortWWN          RemoteNodeWWN
-----
EXT1              20:00:00:11:0d:64:f5:00  20:00:00:11:0d:64:f5:00
EXT2              20:01:00:11:0d:64:f4:00  20:01:00:11:0d:64:f4:00
```

Information Dump

The following command dumps switch information:

show information-dump

Command mode: All

Use the dump command to dump all switch information available (10K or more, depending on your configuration). This data is useful for tuning and debugging switch performance.

If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump commands.

Chapter 3. Statistics Commands

You can use the Statistics Commands to view switch performance statistics in both the user and administrator command modes. This chapter discusses how to use the command line interface to display switch statistics.

Table 89. *Statistics Commands*

Command Syntax and Usage
<p>show counters</p> <p>Dumps all switch statistics. Use this command to gather data for tuning and debugging switch performance. If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump command. For details, see page 297.</p> <p>Command mode: All</p>
<p>show layer3 counters</p> <p>Displays Layer 3 statistics.</p> <p>Command mode: All</p>
<p>show ntp counters</p> <p>Displays Network Time Protocol (NTP) Statistics. See page 294 for a sample output and a description of NTP Statistics.</p> <p>Command mode: All</p>
<p>show snmp-server counters</p> <p>Displays SNMP statistics. See page 290 for sample output.</p> <p>Command mode: All</p>

Forwarding Database Statistics

The following commands display Forwarding Database statistics.

Table 90. *Forwarding Database statistics commands*

Command Syntax and Usage
<p>show mac-address-table counters [all]</p> <p>Displays Forwarding Database (FDB) statistics. The all options displays all FDB statistics (unicast and multicast).</p> <p>Command mode: All</p>
<p>show mac-address-table counters interface port <i><port alias or number></i></p> <p>Displays Forwarding Database (FDB) statistics for the specified port.</p> <p>Command mode: All</p>
<p>show mac-address-table counters portchannel <i><trunk group number></i></p> <p>Displays Forwarding Database (FDB) statistics for the specified trunk group.</p> <p>Command mode: All</p>
<p>show mac-address-table counters state {forward trunk unknown}</p> <p>Displays Forwarding Database (FDB) statistics by state:</p> <ul style="list-style-type: none">o forward displays FDB statistics for forwarding state MAC address entrieso trunk displays FDB statistics for trunk state MAC address entrieso unknown displays FDB statistics for unknown state MAC address entries <p>Command mode: All</p>
<p>show mac-address-table counters static</p> <p>Displays Forwarding Database (FDB) statistics for static MAC address entries.</p> <p>Command mode: All</p>
<p>show mac-address-table counters unicast</p> <p>Displays Forwarding Database (FDB) statistics for unicast MAC address entries.</p> <p>Command mode: All</p>
<p>show mac-address-table counters vlan <i><VLAN number></i></p> <p>Displays Forwarding Database (FDB) statistics for the specified VLAN.</p> <p>Command mode: All</p>
<p>clear mac-address-table counters</p> <p>Clears Forwarding Database (FDB) statistics.</p> <p>Command mode: All except User EXEC</p>

Port Statistics

These commands display traffic statistics on a port-by-port basis. Traffic statistics include SNMP Management Information Base (MIB) objects.

Table 91. *Port Statistics Commands*

Command Syntax and Usage
show interface counters Displays interface statistics. Command mode: All
show interface port <port alias or number> all-counters Displays all statistics for the specified port. Command mode: All
show interface port <port alias or number> bridging-counters Displays bridging (“dot1”) statistics for the specified port. See page 207 for sample output. Command mode: All
show interface port <port alias or number> dot1x counters Displays IEEE 802.1X statistics for the specified port. See page 203 for sample output. Command mode: All
show interface port <port alias or number> ethernet-counters Displays Ethernet (“dot3”) statistics for the specified port. See page 208 for sample output. Command mode: All
show interface port <port alias or number> interface-counters Displays interface statistics for the specified port. See page 211 for sample output. Command mode: All
show interface port <port alias or number> ip-counters Displays IP statistics for the specified port. See page 214 for sample output. Command mode: All
show interface port <port alias or number> link-counters Displays link statistics for the specified port. See page 214 for sample output. Command mode: All
show interface port <port alias or number> link-counters oam counters Displays OAM link statistics for the specified port. Command mode: All

Table 91. *Port Statistics Commands*

Command Syntax and Usage
<p>show interface port <i><port alias or number></i> maintenance-counters</p> <p>Displays maintenance statistics for the specified port.</p> <p>Command mode: All</p>
<p>show interface port <i><port alias or number></i> oam counters</p> <p>Displays Operation, Administrative, and Maintenance (OAM) protocol statistics for the port.</p> <p>Command mode: All</p>
<p>show interface port <i><port alias or number></i> rmon-counters</p> <p>Displays Remote Monitoring (RMON) statistics for the port. See page 215 for sample output.</p> <p>Command mode: All</p>
<p>clear counters</p> <p>Clears statistics for all ports.</p> <p>Command mode: All except User EXEC</p>
<p>clear interface port <i><port alias or number></i> counters</p> <p>Clears all statistics for the port.</p> <p>Command mode: All except User EXEC</p>

802.1X Authenticator Statistics

Use the following command to display the 802.1X authenticator statistics of the selected port:

show interface port <port alias or number> **dot1x counters**

Command mode: All

Authenticator Statistics:	
eapolFramesRx	= 925
eapolFramesTx	= 3201
eapolStartFramesRx	= 2
eapolLogoffFramesRx	= 0
eapolRespIdFramesRx	= 463
eapolRespFramesRx	= 460
eapolReqIdFramesTx	= 1820
eapolReqFramesTx	= 1381
invalidEapolFramesRx	= 0
eapLengthErrorFramesRx	= 0
lastEapolFrameVersion	= 1
lastEapolFrameSource	= 00:01:02:45:ac:51

Table 92. 802.1X Authenticator Statistics of a Port

Statistics	Description
eapolFramesRx	Total number of EAPOL frames received.
eapolFramesTx	Total number of EAPOL frames transmitted.
eapolStartFramesRx	Total number of EAPOL Start frames received.
eapolLogoffFramesRx	Total number of EAPOL Logoff frames received.
eapolRespIdFramesRx	Total number of EAPOL Response Identity frames received.
eapolRespFramesRx	Total number of Response frames received.
eapolReqIdFramesTx	Total number of Request Identity frames transmitted.
eapolReqFramesTx	Total number of Request frames transmitted.
invalidEapolFramesRx	Total number of invalid EAPOL frames received.
eapLengthErrorFramesRx	Total number of EAP length error frames received.
lastEapolFrameVersion	The protocol version number carried in the most recently received EAPOL frame.
lastEapolFrameSource	The source MAC address carried in the most recently received EAPOL frame.

802.1X Authenticator Diagnostics

Use the following command to display the 802.1X authenticator diagnostics of the selected port:

show interface port *<port alias or number>* **dot1x counters**

Command mode: All

Authenticator Diagnostics:	
authEntersConnecting	= 1820
authEapLogoffsWhileConnecting	= 0
authEntersAuthenticating	= 463
authSuccessesWhileAuthenticating	= 5
authTimeoutsWhileAuthenticating	= 0
authFailWhileAuthenticating	= 458
authReauthsWhileAuthenticating	= 0
authEapStartsWhileAuthenticating	= 0
authEapLogoffWhileAuthenticating	= 0
authReauthsWhileAuthenticated	= 3
authEapStartsWhileAuthenticated	= 0
authEapLogoffWhileAuthenticated	= 0
backendResponses	= 923
backendAccessChallenges	= 460
backendOtherRequestsToSupplicant	= 460
backendNonNakResponsesFromSupplicant	= 460
backendAuthSuccesses	= 5
backendAuthFails	= 458

Table 93. 802.1X Authenticator Diagnostics of a Port

Statistics	Description
authEntersConnecting	Total number of times that the state machine transitions to the CONNECTING state from any other state.
authEapLogoffsWhile Connecting	Total number of times that the state machine transitions from CONNECTING to DISCONNECTED as a result of receiving an EAPOL-Logoff message.
authEntersAuthenticating	Total number of times that the state machine transitions from CONNECTING to AUTHENTICATING, as a result of an EAP-Response/Identity message being received from the Supplicant.
authSuccessesWhile Authenticating	Total number of times that the state machine transitions from AUTHENTICATING to AUTHENTICATED, as a result of the Backend Authentication state machine indicating successful authentication of the Supplicant.

Table 93. 802.1X Authenticator Diagnostics of a Port (continued)

Statistics	Description
authTimeoutsWhile Authenticating	Total number of times that the state machine transitions from AUTHENTICATING to ABORTING, as a result of the Backend Authentication state machine indicating authentication timeout.
authFailWhile Authenticating	Total number of times that the state machine transitions from AUTHENTICATING to HELD, as a result of the Backend Authentication state machine indicating authentication failure.
authReauthsWhile Authenticating	Total number of times that the state machine transitions from AUTHENTICATING to ABORTING, as a result of a re-authentication request.
authEapStartsWhile Authenticating	Total number of times that the state machine transitions from AUTHENTICATING to ABORTING, as a result of an EAPOL-Start message being received from the Supplicant.
authEapLogoffWhile Authenticating	Total number of times that the state machine transitions from AUTHENTICATING to ABORTING, as a result of an EAPOL-Logoff message being received from the Supplicant.
authReauthsWhile Authenticated	Total number of times that the state machine transitions from AUTHENTICATED to CONNECTING, as a result of a re-authentication request.
authEapStartsWhile Authenticated	Total number of times that the state machine transitions from AUTHENTICATED to CONNECTING, as a result of an EAPOL-Start message being received from the Supplicant.
authEapLogoffWhile Authenticated	Total number of times that the state machine transitions from AUTHENTICATED to DISCONNECTED, as a result of an EAPOL-Logoff message being received from the Supplicant.
backendResponses	Total number of times that the state machine sends an initial Access-Request packet to the Authentication server. Indicates that the Authenticator attempted communication with the Authentication Server.
backendAccessChallenges	Total number of times that the state machine receives an initial Access-Challenge packet from the Authentication server. Indicates that the Authentication Server has communication with the Authenticator.

Table 93. *802.1X Authenticator Diagnostics of a Port (continued)*

Statistics	Description
backendOtherRequestsToSupplicant	Total number of times that the state machine sends an EAP-Request packet (other than an Identity, Notification, Failure, or Success message) to the Supplicant. Indicates that the Authenticator chose an EAP-method.
backendNonNakResponsesFromSupplicant	Total number of times that the state machine receives a response from the Supplicant to an initial EAP-Request, and the response is something other than EAP-NAK. Indicates that the Supplicant can respond to the Authenticator's chosen EAP-method.
backendAuthSuccesses	Total number of times that the state machine receives an Accept message from the Authentication Server. Indicates that the Supplicant has successfully authenticated to the Authentication Server.
backendAuthFails	Total number of times that the state machine receives a Reject message from the Authentication Server. Indicates that the Supplicant has not authenticated to the Authentication Server.

Bridging Statistics

Use the following command to display the bridging statistics of the selected port:

show interface port <port alias or number> **bridging-counters**

Command mode: All

Bridging statistics for port INT1:	
dot1PortInFrames:	63242584
dot1PortOutFrames:	63277826
dot1PortInDiscards:	0
dot1TpLearnedEntryDiscards:	0
dot1StpPortForwardTransitions:	0

Table 94. *Bridging Statistics of a Port*

Statistics	Description
dot1PortInFrames	The number of frames that have been received by this port from its segment. A frame received on the interface corresponding to this port is only counted by this object if and only if it is for a protocol being processed by the local bridging function, including bridge management frames.
dot1PortOutFrames	The number of frames that have been transmitted by this port to its segment. Note that a frame transmitted on the interface corresponding to this port is only counted by this object if and only if it is for a protocol being processed by the local bridging function, including bridge management frames.
dot1PortInDiscards	Count of valid frames received which were discarded (that is, filtered) by the Forwarding Process.
dot1TpLearnedEntry Discards	The total number of Forwarding Database entries, which have been or would have been learnt, but have been discarded due to a lack of space to store them in the Forwarding Database. If this counter is increasing, it indicates that the Forwarding Database is regularly becoming full (a condition which has unpleasant performance effects on the subnetwork). If this counter has a significant value but is not presently increasing, it indicates that the problem has been occurring but is not persistent.
dot1StpPortForward Transitions	The number of times this port has transitioned from the Learning state to the Forwarding state.

Ethernet Statistics

Use the following command to display the ethernet statistics of the selected port:

show interface port <port alias or number> **ethernet-counters**

Command mode: All

Ethernet statistics for port INT1:	
dot3StatsAlignmentErrors:	0
dot3StatsFCSErrors:	0
dot3StatsSingleCollisionFrames:	0
dot3StatsMultipleCollisionFrames:	0
dot3StatsLateCollisions:	0
dot3StatsExcessiveCollisions:	0
dot3StatsInternalMacTransmitErrors:	NA
dot3StatsFrameTooLongs:	0
dot3StatsInternalMacReceiveErrors:	0

Table 95. *Ethernet Statistics for Port*

Statistics	Description
dot3StatsAlignmentErrors	<p>A count of frames received on a particular interface that are not an integral number of octets in length and do not pass the Frame Check Sequence (FCS) check.</p> <p>The count represented by an instance of this object is incremented when the <code>alignmentError</code> status is returned by the MAC service to the Logical Link Control (LLC) (or other MAC user). Received frames for which multiple error conditions obtained are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.</p>
dot3StatsFCSErrors	<p>A count of frames received on a particular interface that are an integral number of octets in length but do not pass the Frame Check Sequence (FCS) check.</p> <p>The count represented by an instance of this object is incremented when the <code>frameCheckError</code> status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions obtained are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.</p>

Table 95. *Ethernet Statistics for Port (continued)*

Statistics	Description
dot3StatsSingleCollision Frames	<p>A count of successfully transmitted frames on a particular interface for which transmission is inhibited by exactly one collision.</p> <p>A frame that is counted by an instance of this object is also counted by the corresponding instance of either the <code>ifOutUcastPkts</code>, <code>ifOutMulticastPkts</code>, or <code>ifOutBroadcastPkts</code>, and is not counted by the corresponding instance of the <code>dot3StatsMultipleCollisionFrame</code> object.</p>
dot3StatsMultipleCollision Frames	<p>A count of successfully transmitted frames on a particular interface for which transmission is inhibited by more than one collision.</p> <p>A frame that is counted by an instance of this object is also counted by the corresponding instance of either the <code>ifOutUcastPkts</code>, <code>ifOutMulticastPkts</code>, or <code>ifOutBroadcastPkts</code>, and is not counted by the corresponding instance of the <code>dot3StatsSingleCollisionFrames</code> object.</p>
dot3StatsLateCollisions	<p>The number of times that a collision is detected on a particular interface later than 512 bit-times into the transmission of a packet.</p> <p>Five hundred and twelve bit-times corresponds to 51.2 microseconds on a 10 Mbit/s system. A (late) collision included in a count represented by an instance of this object is also considered as a (generic) collision for purposes of other collision-related statistics.</p>
dot3StatsExcessive Collisions	<p>A count of frames for which transmission on a particular interface fails due to excessive collisions.</p>
dot3StatsInternalMac TransmitErrors	<p>A count of frames for which transmission on a particular interface fails due to an internal MAC sub layer transmit error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of either the <code>dot3StatsLateCollisions</code> object, the <code>dot3StatsExcessiveCollisions</code> object, or the <code>dot3StatsCarrierSenseErrors</code> object.</p> <p>The precise meaning of the count represented by an instance of this object is implementation-specific. In particular, an instance of this object may represent a count of transmission errors on a particular interface that are not otherwise counted.</p>

Table 95. *Ethernet Statistics for Port (continued)*

Statistics	Description
dot3StatsFrameTooLongs	<p>A count of frames received on a particular interface that exceed the maximum permitted frame size.</p> <p>The count represented by an instance of this object is incremented when the <code>frameTooLong</code> status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions obtained are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.</p>
dot3StatsInternalMacReceiveErrors	<p>A count of frames for which reception on a particular interface fails due to an internal MAC sub layer receive error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of either the <code>dot3StatsFrameTooLongs</code> object, the <code>dot3StatsAlignmentErrors</code> object, or the <code>dot3StatsFCSErrors</code> object.</p> <p>The precise meaning of the count represented by an instance of this object is implementation-specific. In particular, an instance of this object may represent a count of received errors on a particular interface that are not otherwise counted.</p>

Interface Statistics

Use the following command to display the interface statistics of the selected port:

show interface port <port alias or number> **interface-counters**

Command mode: All

Interface statistics for port EXT1:			
	ifHCIn Counters		ifHCOut Counters
Octets:	0		648329
UcastPkts:	0		0
BroadcastPkts:	0		271
MulticastPkts:	0		7654
FlowCtrlPkts:	0		0
PriFlowCtrlPkts:	0		0
Discards:	0		11
Errors:	0		0
Ingress Discard reasons:		Egress Discard reasons:	
VLAN Discards:	0	HOL-blocking Discards:	0
Filter Discards:	0	MMU Discards:	0
Policy Discards:	0	Cell Error Discards:	0
Non-Forwarding State:	0	MMU Aging Discards:	0
IBP/CBP Discards:	0	Other Discards:	11

Table 96. *Interface Statistics for Port*

Statistics	Description
ifInOctets	The total number of octets received on the interface, including framing characters.
ifInUcastPkts	The number of packets, delivered by this sub-layer to a higher sub-layer, which were not addressed to a multicast or broadcast address at this sub-layer.
ifInBroadcastPkts	The number of packets, delivered by this sub-layer to a higher sub-layer, which were addressed to a broadcast address at this sub-layer.
ifInMulticastPkts	The total number of packets that higher-level protocols requested to be transmitted, and which were addressed to a multicast address at this sub-layer, including those that were discarded or not sent. For a MAC layer protocol, this includes both Group and Functional addresses.
ifInFlowControlPkts	The total number of flow control pause packets received on the interface.
ifInDiscards	The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being delivered to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.

Table 96. *Interface Statistics for Port (continued)*

Statistics	Description
ifInErrors	For packet-oriented interfaces, the number of inbound packets that contained errors preventing them from being delivered to a higher-layer protocol. For character-oriented or fixed-length interfaces, the number of inbound transmission units that contained errors preventing them from being deliverable to a higher-layer protocol.
ifOutOctets	The total number of octets transmitted out of the interface, including framing characters.
ifOutUcastPkts	The total number of packets that higher-level protocols requested to be transmitted, and which were not addressed to a multicast or broadcast address at this sub-layer, including those that were discarded or not sent.
ifOutBroadcastPkts	The total number of packets that higher-level protocols requested to be transmitted, and which were addressed to a broadcast address at this sub-layer, including those that were discarded or not sent. This object is a 64-bit version of <code>ifOutBroadcastPkts</code> .
ifOutMulticastPkts	The total number of packets that higher-level protocols requested to be transmitted, and which were addressed to a multicast address at this sub-layer, including those that were discarded or not sent. For a MAC layer protocol, this includes both Group and Functional addresses. This object is a 64-bit version of <code>ifOutMulticastPkts</code> .
ifOutFlowControlPkts	The total number of flow control pause packets transmitted out of the interface.
ifOutDiscards	The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being transmitted. One possible reason for discarding such a packet could be to free up buffer space.
ifOutErrors	For packet-oriented interfaces, the number of outbound packets that could not be transmitted because of errors. For character-oriented or fixed-length interfaces, the number of outbound transmission units that could not be transmitted because of errors.
VLAN Discards	Discarded because the packet was tagged with a VLAN to which this port is not a member.
Filter Discards	Dropped by the Content Aware Engine (user-configured filter).

Table 96. *Interface Statistics for Port (continued)*

Statistics	Description
Policy Discards	Dropped due to policy setting. For example, due to a user-configured static entry.
Non-Forwarding State	Discarded because the ingress port is not in the forwarding state.
IBP/CBP Discards	Discarded because of Ingress Back Pressure (flow control), or because the Common Buffer Pool is full (for example, insufficient packet buffering).
HOL-blocking Discards	Discarded because of the Head Of Line (HOL) blocking mechanism. Low-priority packets are placed in a separate queue and can be discarded while applications or the TCP protocol determine whether a retransmission is necessary. HOL blocking forces transmission to stop until the overloaded egress port buffer can receive data again.
MMU Discards	Discarded because of the Memory Management Unit.
Cell Error Discards	
MMU Aging Discards	
Other Discards	Discarded packets not included in any category.
Empty Egress Portmap	Dropped due to an egress port bitmap of zero condition (no ports in the egress mask). This counter increments whenever the switching decision found that there was no port to send out.

Interface Protocol Statistics

Use the following command to display the interface protocol statistics of the selected port:

show interface port *<port alias or number>* **ip-counters**

Command mode: All

GEA IP statistics for port INT1:	
ipInReceives :	0
ipInHeaderError :	0
ipInDiscards :	0

Table 97. *Interface Protocol Statistics*

Statistics	Description
ipInReceives	The total number of input datagrams received from interfaces, including those received in error.
ipInHeaderErrors	The number of input datagrams discarded because the IP address in their IP header's destination field was not a valid address to be received at this entity (the switch).
ipInDiscards	The number of input IP datagrams for which no problems were encountered to prevent their continued processing, but which were discarded (for example, for lack of buffer space). Note that this counter does not include any datagrams discarded while awaiting re-assembly.

Link Statistics

Use the following command to display the link statistics of the selected port:

show interface port *<port alias or number>* **link-counters**

Command mode: All

Link statistics for port INT1:	
linkStateChange:	1

Table 98. *Link Statistics*

Statistics	Description
linkStateChange	The total number of link state changes.

RMON Statistics

Use the following command to display the Remote Monitoring (RMON) statistics of the selected port:

show interface port <port alias or number> **rmon-counters**

Command mode: All

RMON statistics for port EXT2:	
etherStatsDropEvents:	NA
etherStatsOctets:	0
etherStatsPkts:	0
etherStatsBroadcastPkts:	0
etherStatsMulticastPkts:	0
etherStatsCRCAlignErrors:	0
etherStatsUndersizePkts:	0
etherStatsOversizePkts:	0
etherStatsFragments:	NA
etherStatsJabbers:	0
etherStatsCollisions:	0
etherStatsPkts64to127octets:	0
etherStatsPkts128to255octets:	0
etherStatsPkts256to511octets:	0
etherStatsPkts512to1023octets:	0
etherStatsPkts1024to1518octets:	0

Table 99. RMON Statistics of a Port

Statistics	Description
etherStatsDropEvents	The total number of packets received that were dropped because of system resource constraints.
etherStatsOctets	The total number of octets of data (including those in bad packets) received on the network (excluding framing bits but including FCS octets).
etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received.
etherStatsBroadcastPkts	The total number of good packets received that were directed to the broadcast address.
etherStatsMulticastPkts	The total number of good packets received that were directed to a multicast address.
etherStatsCRCAlignErrors	The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).

Table 99. *RMON Statistics of a Port (continued)*

Statistics	Description
etherStatsUndersizePkts	The total number of packets received that were less than 64 octets long (excluding framing bits but including FCS octets) and were otherwise well formed.
etherStatsOversizePkts	The total number of packets received that were longer than 1518 octets (excluding framing bits but including FCS octets) and were otherwise well formed.
etherStatsFragments	The total number of packets received that were less than 64 octets in length (excluding framing bits but including FCS octets) and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
etherStatsJabbers	The total number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error). Jabber is defined as the condition where any packet exceeds 20 ms. The allowed range to detect jabber is between 20 ms and 150 ms.
etherStatsCollisions	The best estimate of the total number of collisions on this Ethernet segment.
etherStatsPkts64Octets	The total number of packets (including bad packets) received that were less than or equal to 64 octets in length (excluding framing bits but including FCS octets).
etherStatsPkts65to127 Octets	The total number of packets (including bad packets) received that were greater than 64 octets in length (excluding framing bits but including FCS octets).
etherStatsPkts128to255 Octets	The total number of packets (including bad packets) received that were greater than 127 octets in length (excluding framing bits but including FCS octets).
etherStatsPkts256to511 Octets	The total number of packets (including bad packets) received that were greater than 255 octets in length (excluding framing bits but including FCS octets).

Table 99. *RMON Statistics of a Port (continued)*

Statistics	Description
etherStatsPkts512to1023 Octets	The total number of packets (including bad packets) received that were greater than 511 octets in length (excluding framing bits but including FCS octets).
etherStatsPkts1024to1518 Octets	The total number of packets (including bad packets) received that were greater than 1023 octets in length (excluding framing bits but including FCS octets).

QoS Queue Statistics

The following commands display Quality of Service (QoS) Queue statistics.

Table 100. *QoS Queue Statistics*

Command Syntax and Usage
<p>show interface port <i><port alias or number></i> egress-queue-counters [<i><0-7></i> drop]</p> <p>Displays the total number of successfully transmitted or dropped packets and bytes for each QoS queue for the selected port.</p> <ul style="list-style-type: none">o <i><0-7></i> displays statistics only for the specified queueo drop displays statistics only for the dropped packets and bytes <p>Command mode: All</p>
<p>show interface port <i><port alias or number></i> egress-mcast-queue-counters [<i><8-11></i> drop]</p> <p>Displays the total number of successfully transmitted or dropped packets and bytes for each multicast QoS queue for the selected port.</p> <ul style="list-style-type: none">o <i><8-11></i> displays statistics only for the specified queueo drop displays statistics only for the dropped packets and bytes <p>Command mode: All</p>
<p>show interface port <i><port alias or number></i> egress-queue-rate [<i><0-7></i> drop]</p> <p>Displays the number of successfully transmitted or dropped packets and bytes per second for each QoS queue for the selected port.</p> <ul style="list-style-type: none">o <i><0-7></i> displays statistics only for the specified queueo drop displays statistics only for the dropped packets and bytes <p>Command mode: All</p>
<p>show interface port <i><port alias or number></i> egress-mcast-queue-rate [<i><8-11></i> drop]</p> <p>Displays the number of successfully transmitted or dropped packets and bytes per second for each multicast QoS queue for the selected port.</p> <ul style="list-style-type: none">o <i><8-11></i> displays statistics only for the specified queueo drop displays statistics only for the dropped packets and bytes <p>Command mode: All</p>

Use the following command to display the rate-based QoS queue statistics of the selected port:

show interface port <port alias or number> **egress-queue-rate**

Command mode: All

```

QoS Rate for port INTA14:
QoS Queue 0:
  Tx Packets:                5
  Dropped Packets:          0
  Tx Bytes:                  363
  Dropped Bytes:            0
QoS Queue 1:
  Tx Packets:                0
  Dropped Packets:          0
  Tx Bytes:                  0
  Dropped Bytes:            0
QoS Queue 2:
  Tx Packets:                0
  Dropped Packets:          0
  Tx Bytes:                  0
  Dropped Bytes:            0
QoS Queue 3:
  Tx Packets:                0
  Dropped Packets:          0
  Tx Bytes:                  0
  Dropped Bytes:            0
QoS Queue 4:
  Tx Packets:                0
  Dropped Packets:          0
  Tx Bytes:                  0
  Dropped Bytes:            0
QoS Queue 5:
  Tx Packets:                0
  Dropped Packets:          0
  Tx Bytes:                  0
  Dropped Bytes:            0
QoS Queue 6:
  Tx Packets:                0
  Dropped Packets:          0
  Tx Bytes:                  0
  Dropped Bytes:            0
QoS Queue 7:
  Tx Packets:                0
  Dropped Packets:          0
  Tx Bytes:                  0
  Dropped Bytes:            0
  
```

Table 101. QoS Queue Rate-Based Statistics of a Port

Statistics	Description
Tx Packets	Number of successfully transmitted packets per second for the QoS queue.
Dropped Packets	Number of dropped packets per second for the QoS queue.

Table 101. QoS Queue Rate-Based Statistics of a Port (continued)

Statistics	Description
Tx Bytes	Number of successfully transmitted bytes per second for the QoS queue.
Dropped Bytes	Number of dropped bytes per second for the QoS queue.

Use the following command to display the -based QoS queue statistics of the selected port:

show interface port *<port alias or number>* **egress-queue-counters**

Command mode: All

```
QoS Rate for port 1:1:
QoS Queue 0:
  Tx Packets:                                0
  Dropped Packets:                          0
  Tx Bytes:                                  0
  Dropped Bytes:                             0
QoS Queue 1:
  Tx Packets:                                0
  Dropped Packets:                          0
  Tx Bytes:                                  0
  Dropped Bytes:                             0
QoS Queue 2:
  Tx Packets:                                0
  Dropped Packets:                          0
  Tx Bytes:                                  0
  Dropped Bytes:                             0
QoS Queue 3:
  Tx Packets:                                0
  Dropped Packets:                          0
  Tx Bytes:                                  0
  Dropped Bytes:                             0
QoS Queue 4:
  Tx Packets:                                0
  Dropped Packets:                          0
  Tx Bytes:                                  0
  Dropped Bytes:                             0
QoS Queue 5:
  Tx Packets:                                0
  Dropped Packets:                          0
  Tx Bytes:                                  0
  Dropped Bytes:                             0
QoS Queue 6:
  Tx Packets:                                0
  Dropped Packets:                          0
  Tx Bytes:                                  0
  Dropped Bytes:                             0
QoS Queue 7:
  Tx Packets:                                0
  Dropped Packets:                          0
  Tx Bytes:                                  0
  Dropped Bytes:                             0
```

Table 102. *QoS Queue Rate-Based Statistics of a Port*

Statistics	Description
Tx Packets	Total number of successfully transmitted packets for the QoS queue.
Dropped Packets	Total number of dropped packets for the QoS queue.
Tx Bytes	Total number of successfully transmitted bytes for the QoS queue.
Dropped Bytes	Total number of dropped bytes for the QoS queue.

Link Aggregation Group (LAG) Statistics

The following commands display Link Aggregation Group (LAG) statistics.

Table 103. LAG Statistics Commands

Command Syntax and Usage
<pre>show interface portchannel <trunk group number> interface-counters</pre> <p>Displays interface statistics for the LAG. For a sample output see page 222.</p> <p>Command mode: All</p>
<pre>clear interface portchannel <trunk group number> counters</pre> <p>Clears all the statistics on the specified LAG.</p> <p>Command mode: All except User EXEC</p>

Trunk Group Interface Statistics

The following command displays interface statistics for the specified trunk group.

```
show interface portchannel <trunk group number> interface-counters
```

Command mode: All

Interface statistics for trunk group 12:		
	ifHCIn Counters	ifHCOut Counters
Octets:	6003620	27746863
UcastPkts:	0	0
BroadcastPkts:	0	33358
MulticastPkts:	42883	135420
FlowCtrlPkts:	0	0
PriFlowCtrlPkts:	0	0
Discards:	0	0
Errors:	0	0
Ingress Discard reasons for trunk group 12:		
VLAN Discards:	0	
Empty Egress Portmap:	0	
Filter Discards:	0	
Policy Discards:	0	
Non-Forwarding State:	0	
IBP/CBP Discards:	0	

Layer 2 Statistics

The following commands display Layer 2 statistics.

Table 104. *Layer 2 Statistics Commands*

Command Syntax and Usage
show fcoe counters Displays Fibre Channel over Ethernet (FCoE) statistics. See page 289 for sample output. Command mode: All
show interface port <port alias or number> lacp counters Displays Link Aggregation Control Protocol (LACP) statistics for the specified port. See page 225 for sample output. Command mode: All
show interface port <port alias or number> lldp counters Displays LLDP statistics for the specified port. See page 227 for sample output. Command mode: All except User EXEC
show hotlinks counters Displays Hot Links statistics. See page 226 for sample output. Command mode: All except User EXEC
show oam counters Displays OAM statistics. See page 229 for sample output. Command mode: All except User EXEC
show spanning-tree statistics Displays all Spanning Tree Protocol (STP) statistics. See page 228 for sample output. Command mode: All
clear fcoe counters Clears all Fibre Channel over Ethernet (FCoE) statistics. Command mode: All
clear interface port <port alias or number> lacp counters Clears all Link Aggregation Control Protocol (LACP) statistics for the specified port. Command mode: All except User EXEC

Table 104. *Layer 2 Statistics Commands (continued)*

Command Syntax and Usage
clear interface port <i><port alias or number></i> lldp counters Clears all LLDP statistics for the port. Command mode: All except User EXEC
clear hotlinks Clears all Hot Links statistics. Command mode: All except User EXEC

LACP Statistics

Use the following command to display Link Aggregation Control Protocol (LACP) statistics:

```
show interface port <port alias or number> lACP counters
```

Command mode: All

Port EXT1:	

Valid LACPDUs received:	- 870
Valid Marker PDUs received:	- 0
Valid Marker Rsp PDUs received:	- 0
Unknown version/TLV type:	- 0
Illegal subtype received:	- 0
LACPDUs transmitted:	- 6031
Marker PDUs transmitted:	- 0
Marker Rsp PDUs transmitted:	- 0

Link Aggregation Control Protocol (LACP) statistics are described in the following table:

Table 105. *LACP Statistics*

Statistic	Description
Valid LACPDUs received	Total number of valid LACP data units received.
Valid Marker PDUs received	Total number of valid LACP marker data units received.
Valid Marker Rsp PDUs received	Total number of valid LACP marker response data units received.
Unknown version/TLV type	Total number of LACP data units with an unknown version or type, length, and value (TLV) received.
Illegal subtype received	Total number of LACP data units with an illegal subtype received.
LACPDUs transmitted	Total number of LACP data units transmitted.
Marker PDUs transmitted	Total number of LACP marker data units transmitted.
Marker Rsp PDUs transmitted	Total number of LACP marker response data units transmitted.

Hotlinks Statistics

Use the following command to display Hot Links statistics:

show hotlinks counters

Command mode: All

```
Hot Links Trigger Stats:
-----
Trigger 1 statistics:
  Trigger Name: Trigger 1
  Master active:          0
  Backup active:         0
  FDB update:            0   failed: 0
```

The following table describes the Hotlinks statistics:

Table 106. *Hotlinks Statistics*

Statistic	Description
Master active	Total number of times the Master interface transitioned to the Active state.
Backup active	Total number of times the Backup interface transitioned to the Active state.
FDB update	Total number of FDB update requests sent.
failed	Total number of FDB update requests that failed.

LLDP Port Statistics

Use the following command to display LLDP statistics:

```
show interface port <port alias or number> lldp counters
```

Command mode: All

LLDP Port INT1 Statistics	
Frames Transmitted	: 0
Frames Received	: 0
Frames Received in Errors	: 0
Frames Discarded	: 0
TLVs Unrecognized	: 0
Neighbors Aged Out	: 0
...	

The following table describes the LLDP port statistics:

Table 107. *LLDP Port Statistics*

Statistic	Description
Frames Transmitted	Total number of LLDP frames transmitted.
Frames Received	Total number of LLDP frames received.
Frames Received in Errors	Total number of LLDP frames that had errors.
Frames Discarded	Total number of LLDP frames discarded.
TLVs Unrecognized	Total number of unrecognized TLV (Type, Length, and Value) fields received.
Neighbors Aged Out	Total number of neighbor devices that have had their LLDP information aged out.

Spanning Tree Statistics

Use the following command to display Spanning Tree Protocol (STP) statistics:

show spanning-tree statistics

Command mode: All

Spanning-tree group: 1									
Port	RxBpdu	TxBpdu	RxTCN	LastTCNRx		TxTCN	LastTCNTx		
17	28	212246	22	13:53:41	7-15-2016	210286	11:35:54	7-20-2016	
18	13	212244	7	13:53:18	7-15-2016	210289	11:35:54	7-20-2016	
20	212328	210259	181570	11:35:55	7-20-2016	210257	11:35:54	7-20-2016	
21	212326	2	210366	11:35:54	7-20-2016	1	13:33:07	7-15-2016	
22	238753	423006	204170	11:35:54	7-20-2016	420536	11:35:54	7-20-2016	
23	232365	423004	204612	11:35:54	7-20-2016	420530	11:35:54	7-20-2016	
24	240073	423000	199662	11:35:53	7-20-2016	420528	11:35:54	7-20-2016	
Spanning-tree group: 23									
Port	RxBpdu	TxBpdu	RxTCN	LastTCNRx		TxTCN	LastTCNTx		
11	39	211499	5	14:01:02	7-15-2016	101	2:11:41	7-20-2016	
12	36	211499	2	13:53:06	7-15-2016	104	2:11:41	7-20-2016	
13	36	211497	2	13:53:06	7-15-2016	104	2:11:41	7-20-2016	
14	36	211481	2	13:53:06	7-15-2016	104	2:11:41	7-20-2016	
15	36	211497	2	13:53:06	7-15-2016	104	2:11:41	7-20-2016	

Use the following command to display STP statistics for a specific port:

show spanning-tree statistics port *<port alias or number>*

Command mode: All

Port: 17									
stg	RxBpdu	TxBpdu	RxTCN	LastTCNRx		TxTCN	LastTCNTx		
1	28	212329	22	13:53:41	7-15-2016	210369	11:38:41	7-20-2016	
Dropped Bpdu counter: 28									

Use the following command to display STP statistics for a specific Spanning Tree Group (STG):

show spanning-tree statistics stp *<1-256>*

Command mode: All

Spanning-tree group: 1									
Port	RxBpdu	TxBpdu	RxTCN	LastTCNRx		TxTCN	LastTCNTx		
17	28	212246	22	13:53:41	7-15-2016	210286	11:35:54	7-20-2016	
18	13	212244	7	13:53:18	7-15-2016	210289	11:35:54	7-20-2016	
20	212328	210259	181570	11:35:55	7-20-2016	210257	11:35:54	7-20-2016	
21	212326	2	210366	11:35:54	7-20-2016	1	13:33:07	7-15-2016	
22	238753	423006	204170	11:35:54	7-20-2016	420536	11:35:54	7-20-2016	
23	232365	423004	204612	11:35:54	7-20-2016	420530	11:35:54	7-20-2016	
24	240073	423000	199662	11:35:53	7-20-2016	420528	11:35:54	7-20-2016	

OAM Statistics

Use the following command to display OAM statistics:

show oam counters

Command mode: All

```
OAM statistics on port INT1
-----
Information OAMPDU Tx :      0
Information OAMPDU Rx :      0
Unsupported OAMPDU Tx :      0
Unsupported OAMPDU Rx :      0

Local faults
-----
  0 Link fault records
  0 Critical events
  0 Dying gasps

Remote faults
-----
  0 Link fault records
  0 Critical events
  0 Dying gasps
```

OAM statistics include the following:

- Total number of OAM Protocol Data Units (OAMPDU) transmitted and received.
- Total number of unsupported OAM Protocol Data Units (OAMPDU) transmitted and received.
- Local faults detected.
- Remote faults detected.

vLAG Statistics

The following table describes the vLAG statistics commands:

Table 108. *vLAG Statistics Options*

Command Syntax and Usage
show vlag isl-statistics Displays vLAG ISL statistics for the selected port. See page 230 for sample output.
show vlag statistics Displays all vLAG statistics. See page 230 for sample output.
clear vlag statistics Clears all vLAG statistics.

vLAG ISL Statistics

Use the following command to display vLAG statistics:

show vlag isl-statistics

Command mode: All

	In Counter	Out Counter
Octets:	2755820	2288
Packets:	21044	26

ISL statistics include the total number of octets received/transmitted, and the total number of packets received/transmitted over the Inter-Switch Link (ISL).

vLAG Statistics

Use the following command to display vLAG statistics:

show vlag statistics

Command mode: All

vLAG PDU sent:			
Role Election:	0	System Info:	0
Peer Instance Enable:	0	Peer Instance Disable:	0
FDB Dynamic Add:	0	FDB Dynamic Del:	0
FDB Inactive Add:	0	FDB Inactive Del:	0
Health Check:	0	ISL Hello:	0
Other:	0	Unknown:	0
vLAG PDU received:			
Role Election:	0	System Info:	0
Peer Instance Enable:	0	Peer Instance Disable:	0
FDB Dynamic Add:	0	FDB Dynamic Del:	0
FDB Inactive Add:	0	FDB Inactive Del:	0
Health Check:	0	ISL Hello:	0
Other:	0	Unknown:	0
vLAG IGMP packets forwarded:			
IGMP Reports:	0		
IGMP Leaves:	0		

The following table describes the vLAG statistics:

Table 109. *vLAG Statistics*

Statistic	Description
Role Election	Total number of vLAG PDUs sent for role elections.
System Info	Total number of vLAG PDUs sent for getting system information.
Peer Instance Enable	Total number of vLAG PDUs sent for enabling peer instance.
Peer Instance Disable	Total number of vLAG PDUs sent for disabling peer instance.
FDB Dynamic Add	Total number of vLAG PDUs sent for addition of FDB dynamic entry.
FDB Dynamic Del	Total number of vLAG PDUs sent for deletion of FDB dynamic entry.
FDB Inactive Add	Total number of vLAG PDUs sent for addition of FDB inactive entry.
FDB Inactive Del	Total number of vLAG PDUs sent for deletion of FDB inactive entry.
Health Check	Total number of vLAG PDUs sent for health checks.
ISL Hello	Total number of vLAG PDUs sent for ISL hello.
Other	Total number of vLAG PDUs sent for other reasons.
Unknown	Total number of vLAG PDUs sent for unknown operations.
IGMP Reports	Total number of IGMP Reports forwarded over vLAG.
IGMP Leaves	Total number of IGMP Leave messages forwarded over vLAG.

Layer 3 Statistics

The following commands display Layer 3 statistics.

Table 110. *Layer 3 Statistics Commands*

Command Syntax and Usage
show ip arp counters Displays Address Resolution Protocol (ARP) statistics. See page 246 for sample output. Command mode: All
show ip arp inspection statistics [vlan <VLAN ID (1-4094)>] Displays Dynamic ARP Inspection statistics. See page 246 for sample output. Command mode: All
show ip counters Displays IP statistics. See page 236 for sample output. Command mode: All
show ip dhcp snooping counters Displays Dynamic Host Control Protocol (DHCP) Snooping statistics. Command mode: All
show ip dns counters Displays Domain Name System (DNS) statistics. See page 248 for sample output. Command mode: All
show ip icmp counters Displays ICMP statistics. See page 249 for sample output. Command mode: All
show ip igmp counters Displays IGMP statistics. See page 254 for sample output. Command mode: All
show ip igmp vlan <VLAN number> counter Displays IGMP statistics for a specific VLAN. See page 254 for sample output. Command mode: All
show ip pim counters Displays PIM statistics for all configured PIM interfaces. See page 269 for sample output. Command mode: All

Table 110. *Layer 3 Statistics Commands (continued)*

Command Syntax and Usage
show ip pim interface <interface number> counters Displays PIM statistics for the selected interface. Command mode: All
show ip pim mroute count Displays statistics of various multicast entry types. Command mode: All
show ip ospf counters Displays OSPF statistics. See page 260 for sample output. Command mode: All
show ip rip counters Displays Routing Information Protocol (RIP) statistics. See page 270 for sample output. Command mode: All
show ip route counters Displays route statistics. See page 244 for sample output. Command mode: All
show ip slp counter Displays Service Location Protocol (SLP) packet statistics. See page 296 for a sample output. Command mode: All
show ip tcp counters Displays TCP statistics. See page 251 for sample output. Command mode: All
show ip udp counters Displays UDP statistics. See page 253 for sample output. Command mode: All
show ip vrrp counters When virtual routers are configured, you can display the protocol statistics for VRRP. See page 268 for sample output. Command mode: All
show ipv6 counters Displays IPv6 statistics. See page 239 for sample output. Command mode: All
show ipv6 mld counters Displays Multicast Listener Discovery (MLD) statistics. Command mode: All

Table 110. *Layer 3 Statistics Commands (continued)*

Command Syntax and Usage
show ipv6 ospf counters Displays OSPFv3 statistics. See page 265 for sample output. Command mode: All
clear ip counters Clears IPv4 statistics. Use this command with caution as it deletes all the IPv4 statistics. Command mode: All except User EXEC
clear ip arp counters Clears Address Resolution Protocol (ARP) statistics. Command mode: All except User EXEC
clear ip arp inspection statistics [vlan <VLAN ID (1-4094)>] Clears Dynamic ARP Inspection statistics. Command mode: Privileged EXEC
clear ip dhcp snooping counters Clears DHCP Snooping statistics. Command mode: Privileged EXEC
clear ip dns counters Clears Domain Name System (DNS) statistics. Command mode: All except User EXEC
clear ip icmp counters Clears Internet Control Message Protocol (ICMP) statistics. Command mode: All except User EXEC
clear ip igmp [<VLAN number>] counters Clears IGMP statistics for all VLANs or for a specific VLAN. Command mode: All
clear ip ospf counters Clears Open Shortest Path First (OSPF) statistics. Command mode: All except User EXEC
clear ip rip counters Clears Routing Information Protocol (RIP) statistics. Command mode: All except User EXEC
clear ip slp counters Clears Service Location Protocol (SLP) packet statistics. Command mode: All except user EXEC

Table 110. *Layer 3 Statistics Commands (continued)*

Command Syntax and Usage
clear ip tcp counters Clears Transmission Control Protocol (TCP) statistics. Command mode: All except User EXEC
clear ip udp counters Clears User Datagram Protocol (UDP) statistics. Command mode: All except User EXEC
clear ip vrrp counters Clears VRRP statistics. Command mode: All
clear ipv6 counters Clears IPv6 statistics. Use this command with caution as it deletes all the IPv6 statistics. Command mode: All except User EXEC
show layer3 counters Dumps all Layer 3 statistics. Use this command to gather data for tuning and debugging switch performance. If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump command. Command mode: All

IPv4 Statistics

The following command displays IPv4 statistics:

show ip counters

Command mode: All

IP statistics:			
ipInReceives:	3115873	ipInHdrErrors:	1
ipInAddrErrors:	35447	ipForwDatagrams:	0
ipInUnknownProtos:	500504	ipInDiscards:	0
ipInDelivers:	2334166	ipOutRequests:	1010542
ipOutDiscards:	4	ipOutNoRoutes:	4
ipReasmReqds:	0	ipReasmOKs:	0
ipReasmFails:	0	ipFragOKs:	0
ipFragFails:	0	ipFragCreates:	0
ipRoutingDiscards:	0	ipDefaultTTL:	255
ipReasmTimeout:	5		

Table 111. *IP Statistics*

Statistic	Description
ipInReceives	The total number of input datagrams received from interfaces, including those received in error.
ipInHdrErrors	The number of input datagrams discarded due to errors in their IP headers, including bad checksums, version number mismatch, other format errors, time-to-live exceeded, errors discovered in processing their IP options, and so forth.
ipInAddrErrors	The number of input datagrams discarded because the IP address in their IP header's destination field was not a valid address to be received at this entity (the switch). This count includes invalid addresses (for example, 0.0.0.0) and addresses of unsupported Classes (for example, Class E). For entities which are not IP Gateways and therefore do not forward datagrams, this counter includes datagrams discarded because the destination address was not a local address.
ipForwDatagrams	The number of input datagrams for which this entity (the switch) was not their final IP destination, as a result of which an attempt was made to find a route to forward them to that final destination. In entities which do not act as IP Gateways, this counter will include only those packets, which were Source-Routed via this entity (the switch), and the Source-Route option processing was successful.

Table 111. *IP Statistics (continued)*

Statistic	Description
ipInUnknownProtos	The number of locally addressed datagrams received successfully but discarded because of an unknown or unsupported protocol.
ipInDiscards	The number of input IP datagrams for which no problems were encountered to prevent their continued processing, but which were discarded (for example, for lack of buffer space). Note that this counter does not include any datagrams discarded while awaiting re-assembly.
ipInDelivers	The total number of input datagrams successfully delivered to IP user-protocols (including ICMP).
ipOutRequests	The total number of IP datagrams which local IP user-protocols (including ICMP) supplied to IP in requests for transmission. Note that this counter does not include any datagrams counted in ipForwDatagrams.
ipOutDiscards	The number of output IP datagrams for which no problem was encountered to prevent their transmission to their destination, but which were discarded (for example, for lack of buffer space). Note that this counter would include datagrams counted in ipForwDatagrams if any such packets met this (discretionary) discard criterion.
ipOutNoRoutes	The number of IP datagrams discarded because no route could be found to transmit them to their destination. Note that this counter includes any packets counted in ipForwDatagrams, which meet this <i>no-route</i> criterion. Note that this includes any datagrams which a host cannot route because all of its default gateways are down.
ipReasmReqds	The number of IP fragments received which needed to be reassembled at this entity (the switch).
ipReasmOKs	The number of IP datagrams successfully re- assembled.
ipReasmFails	The number of failures detected by the IP re- assembly algorithm (for whatever reason: timed out, errors, and so forth). Note that this is not necessarily a count of discarded IP fragments since some algorithms (notably the algorithm in RFC 815) can lose track of the number of fragments by combining them as they are received.
ipFragOKs	The number of IP datagrams that have been successfully fragmented at this entity (the switch).
ipFragFails	The number of IP datagrams that have been discarded because they needed to be fragmented at this entity (the switch) but could not be, for example, because their <i>Don't Fragment</i> flag was set.

Table 111. *IP Statistics (continued)*

Statistic	Description
ipFragCreates	The number of IP datagram fragments that have been generated as a result of fragmentation at this entity (the switch).
ipRoutingDiscards	The number of routing entries, which were chosen to be discarded even though they are valid. One possible reason for discarding such an entry could be to free-up buffer space for other routing entries.
ipDefaultTTL	The default value inserted into the Time-To-Live (TTL) field of the IP header of datagrams originated at this entity (the switch), whenever a TTL value is not supplied by the transport layer protocol.
ipReasmTimeout	The maximum number of seconds, which received fragments are held while they are awaiting reassembly at this entity (the switch).

Use the following command to clear IPv4 statistics:

clear ip counters

Command mode: All except User EXEC

IPv6 Statistics

The following command displays IPv6 statistics:

show ipv6 counters

Command mode: All

```
IPv6 Statistics
*****
48016 Rcvd                0 HdrErrors                0 TooBigErrors
  0 AddrErrors            0 FwdDgrams                0 UnknownProtos
  0 Discards              48016 Delivers            48155 OutRequests
  0 OutDiscards           0 OutNoRoutes              0 ReasmReqds
  0 ReasmOKs              0 ReasmFails
  0 FragOKs               0 FragFails                0 FragCreates
  0 RcvdMcastPkt          146 SentMcastPkts         0 TruncatedPkts
  0 RcvdRedirects        0 SentRedirects

ICMP Statistics
*****
Received :
43353 ICMPPkts          1 ICMPErrPkt              91 DestUnreach          0 TimeExcds
  0 ParmProbs            0 PktTooBigMsg            39512 ICMEchoReq        0 ICMEchoReps
  0 RouterSols           0 RouterAdv               1828 NeighSols         1922 NeighAdv
  0 Redirects            91 AdminProhib            0 ICMPBadCode

Sent :
43269 ICMPMsgs          0 ICMPErrMsgs             0 DstUnReach            0 TimeExcds
  0 ParmProbs            0 PktTooBigMsg            0 EchoReq               39512 EchoReply
  6 RouterSols           0 RouterAdv               1924 NeighSols         1827 NeighborAdv
  0 RedirectMsgs        0 AdminProhibMsgs

UDP statistics
*****
Received :
4679 UDPDgrams          0 UDPNoPorts              0 UDPErrPkts
Sent :
91 UDPDgrams
```

Table 112 describes the IPv6 statistics.

Table 112. *IPv6 Statistics*

Statistic	Description
Rcvd	Number of datagrams received from interfaces, including those received in error.
HdrErrors	Number of datagrams discarded due to errors in their IP headers, including bad checksums, version number mismatch, other format errors, time-to-live exceeded, errors discovered in processing their IP options, and so forth.
TooBigErrors	The number of input datagrams that could not be forwarded because their size exceeded the link MTU of outgoing interface.
AddrErrors	Number of datagrams discarded because the IP address in their IP header's destination field was not a valid address to be received at this entity (the switch). This count includes invalid addresses. For entities which are not IP Gateways and therefore do not forward datagrams, this counter includes datagrams discarded because the destination address was not a local address.
FwdDgrams	Number of input datagrams for which this entity (the switch) was not their final IP destination, as a result of which an attempt was made to find a route to forward them to that final destination. In entities which do not act as IP Gateways, this counter will include only those packets, which were Source-Routed via this entity (the switch), and the Source-Route option processing was successful.
UnknownProtos	Number of locally addressed datagrams received successfully but discarded because of an unknown or unsupported protocol.
Discards	Number of IP datagrams for which no problems were encountered to prevent their continued processing, but which were discarded (for example, for lack of buffer space). Note that this counter does not include any datagrams discarded while awaiting re-assembly.
Delivers	Number of datagrams successfully delivered to IP user-protocols (including ICMP).
OutRequests	Number of IP datagrams which local IP user-protocols (including ICMP) supplied to IP in requests for transmission.
OutDiscards	Number of output IP datagrams for which no problem was encountered to prevent their transmission to their destination, but which were discarded (for example, for lack of buffer space).

Table 112. *IPv6 Statistics (continued)*

Statistic	Description
OutNoRoutes	Number of IP datagrams discarded because no route could be found to transmit them to their destination. Note that this includes any datagrams which a host cannot route because all of its default gateways are down.
ReasmReqds	Number of IP fragments received which needed to be reassembled at this entity (the switch).
ReasmOKs	Number of IP datagrams successfully re- assembled.
ReasmFails	Number of failures detected by the IP re- assembly algorithm (for whatever reason: timed out, errors, and so forth). Note that this is not necessarily a count of discarded IP fragments since some algorithms (notably the algorithm in RFC 815) can lose track of the number of fragments by combining them as they are received.
FragOKs	Number of IP datagrams that have been successfully fragmented at this entity (the switch).
FragFails	Number of IP datagrams that have been discarded because they needed to be fragmented at this entity (the switch) but could not be, for example, because their Don ' t Fragment flag was set.
FragCreates	Number of IP datagram fragments that have been generated as a result of fragmentation at this entity (the switch).
RcvdMcastPkt	The number of multicast packets received by the interface.
SentMcastPkts	The number of multicast packets transmitted by the interface.
TruncatedPkts	The number of input datagrams discarded because datagram frame didn't carry enough data.
RcvdRedirects	The number of Redirect messages received by the interface.
SentRedirects	The number of Redirect messages sent.

The following table describes the IPv6 ICMP statistics.

Table 113. *ICMP Statistics*

Statistic	Description
Received	
ICMPPkts	Number of ICMP messages which the entity (the switch) received.
ICMPErrPkt	Number of ICMP messages which the entity (the switch) received but determined as having ICMP-specific errors (bad ICMP checksums, bad length, and so forth).
DestUnreach	Number of ICMP Destination Unreachable messages received.
TimeExcds	Number of ICMP Time Exceeded messages received.
ParmProbs	Number of ICMP Parameter Problem messages received.
PktTooBigMsg	The number of ICMP Packet Too Big messages received by the interface.
ICMPEchoReq	Number of ICMP Echo (request) messages received.
ICMPEchoReps	Number of ICMP Echo Reply messages received.
RouterSols	Number of Router Solicitation messages received by the switch.
RouterAdv	Number of Router Advertisements received by the switch.
NeighSols	Number of Neighbor Solicitations received by the switch.
NeighAdv	Number of Neighbor Advertisements received by the switch.
Redirects	Number of ICMP Redirect messages received.
AdminProhib	The number of ICMP destination unreachable/communication administratively prohibited messages received by the interface.
ICMPBadCode	The number of ICMP Parameter Problem messages received by the interface.
Sent	
ICMPMsgs	Number of ICMP messages which this entity (the switch) attempted to send.
ICMPErrMsgs	Number of ICMP messages which this entity (the switch) did not send due to problems discovered within ICMP such as a lack of buffer. This value should not include errors discovered outside the ICMP layer such as the inability of IP to route the resultant datagram. In some implementations there may be no types of errors that contribute to this counter's value.
DstUnReach	Number of ICMP Destination Unreachable messages sent.

Table 113. *ICMP Statistics (continued)*

Statistic	Description
TimeExcds	Number of ICMP Time Exceeded messages sent.
ParmProbs	Number of ICMP Parameter Problem messages sent.
PktTooBigs	The number of ICMP Packet Too Big messages sent by the interface.
EchoReq	Number of ICMP Echo (request) messages sent.
EchoReply	Number of ICMP Echo Reply messages sent.
RouterSols	Number of Router Solicitation messages sent by the switch.
RouterAdv	Number of Router Advertisements sent by the switch.
NeighSols	Number of Neighbor Solicitations sent by the switch.
NeighAdv	Number of Neighbor Advertisements sent by the switch.
RedirectMsgs	Number of ICMP Redirect messages sent. For a host, this object will always be zero, since hosts do not send redirects.
AdminProhibMsgs	Number of ICMP destination unreachable/communication administratively prohibited messages sent.

[Table 114](#) describes the UDP statistics.

Table 114. *UDP Statistics*

Statistic	Description
Received	
UDPDgrams	Number of UDP datagrams received by the switch.
UDPNoPorts	Number of received UDP datagrams for which there was no application at the destination port.
UDPErrPkts	Number of received UDP datagrams that could not be delivered for reasons other than the lack of an application at the destination port.
Sent	
UDPDgrams	Number of UDP datagrams sent from this entity (the switch).

Use the following command to clear IPv6 statistics:

clear ipv6 counters

Command mode: All except User EXEC

IPv4 Route Statistics

The following command displays IPv4 route statistics:

show ip route counters

Command mode: All

```

Route statistics:
-----
Current total outstanding routes      :          1
Highest number ever recorded         :          1
Current static routes                 :           0
Current RIP routes                   :           0
Current OSPF routes                   :           0
Current BGP routes                   :           0
Maximum supported routes              :        2048

ECMP statistics (active in ASIC):
-----
Maximum number of ECMP routes        :        2048
Maximum number of static ECMP routes :         128
Number of routes with ECMP paths     :           0
  
```

Table 115. *Route Statistics*

Statistics	Description
Current total outstanding routes	Total number of outstanding routes in the route table.
Highest number ever recorded	Highest number of routes ever recorded in the route table.
Current static routes	Total number of static routes in the route table.
Current RIP routes	Total number of Routing Information Protocol (RIP) routes in the route table.
Current OSPF routes	Total number of OSPF routes in the route table.
Current BGP routes	Total number of Border Gateway Protocol routes in the route table.
Maximum supported routes	Maximum number of routes that are supported.
Maximum number of ECMP routes	Maximum number of ECMP routes that are supported.
Maximum number of static ECMP routes	Maximum number of static ECMP routes that are supported.
Number of routes with ECMP paths	Current number of routes that contain ECMP paths.

IPv6 Route Statistics

The following command displays IPv6 route statistics:

show ipv6 route counters

Command mode: All

IPv6 Route statistics:			
ipv6RoutesCur:	4	ipv6RoutesHighWater:	6
ipv6RoutesMax:	1156		
ECMP statistics:			

Maximum number of ECMP routes	:	600	
Max ECMP paths allowed for one route	:	5	

Table 116. *IPv6 Route Statistics*

Statistics	Description
ipv6RoutesCur	Total number of outstanding routes in the route table.
ipv6RoutesHighWater	Highest number of routes ever recorded in the route table.
ipv6RoutesMax	Maximum number of routes that are supported.
Maximum number of ECMP routes	Maximum number of ECMP routes supported.
Max ECMP paths allowed for one route	Maximum number of ECMP paths supported for each route.

Use the `clear` option to delete all IPv6 route statistics.

ARP statistics

The following command displays Address Resolution Protocol statistics.

show [ip] arp counters

Command mode: All

ARP statistics:			
arpEntriesCur:	3	arpEntriesHighWater:	4
arpEntriesMax:	4095		

Table 117. ARP Statistics

Statistic	Description
arpEntriesCur	The total number of outstanding ARP entries in the ARP table.
arpEntriesHighWater	The highest number of ARP entries ever recorded in the ARP table.
arpEntriesMax	The maximum number of ARP entries that are supported.

The following command displays Dynamic ARP Inspection statistics.

show ip arp inspection statistics [vlan <VLAN ID (1-4094)>]

Command mode: All

Vlan	Forwarded	Dropped
2	100	200

DHCP Statistics

The following commands display DHCP statistics:

Table 118. *DHCP Statistics Options*

Command Syntax and Usage
show ip dhcp snooping counters Displays DHCP Snooping statistics. Command mode: All
clear ip dhcp snooping counters Clears DHCP Snooping statistics. Command mode: Privileged EXEC

DHCP Snooping Statistics

The following command displays DHCP Snooping statistics:

show ip dhcp snooping counters

Command mode: All

DHCP Snooping statistics:	
Received Request packets	2
Received Reply packets	2
Received Invalid packets	0
Dropped packets out of rate	0
Dropped packets other reason	0

DHCP Snooping Statistics count all DHCP packets processed by DHCP snooping.

DNS Statistics

The following command displays Domain Name System statistics.

show ip dns counters

Command mode: All

DNS statistics:	
dnsInRequests:	0
dnsOutRequests:	0
dnsBadRequests:	0

Table 119. *DNS Statistics*

Statistics	Description
dnsInRequests	The total number of DNS response packets that have been received.
dnsOutRequests	The total number of DNS response packets that have been transmitted.
dnsBadRequests	The total number of DNS request packets received that were dropped.

ICMP Statistics

The following command displays ICMP statistics:

show ip icmp counters

Command mode: All

ICMP statistics:			
icmpInMsgs:	245802	icmpInErrors:	1393
icmpInDestUnreachs:	41	icmpInTimeExcds:	0
icmpInParmProbs:	0	icmpInSrcQuenchs:	0
icmpInRedirects:	0	icmpInEchos:	18
icmpInEchoReps:	244350	icmpInTimestamps:	0
icmpInTimestampReps:	0	icmpInAddrMasks:	0
icmpInAddrMaskReps:	0	icmpOutMsgs:	253810
icmpOutErrors:	0	icmpOutDestUnreachs:	15
icmpOutTimeExcds:	0	icmpOutParmProbs:	0
icmpOutSrcQuenchs:	0	icmpOutRedirects:	0
icmpOutEchos:	253777	icmpOutEchoReps:	18
icmpOutTimestamps:	0	icmpOutTimestampReps:	0
icmpOutAddrMasks:	0	icmpOutAddrMaskReps:	0

Table 120. ICMP Statistics

Statistic	Description
icmpInMsgs	The total number of ICMP messages which the entity (the switch) received. Note that this counter includes all those counted by icmpInErrors.
icmpInErrors	The number of ICMP messages which the entity (the switch) received but determined as having ICMP-specific errors (bad ICMP checksums, bad length, and so forth).
icmpInDestUnreachs	The number of ICMP Destination Unreachable messages received.
icmpInTimeExcds	The number of ICMP Time Exceeded messages received.
icmpInParmProbs	The number of ICMP Parameter Problem messages received.
icmpInSrcQuenchs	The number of ICMP Source Quench (buffer almost full, stop sending data) messages received.
icmpInRedirects	The number of ICMP Redirect messages received.
icmpInEchos	The number of ICMP Echo (request) messages received.
icmpInEchoReps	The number of ICMP Echo Reply messages received.
icmpInTimestamps	The number of ICMP Timestamp (request) messages received.
icmpInTimestampReps	The number of ICMP Timestamp Reply messages received.

Table 120. *ICMP Statistics*

Statistic	Description
icmpInAddrMasks	The number of ICMP Address Mask Request messages received.
icmpInAddrMaskReps	The number of ICMP Address Mask Reply messages received.
icmpOutMsgs	The total number of ICMP messages which this entity (the switch) attempted to send. Note that this counter includes all those counted by <code>icmpOutErrors</code> .
icmpOutErrors	The number of ICMP messages which this entity (the switch) did not send due to problems discovered within ICMP such as a lack of buffer. This value should not include errors discovered outside the ICMP layer such as the inability of IP to route the resultant datagram. In some implementations there may be no types of errors that contribute to this counter's value.
icmpOutDestUnreachs	The number of ICMP Destination Unreachable messages sent.
icmpOutTimeExcds	The number of ICMP Time Exceeded messages sent.
icmpOutParmProbs	The number of ICMP Parameter Problem messages sent.
icmpOutSrcQuenchs	The number of ICMP Source Quench (buffer almost full, stop sending data) messages sent.
icmpOutRedirects	The number of ICMP Redirect messages sent. For a host, this object will always be zero, since hosts do not send redirects.
icmpOutEchos	The number of ICMP Echo (request) messages sent.
icmpOutEchoReps	The number of ICMP Echo Reply messages sent.
icmpOutTimestamps	The number of ICMP Timestamp (request) messages sent.
icmpOutTimestampReps	The number of ICMP Timestamp Reply messages sent.
icmpOutAddrMasks	The number of ICMP Address Mask Request messages sent.
icmpOutAddrMaskReps	The number of ICMP Address Mask Reply messages sent.

TCP Statistics

The following command displays TCP statistics:

show ip tcp counters

Command mode: All

TCP statistics:			
tcpRtoAlgorithm:	4	tcpRtoMin:	0
tcpRtoMax:	240000	tcpMaxConn:	2048
tcpActiveOpens:	0	tcpPassiveOpens:	16
tcpAttemptFails:	0	tcpEstabResets:	0
tcpInSegs:	2035	tcpOutSegs:	1748
tcpRetransSegs:	21	tcpInErrs:	0
tcpCurrEstab:	1	tcpCurrConn:	5
tcpOutRsts:	0		

Table 121. *TCP Statistics*

Statistic	Description
tcpRtoAlgorithm	The algorithm used to determine the <code>timeout</code> value used for retransmitting unacknowledged octets.
tcpRtoMin	The minimum value permitted by a TCP implementation for the retransmission <code>timeout</code> , measured in milliseconds. More refined semantics for objects of this type depend upon the algorithm used to determine the retransmission <code>timeout</code> . In particular, when the <code>timeout</code> algorithm is <code>rsre(3)</code> , an object of this type has the semantics of the <code>LBOUND</code> quantity described in RFC 793.
tcpRtoMax	The maximum value permitted by a TCP implementation for the retransmission <code>timeout</code> , measured in milliseconds. More refined semantics for objects of this type depend upon the algorithm used to determine the retransmission <code>timeout</code> . In particular, when the <code>timeout</code> algorithm is <code>rsre(3)</code> , an object of this type has the semantics of the <code>UBOUND</code> quantity described in RFC 793.
tcpMaxConn	The limit on the total number of TCP connections the entity (the switch) can support. In entities where the maximum number of connections is dynamic, this object should contain the value -1.
tcpActiveOpens	The number of times TCP connections have made a direct transition to the <code>SYN-SENT</code> state from the <code>CLOSED</code> state.
tcpPassiveOpens	The number of times TCP connections have made a direct transition to the <code>SYN-RCVD</code> state from the <code>LISTEN</code> state.
tcpAttemptFails	The number of times TCP connections have made a direct transition to the <code>CLOSED</code> state from either the <code>SYN-SENT</code> state or the <code>SYN-RCVD</code> state, plus the number of times TCP connections have made a direct transition to the <code>LISTEN</code> state from the <code>SYN-RCVD</code> state.

Table 121. *TCP Statistics (continued)*

Statistic	Description
tcpEstabResets	The number of times TCP connections have made a direct transition to the CLOSED state from either the ESTABLISHED state or the CLOSE-WAIT state.
tcpInSegs	The total number of segments received, including those received in error. This count includes segments received on currently established connections.
tcpOutSegs	The total number of segments sent, including those on current connections but excluding those containing only retransmitted octets.
tcpRetransSegs	The total number of segments retransmitted - that is, the number of TCP segments transmitted containing one or more previously transmitted octets.
tcpInErrs	The total number of segments received in error (for example, bad TCP checksums).
tcpCurEstab	The total number of outstanding TCP sessions in the ESTABLISHED state.
tcpCurConn	The total number of outstanding TCP sessions that are currently opened.
tcpOutRsts	The number of TCP segments sent containing the RST flag.

UDP Statistics

The following command displays UDP statistics:

show ip udp counters

Command mode: All

UDP statistics:			
udpInDatagrams:	54	udpOutDatagrams:	43
udpInErrors:	0	udpNoPorts:	1578077

Table 122. *UDP Statistics*

Statistic	Description
udpInDatagrams	The total number of UDP datagrams delivered to the switch.
udpOutDatagrams	The total number of UDP datagrams sent from this entity (the switch).
udpInErrors	The number of received UDP datagrams that could not be delivered for reasons other than the lack of an application at the destination port.
udpNoPorts	The total number of received UDP datagrams for which there was no application at the destination port.

IGMP Statistics

The following command displays statistics about IGMP protocol packets for all VLANs:

show ip igmp counters

Command mode: All

```

IGMP vlan 2 statistics:
-----
rxIgmpValidPkts:          0   rxIgmpInvalidPkts:          0
rxIgmpGenQueries:         0   rxIgmpGrpSpecificQueries:   0
rxIgmpGroupSrcSpecificQueries: 0   rxIgmpDiscardPkts:         0
rxIgmpLeaves:            0   rxIgmpReports:             0
txIgmpReports:           0   txIgmpGrpSpecificQueries:   0
txIgmpLeaves:            0   rxIgmpV3CurrentStateRecords: 0
rxIgmpV3SourceListChangeRecords: 0   rxIgmpV3FilterChangeRecords: 0
txIgmpGenQueries:        18   rxPimHellos:                0
  
```

The following command displays statistics about IGMP protocol packets for a specific VLAN:

show ip igmp vlan <VLAN number> counter

Command mode: All

```

IGMP vlan 147 statistics:
-----
rxIgmpValidPkts:          0   rxIgmpInvalidPkts:          0
rxIgmpGenQueries:         0   rxIgmpGrpSpecificQueries:   0
rxIgmpGroupSrcSpecificQueries: 0   rxIgmpDiscardPkts:         0
rxIgmpLeaves:            0   rxIgmpReports:             0
txIgmpReports:           0   txIgmpGrpSpecificQueries:   0
txIgmpLeaves:            0   rxIgmpV3CurrentStateRecords: 0
rxIgmpV3SourceListChangeRecords: 0   rxIgmpV3FilterChangeRecords: 0
txIgmpGenQueries:        0   rxPimHellos:                0
  
```

Table 123. IGMP Statistics

Statistic	Description
rxIgmpValidPkts	Total number of valid IGMP packets received.
rxIgmpInvalidPkts	Total number of invalid packets received.
rxIgmpGenQueries	Total number of General Membership Query packets received.
rxIgmpGrpSpecificQueries	Total number of Membership Query packets received for specific groups.
rxIgmpGroupSrcSpecificQueries	Total number of Group Source-Specific Queries (GSSQ) received.
rxIgmpDiscardPkts	Total number of IGMP packets discarded.

Table 123. *IGMP Statistics*

Statistic	Description
rxIgmpLeaves	Total number of Leave requests received.
rxIgmpReports	Total number of Membership Reports received.
txIgmpReports	Total number of Membership reports transmitted.
txIgmpGrpSpecificQueries	Total number of Membership Query packets transmitted to specific groups.
txIgmpLeaves	Total number of Leave messages transmitted.
rxIgmpV3CurrentStateRecords	Total number of Current State records received.
rxIgmpV3SourceListChangeRecords	Total number of Source List Change records received.
rxIgmpV3FilterChangeRecords	Total number of Filter Change records received.
txIgmpGenQueries	Total number of transmitted General Queries.
rxPimHellos	Total number of PIM hello packets received.

MLD Statistics

The following commands display MLD statistics.

Table 124. *MLD Statistics Commands*

Command Syntax and Usage
show ipv6 mld Displays MLD global statistics. See page 257 for sample output. Command mode: All
show ipv6 mld counters Displays MLD area statistics. Command mode: All
show ipv6 mld interface Displays information for all MLD interfaces. Command mode: All
show ipv6 mld interface counters Displays total number of MLD entries. Command mode: All
show ipv6 mld interface <i><interface number></i> Displays MLD interface statistics for the specified interface. Command mode: All
show ipv6 mld interface [<i><interface number></i>] counters Displays MLD interface statistics. Command mode: All
clear ipv6 mld counters Clears MLD counters. Command mode: Privileged EXEC
clear ipv6 mld dynamic Clears all dynamic MLD tables. Command mode: Privileged EXEC
clear ipv6 mld groups Clears dynamic MLD registered group tables. Command mode: Privileged EXEC
clear ipv6 mld mrouter Clears dynamic MLD mrouter group tables. Command mode: Privileged EXEC

MLD Global Statistics

The MLD global statistics displays information for all MLD packets received on all interfaces

show ipv6 mld counters

Command mode: All

```
MLD global statistics:
-----
Total L3 IPv6 (S, G, V) entries: 2
Total MLD groups: 2
Bad Length: 0
Bad Checksum: 0
Bad Receive If: 0
Receive non-local: 0
Invalid Packets: 4

MLD packet statistics for interfaces:

MLD interface packet statistics for interface 1:
MLD msg type      Received      Sent      RxErrors
-----
General Query          0          1067          0
MAS Query              0           0           0
MASSQ Query           0           0           0
MLDv1 Report          0           0           0
MLDv1 Done            0           0           0
MLDv2 Report         1069         1084          0
INC CSRs(v2)          1            0           0
EXC CSRs(v2)         2134         1093          0
TO_INC FMCRs(v2)      1            0           0
TO_EXC FMCRs(v2)      0            15          0
ALLOW SLCRs(v2)       0            0           0
BLOCK SLCRs(v2)       0            0           0

MLD interface packet statistics for interface 2:
MLD msg type      Received      Sent      RxErrors
-----

MLD interface packet statistics for interface 3:
MLD msg type      Received      Sent      RxErrors
-----
General Query          0          2467          0
MAS Query              0           0           0
MASSQ Query           0           0           0
MLDv1 Report          0           0           0
MLDv1 Done            0           0           0
MLDv2 Report          2          2472          0
INC CSRs(v2)          1            0           0
EXC CSRs(v2)          0          2476          0
TO_INC FMCRs(v2)      0            0           0
TO_EXC FMCRs(v2)      0            8           0
ALLOW SLCRs(v2)       0            0           0
BLOCK SLCRs(v2)       1            0           0
```

The following table describes the fields in the MLD global statistics output.

Table 125. *MLD Global Statistics*

Statistic	Description
Bad Length	Number of messages received with length errors.
Bad Checksum	Number of messages received with an invalid IP checksum.
Bad Receive If	Number of messages received on an interface not enabled for MLD.
Receive non-local	Number of messages received from non-local senders.
Invalid packets	Number of rejected packets.
General Query (v1/v2)	Number of general query packets.
MAS Query(v1/v2)	Number of multicast address specific query packets.
MASSQ Query (v2)	Number of multicast address and source specific query packets.
Listener Report(v1)	Number of packets sent by a multicast listener in response to MLDv1 query.
Listener Done(v1/v2)	Number of packets sent by a host when it wants to stop receiving multicast traffic.
Listener Report(v2)	Number of packets sent by a multicast listener in response to MLDv2 query.
MLDv2 INC mode CSRs	Number of current state records with include filter mode.
MLDv2 EXC mode CSRs	Number of current state records with exclude filter mode.
MLDv2 TO_INC FMCRs	Number of filter mode change records for which the filter mode has changed to include mode.
MLDv2 TO_EXC FMCRs	Number of filter mode change records for which the filter mode has changed to exclude mode.
MLDv2 ALLOW SLCRs	Number of source list change records for which the specified sources from where the data is to be received has changed.
MLDv2 BLOCK SLCRs	Number of source list change records for which the specified sources from where the data is to be received is to be blocked.

OSPF Statistics

The following commands display OSPF statistics.

Table 126. *OSPF Statistics Commands*

Command Syntax and Usage
show ip ospf counters Displays OSPF statistics. See page 260 for sample output. Command mode: All
show ip ospf area counters Displays OSPF area statistics. Command mode: All
show ip ospf interface [<i><interface number></i>] counters Displays OSPF interface statistics. Command mode: All

OSPF Global Statistics

The following command displays statistics about OSPF packets received on all OSPF areas and interfaces:

show ip ospf counters

Command mode: All

```

OSPF stats
-----
Rx/Tx Stats:           Rx           Tx
-----
Pkts                   0           0
hello                  23          518
database               4           12
ls requests            3           1
ls acks                7           7
ls updates             9           7

Nbr change stats:     Intf change Stats:
hello                 2           up                4
start                 0           down              2
n2way                 2           loop              0
adjoint ok            2           unloop            0
negotiation done     2           wait timer        2
exchange done         2           backup            0
bad requests          0           nbr change        5
bad sequence          0
loading done          2
n1way                 0
rst_ad                0
down                  1

Timers kickoff
hello                 514
retransmit            1028
lsa lock              0
lsa ack               0
dbage                 0
summary               0
ase export            0
  
```

Table 127. *OSPF General Statistics*

Statistic	Description
Rx/Tx Stats:	
Rx Pkts	The sum total of all OSPF packets received on all OSPF areas and interfaces.
Tx Pkts	The sum total of all OSPF packets transmitted on all OSPF areas and interfaces.
Rx Hello	The sum total of all Hello packets received on all OSPF areas and interfaces.
Tx Hello	The sum total of all Hello packets transmitted on all OSPF areas and interfaces.

Table 127. *OSPF General Statistics (continued)*

Statistic	Description
Rx Database	The sum total of all Database Description packets received on all OSPF areas and interfaces.
Tx Database	The sum total of all Database Description packets transmitted on all OSPF areas and interfaces.
Rx ls Requests	The sum total of all Link State Request packets received on all OSPF areas and interfaces.
Tx ls Requests	The sum total of all Link State Request packets transmitted on all OSPF areas and interfaces.
Rx ls Acks	The sum total of all Link State Acknowledgement packets received on all OSPF areas and interfaces.
Tx ls Acks	The sum total of all Link State Acknowledgement packets transmitted on all OSPF areas and interfaces.
Rx ls Updates	The sum total of all Link State Update packets received on all OSPF areas and interfaces.
Tx ls Updates	The sum total of all Link State Update packets transmitted on all OSPF areas and interfaces.
Nbr Change Stats:	
hello	The sum total of all Hello packets received from neighbors on all OSPF areas and interfaces.
Start	The sum total number of neighbors in this state (that is, an indication that Hello packets must now be sent to the neighbor at intervals of <code>HelloInterval</code> seconds.) across all OSPF areas and interfaces.
n2way	The sum total number of bidirectional communication establishment between this router and other neighboring routers.
adjoint ok	The sum total number of decisions to be made (again) as to whether an adjacency should be established/maintained with the neighbor across all OSPF areas and interfaces.
negotiation done	The sum total number of neighbors in this state wherein the Master/slave relationship has been negotiated, and sequence numbers have been exchanged, across all OSPF areas and interfaces.
exchange done	The sum total number of neighbors in this state (that is, in an adjacency's final state) having transmitted a full sequence of Database Description packets across all OSPF areas and interfaces.
bad requests	The sum total number of Link State Requests which have been received for a link state advertisement not contained in the database across all interfaces and OSPF areas.

Table 127. *OSPF General Statistics (continued)*

Statistic	Description
bad sequence	The sum total number of Database Description packets which have been received that either: <ul style="list-style-type: none"> a. Has an unexpected DD sequence number. b. Unexpectedly has the init bit set. c. Has an options field differing from the last Options field received in a Database Description packet. Any of these conditions indicate that some error has occurred during adjacency establishment for all OSPF areas and interfaces.
loading done	The sum total number of link state updates received for all out-of-date portions of the database across all OSPF areas and interfaces.
n1way	The sum total number of Hello packets received from neighbors, in which this router is not mentioned across all OSPF interfaces and areas.
rst_ad	The sum total number of times the Neighbor adjacency has been reset across all OPSF areas and interfaces.
down	The total number of Neighboring routers down (that is, in the initial state of a neighbor conversation) across all OSPF areas and interfaces.
Intf Change Stats:	
up	The sum total number of interfaces up in all OSPF areas.
down	The sum total number of interfaces down in all OSPF areas.
loop	The sum total of interfaces no longer connected to the attached network across all OSPF areas and interfaces.
unloop	The sum total number of interfaces, connected to the attached network in all OSPF areas.
wait timer	The sum total number of times the Wait Timer has been fired, indicating the end of the waiting period that is required before electing a (Backup) Designated Router across all OSPF areas and interfaces.
backup	The sum total number of Backup Designated Routers on the attached network for all OSPF areas and interfaces.
nbr change	The sum total number of changes in the set of bidirectional neighbors associated with any interface across all OSPF areas.

Table 127. *OSPF General Statistics (continued)*

Statistic	Description
Timers Kickoff:	
hello	The sum total number of times the Hello timer has been fired (which triggers the send of a Hello packet) across all OPSF areas and interfaces.
retransmit	The sum total number of times the Retransmit timer has been fired across all OPSF areas and interfaces.
lsa lock	The sum total number of times the Link State Advertisement (LSA) lock timer has been fired across all OSPF areas and interfaces.
lsa ack	The sum total number of times the LSA Ack timer has been fired across all OSPF areas and interfaces.
dbage	The total number of times the data base age (Dbage) has been fired.
summary	The total number of times the Summary timer has been fired.
ase export	The total number of times the Autonomous System Export (ASE) timer has been fired.

OSPFv3 Statistics

The following commands display OSPFv3 statistics.

Table 128. *OSPFv3 Statistics Commands*

Command Syntax and Usage
show ipv6 ospf counters Displays OSPFv3 statistics. See page 260 for sample output. Command mode: All
show ipv6 ospf area counters Displays OSPFv3 area statistics. Command mode: All
show ipv6 ospf interface [<i><interface number></i>] counters Displays OSPFv3 interface statistics. Command mode: All

OSPFv3 Global Statistics

The following command displays statistics about OSPFv3 packets received on all OSPFv3 areas and interfaces:

show ipv6 ospf counters

Command mode: All

```

OSPFv3 stats
-----
Rx/Tx/Disc Stats:          Rx          Tx          Discarded
-----
Pkts                      9695      95933       0
hello                    9097      8994        0
database                   39         51          6
ls requests                 16          8          0
ls acks                     172        360         0
ls updates                  371        180         0

Nbr change stats:          Intf change Stats:
down                        0          down         5
attempt                     0          loop         0
init                         1          waiting      6
n2way                       1          ptop         0
exstart                     1          dr           4
exchange done               1          backup       6
loading done                 1          dr other     0
full                        1          all events   33
all events                   6

Timers kickoff
hello                      8988
wait                        6
poll                        0
nbr probe                   0

Number of LSAs
originated                  180
rcvd newer originations     355
  
```

The OSPFv3 General Statistics contain the sum total of all OSPF packets received on all OSPFv3 areas and interfaces.

Table 129. *OSPFv3 General Statistics*

Statistics	Description
Rx/Tx Stats:	
Rx Pkts	The sum total of all OSPFv3 packets received on all OSPFv3 interfaces.
Tx Pkts	The sum total of all OSPFv3 packets transmitted on all OSPFv3 interfaces.
Discarded Pkts	The sum total of all OSPFv3 packets discarded.
Rx hello	The sum total of all Hello packets received on all OSPFv3 interfaces.
Tx hello	The sum total of all Hello packets transmitted on all OSPFv3 interfaces.

Table 129. *OSPFv3 General Statistics (continued)*

Statistics	Description
Discarded hello	The sum total of all Hello packets discarded, including packets for which no associated interface has been found.
Rx database	The sum total of all Database Description packets received on all OSPFv3 interfaces.
Tx database	The sum total of all Database Description packets transmitted on all OSPFv3 interfaces.
Discarded database	The sum total of all Database Description packets discarded.
Rx ls requests	The sum total of all Link State Request packets received on all OSPFv3 interfaces.
Tx ls requests	The sum total of all Link State Request packets transmitted on all OSPFv3 interfaces.
Discarded ls requests	The sum total of all Link State Request packets discarded.
Rx ls acks	The sum total of all Link State Acknowledgement packets received on all OSPFv3 interfaces.
Tx ls acks	The sum total of all Link State Acknowledgement packets transmitted on all OSPFv3 interfaces.
Discarded ls acks	The sum total of all Link State Acknowledgement packets discarded.
Rx ls updates	The sum total of all Link State Update packets received on all OSPFv3 interfaces.
Tx ls updates	The sum total of all Link State Update packets transmitted on all OSPFv3 interfaces.
Discarded ls updates	The sum total of all Link State Update packets discarded.
Nbr Change Stats:	
down	The total number of Neighboring routers down (in the initial state of a neighbor conversation) across all OSPFv3 interfaces.
attempt	The total number of transitions into attempt state of neighboring routers across all OSPFv3 interfaces.
init	The total number of transitions into init state of neighboring routers across all OSPFv3 interfaces.
n2way	The total number of bidirectional communication establishment between this router and other neighboring routers.
exstart	The total number of transitions into exstart state of neighboring routers across all OSPFv3 interfaces.

Table 129. OSPFv3 General Statistics (continued)

Statistics	Description
exchange done	The total number of neighbors in this state (that is, in an adjacency's final state) having transmitted a full sequence of Database Description packets, across all OSPFv3 interfaces.
loading done	The total number of link state updates received for all out-of-date portions of the database across all OSPFv3 interfaces.
full	The total number of transitions into full state of neighboring routers across all OSPFv3 interfaces.
all events	The total number of state transitions of neighboring routers across all OSPFv3 interfaces.
Intf Change Stats:	
down	The total number of transitions into down state of all OSPFv3 interfaces.
loop	The total number of transitions into loopback state of all OSPFv3 interfaces.
waiting	The total number of transitions into waiting state of all OSPFv3 interfaces.
ptop	The total number of transitions into point-to-point state of all OSPFv3 interfaces.
dr	The total number of transitions into Designated Router other state of all OSPFv3 interfaces.
backup	The total number of transitions into backup state of all OSPFv3 interfaces.
all events	The total number of changes associated with any OSPFv3 interface, including changes into internal states.
Timers Kickoff:	
hello	The total number of times the Hello timer has been fired (which triggers the send of a Hello packet) across all OSPFv3 interfaces.
wait	The total number of times the wait timer has been fired (which causes an interface to exit waiting state), across all OPSFv3 interfaces.
poll	The total number of times the timer whose firing causes hellos to be sent to inactive NBMA and Demand Circuit neighbors has been fired, across all OPSFv3 interfaces.
nbr probe	The total number of times the neighbor probe timer has been fired, across all OPSFv3 interfaces.
Number of LSAs:	
originated	The number of LSAs originated by this router.
rcvd newer originations	The number of LSAs received that have been determined to be newer originations.

VRRP Statistics

Virtual Router Redundancy Protocol (VRRP) support on the CN4093 provides redundancy between routers in a LAN. This is accomplished by configuring the same virtual router IP address and ID number on each participating VRRP-capable routing device. One of the virtual routers is then elected as the master, based on a number of priority criteria, and assumes control of the shared virtual router IP address. If the master fails, one of the backup virtual routers will assume routing authority and take control of the virtual router IP address.

When virtual routers are configured, you can display the protocol statistics for VRRP. The following command displays VRRP statistics:

show ip vrrp counters

Command mode: All

VRRP statistics:			
vrrpInAdvers:	0	vrrpBadAdvers:	0
vrrpOutAdvers:	0		
vrrpBadVersion:	0	vrrpBadVrid:	0
vrrpBadAddress:	0	vrrpBadData:	0
vrrpBadPassword:	0	vrrpBadInterval:	0

Table 130. VRRP Statistics

Statistics	Description
vrrpInAdvers	The total number of valid VRRP advertisements that have been received.
vrrpBadAdvers	The total number of VRRP advertisements received that were dropped.
vrrpOutAdvers	The total number of VRRP advertisements that have been sent.
vrrpBadVersion	The total number of VRRP advertisements received that had a bad version number.
vrrpBadVrid	The total number of VRRP advertisements received that had a bad virtual router ID.
vrrpBadAddress	The total number of VRRP advertisements received that had a bad address.
vrrpBadData	The total number of VRRP advertisements received that had bad data.
vrrpBadPassword	The total number of VRRP advertisements received that had a bad password.
vrrpBadInterval	The total number of VRRP advertisements received that had a bad interval.

PIM Statistics

The following command displays Protocol Independent Multicast (PIM) statistics:

show ip pim counters

Command mode: All

Hello Tx/Rx	: 2595/2596
Join/Prune Tx/Rx	: 0/0
Assert Tx/Rx	: 0/0
Register Tx/Rx	: 0/0
Null-Reg Tx/Rx	: 0/0
RegStop Tx/Rx	: 0/0
CandRPAdv Tx/Rx	: 973/0
BSR Tx/Rx	: 0/1298
Graft Tx/Rx	: 0/0
Graft Ack Tx/Rx	: 0/0
Mcast data Tx/Rx	: 0/0
MDP drop Tx/Rx	: 0/0
CTL drop Tx/Rx	: 0/0
Bad pkts	: 0

Table 131. PIM Statistics

Statistics	Description
Hello Tx/Rx	Number of Hello messages transmitted or received.
Join/Prune Tx/Rx	Number of Join/Prune messages transmitted or received.
Assert Tx/Rx	Number of Assert messages transmitted or received.
Register Tx/Rx	Number of Register messages transmitted or received.
Null-Reg Tx/Rx	Number of NULL-register messages transmitted or received.
RegStop Tx/Rx	Number of Register Stop messages transmitted or received.
CandRPAdv Tx/Rx	Number of Candidate RP Advertisements transmitted or received.
BSR Tx/Rx	Number of Bootstrap Router (BSR) messages transmitted or received.
Graft Tx/Rx	Number of Graft messages transmitted or received.
Graft Ack Tx/Rx	Number of Graft Acknowledgements transmitted or received.
Mcast data Tx/Rx	Number of multicast datagrams transmitted or received.
MDP drop Tx/Rx	Number of Multicast data packet Tx/Rx dropped.
CTL drop Tx/Rx	Number of PIM control packet Tx/Rx dropped.
Bad pkts	Number of bad PIM packets received.

Routing Information Protocol Statistics

The following command displays RIP statistics:

show ip rip counters

Command mode: All

```
RIP ALL STATS INFORMATION:
  RIP packets received           = 12
  RIP packets sent               = 75
  RIP request received           = 0
  RIP response received          = 12
  RIP request sent               = 3
  RIP reponse sent               = 72
  RIP route timeout              = 0
  RIP bad size packet received   = 0
  RIP bad version received       = 0
  RIP bad zeros received         = 0
  RIP bad src port received      = 0
  RIP bad src IP received        = 0
  RIP packets from self received = 0
```

Management Processor Statistics

The following commands display Management Processor statistics.

Table 132. *Management Processor Statistics Commands*

Command Syntax and Usage
show mp i2c Displays i2c statistics. Command mode: All
show mp memory Displays memory utilization statistics. Command mode: All
show mp packet counters Displays packet statistics, to check for leads and load. To view a sample output and a description of the statistics, see page 272 . Command mode: All
show mp tcp-block Displays all TCP control blocks that are in use. To view a sample output and a description of the statistics, see page 283 . Command mode: All
show mp thread Displays STEM thread statistics. This command is used by Technical Support personnel. Command mode: All
show mp udp-block Displays all UDP control blocks that are in use. To view a sample output, see page 284 . Command mode: All
show processes cpu Displays CPU utilization for periods of up to 1, 4, and 64 seconds. To view a sample output and a description of the stats, see page 284 . Command mode: All
show processes cpu history Displays history of CPU utilization. To view a sample output, see page 286 . Command mode: All

Packet Statistics

The following commands display Packet statistics.

Table 133. *Packet Statistics Commands*

Command Syntax and Usage
show mp packet counters Displays packet statistics, to check for leads and load. To view a sample output and a description of the stats, see page 272 . Command mode: All
clear mp packet logs Clears all CPU packet statistics and logs. Command mode: Privileged EXEC

MP Packet Statistics

The following command displays MP packet statistics:

show mp packet counters

Command mode: All

```
CPU packet statistics at 8:21:54 Tue Jan 8, 2013

Packet rate:          Incoming          Outgoing
-----
1-second:             8              7
4-seconds:            7              5
64-seconds:           4              3

Packet counters:      Received          Sent
-----
Total packets:        109056          148761
Since bootup:         109056          148768
BPDUs:                6415           19214
Cisco packets:        0              0
ARP Requests:         15            10061
ARP Replies:          8545           14
LACP packets:         3414           3420
IPv4 packets:         60130          116101
ICMP Requests:        0              21
ICMP Replies:         21             0
IGMP packets:         0              0
PIM packets:          0              0
VRRP packets:         0              0
TCP packets:          60088          116113
  FTP                  0              0
  HTTP                 0              0
  SSH                  3              3
  TACACS               0              0
  TELNET               60095          116145
TCP other              0              0
UDP packets:          24             9
  DHCP                0              0
  NTP                  0              0
```



```

RADIUS                0                0
SNMP                  0                0
TFTP                  0                0
UDP other              24                8
RIP packets:          0                1
OSPF packets:         0                0
BGP packets:          0                0
IPV6 packets:         0                0
LLDP PDUs:            3987             6876
FCoE FIP PDUs:        0                0
ECP PDUs:              0                0
MgmtSock Packets:     919             932
Other:                 26549            0

Packet Buffer Statistics:
-----
allocs:                265803
frees:                 265806
failures:               0
dropped:                0

small packet buffers:
-----
current:                1
max:                    1024
threshold:              128
hi-watermark:           3
hi-water time:          3:39:12 Tue Jan  8, 2013

medium packet buffers:
-----
current:                0
max:                    2048
threshold:              50
hi-watermark:           1
hi-water time:          3:37:12 Tue Jan  8, 2013

jumbo packet buffers:
-----
current:                0
max:                    16
hi-watermark:           0

pkt_hdr statistics:
-----
current      :          0
max          :         3072
hi-watermark :          180

```

Table 134. *Packet Statistics*

Statistics	Description
Packet Rate	
1-second	The rate of incoming and outgoing packets over 1 second.
4-seconds	The rate of incoming and outgoing packets over 4 seconds.
64-seconds	The rate of incoming and outgoing packets over 64 seconds.

Table 134. *Packet Statistics (continued)*

Statistics	Description
Packets Counters	
Total packets	Total number of packets received.
Since bootup	Total number of packets received and sent since the last switch reboot.
BPDUs	Total number of spanning-tree Bridge Protocol Data Units received.
Cisco packets	Total number of UniDirectional Link Detection (UDLD) packets and Cisco Discovery Protocol (CDP) packets received.
ARP packets	Total number of Address Resolution Protocol packets received.
IPv4 packets	Total number of IPv4 packets received and sent. Includes the following packet types: <ul style="list-style-type: none"> ○ IGMP ○ PIM ○ ICMP requests ○ ICMP replies
TCP packets	Total number of TCP packets received and sent. Includes the following packet types: <ul style="list-style-type: none"> ○ FTP ○ HTTP ○ SSH ○ TACACS+ ○ Telnet ○ Other
UDP packets	Total number of UDP packets received and sent. Includes the following packet types: <ul style="list-style-type: none"> ○ DHCP ○ NTP ○ RADIUS ○ SNMP ○ TFTP ○ Other
RIP packets	Total number of Routing Information Protocol packets received and sent.
OSPF packets	Total number of Open Shortest Path First packets received and sent.

Table 134. *Packet Statistics (continued)*

Statistics	Description
BGP packets	Total number of Border Gateway Protocol packets received and sent.
IPv6 packets	Total number of IPv6 packets received.
LLDP PDUs	Total number of Link Layer Discovery Protocol data units received.
ECP PDUs	Total number of Edge Control Protocol data units received and sent.
MgmtSock Packets	Total number of packets received and transmitted through the management port.
Other	Total number of other packets received.
Packet Buffer Statistics	
allocs	Total number of packet allocations from the packet buffer pool by the TCP/IP protocol stack.
frees	Total number of times the packet buffers are freed (released) to the packet buffer pool by the TCP/IP protocol stack.
failures	Total number of packet allocation failures from the packet buffer pool by the TCP/IP protocol stack.
dropped	Total number of packets dropped by the packet buffer pool.
small packet buffers	
current	Total number of packet allocations with size less than 128 bytes from the packet buffer pool by the TCP/IP protocol stack.
max	Maximum number of small packet allocations supported.
threshold	Threshold value for small packet allocations, beyond which only high-priority small packets are allowed.
hi-watermark	The highest number of packet allocation with size less than 128 bytes from the packet buffer pool by the TCP/IP protocol stack.
hi-water time	Time stamp that indicates when the hi-watermark was reached.

Table 134. *Packet Statistics (continued)*

Statistics	Description
medium packet buffers	
current	Total number of packet allocations with size between 128 to 1536 bytes from the packet buffer pool by the TCP/IP protocol stack.
max	Maximum number of medium packet allocations supported.
threshold	Threshold value for medium packet allocations, beyond which only high-priority medium packets are allowed.
hi-watermark	The highest number of packet allocation with size between 128 to 1536 bytes from the packet buffer pool by the TCP/IP protocol stack.
hi-water time	Time stamp that indicates when the hi-watermark was reached.
jumbo packet buffers	
current	Total number of packet allocations with more than 1536 bytes from the packet buffer pool by the TCP/IP protocol stack.
max	Maximum number of jumbo packet allocations supported.
hi-watermark	The highest number of packet allocation with more than 1536 bytes from the packet buffer pool by the TCP/IP protocol stack.
pkt_hdr statistics	
current	Total number of packet allocations with more than 1536 bytes from the packet buffer pool by the TCP/IP protocol stack.
max	Maximum number of packet allocations with more than 1536 bytes from the packet buffer pool by the TCP/IP protocol stack.
hi-watermark	The highest number of packet allocation with more than 1536 bytes from the packet buffer pool by the TCP/IP protocol stack.

Packet Statistics Log

These commands allow you to display a log of all packets received by CPU. The following table describes the Packet Statistics Log options.

Table 135. *Packet Statistics Log Options*

Command Syntax and Usage
show mp packet logs all Displays all packet logs received by and sent from the CPU. To view a sample output and a description of the log entries, see “Packet Log example” on page 277 . Command mode: All
show mp packet logs rx Displays all packets logs received by the CPU. Command mode: All
show mp packet logs tx Displays all packet logs sent from the CPU. Command mode: All

Packet Log example

The following command displays all packet logs received by and sent from the CPU.

show mp packet logs all

Command mode: All

```
358. Type: BPDU, sent 1:01:11 Tue Mar 20, 2012
    Port EXT2, VLAN 201, Length 57, Reason 0x0, Flags 0x0
    Dst MAC: 01:80:c2:00:00:00, Src MAC: 08:17:f4:a7:57:2c

357. Type: ICMP ECHO Req, sent 1:01:09 Tue Mar 20, 2012
    Port MGT1, VLAN 4095, Length 16, Reason 0x0, Flags 0x0 FromMgmtSock
    Src IP: 9.43.98.125, Dst IP: 9.43.98.254
```

Each packet log entry includes the following information:

- Entry ID
- Packet type
- Date and time
- Port number
- VLAN number
- Packet length
- Reason code
- Flags
- Source and destination address

Packet Statistics Last Packet

These commands allow you to display a specified number (*N*) of the most recent packet logs received by or sent from the CPU. The following table describes the Packet Statistics Last Packet options.

Table 136. *Last Packet Options*

Command Syntax and Usage
show mp packet last both <1-1000> Displays a specified number of recent packet logs received by and sent from the CPU. To view a sample output and a description, see “Packet Log example” on page 277 . Command mode: All
show mp packet last rx <1-1000> Displays a specified number of recent packet logs received by the CPU. Command mode: All
show mp packet last tx <1-1000> Displays a specified number of recent packet logs sent from the CPU. Command mode: All

Packet Statistics Dump

The following table describes the Packet Statistics Dump options.

Table 137. *Packet Statistics Dump Options*

Command Syntax and Usage
show mp packet dump all Displays all packet statistics and logs received by and sent from the CPU. Command mode: All
show mp packet dump rx Displays all packet statistics and logs received by the CPU. Command mode: All
show mp packet dump tx Displays all packet statistics and logs sent from the CPU. Command mode: All

Logged Packet Statistics

The following command displays logged packets that have been received or sent, based on the specified filter:

```
show mp packet parse {rx|tx} <arsing_option>
```

The filter options are described in [Table 138](#).

Table 138. *Packet Log Parsing Options*

Command Syntax and Usage
<pre>show mp packet parse {rx tx} arp</pre> <p>Displays only ARP packets logged.</p> <p>Command mode: All</p>
<pre>show mp packet parse {rx tx} bgp</pre> <p>Displays only BGP packets logged.</p> <p>Command mode: All</p>
<pre>show mp packet parse {rx tx} bpdud</pre> <p>Displays only BPDUs logged.</p> <p>Command mode: All</p>
<pre>show mp packet parse {rx tx} cisco</pre> <p>Displays only Cisco packets (BPDU/CDP/UDLD) logged.</p> <p>Command mode: All</p>
<pre>show mp packet parse {rx tx} dhcp</pre> <p>Displays only DHCP packets logged.</p> <p>Command mode: All</p>
<pre>show mp packet parse {rx tx} ecp</pre> <p>Displays only ECP packets logged.</p> <p>Command mode: All</p>
<pre>show mp packet parse {rx tx} fcoe</pre> <p>Displays only FCoE FIP PDUs logged.</p> <p>Command mode: All</p>
<pre>show mp packet parse {rx tx} ftp</pre> <p>Displays only FTP packets logged.</p> <p>Command mode: All</p>
<pre>show mp packet parse {rx tx} http</pre> <p>Displays only HTTP packets logged.</p> <p>Command mode: All</p>

Table 138. *Packet Log Parsing Options (continued)*

Command Syntax and Usage
show mp packet parse {rx tx} https Displays only HTTPS packets logged. Command mode: All
show mp packet parse {rx tx} icmp Displays only ICMP packets logged. Command mode: All
show mp packet parse {rx tx} igmp Displays only IGMP packets logged. Command mode: All
show mp packet parse {rx tx} ip-addr <IPv4_address> Displays only logged packets with the specified IPv4 address. Command mode: All
show mp packet parse {rx tx} ipv4 Displays only IPv4 packets logged. Command mode: All
show mp packet parse {rx tx} ipv6 Displays only IPv6 packets logged. Command mode: All
show mp packet parse {rx tx} lacp Displays only LACP PDUs logged. Command mode: All
show mp packet parse {rx tx} lldp Displays only LLDP PDUs logged. Command mode: All
show mp packet parse {rx tx} mac <MAC_address> Displays only logged packets with the specified MAC address. Command mode: All
show mp packet parse {rx tx} mgmtsock Displays only packets logged on management ports. Command mode: All
show mp packet parse {rx tx} ntp Displays only NTP packets logged. Command mode: All

Table 138. *Packet Log Parsing Options (continued)*

Command Syntax and Usage
show mp packet parse {rx tx} ospf Displays only OSPF packets logged. Command mode: All
show mp packet parse {rx tx} other Displays logs of all packets not explicitly selectable. Command mode: All
show mp packet parse {rx tx} pim Displays only PIM packets logged. Command mode: All
show mp packet parse {rx tx} port <port_number> Displays only logged packets with the specified port. Command mode: All
show mp packet parse {rx tx} radius Displays only RADIUS packets logged. Command mode: All
show mp packet parse {rx tx} rarp Displays only Reverse-ARP packets. Command mode: All
show mp packet parse {rx tx} raw Displays raw packet buffer in addition to headers. Command mode: All
show mp packet parse {rx tx} rip Displays only RIP packets logged. Command mode: All
show mp packet parse {rx tx} snmp Displays only SNMP packets logged. Command mode: All
show mp packet parse {rx tx} ssh Displays only SSH packets logged. Command mode: All
show mp packet parse {rx tx} tacacs Displays only TACACS packets logged. Command mode: All

Table 138. *Packet Log Parsing Options (continued)*

Command Syntax and Usage
show mp packet parse {rx tx} tcp Displays only TCP packets logged. Command mode: All
show mp packet parse {rx tx} tcpother Displays only TCP other-port packets logged. Command mode: All
show mp packet parse {rx tx} telnet Displays only TELNET packets logged. Command mode: All
show mp packet parse {rx tx} tftp Displays only TFTP packets logged. Command mode: All
show mp packet parse {rx tx} udp Displays only UDP packets logged. Command mode: All
show mp packet parse {rx tx} udpother Displays only UDP other-port packets logged. Command mode: All
show mp packet parse {rx tx} vlan <VLAN_number> Displays only logged packets with the specified VLAN. Command mode: All
show mp packet parse {rx tx} vrrp Displays only VRRP logged packets. Command mode: All

TCP Statistics

The following command displays TCP statistics:

show mp tcp-block

Command mode: All

```

Data Ports:
-----
All TCP allocated control blocks:
14835bd8:  0.0.0.0                0 <=>
           172.31.38.107         80 listen MGT up
147c6eb8:  0:0:0:0:0:0:0:0             0 <=>
           0:0:0:0:0:0:0:0             80 listen
147c6d68:  0.0.0.0                0 <=>
           0.0.0.0                80 listen
14823918:  172.31.37.42             55866 <=>
           172.31.38.107         23 established 0 ??
11af2394:  0.0.0.0                0 <=>
           172.31.38.107         23 listen MGT up
147e6808:  0.0.0.0                0 <=>
           0.0.0.0                23 listen
147e66b8:  0:0:0:0:0:0:0:0             0 <=>
           0:0:0:0:0:0:0:0             23 listen
147e6568:  0.0.0.0                0 <=>
           0.0.0.0                23 listen

Mgmt Ports:
-----
Active Internet connections (servers and established)
Proto Recv-Q Send-Q Local Address           Foreign Address         State
tcp      0      0 172.31.38.107:http     *:*                     LISTEN
tcp      0      0 172.31.38.107:telnet  *:*                     LISTEN
tcp      0      0 *:11000                 *:*                     LISTEN
tcp      0 1274 172.31.38.107:telnet  172.31.37.42:55866     ESTABLISHED

```

Table 139. MP Specified TCP Statistics

Statistics	Description
14835bd8	Memory
0.0.0.0	Destination IP address
0	Destination port
172.31.38.107	Source IP
80	Source port
listen MGT1 up	State

UDP Statistics

The following command displays UDP statistics:

show mp udp-block

Command mode: All

```

Data Ports:
-----
All UDP allocated control blocks:
 68: listen
161: listen
500: listen
546: listen

Mgmt Ports:
-----
Active Internet connections (servers and established)
Proto Recv-Q Send-Q Local Address           Foreign Address         State
udp      0      0 9.43.95.121:snmp       *:.*
0.0.0.0          0 <=> 9.43.95.121          161 accept MGT1 up
  
```

CPU Statistics

The following commands display CPU utilization statistics:

show mp cpu

Command mode: All

CPU utilization	Highest	Thread	Time
-----	-----	-----	-----
cpuUtil1Second:	3%	83%	58 (I2C) 12:02:14 Fri Oct 14, 2011
cpuUtil4Seconds:	5%		
cpuUtil64Seconds:	5%		

Table 140. CPU Statistics

Statistics	Description
cpuUtil1Second	The use of MP CPU over 1 second. It shows the percentage, highest rate, thread, and time the highest utilization occurred.
cpuUtil4Seconds	The use of MP CPU over 4 seconds. It shows the percentage.
cpuUtil64Seconds	The use of MP CPU over 64 seconds. It shows the percentage.
Highest	The highest percent of CPU use.
Thread	The thread ID and name of the thread that caused the highest CPU use.
Time	The time when the highest CPU use was reached.

show processes cpu

Command mode: All

```

CPU Utilization at  8:25:55 Tue Jan  8, 2013

Total CPU Utilization: For 1 second: 2.92%
                       For 5 second: 3.38%
                       For 1 minute: 7.88%
                       For 5 minute: 8.93%

Highest CPU Utilization: thread  2 (STP ) at  6:44:56 Tue Jan  8, 2013

-----
Thread  Thread      Utilization
  ID    Name         1sec      5sec      1Min      5Min      Status
-----
  1     STEM         0.00%     0.00%     0.00%     0.00%     idle
  2     STP           0.00%     0.05%     0.10%     0.10%     idle
  3     MFDB          0.00%     0.00%     5.06%     5.22%     idle
  4     TND            0.00%     0.00%     0.00%     0.00%     idle
  5     CONS           0.00%     0.00%     0.00%     0.15%     suspended
  6     TNET           0.11%     0.58%     0.17%     0.27%     running
  7     TNET           0.00%     0.00%     0.00%     0.00%     idle
  8     TNET           0.00%     0.00%     0.00%     0.00%     idle
  9     TNET           0.00%     0.00%     0.00%     0.00%     idle
 10     LOG            0.00%     0.00%     0.00%     0.00%     idle
 11     TRAP           0.00%     0.00%     0.00%     0.00%     idle
 13     NTP            0.00%     0.00%     0.00%     0.00%     idle
 14     IP             0.04%     0.04%     0.06%     0.06%     idle
 17     IP             0.01%     0.08%     0.04%     0.04%     idle
 18     RIP            0.00%     0.00%     0.00%     0.00%     idle
 19     AGR            0.00%     0.00%     0.00%     0.00%     idle
 20     EPI            0.16%     0.27%     0.12%     0.10%     runnable
 22     PORT           0.00%     0.00%     0.00%     0.00%     idle
 24     BGP            0.18%     0.04%     0.00%     0.00%     idle
 32     SCAN           0.00%     0.00%     0.00%     0.00%     idle
 34     OSPF           0.20%     0.04%     0.02%     0.01%     idle
 36     SNMP           0.00%     0.00%     0.00%     0.00%     idle
 37     SNMP           0.00%     0.00%     0.00%     0.00%     idle
 38     SNMP           0.00%     0.00%     0.00%     0.00%     idle
 40     SSHD           0.00%     0.00%     0.00%     0.00%     idle
...
 120    VDPT           0.00%     0.00%     0.00%     0.00%     idle
 124    HIST           0.00%     0.00%     0.00%     0.00%     runnable
 128    NORM           0.00%     0.00%     0.00%     0.00%     idle
 129    NORM           0.00%     0.00%     0.00%     0.00%     idle
 130    DONE           0.00%     0.00%     0.00%     0.00%     idle

```

Table 141. CPU Statistics

Statistics	Description
Thread ID	The thread ID number.
Thread Name	The name of the thread.
1sec	The percent of CPU use over 1 second.
5sec	The percent of CPU use over 5 seconds.
1Min	The percent of CPU use over 1 minute.

Table 141. *CPU Statistics*

Statistics	Description
5Min	The percent of CPU use over 5 minutes.
Status	The status of the process.

CPU Statistics History

The following command display a history of CPU use statistics:

show processes cpu history

Command mode: All

CPU Utilization History					

17	(IP)	98%	at	22:17:24	Mon Feb 20, 2012
59	(LACP)	9%	at	22:17:33	Mon Feb 20, 2012
110	(ETMR)	12%	at	22:17:34	Mon Feb 20, 2012
110	(ETMR)	12%	at	22:17:36	Mon Feb 20, 2012
110	(ETMR)	12%	at	22:17:40	Mon Feb 20, 2012
110	(ETMR)	12%	at	22:17:45	Mon Feb 20, 2012
110	(ETMR)	17%	at	22:17:47	Mon Feb 20, 2012
110	(ETMR)	18%	at	22:17:49	Mon Feb 20, 2012
110	(ETMR)	25%	at	22:20:28	Mon Feb 20, 2012
110	(ETMR)	26%	at	22:39:08	Mon Feb 20, 2012
37	(SNMP)	28%	at	22:46:20	Mon Feb 20, 2012
94	(PROX)	57%	at	23:29:36	Mon Feb 20, 2012
94	(PROX)	63%	at	23:29:37	Mon Feb 20, 2012
94	(PROX)	63%	at	23:29:39	Mon Feb 20, 2012
58	(I2C)	64%	at	16:21:54	Tue Feb 21, 2012
5	(CONS)	86%	at	18:41:54	Tue Feb 21, 2012
58	(I2C)	88%	at	18:41:55	Tue Feb 21, 2012
58	(I2C)	88%	at	21:29:41	Sat Feb 25, 2012
58	(I2C)	98%	at	12:04:59	Tue Feb 28, 2012
58	(I2C)	100%	at	11:31:32	Sat Mar 10, 2012

Access Control List Statistics

The following commands display and change ACL statistics.

Table 142. *ACL Statistics Commands*

Command Syntax and Usage
show access-control counters Displays all ACL statistics. For output sample, see page 288 . Command mode: All
show access-control list <1-640> counters Displays the Access Control List Statistics for a specific ACL. Command mode: All
show access-control list6 <1-128> counters Displays the IPv6 ACL statistics for a specific ACL. Command mode: All
show access-control macl <1-128> counters Displays the ACL statistics for a specific management ACL (MACL). Command mode: All
show access-control meter <1-127> counters Displays ACL meter statistics. For output sample, see page 288 . Command mode: All
show access-control vmap <1-128> counters Displays VLAN Map statistics for the selected VMAP. For details, see page 288 . Command mode: All
clear access-control list {<1-640> all} counters Clears ACL statistics. Command mode: Privileged EXEC
clear access-control list6 {<1-128> all} Clears IPv6 ACL statistics. Command mode: Privileged EXEC
clear access-control meter <1-127> counters Clears ACL meter statistics. Command mode: Privileged EXEC

ACL Statistics

The following command displays ACL statistics.

show access-control counters

Command mode: All

Hits for ACL 1:	26057515
Hits for ACL 2:	26057497

ACL Meter Statistics

This option displays ACL meter statistics.

show access-control meter <meter number> counters

Command mode: All

Out of profile hits for Meter 1, Port EXT1:	0
Out of profile hits for Meter 2, Port EXT1:	0

VMAP Statistics

The following command displays VLAN Map statistics.

show access-control vmap <vmap number> counters

Command mode: All

Hits for VMAP 1:	57515
------------------	-------

Fibre Channel over Ethernet Statistics

The following command displays Fibre Channel over Ethernet (FCoE) statistics:

show fcoe counters

Command mode: All

```
FCF-keepalives statistics:
FCF 54:7f:ee:8f:d4:2a keepalives received : 62
FCOE statistics:
FCFAdded:                5   FCFRemoved:                1
FCOEAdded:               81  FCOERemoved:               24
```

Fibre Channel over Ethernet (FCoE) statistics are described in the following table:

Table 143. *FCoE Statistics*

Statistic	Description
FCFAdded	Total number of FCoE Forwarders (FCF) added.
FCFRemoved	Total number of FCoE Forwarders (FCF) removed.
FCOEAdded	Total number of FCoE connections added.
FCOERemoved	Total number of FCoE connections removed.

The total can accumulate over several FCoE sessions, until the statistics are cleared.

The following command clears Fibre Channel over Ethernet (FCoE) statistics:

clear fcoe counters

Command mode: All

SNMP Statistics

The following command displays SNMP statistics:

show snmp-server counters

Command mode: All except User EXEC

SNMP statistics:			
snmpInPkts:	150097	snmpInBadVersions:	0
snmpInBadC'tyNames:	0	snmpInBadC'tyUses:	0
snmpInASNParseErrs:	0	snmpEnableAuthTraps:	0
snmpOutPkts:	150097	snmpInBadTypes:	0
snmpInTooBig:	0	snmpInNoSuchNames:	0
snmpInBadValues:	0	snmpInReadOnlys:	0
snmpInGenErrs:	0	snmpInTotalReqVars:	798464
snmpInTotalSetVars:	2731	snmpInGetRequests:	17593
snmpInGetNexts:	131389	snmpInSetRequests:	615
snmpInGetResponses:	0	snmpInTraps:	0
snmpOutTooBig:	0	snmpOutNoSuchNames:	1
snmpOutBadValues:	0	snmpOutReadOnlys:	0
snmpOutGenErrs:	1	snmpOutGetRequests:	0
snmpOutGetNexts:	0	snmpOutSetRequests:	0
snmpOutGetResponses:	150093	snmpOutTraps:	4
snmpSilentDrops:	0	snmpProxyDrops:	0

Table 144. *SNMP Statistics*

Statistic	Description
snmpInPkts	The total number of Messages delivered to the SNMP entity from the transport service.
snmpInBadVersions	The total number of SNMP Messages, which were delivered to the SNMP protocol entity and were for an unsupported SNMP version.
snmpInBadC'tyNames	The total number of SNMP Messages delivered to the SNMP entity which used an SNMP community name not known to the said entity (the switch).
snmpInBadC'tyUses	The total number of SNMP Messages delivered to the SNMP protocol entity which represented an SNMP operation which was not allowed by the SNMP community named in the Message.

Table 144. *SNMP Statistics (continued)*

Statistic	Description
snmpInASNParseErrs	<p>The total number of ASN.1 or BER errors encountered by the SNMP protocol entity when decoding SNMP Messages received.</p> <p>Note: OSI's method of specifying abstract objects is called ASN.1 (Abstract Syntax Notation One, defined in X.208), and one set of rules for representing such objects as strings of ones and zeros is called the BER (Basic Encoding Rules, defined in X.209). ASN.1 is a flexible notation that allows one to define a variety of data types, from simple types such as integers and bit strings to structured types such as sets and sequences. BER describes how to represent or encode values of each ASN.1 type as a string of eight-bit octets.</p>
snmpEnableAuthTraps	An object to enable or disable the authentication traps generated by this entity (the switch).
snmpOutPkts	The total number of SNMP Messages which were passed from the SNMP protocol entity to the transport service.
snmpInBadTypes	The total number of SNMP Messages which failed ASN parsing.
snmpInTooBig	The total number of SNMP Protocol Data Units (PDUs) which were delivered to the SNMP protocol entity and for which the value of the error-status field is <i>too big</i> .
snmpInNoSuchNames	The total number of SNMP Protocol Data Units (PDUs) which were delivered to the SNMP protocol entity and for which the value of the error-status field is <i>noSuchName</i> .
snmpInBadValues	The total number of SNMP Protocol Data Units (PDUs) which were delivered to the SNMP protocol entity and for which the value of the error-status field is <i>badValue</i> .
snmpInReadOnlys	The total number of valid SNMP Protocol Data Units (PDUs), which were delivered to the SNMP protocol entity and for which the value of the error-status field is <i>'read-Only'</i> . It should be noted that it is a protocol error to generate an SNMP PDU, which contains the value <i>'read-Only'</i> in the error-status field. As such, this object is provided as a means of detecting incorrect implementations of the SNMP.

Table 144. *SNMP Statistics (continued)*

Statistic	Description
snmpInGenErrs	The total number of SNMP Protocol Data Units (PDUs), which were delivered to the SNMP protocol entity and for which the value of the error-status field is <code>genErr</code> .
snmpInTotalReqVars	The total number of MIB objects which have been retrieved successfully by the SNMP protocol entity as a result of receiving valid SNMP Get-Request and Get-Next Protocol Data Units (PDUs).
snmpInTotalSetVars	The total number of MIB objects, which have been altered successfully by the SNMP protocol entity as a result of receiving valid SNMP Set-Request Protocol Data Units (PDUs).
snmpInGetRequests	The total number of SNMP Get-Request Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.
snmpInGetNexts	The total number of SNMP Get-Next Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.
snmpInSetRequests	The total number of SNMP Set-Request Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.
snmpInGetResponses	The total number of SNMP Get-Response Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.
snmpInTraps	The total number of SNMP Trap Protocol Data Units (PDUs), which have been accepted and processed by the SNMP protocol entity.
snmpOutTooBig	The total number of SNMP Protocol Data Units (PDUs), which were generated by the SNMP protocol entity and for which the value of the error-status field is <i>too big</i> .
snmpOutNoSuchNames	The total number of SNMP Protocol Data Units (PDUs), which were generated by the SNMP protocol entity and for which the value of the error-status is <code>noSuchName</code> .
snmpOutBadValues	The total number of SNMP Protocol Data Units (PDUs), which were generated by the SNMP protocol entity and for which the value of the error-status field is <code>badValue</code> .
snmpOutReadOnly	Not in use.

Table 144. *SNMP Statistics (continued)*

Statistic	Description
snmpOutGenErrs	The total number of SNMP Protocol Data Units (PDUs), which were generated by the SNMP protocol entity and for which the value of the error-status field is <code>genErr</code> .
snmpOutGetRequests	The total number of SNMP Get-Request Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.
snmpOutGetNexts	The total number of SNMP Get-Next Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.
snmpOutSetRequests	The total number of SNMP Set-Request Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.
snmpOutGetResponses	The total number of SNMP Get-Response Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.
snmpOutTraps	The total number of SNMP Trap Protocol Data Units (PDUs), which have been generated by the SNMP protocol entity.
snmpSilentDrops	The total number of <code>GetRequest</code> -PDUs, <code>GetNextRequest</code> -PDUs, <code>GetBulkRequest</code> -PDUs, <code>SetRequest</code> -PDUs, and <code>InformRequest</code> -PDUs delivered to the SNMPv2 entity which were silently dropped because the size of a reply containing an alternate <code>Response</code> -PDU with an empty variable bindings field was greater than either a local constraint or the maximum message size associated with the originator of the request.
snmpProxyDrops	The total number of <code>GetRequest</code> -PDUs, <code>GetNextRequest</code> -PDUs, <code>GetBulkRequest</code> -PDUs, <code>SetRequest</code> -PDUs, and <code>InformRequest</code> -PDUs delivered to the SNMP entity which were silently dropped because the transmission of the message to a proxy target failed in a manner such that no <code>Response</code> -PDU could be returned.

NTP Statistics

Enterprise NOS uses NTP (Network Timing Protocol) version 3 to synchronize the switch's internal clock with an atomic time calibrated NTP server. With NTP enabled, the switch can accurately update its internal clock to be consistent with other devices on the network and generates accurate syslogs.

The following command displays NTP statistics:

show ntp counters

Command mode: All

```
NTP statistics:
  Primary Server:
    Requests Sent:           17
    Responses Received:     17
    Updates:                 1
  Secondary Server:
    Requests Sent:           0
    Responses Received:     0
    Updates:                 0

Last update based on response from primary/secondary server.
Last update time: 18:04:16 Tue Jul 13, 2010
Current system time: 18:55:49 Tue Jul 13, 2010
```

Table 145. *NTP Statistics*

Field	Description
Primary Server	<ul style="list-style-type: none">● Requests Sent: The total number of NTP requests the switch sent to the primary NTP server to synchronize time.● Responses Received: The total number of NTP responses received from the primary NTP server.● Updates: The total number of times the switch updated its time based on the NTP responses received from the primary NTP server.
Secondary Server	<ul style="list-style-type: none">● Requests Sent: The total number of NTP requests the switch sent to the secondary NTP server to synchronize time.● Responses Received: The total number of NTP responses received from the secondary NTP server.● Updates: The total number of times the switch updated its time based on the NTP responses received from the secondary NTP server.
Last update based on response from primary server	Last update of time on the switch based on either primary or secondary NTP response received.

Table 145. *NTP Statistics (continued)*

Field	Description
Last update time	The time stamp showing the time when the switch was last updated.
Current system time	The switch system time when the command was issued.

The following command displays information about NTP associated peers:

show ntp associations

Command mode: All

address	ref clock	st	when(s)	offset(s)
*12.200.151.18	198.72.72.10	3	35316	-2
*synced, #unsynced				

Table 146. *NTP Associations*

Field	Description
address	Peer address
ref clock	Peer reference clock address
st	Peer stratum
when(s)	Time in seconds since the latest NTP packet was received from the peer
offset(s)	Offset in seconds between the peer clock and local clock

SLP Statistics

The following table displays SLP statistics commands:

Table 147. *SLP Statistics Commands*

Command Syntax and Usage
show ip slp counter Displays SLP packet counters. Command mode: All
clear ip slp counters Clears SLP packet counters. Command mode: Privileged EXEC

Use the following command to display SLP packet counters:

show ip slp counter

Command mode: All

SLP Send Counters:	
SLP DAAdvert	: 0
SLP SrvRqst	: 0
SLP SrvRply	: 0
SLP SrvAck	: 0
SLP AttrRqst	: 0
SLP AttrRply	: 0
SLP SrvTypeRqst	: 0
SLP SrvReg	: 0
SLP SrvDeReg	: 0
SLP SrvTypeRply	: 0
SLP SAAdvert	: 0
SLP Unknown	: 0
SLP Receive Counters:	
SLP DAAdvert	: 0
SLP SrvRqst	: 0
SLP SrvRply	: 0
SLP SrvAck	: 0
SLP AttrRqst	: 0
SLP AttrRply	: 0
SLP SrvTypeRqst	: 0
SLP SrvReg	: 0
SLP SrvDeReg	: 0
SLP SrvTypeRply	: 0
SLP SAAdvert	: 0
SLP Dropped	: 0
Incorect pkt/dest	: 0
Scopes mismatch	: 0
Others	: 0

Statistics Dump

The following command dumps switch statistics:

show counters

Command mode: All

```
CPU Utilization at 12:13:08 Thu Mar 12, 2015

Total CPU Utilization: For 1 second: 0.06%
                       For 5 second: 0.33%
                       For 1 minute: 0.12%
                       For 5 minute: 0.11%

Highest CPU Utilization: thread 16 (IP ) at 14:12:23 Wed Feb 25, 2015

-----
Thread  Thread      Utilization      Status
  ID    Name          1sec      5sec      1Min      5Min
-----
  1     STEM          0.00%     0.00%     0.00%     0.00%     idle
  2     STP            0.00%     0.00%     0.00%     0.00%     idle
  3     MFDB           0.00%     0.00%     0.00%     0.00%     idle
  4     TND            0.00%     0.00%     0.00%     0.00%     idle
  5     CONS           0.01%     0.02%     0.00%     0.01%     running
  6     TNET           0.00%     0.00%     0.00%     0.00%     idle
  7     TNET           0.00%     0.00%     0.00%     0.00%     idle
  8     TNET           0.00%     0.00%     0.00%     0.00%     idle
  9     TNET           0.00%     0.00%     0.00%     0.00%     idle
 10     LOG            0.00%     0.00%     0.00%     0.00%     idle
 11     TRAP           0.00%     0.00%     0.00%     0.00%     idle
 12     NTP            0.00%     0.00%     0.00%     0.00%     idle
 13     RMON           0.00%     0.00%     0.00%     0.00%     idle
 16     IP              0.00%     0.01%     0.01%     0.01%     idle
 18     AGR            0.00%     0.00%     0.00%     0.00%     idle
 19     EPI            0.00%     0.00%     0.00%     0.00%     idle
 20     PORT           0.00%     0.00%     0.00%     0.00%     idle
 25     MGMT           0.01%     0.01%     0.01%     0.02%     idle
 28     SNMP           0.00%     0.00%     0.01%     0.00%     idle
 29     SNMP           0.00%     0.00%     0.00%     0.00%     idle
 31     SSHD           0.00%     0.00%     0.00%     0.00%     idle
 33     TEAM           0.00%     0.00%     0.00%     0.00%     idle
 34     I2C            0.00%     0.00%     0.00%     0.00%     idle
 35     LACP           0.01%     0.25%     0.04%     0.02%     idle
 36     SFP            0.00%     0.00%     0.00%     0.00%     idle
 37     L3HS           0.00%     0.00%     0.00%     0.00%     idle
 38     HLNK           0.00%     0.00%     0.00%     0.00%     idle
 39     LLDP           0.00%     0.00%     0.01%     0.02%     idle
 40     IPV6           0.00%     0.01%     0.00%     0.00%     idle
...

```

Use the dump command to dump all switch statistics (40K or more, depending on your configuration). This data can be used to tune or debug switch performance.

If you want to capture dump data to a file, set your communication software on your workstation to capture session data prior to issuing the dump command.

Chapter 4. Configuration Commands

This chapter discusses how to use the Command Line Interface (CLI) for making, viewing, and saving switch configuration changes. Many of the commands, although not new, display more or different information than in the previous version. Important differences are called out in the text.

Table 148. *General Configuration Commands*

Command Syntax and Usage
<p>show running-config [diff]</p> <p>Dumps current configuration to a script file. The diff option displays only the running configuration changes that have been applied but not saved to flash memory. For details, see page 572.</p> <p>Command mode: All except User EXEC</p>
<p>copy running-config backup-config</p> <p>Copy the current (running) configuration from switch memory to the backup-config partition. For details, see page 573.</p> <p>Command mode: All except User EXEC</p>
<p>copy running-config startup-config</p> <p>Copy the current (running) configuration from switch memory to the startup-config partition.</p> <p>Command mode: All except User EXEC</p>
<p>copy running-config {ftp sftp tftp} [data-port extm-port mgt-port]</p> <p>Backs up current configuration to a file on the selected FTP/TFTP/SFTP server. Select a management port, or press Enter to use the default (management) port.</p> <p>Command mode: All except User EXEC</p>
<p>copy {ftp sftp tftp} running-config [data-port extm-port mgt-port]</p> <p>Restores current configuration from a FTP/TFTP/SFTP server. Select a management port, or press Enter to use the default (management) port. For details, see page 574.</p> <p>Command mode: All except User EXEC</p>

Table 148. *General Configuration Commands*

Command Syntax and Usage
<p>copy {sftp tftp} {ca-cert host-key host-cert host-cert-only public-key} [data-port extm-port mgt-port]</p> <p>Imports interface used by NIST certified test laboratories for USGv6 (NIST SP 500-267) certification purposes. Required for RSA digital signature authentication verification during IKEv2 interoperability testing. Uses TFTP or SFTP to import:</p> <ul style="list-style-type: none">o ca-cert: Certificate Authority root certificateo host-key: host private keyo host-cert: host public keyo host-cert-only: host private key generated on the switcho public-key: client public keyo data-port: data porto extm-port: external management porto mgt-port: management port <p>Command mode: All except User EXEC</p>

Viewing and Saving Changes

As you use the configuration commands to set switch parameters, the changes you make take effect immediately. You do not need to apply them. Configuration changes are lost the next time the switch boots, unless you save the changes.

You can view all running configuration changes that have been applied but not saved to flash memory using the `show running-config diff` command in Privileged EXEC mode.

Note: Some operations can override the settings of the Configuration commands. Therefore, settings you view using the Configuration commands (for example, port status) might differ from run-time information that you view using the Information commands. The Information commands display current run-time information of switch parameters.

Saving the Configuration

You must save configuration settings to flash memory, so the CN4093 reloads the settings after a reset.

Note: If you do not save the changes, they will be lost the next time the system is rebooted.

To save the new configuration, enter one of the following commands:

```
CN 4093# copy running-config startup-config
```

or

```
CN 4093# write
```

Note: The `write` command doesn't prompt the user for confirmation.

When you save configuration changes, the changes are saved to the *active* configuration block. For instructions on selecting the configuration to run at the next system reset, see [“Selecting a Configuration Block” on page 602](#).

System Configuration

These commands provide configuration of switch management parameters such as user and administrator privilege mode passwords, Web-based management settings, and management access lists.

Table 149. *System Configuration Commands*

Command Syntax and Usage
<p>[no] banner <1-80 characters></p> <p>Configures a login banner of up to 80 characters. When a user or administrator logs into the switch, the login banner is displayed. It is also displayed as part of the output from the <code>show sys-info</code> command.</p> <p>Command mode: Global configuration</p>
<p>[no] boot strict enable</p> <p>Enables or disables switch operation in security strict mode. When enabled, the authentication and privacy protocols and algorithms of the device are compliant with NIST SP-800-131A, with non-compliant protocols and algorithms disabled.</p> <p>Setting will be applied and device will be reset to default factory configuration after reboot.</p> <p>The default setting is <code>disabled</code>.</p> <p>Note: Ensure NIST Strict compliance is enabled on the Chassis Management Module before enabling Strict mode operation on the device.</p> <p>Command mode: Global configuration</p>
<p>[no] boot siom</p> <p>Enables or disables SIOM on the switch.</p> <p>You must reboot the switch for this change to take effect.</p> <p>The default setting is <code>disabled</code>.</p> <p>Command mode: Global configuration</p>
<p>easyconnect</p> <p>Allows to apply a series of customizable and predefined configurations based on common deployment scenarios. The EasyConnect (EZC) wizard will display the available configuration options. For more details on using the EZC wizard, see the <i>Lenovo Flex System Fabric CN4093 10 Gb Converged Scalable Switch Application Guide for Lenovo Enterprise Network Operating System 8.4</i>.</p> <p>Note: Not available in stacking.</p> <p>Command mode: Privileged EXEC</p>
<p>[no] hostname <character string></p> <p>Enables or disables displaying of the host name (system administrator's name) in the Command Line Interface (CLI).</p> <p>Command mode: Global configuration</p>

Table 149. *System Configuration Commands (continued)*

Command Syntax and Usage
<p>line console length <0-300></p> <p>Configures the number of lines per screen displayed in the CLI by default for console sessions. Setting it to 0 disables paging.</p> <p>The default value is 28.</p> <p>Command mode: Global configuration</p>
<p>no line console</p> <p>Sets <code>line console length</code> to the default value of 28.</p> <p>Command mode: Global configuration</p>
<p>line vty length <0-300></p> <p>Sets the default number of lines per screen displayed for Telnet and SSH sessions. A value of 0 disables paging.</p> <p>The default value is 28.</p> <p>Command mode: Global configuration</p>
<p>no line vty</p> <p>Sets <code>line vty length</code> to the default value of 28.</p> <p>Command mode: Global configuration</p>
<p>system date <yyyy> <mm> <dd></p> <p>Prompts the user for the system date. The date retains its value when the switch is reset.</p> <p>Command mode: Global configuration</p>
<p>[no] system daylight</p> <p>Enables or disables daylight saving time in the system clock. When enabled, the switch will add an extra hour to the system clock so that it is consistent with the local clock.</p> <p>By default, this option is disabled.</p> <p>Command mode: Global configuration</p>
<p>[no] system dhcp [extm mgt]</p> <p>Enables or disables Dynamic Host Control Protocol for setting the IP address on the selected interface. When enabled, the IP address obtained from the DHCP server overrides the static IP address.</p> <p>The default setting is enabled.</p> <p>Command mode: Global configuration</p>
<p>[no] system dhcp {hostname syslog}</p> <p>Enables or disables hostname or log server options support for DHCP/BOOTP client.</p> <p>Command mode: Global configuration</p>

Table 149. *System Configuration Commands (continued)*

Command Syntax and Usage
<p>system idle <0-60></p> <p>Sets the idle timeout for CLI sessions in minutes. A value of 0 disables system idle.</p> <p>The default value is 10 minutes.</p> <p>Command mode: Global configuration</p>
<p>system linkscan {fast normal slow}</p> <p>Configures the link scan interval used to poll the status of ports.</p> <p>Command mode: Global configuration</p>
<p>[no] system notice <maximum 1024 character multi-line login notice> <'.' to end></p> <p>Enables or disables the display of a login notice immediately before the “Enter password:” prompt. This notice can contain up to 1024 characters and new lines.</p> <p>Command mode: Global configuration</p>
<p>[no] system packet-logging</p> <p>Enables or disables logging of packets that come to the CPU.</p> <p>The default setting is enabled.</p> <p>Command mode: Global configuration</p>
<p>[no] system reset-control</p> <p>Enables or disables the reset control flag. When enabled, the switch continues to function after a crash of the main processor, using the last known Layer 2/3 information.</p> <p>Command mode: Global configuration</p>
<p>system time <hh>:<mm>:<ss></p> <p>Configures the system time using a 24-hour clock format. The time retains its value when the switch is reset.</p> <p>Command mode: Global configuration</p>
<p>system timezone</p> <p>Configures the time zone where the switch resides. You are prompted to select your location (continent, country, region) by the timezone wizard. Once a region is selected, the switch updates the time to reflect local changes to Daylight Saving Time, etc.</p> <p>Command mode: Global configuration</p>

Table 149. *System Configuration Commands (continued)*

Command Syntax and Usage
<p>terminal dont-ask</p> <p>Disables CLI confirmation prompts for the current session. The switch will choose the default answer.</p> <p>Note: When using this command any settings configured through the prompting command will be temporarily disregarded for the duration of the current session.</p> <p>Command mode: All</p>
<p>no terminal dont-ask</p> <p>Enables CLI confirmation prompts for the current session.</p> <p>Note: When using this command any settings configured through the prompting command will be temporarily disregarded for the duration of the current session.</p> <p>Command mode: All</p>
<p>terminal-length <0-300></p> <p>Configures the number of lines per screen displayed in the CLI for the current session. A value of 0 disables paging. By default, it is set to the corresponding line vty length or line console length value in effect at login.</p> <p>Command mode: All</p>
<p>show boot strict</p> <p>Displays the current security strict mode status.</p> <p>Command mode: Global configuration</p>
<p>show boot security-policy</p> <p>Displays the current security policy configuration.</p> <p>Note: The security policy is configurable only through the CMM tool.</p> <p>Command mode: All</p>
<p>show boot siom</p> <p>Displays the current SIOM setting and the SIOM setting that will take effect after reboot.</p> <p>Command mode: All</p>
<p>show system</p> <p>Displays the current system parameters.</p> <p>Command mode: All</p>

System Error Disable and Recovery Configuration

The Error Disable and Recovery feature allows the switch to automatically disable a port if an error condition is detected on the port. The port remains in the error-disabled state until it is re-enabled manually, or re-enabled automatically by the switch after a timeout period has elapsed. The error-disabled state of a port does not persist across a system reboot.

Table 150. *Error Disable Configuration Commands*

Command Syntax and Usage
<p>[no] errdisable recovery</p> <p>Globally enables or disables automatic error-recovery for error-disabled ports. The default setting is disabled.</p> <p>Note: Each port must have error-recovery enabled to participate in automatic error recovery.</p> <p>Command mode: Global configuration</p>
<p>errdisable timeout <30-86400></p> <p>Configures the error-recovery timeout, in seconds. After the timer expires, the switch attempts to re-enable the port.</p> <p>The default value is 300 seconds.</p> <p>Note: When you change the timeout value, all current error-recovery timers are reset.</p> <p>Command mode: Global configuration</p>
<p>show errdisable</p> <p>Displays the current system Error Disable configuration.</p> <p>Command mode: All</p>

Link Flap Dampening Configuration

The Link Flap Dampening feature allows the switch to automatically disable a port if too many link flaps (link up/link down) are detected on the port during a specified time interval. The port remains in the error-disabled state until it is re-enabled manually, or re-enabled automatically by the switch after a timeout period has elapsed.

Table 151. *Link Flap Dampening Configuration Options*

Command Syntax and Usage
[no] errdisable link-flap enable Enables or disables Link Flap Dampening. Command mode: Global configuration
errdisable link-flap max-flaps <1-100> Configures the maximum number of link flaps allowed in the configured time period. The default value is 5. Command mode: Global configuration
errdisable link-flap time <5-500> Configures the time period, in seconds. The default value is 30 seconds. Command mode: Global configuration
show errdisable link-flap Displays the current Link Flap Dampening parameters. Command mode: All

System Host Log Configuration

The following table displays System Host Log configuration commands.

Table 152. *Host Log Configuration Commands*

Command Syntax and Usage
<p>[no] logging buffer severity <0-7></p> <p>Sets the severity level of system log messages that are written to flash buffer. The system saves only messages with the selected severity level and above. For example, if you set the buffer severity to 2, only messages with severity level of 1 and 2 are saved.</p> <p>The default is 7, which means log all severity levels.</p> <p>Command mode: Global configuration</p>
<p>[no] logging console</p> <p>Enables or disables delivering syslog messages to the console. When necessary, disabling console ensures the switch is not affected by syslog messages.</p> <p>The default setting is enabled.</p> <p>Command mode: Global configuration</p>
<p>logging console severity <0-7></p> <p>Sets the severity level of system log messages to display via the console, Telnet, and SSH. The system displays only messages with the selected severity level and above. For example, if you set the console severity to 2, only messages with severity level of 1 and 2 are displayed.</p> <p>The default is 7, which means log all severity levels.</p> <p>Command mode: Global configuration</p>
<p>no logging console severity</p> <p>Disables delivering syslog messages to the console based on severity.</p> <p>Command mode: Global configuration</p>
<p>logging host <1-2> address <IP address> [data-port extm-port mgt-port]</p> <p>Sets the IPv4 address of the first or second syslog host.</p> <p>Command mode: Global configuration</p>
<p>logging host <1-2> address6 <IPv6 address> [data-port extm-port mgt-port]</p> <p>Sets the IPv6 address of the first or second syslog host.</p> <p>Command mode: Global configuration</p>
<p>logging host <1-2> facility <0-7></p> <p>This option sets the facility level of the first or second syslog host displayed.</p> <p>The default is 0.</p> <p>Command mode: Global configuration</p>

Table 152. Host Log Configuration Commands

Command Syntax and Usage
<p>logging host <1-2> severity <0-7></p> <p>This option sets the severity level of the first or second syslog host displayed. The default is 7, which means log all severity levels.</p> <p>Command mode: Global configuration</p>
<p>no logging host <1-2></p> <p>Removes the specified syslog host.</p> <p>Command mode: Global configuration</p>
<p>[no] logging log {all <feature>}</p> <p>Displays a list of features for which syslog messages can be generated. You can choose to enable/disable specific features (such as vlans, stg, or ssh), or enable/disable syslog on all available features.</p> <p>Command mode: Global configuration</p>
<p>[no] logging pdrop enable</p> <p>Enables or disables packet drop logging.</p> <p>By default, the switch generates these messages once every 30 minutes.</p> <p>Command mode: Global configuration</p>
<p>logging pdrop interval <0-30></p> <p>Sets the packet drop logging interval, in minutes. The default value is 30.</p> <p>Command mode: Global configuration</p>
<p>[no] logging synchronous [level <0-7> all]</p> <p>Enables or disables synchronous logging messages. When enabled, logging messages are displayed asynchronously.</p> <p>The level parameter sets the message severity level. Messages with a severity level equal to or higher than this value are displayed asynchronously. Low numbers indicate greater severity. All displays all messages asynchronously, regardless the severity level.</p> <p>The default setting is 2.</p> <p>Command mode: Global configuration</p>
<p>logging source-interface loopback <1-5></p> <p>Sets the loopback interface number for syslogs.</p> <p>Command mode: Global configuration</p>

Table 152. *Host Log Configuration Commands*

Command Syntax and Usage
<p>no logging source-interface loopback</p> <p>Removes the loopback interface for syslogs.</p> <p>Command mode: Global configuration</p>
<p>show logging [severity <severity level>] [reverse]</p> <p>Displays the current syslog settings, followed by the most recent 2000 syslog messages, as displayed by the <code>show logging messages</code> command. For details, see page 47.</p> <p>The <code>reverse</code> option displays the output in reverse order, from the newest entry to the oldest.</p> <p>Command mode: All</p>

SSH Server Configuration

For the CN4093 10 Gb Converged Scalable Switch, these commands enable Secure Shell access from any SSH client.

Table 153. *SSH Server Configuration Commands*

Command Syntax and Usage
<p>[no] ssh enable Enables or disables the SSH server. Command mode: Global configuration</p>
<p>ssh generate-host-key Generate the RSA host key. Command mode: Global configuration</p>
<p>ssh maxauthattempts <1-20> Sets the maximum number of SSH authentication attempts. The default value is 2. Command mode: Global configuration</p>
<p>no ssh maxauthattempts Resets the maximum number of SSH authentication attempts to its default value of 2. Command mode: Global configuration</p>
<p>ssh port <TCP port number> Sets the SSH server port number. The default port number is 22. Command mode: Global configuration</p>
<p>no ssh port Resets the SSH server port to the default port number 22. Command mode: Global configuration</p>
<p>ssh public-key index <1-100> {adduser deluser} username <user name> Assigns another user name for existing public keys or removes a user name. Command mode: Global configuration</p>
<p>[no] ssh scp-enable Enables or disables the SCP apply and save. Command mode: Global configuration</p>
<p>ssh scp-password Set the administration password for SCP access. Command mode: Global configuration</p>

Table 153. SSH Server Configuration Commands

Command Syntax and Usage
<p>show ssh</p> <p>Displays the current SSH server configuration.</p> <p>Command mode: All</p>
<p>show ssh-clienthostkey {address <SFTP server IP address> all}</p> <p>Displays the current SFTP/SSH host key configuration.</p> <ul style="list-style-type: none">o address : Displays a specific SFTP/SSH host keyo all : Displays all SFTP/SSH host keys <p>Commands mode: All</p>
<p>show ssh-clientpubkey {all index <1-100> username <user name>}</p> <p>Displays the current SSH public key configuration.</p> <ul style="list-style-type: none">o all : Displays all SSH public keyso index : Displays a specific SSH public keyo username : Displays all the SSH public keys of a particular user <p>Command mode: All</p>
<p>clear ssh-clienthostkey {address <SFTP server IP address> all}</p> <p>Clears stored SFTP/SSH host key configuration.</p> <ul style="list-style-type: none">o address : Clears a specific SFTP/SSH host keyo all : Clears all SFTP/SSH host keys <p>Command mode: All except User EXEC</p>
<p>clear ssh-clientpubkey {all index <1-100> username <user name>}</p> <p>Clears stored SSH public key configuration.</p> <ul style="list-style-type: none">o all : Clears all SSH public keyso index : Clears a specific SSH public keyo username : Clears a particular username from all the SSH public keys <p>Command mode: All except User EXEC</p>

RADIUS Server Configuration

The following table displays RADIUS Server configuration commands.

Table 154. RADIUS Server Configuration Commands

Command Syntax and Usage
<p>[no] radius-server backdoor</p> <p>Enables or disables the RADIUS backdoor for Telnet/SSH/HTTP/HTTPS. The default value is disabled.</p> <p>To obtain the RADIUS backdoor password for your switch, contact your Service and Support line.</p> <p>Command mode: Global configuration</p>
<p>[no] radius-server enable</p> <p>Enables or disables the RADIUS server.</p> <p>Command mode: Global configuration</p>
<p>[default] radius-server port <UDP port number></p> <p>Enter the number of the UDP port to be configured, between 1500 - 3000. The default is 1645.</p> <p>Command mode: Global configuration</p>
<p>[no] radius-server primary-host <IP address></p> <p>Sets the primary RADIUS server address.</p> <p>Command mode: Global configuration</p>
<p>[no] radius-server secondary-host <IP address></p> <p>Sets the secondary RADIUS server address.</p> <p>Command mode: Global configuration</p>
<p>radius-server primary-host <hostname or IP address> [key <1-32 characters>]</p> <p>This is the primary shared secret between the switch and the RADIUS server(s). The key option sets the RADIUS server secret key.</p> <p>Command mode: Global configuration</p>
<p>no radius-server primary-host [key]</p> <p>Removes the primary RADIUS server. The key option removes only the RADIUS server secret key.</p> <p>Command mode: Global configuration</p>
<p>radius-server retransmit <1-3></p> <p>Sets the number of failed authentication requests before switching to a different RADIUS server.</p> <p>The default is 3 requests.</p> <p>Command mode: Global configuration</p>

Table 154. RADIUS Server Configuration Commands

Command Syntax and Usage
<p>radius-server secondary-host <hostname or IP address> [key <1-32 characters>]</p> <p>This is the secondary shared secret between the switch and the RADIUS server(s). The key option sets the RADIUS server secret key.</p> <p>Command mode: Global configuration</p>
<p>no radius-server secondary-host [key]</p> <p>Removes the secondary RADIUS server. The key option removes only the RADIUS server secret key.</p> <p>Command mode: Global configuration</p>
<p>[no] radius-server secure-backdoor</p> <p>Enables or disables the RADIUS backdoor using secure password for Telnet/SSH/HTTP/HTTPS.</p> <p>Note: This command does not apply when RADIUS backdoor is enabled.</p> <p>Command mode: Global configuration</p>
<p>radius-server timeout <1-10></p> <p>Sets the amount of time, in seconds, before a RADIUS server authentication attempt is considered to have failed.</p> <p>The default is 3 seconds.</p> <p>Command mode: Global configuration</p>
<p>ip radius source-interface loopback <1-5></p> <p>Sets the RADIUS source loopback interface.</p> <p>Command mode: Global configuration</p>
<p>show radius-server</p> <p>Displays the current RADIUS server parameters.</p> <p>Command mode: All</p>

TACACS+ Server Configuration

TACACS (Terminal Access Controller Access Control system) is an authentication protocol that allows a remote access server to forward a user's logon password to an authentication server to determine whether access can be allowed to a given system. TACACS is not an encryption protocol, and therefore less secure than TACACS+ and Remote Authentication Dial-In User Service (RADIUS) protocols. Both TACACS and TACACS+ are described in RFC 1492.

TACACS+ protocol is more reliable than RADIUS, as TACACS+ uses the Transmission Control Protocol (TCP) whereas RADIUS uses the User Datagram Protocol (UDP). Also, RADIUS combines authentication and authorization in a user profile, whereas TACACS+ separates the two operations.

TACACS+ offers the following advantages over RADIUS as the authentication device:

- TACACS+ is TCP-based, so it facilitates connection-oriented traffic.
- It supports full-packet encryption, as opposed to password-only in authentication requests.
- It supports de-coupled authentication, authorization, and accounting.

Table 155. *TACACS+ Server Configuration Commands*

Command Syntax and Usage
<p>[no] tacacs-server accounting-enable Enables or disables TACACS+ accounting. Command mode: Global configuration</p>
<p>[no] tacacs-server attempts <1-10> Sets the number of failed login attempts before disconnecting the user. The default is 2 attempts. Command mode: Global configuration</p>
<p>[no] tacacs-server backdoor Enables or disables the TACACS+ back door for Telnet, SSH/SCP or HTTP/HTTPS. Enabling this feature allows you to bypass the TACACS+ servers. It is recommended that you use Secure Backdoor to ensure the switch is secured, because Secure Backdoor disallows access through the back door when the TACACS+ servers are responding. The default setting is disabled. To obtain the TACACS+ backdoor password for your CN4093, contact your Service and Support line. Command mode: Global configuration</p>
<p>tacacs-server chpassp <1-32 characters> Defines the password for the primary TACACS+ server. Command mode: Global configuration</p>

Table 155. TACACS+ Server Configuration Commands (continued)

Command Syntax and Usage
<p>tacacs-server chpass <1-32 characters></p> <p>Defines the password for the secondary TACACS+ server.</p> <p>Command mode: Global configuration</p>
<p>[no] tacacs-server command-authorization</p> <p>Enables or disables TACACS+ command authorization.</p> <p>Command mode: Global configuration</p>
<p>[no] tacacs-server command-logging</p> <p>Enables or disables TACACS+ command logging.</p> <p>Command mode: Global configuration</p>
<p>[no] tacacs-server directed-request [restricted no-truncate]</p> <p>Enables or disables TACACS+ directed request, which uses a specified TACACS+ server for authentication, authorization, accounting. When enabled, When directed-request is enabled, each user must add a configured TACACS+ server hostname to the username (for example, username@hostname) during login.</p> <p>This command allows the following options:</p> <ul style="list-style-type: none">o Restricted: Only the username is sent to the specified TACACS+ server.o No-truncate: The entire login string is sent to the TACACS+ server. <p>Command mode: Global configuration</p>
<p>[no] tacacs-server enable</p> <p>Enables or disables the TACACS+ server.</p> <p>By default, the server is disabled.</p> <p>Command mode: Global configuration</p>
<p>[no] tacacs-server enable-bypass</p> <p>Enables or disables the enable-bypass for administrator privilege.</p> <p>By default, enable-bypass is enabled.</p> <p>Command mode: Global configuration</p>
<p>[no] tacacs-server encryption-enable</p> <p>Enables or disables encryption for TACACS+ traffic packets.</p> <p>Command mode: Global configuration</p>
<p>[no] tacacs-server password-change</p> <p>Enables or disables TACACS+ password change.</p> <p>The default value is disabled.</p> <p>Command mode: Global configuration</p>

Table 155. TACACS+ Server Configuration Commands (continued)

Command Syntax and Usage
<p>primary-password</p> <p>Configures the password for the primary TACACS+ server. The CLI will prompt you for input.</p> <p>Command mode: Global configuration</p>
<p>secondary-password</p> <p>Configures the password for the secondary TACACS+ server. The CLI will prompt you for input.</p> <p>Command mode: Global configuration</p>
<p>[default] tacacs-server port <TCP port number></p> <p>Enter the number of the TCP port to be configured, between 1 and 65000. The default is 49.</p> <p>Command mode: Global configuration</p>
<p>[no] tacacs-server primary-host <IP address></p> <p>Defines the primary TACACS+ server address.</p> <p>Command mode: Global configuration</p>
<p>[no] tacacs-server primary-host <IP address> key <1-32 characters></p> <p>This is the primary shared secret key between the switch and the TACACS+ server(s).</p> <p>Command mode: Global configuration</p>
<p>[no] tacacs-server privilege-mapping</p> <p>Enables or disables TACACS+ privilege-level mapping. The default value is disabled.</p> <p>Command mode: Global configuration</p>
<p>tacacs-server retransmit <1-3></p> <p>Sets the number of failed authentication requests before switching to a different TACACS+ server. The default is 3 requests.</p> <p>Command mode: Global configuration</p>
<p>[no] tacacs-server secondary-host <IP address></p> <p>Defines the secondary TACACS+ server address.</p> <p>Command mode: Global configuration</p>
<p>[no] tacacs-server secondary-host <IP address> key <1-32 characters></p> <p>This is the secondary shared secret key between the switch and the TACACS+ server(s).</p> <p>Command mode: Global configuration</p>

Table 155. TACACS+ Server Configuration Commands (continued)

Command Syntax and Usage
<p>[no] tacacs-server secure-backdoor</p> <p>Enables or disables TACACS+ secure back door access through Telnet, SSH/SCP, or HTTP/HTTPS only when the TACACS+ servers are not responding.</p> <p>This feature is recommended to permit access to the switch when the TACACS+ servers become unresponsive. If no back door is enabled, the only way to gain access when TACACS+ servers are unresponsive is to use the back door via the console port.</p> <p>The default is disabled.</p> <p>Command mode: Global configuration</p>
<p>tacacs-server timeout <4-15></p> <p>Sets the amount of time, in seconds, before a TACACS+ server authentication attempt is considered to have failed.</p> <p>The default is 5 seconds.</p> <p>Command mode: Global configuration</p>
<p>[no] tacacs-server user-mapping {<0-15> user oper admin}</p> <p>Maps a TACACS+ authorization level to a switch user level. Enter a TACACS+ authorization level (0-15), followed by the corresponding switch user level.</p> <p>Command mode: Global configuration</p>
<p>ip tacacs-server source-interface loopback <1-5></p> <p>Sets the TACACS+ source loopback interface.</p> <p>Command mode: Global configuration</p>
<p>show tacacs-server</p> <p>Displays current TACACS+ configuration parameters.</p> <p>Command mode: All</p>

LDAP Server Configuration

LDAP (Lightweight Directory Access Protocol) is an authentication protocol that allows a remote access server to forward a user's logon password to an authentication server to determine whether access can be allowed to a given system.

The following commands will take effect only if the switch is in Legacy Input/Output Module (LIOM) mode.

When the switch is in Secure Input/Output Module (SIOM) mode, these commands are not applicable, as the LDAP configuring is made through CMM (Chassis Management Module) tool.

By default, LDAP is enabled using local LDAP. To login, enter the same credentials (user/password) used to login to CMM tool.

Table 156. *LDAP Server Configuration Commands*

Command Syntax and Usage
<p>ldap-server attribute username <1-128 characters></p> <p>Sets a customized LDAP user attribute.</p> <p>The default value is uid.</p> <p>Note: The user attribute needs to be set to cn if LDAP server is MS active directory.</p> <p>Command mode: Global configuration</p>
<p>no ldap-server attribute [username]</p> <p>Sets LDAP attributes back to their default values. The username option sets the LDAP user attribute back to its default value of uid.</p> <p>Command mode: Global configuration</p>
<p>[no] ldap-server backdoor</p> <p>Enables or disables the LDAP back door for Telnet, SSH/SCP, or HTTP/HTTPS.</p> <p>The default setting is disabled.</p> <p>Note: To obtain the LDAP back door password for your CN4093, contact your Service and Support line.</p> <p>Command mode: Global configuration</p>
<p>ldap-server domain [<1-128 characters> none]</p> <p>Sets the domain name for the LDAP server. Enter the full path for your organization. For example:</p> <p>ou=people, dc=mydomain, dc=com</p> <p>Command mode: Global configuration</p>

Table 156. LDAP Server Configuration Commands (continued)

Command Syntax and Usage
<p>[no] ldap-server enable Enables or disables the LDAP server. Command mode: Global configuration</p>
<p>[default] ldap-server port <UDP port number> Enter the number of the UDP port to be configured, between 1 - 65000. The default is 389. Command mode: Global configuration</p>
<p>[no] ldap-server primary-host <IP address> Sets the primary LDAP server address. Command mode: Global configuration</p>
<p>ldap-server retransmit <1-3> Sets the number of failed authentication requests before switching to a different LDAP server. The default is 3 requests. Command mode: Global configuration</p>
<p>[no] ldap-server secondary-host <IP address> Sets the secondary LDAP server address. Command mode: Global configuration</p>
<p>ldap-server timeout <4-15> Sets the amount of time, in seconds, before a LDAP server authentication attempt is considered to have failed. The default is 5 seconds. Command mode: Global configuration</p>
<p>show ldap-server Displays the current LDAP server parameters configured in LIOM mode. Command mode: All</p>
<p>show ldap-server siom-configure Displays the current LDAP server parameters configured in SIOM mode. Command mode: All Note: This command is applicable only when if switch is running in SIOM mode.</p>

NTP Server Configuration

These commands allow you to synchronize the switch clock to a Network Time Protocol (NTP) server. By default, this option is disabled.

Table 157. *NTP Server Configuration Commands*

Command Syntax and Usage
<p>[no] ntp authenticate</p> <p>Enables or disables NTP authentication. When authentication is enabled, the switch transmits NTP packets with the MAC address appended.</p> <p>The default setting is disabled.</p> <p>Command mode: Global configuration</p>
<p>[no] ntp enable</p> <p>Enables or disables the NTP synchronization service.</p> <p>Command mode: Global configuration</p>
<p>ntp interval <5-44640></p> <p>Specifies the interval, that is, how often, in minutes, to re-synchronize the switch clock with the NTP server.</p> <p>The default value is 1440.</p> <p>Command mode: Global configuration</p>
<p>ntp offset <0-86400></p> <p>Configures the minimum offset in seconds between the switch clock and the NTP server that triggers a system log message.</p> <p>The default value is 300.</p> <p>Command mode: Global configuration</p>
<p>no ntp offset</p> <p>Resets the NTP offset to the default 300 seconds value.</p> <p>Command mode: Global configuration</p>
<p>ntp primary-key <1-65534></p> <p>Adds the NTP primary server key, which specifies which MD5 key is used by the primary server.</p> <p>Command mode: Global configuration</p>
<p>ntp secondary-key <1-65534></p> <p>Adds the NTP secondary server key, which specifies which MD5 key is used by the secondary server.</p> <p>Command mode: Global configuration</p>

Table 157. NTP Server Configuration Commands

Command Syntax and Usage
<p>ntp primary-server <IP address> [data-port extm-port mgt-port]</p> <p>Prompts for the IP addresses of the primary NTP server to which you want to synchronize the switch clock. Select the port to use for data transfer:</p> <ul style="list-style-type: none">o data port (data)o external management port (extm)o internal management port (mgt) <p>Command mode: Global configuration</p>
<p>no ntp primary-server</p> <p>Removes the primary NTP server address.</p> <p>Command mode: Global configuration</p>
<p>ntp secondary-server <IP address> [data-port extm-port mgt-port]</p> <p>Prompts for the IP addresses of the secondary NTP server to which you want to synchronize the switch clock. Select the port to use for data transfer:</p> <ul style="list-style-type: none">o data port (data)o external management port (extm)o internal management port (mgt) <p>Command mode: Global configuration</p>
<p>no ntp secondary-server</p> <p>Removes the secondary NTP server address.</p> <p>Command mode: Global configuration</p>
<p>ntp ipv6 primary-server <IPv6 address> [data-port extm-port mgt-port]</p> <p>Prompts for the IPv6 addresses of the primary NTP server to which you want to synchronize the switch clock. Select the port to use for data transfer:</p> <ul style="list-style-type: none">o data port (data)o external management port (extm)o internal management port (mgt) <p>Command mode: Global configuration</p>
<p>no ntp ipv6 primary-server</p> <p>Removes the IPv6 primary NTP server address.</p> <p>Command mode: Global configuration</p>

Table 157. NTP Server Configuration Commands

Command Syntax and Usage
<p>ntp ipv6 secondary-server <IPv6 address> [data-port extm-port mgt-port]</p> <p>Prompts for the IPv6 addresses of the secondary NTP server to which you want to synchronize the switch clock. Select the port to use for data transfer:</p> <ul style="list-style-type: none">o data port (data)o external management port (extm)o internal management port (mgt) <p>Command mode: Global configuration</p>
<p>no ntp ipv6 secondary-server</p> <p>Removes the IPv6 secondary NTP server address.</p> <p>Command mode: Global configuration</p>
<p>[no] ntp sync-logs</p> <p>Enables or disables informational logs for NTP synchronization failures. The default setting is enabled.</p> <p>Command mode: Global configuration</p>
<p>[no] ntp source loopback <1-5></p> <p>Sets the NTP source loopback interface.</p> <p>Command mode: Global configuration</p>
<p>[no] ntp trusted-key <1-65534></p> <p>Adds or removes an MD5 key code to the list of trusted keys. Enter 0 (zero) to remove the selected key code.</p> <p>Command mode: Global configuration</p>
<p>show ntp</p> <p>Displays the current NTP service settings.</p> <p>Command mode: All</p>

NTP MD5 Key Commands

The following table displays NTP MD5 Key configuration commands.

Table 158. NTP MD5 Key Configuration Options

Command Syntax and Usage
<p>ntp message-digest-key <1-65534> md5-key <1-16 characters></p> <p>Configures the selected MD5 key code.</p> <p>Command mode: Global configuration</p>
<p>no ntp message-digest-key <1-65534></p> <p>Deletes the selected MD5 key code.</p> <p>Command mode: Global configuration</p>

System SNMP Configuration

Enterprise NOS supports SNMP-based network management. In SNMP model of network management, a management station (client/manager) accesses a set of variables known as MIBs (Management Information Base) provided by the managed device (agent). If you are running an SNMP network management station on your network, you can manage the switch using the following standard SNMP MIBs:

- MIB II (RFC 1213)
- Ethernet MIB (RFC 1643)
- Bridge MIB (RFC 1493)

An SNMP agent is a software process on the managed device that listens on UDP port 161 for SNMP messages. Each SNMP message sent to the agent contains a list of management objects to retrieve or to modify.

SNMP parameters that can be modified include:

- System name
- System location
- System contact
- Use of the SNMP system authentication trap function
- Read community string
- Write community string
- Trap community strings

Table 159. *System SNMP Commands*

Command Syntax and Usage
<p>[no] snmp-server authentication-trap</p> <p>Enables or disables the use of the system authentication trap facility. The default setting is <code>disabled</code>.</p> <p>Command mode: Global configuration</p>
<p>[no] snmp-server contact <1-64 characters></p> <p>Configures the name of the system contact. The contact can have a maximum of 64 characters.</p> <p>Command mode: Global configuration</p>
<p>snmp-server host <trap host IP address> <trap host community string></p> <p>Adds a trap host server.</p> <p>Command mode: Global configuration</p>
<p>no snmp-server host <trap host IP address></p> <p>Removes the trap host server.</p> <p>Command mode: Global configuration</p>

Table 159. *System SNMP Commands*

Command Syntax and Usage
<p>[no] snmp-server link-trap <i><port alias or number></i> enable</p> <p>Enables or disables the sending of SNMP link up and link down traps for the specified port.</p> <p>The default setting is enabled.</p> <p>Command mode: Global configuration</p>
<p>[no] snmp-server location <i><1-64 characters></i></p> <p>Configures the name of the system location. The location can have a maximum of 64 characters.</p> <p>Command mode: Global configuration</p>
<p>[no] snmp-server name <i><1-64 characters></i></p> <p>Configures the name for the system. The name can have a maximum of 64 characters.</p> <p>Command mode: Global configuration</p>
<p>snmp-server read-community <i><1-32 characters></i></p> <p>Configures the SNMP read community string. The read community string controls SNMP “get” access to the switch. It can have a maximum of 32 characters.</p> <p>The default read community string is public.</p> <p>Command mode: Global configuration</p>
<p>[no] snmp-server read-community-additional <i><1-32 characters></i></p> <p>Adds or removes an additional SNMP read community string. Up to 7 additional read community strings are supported.</p> <p>Command mode: Global configuration</p>
<p>snmp-server timeout <i><1-30></i></p> <p>Sets the timeout value for the SNMP state machine, in minutes.</p> <p>Command mode: Global configuration</p>
<p>[no] snmp-server trap-source {<i><interface number></i> loopback <i><1-5></i>}</p> <p>Configures the source interface for SNMP traps.</p> <p>Command mode: Global configuration</p>
<p>snmp-server write-community <i><1-32 characters></i></p> <p>Configures the SNMP write community string. The write community string controls SNMP “set” and “get” access to the switch. It can have a maximum of 32 characters.</p> <p>The default write community string is private.</p> <p>Command mode: Global configuration</p>

Table 159. *System SNMP Commands*

Command Syntax and Usage
[no] snmp-server write-community-additional <1-32 characters> Adds or removes an additional SNMP write community string. Up to 7 additional write community strings are supported. Command mode: Global configuration
show snmp-server Displays the current SNMP configuration. Command mode: All

SNMPv3 Configuration

SNMP version 3 (SNMPv3) is an extensible SNMP Framework that supplements the SNMPv2 Framework by supporting the following:

- a new SNMP message format
- security for messages
- access control
- remote configuration of SNMP parameters

For more details on the SNMPv3 architecture please refer to RFC3411 to RFC3418.

Table 160. *SNMPv3 Configuration Commands*

Command Syntax and Usage
snmp-server access <1-32> This command allows you to specify access rights. The View-based Access Control Model defines a set of services that an application can use for checking access rights of the user. You need access control when you have to process retrieval or modification request from an SNMP entity. To view command options, see page 330 . Command mode: Global configuration
snmp-server community <1-16> The community table contains objects for mapping community strings and version-independent SNMP message parameters. To view command options, see page 332 . Command mode: Global configuration
snmp-server group <1-17> A group maps the user name to the access group names and their access rights needed to access SNMP management objects. A group defines the access rights assigned to all names that belong to a particular group. To view command options, see page 331 . Command mode: Global configuration

Table 160. *SNMPv3 Configuration Commands (continued)*

<p>snmp-server notify <1-16></p> <p>A notification application typically monitors a system for particular events or conditions, and generates Notification-Class messages based on these events or conditions. To view command options, see page 335.</p> <p>Command mode: Global configuration</p>
<p>snmp-server target-address <1-16></p> <p>This command allows you to configure destination information, consisting of a transport domain and a transport address. This is also termed as transport endpoint. The SNMP MIB provides a mechanism for performing source address validation on incoming requests, and for selecting community strings based on target addresses for outgoing notifications. To view command options, see page 333.</p> <p>Command mode: Global configuration</p>
<p>snmp-server target-parameters <1-16></p> <p>This command allows you to configure SNMP parameters, consisting of message processing model, security model, security level, and security name information. There may be multiple transport endpoints associated with a particular set of SNMP parameters, or a particular transport endpoint may be associated with several sets of SNMP parameters. To view command options, see page 334.</p> <p>Command mode: Global configuration</p>
<p>snmp-server user <1-17></p> <p>This command allows you to create a user security model (USM) entry for an authorized user. You can also configure this entry through SNMP. To view command options, see page 328.</p> <p>Command mode: Global configuration</p>
<p>snmp-server version {v1v2v3 v3only}</p> <p>This command allows you to enable or disable the access to SNMP versions 1, 2 or 3.</p> <p>The default value is v1v2v3.</p> <p>Command mode: Global configuration</p>
<p>snmp-server view <1-128></p> <p>This command allows you to create different MIB views. To view command options, see page 329.</p> <p>Command mode: Global configuration</p>
<p>show snmp-server v3</p> <p>Displays the current SNMPv3 configuration.</p> <p>Command mode: All</p>

User Security Model Configuration

You can make use of a defined set of user identities using this Security Model. An SNMP engine must have the knowledge of applicable attributes of a user.

These commands help you create a user security model entry for an authorized user. You need to provide a security name to create the USM entry.

Table 161. *User Security Model Configuration Commands*

Command Syntax and Usage
<p>snmp-server user <1-17> authentication-protocol {md5 sha none} authentication-password <password value></p> <p>This command allows you to configure the authentication protocol and password.</p> <p>The authentication protocol can be HMAC-MD5-96 or HMAC-SHA-96 for compatibility mode, HMAC-SHA-96 for security strict mode, or none. The default algorithm is none.</p> <p>MD5 authentication protocol is not available in security strict mode if you do not select SNMPv3 account backward compatibility.</p> <p>When you configure an authentication algorithm, you must provide a password, otherwise you will get an error message during validation. This command allows you to create or change your password for authentication.</p> <p>Command mode: Global configuration</p>
<p>snmp-server user <1-17> name <1-32 characters></p> <p>This command allows you to configure a string that represents the name of the user. This is the login name that you need in order to access the switch.</p> <p>Command mode: Global configuration</p>
<p>snmp-server user <1-17> privacy-protocol {aes des none} privacy-password <password value></p> <p>This command allows you to configure the type of privacy protocol and the privacy password.</p> <p>The privacy protocol protects messages from disclosure. The options are des (CBC-DES Symmetric Encryption Protocol), aes (AES-128 Advanced Encryption Standard Protocol) or none. If you specify des as the privacy protocol, then make sure that you have selected one of the authentication protocols (MD5 or HMAC-SHA-96). In security strict mode, if you do not select SNMPv3 account backward compatibility, make sure to disable des privacy protocol. If you specify aes as the privacy protocol, make sure that you have selected HMAC-SHA-256 authentication protocol. If you select none as the authentication protocol, you will get an error message.</p> <p>You can create or change the privacy password.</p> <p>Command mode: Global configuration</p>

Table 161. *User Security Model Configuration Commands*

Command Syntax and Usage
no snmp-server user <1-17> Deletes the USM user entries. Command mode: Global configuration
show snmp-server v3 user <1-17> Displays the USM user entries. Command mode: All

SNMPv3 View Configuration

Note that the first five default `vacmViewTreeFamily` entries cannot be removed, and their names cannot be changed.

Table 162. *SNMPv3 View Configuration Commands*

Command Syntax and Usage
[no] snmp-server view <1-128> mask <1-32 characters> This command defines the bit mask, which in combination with the corresponding tree defines a family of view subtrees. Command mode: Global configuration
snmp-server view <1-128> name <1-32 characters> This command defines the name for a family of view subtrees. Command mode: Global configuration
snmp-server view <1-128> tree <1-64 characters> This command defines MIB tree, which when combined with the corresponding mask defines a family of view subtrees. Command mode: Global configuration
snmp-server view <1-128> type { included excluded } This command indicates whether the corresponding instances of <code>vacmViewTreeFamilySubtree</code> and <code>vacmViewTreeFamilyMask</code> define a family of view subtrees, which is included in or excluded from the MIB view. Command mode: Global configuration
no snmp-server view <1-128> Deletes the <code>vacmViewTreeFamily</code> group entry. Command mode: Global configuration
show snmp-server v3 view <1-128> Displays the current <code>vacmViewTreeFamily</code> configuration. Command mode: All

View-based Access Control Model Configuration

The view-based Access Control Model defines a set of services that an application can use for checking access rights of the user. Access control is needed when the user has to process SNMP retrieval or modification request from an SNMP entity.

Table 163. *View-based Access Control Model Commands*

Command Syntax and Usage
<p>snmp-server access <1-32> level {noAuthNoPriv authNoPriv authPriv}</p> <p>Defines the minimum level of security required to gain access rights. The level <code>noAuthNoPriv</code> means that the SNMP message will be sent without authentication and without using a privacy protocol. The level <code>authNoPriv</code> means that the SNMP message will be sent with authentication but without using a privacy protocol. The <code>authPriv</code> means that the SNMP message will be sent both with authentication and using a privacy protocol.</p> <p>Command mode: Global configuration</p>
<p>snmp-server access <1-32> match {exact prefix}</p> <p>If the value is set to <code>exact</code>, then all the rows whose <code>contextName</code> exactly matches the prefix are selected. If the value is set to <code>prefix</code> then the all the rows where the starting octets of the <code>contextName</code> exactly match the prefix are selected.</p> <p>Command mode: Global configuration</p>
<p>snmp-server access <1-32> name <1-32 characters></p> <p>Defines the name of the group.</p> <p>Command mode: Global configuration</p>
<p>snmp-server access <1-32> notify-view <1-32 characters></p> <p>Defines a notify view name that allows you notify access to the MIB view.</p> <p>Command mode: Global configuration</p>
<p>snmp-server access <1-32> prefix <1-32 characters></p> <p>Defines the name of the context. An SNMP context is a collection of management information that an SNMP entity can access. An SNMP entity has access to many contexts. For more information on naming the management information, see RFC2571, the SNMP Architecture document. The view-based Access Control Model defines a table that lists the locally available contexts by <code>contextName</code>.</p> <p>Command mode: Global configuration</p>
<p>snmp-server access <1-32> read-view <1-32 characters></p> <p>Defines a read view name that allows you read access to a particular MIB view. If the value is empty or if there is no active MIB view having this value then no access is granted.</p> <p>Command mode: Global configuration</p>

Table 163. *View-based Access Control Model Commands (continued)*

Command Syntax and Usage
snmp-server access <1-32> security {usm snmpv1 snmpv2} Allows you to select the security model to be used. Command mode: Global configuration
snmp-server access <1-32> write-view <1-32 characters> Defines a write view name that allows you write access to the MIB view. If the value is empty or if there is no active MIB view having this value then no access is granted. Command mode: Global configuration
no snmp-server access <1-32> Deletes the View-based Access Control entry. Command mode: Global configuration
show snmp-server v3 access <1-32> Displays the View-based Access Control configuration. Command mode: All

SNMPv3 Group Configuration

The following table displays SNMPv3 Group configuration commands.

Table 164. *SNMPv3 Group Configuration Commands*

Command Syntax and Usage
snmp-server group <1-17> group-name <1-32 characters> The name for the access group as defined in the following command: snmp-server access <1-32> name <1-32 characters> on page 328 . Command mode: Global configuration
snmp-server group <1-17> security {usm snmpv1 snmpv2} Defines the security model. Command mode: Global configuration
snmp-server group <1-17> user-name <1-32 characters> Sets the user name as defined in the following command on page 328 : snmp-server user <1-17> name <1-32 characters> Command mode: Global configuration
no snmp-server group <1-17> Deletes the vacmSecurityToGroup entry. Command mode: Global configuration
show snmp-server v3 group <1-17> Displays the current vacmSecurityToGroup configuration. Command mode: All

SNMPv3 Community Table Configuration

These commands are used for configuring the community table entry. The configured entry is stored in the community table list in the SNMP engine. This table is used to configure community strings in the Local Configuration Datastore (LCD) of SNMP engine.

Table 165. *SNMPv3 Community Table Configuration Commands*

Command Syntax and Usage
<p>snmp-server community <1-16> index <1-32 characters></p> <p>Allows you to configure the unique index value of a row in this table.</p> <p>Command string: Global configuration</p>
<p>snmp-server community <1-16> name <1-32 characters></p> <p>Defines the user name as defined in the following command on page 328: <code>snmp-server user <1-17> name <1-32 characters></code></p> <p>Command string: Global configuration</p>
<p>snmp-server community <1-16> tag <1-255 characters></p> <p>Allows you to configure a tag. This tag specifies a set of transport endpoints to which a command responder application sends an SNMP trap.</p> <p>Command mode: Global configuration</p>
<p>snmp-server community <1-16> user-name <1-32 characters></p> <p>Defines a readable string that represents the corresponding value of an SNMP community name in a security model.</p> <p>Command mode: Global configuration</p>
<p>no snmp-server community <1-16></p> <p>Deletes the community table entry.</p> <p>Command mode: Global configuration</p>
<p>show snmp-server v3 community <1-16></p> <p>Displays the community table configuration.</p> <p>Command mode: All</p>

SNMPv3 Target Address Table Configuration

These commands are used to configure the target transport entry. The configured entry is stored in the target address table list in the SNMP engine. This table of transport addresses is used in the generation of SNMP messages.

Table 166. Target Address Table Configuration Commands

Command Syntax and Usage
<p>snmp-server target-address <1-16> {address address6} <IP address> name <1-32 characters></p> <p>Allows you to configure the locally arbitrary, but unique identifier, target address name associated with this entry.</p> <p>Command mode: Global configuration</p>
<p>snmp-server target-address <1-16> name <1-32 characters> {address address6} <transport IP address></p> <p>Configures a transport IPv4/IPv6 address that can be used in the generation of SNMP traps.</p> <p>Note: IPv6 addresses are not displayed in the configuration, but they do receive traps.</p> <p>Command mode: Global configuration</p>
<p>snmp-server target-address <1-16> parameters-name <1-32 characters></p> <p>Defines the name as defined in the following command on page 334: snmp-server target-parameters <1-16> name <1-32 characters></p> <p>Command mode: Global configuration</p>
<p>snmp-server target-address <1-16> port <port number></p> <p>Allows you to configure a transport address port that can be used in the generation of SNMP traps.</p> <p>Command mode: Global configuration</p>
<p>snmp-server target-address <1-16> taglist <1-255 characters></p> <p>Allows you to configure a list of tags that are used to select target addresses for a particular operation.</p> <p>Command mode: Global configuration</p>
<p>no snmp-server target-address <1-16></p> <p>Deletes the Target Address Table entry.</p> <p>Command mode: Global configuration</p>
<p>show snmp-server v3 target-address <1-16></p> <p>Displays the current Target Address Table configuration.</p> <p>Command mode: All</p>

SNMPv3 Target Parameters Table Configuration

You can configure the target parameters entry and store it in the target parameters table in the SNMP engine. This table contains parameters that are used to generate a message. The parameters include the message processing model (for example: SNMPv3, SNMPv2c, SNMPv1), the security model (for example: USM), the security name, and the security level (`noAuthNoPriv`, `authNoPriv`, or `authPriv`).

Table 167. Target Parameters Table Configuration Commands

Command Syntax and Usage
<p>snmp-server target-parameters <1-16> level {noAuthNoPriv authNoPriv authPriv}</p> <p>Allows you to select the level of security to be used when generating the SNMP messages using this entry. The level <code>noAuthNoPriv</code> means that the SNMP message will be sent without authentication and without using a privacy protocol. The level <code>authNoPriv</code> means that the SNMP message will be sent with authentication but without using a privacy protocol. The <code>authPriv</code> means that the SNMP message will be sent both with authentication and using a privacy protocol.</p> <p>Command mode: Global configuration</p>
<p>snmp-server target-parameters <1-16> message {snmpv1 snmpv2c snmpv3}</p> <p>Allows you to configure the message processing model that is used to generate SNMP messages.</p> <p>Command mode: Global configuration</p>
<p>snmp-server target-parameters <1-16> name <1-32 characters></p> <p>Allows you to configure the locally arbitrary, but unique, identifier that is associated with this entry.</p> <p>Command mode: Global configuration</p>
<p>snmp-server target-parameters <1-16> security {usm snmpv1 snmpv2}</p> <p>Allows you to select the security model to be used when generating the SNMP messages.</p> <p>Command mode: Global configuration</p>
<p>snmp-server target-parameters <1-16> user-name <1-32 characters></p> <p>Defines the name that identifies the user in the USM table (page 328) on whose behalf the SNMP messages are generated using this entry.</p> <p>Command mode: Global configuration</p>

Table 167. *Target Parameters Table Configuration Commands (continued)*

Command Syntax and Usage
no snmp-server target-parameters <1-16> Deletes the targetParamsTable entry. Command mode: Global configuration
show snmp-server v3 target-parameters <1-16> Displays the current targetParamsTable configuration. Command mode: All

SNMPv3 Notify Table Configuration

SNMPv3 uses Notification Originator to send out traps. A notification typically monitors a system for particular events or conditions, and generates Notification-Class messages based on these events or conditions.

Table 168. *Notify Table Commands*

Command Syntax and Usage
snmp-server notify <1-16> name <1-32 characters> Defines a locally arbitrary, but unique, identifier associated with this SNMP notify entry. Command mode: Global configuration
snmp-server notify <1-16> tag <1-255 characters> Allows you to configure a tag that contains a tag value which is used to select entries in the Target Address Table. Any entry in the snmpTargetAddrTable that matches the value of this tag is selected. Command mode: Global configuration
no snmp-server notify <1-16> Deletes the notify table entry. Command mode: Global configuration
show snmp-server v3 notify <1-16> Displays the current notify table configuration. Command mode: All

System Access Configuration

The following table describes system access configuration commands.

Table 169. *System Access Configuration Commands*

Command Syntax and Usage
<p>[no] access http enable</p> <p>Enables or disables HTTP (Web) access to the Browser-Based Interface. The default settings is disabled.</p> <p>Command mode: Global configuration</p>
<p>[default] access http port [<port number>]</p> <p>Sets the switch port used for serving switch Web content. The default setting is HTTP port 80.</p> <p>Command mode: Global configuration</p>
<p>[no] access snmp {read-only read-write}</p> <p>Enables or disables read-only/write-read SNMP access.</p> <p>Command mode: Global configuration</p>
<p>[no] access telnet enable</p> <p>Enables or disables Telnet access. The default settings is disabled.</p> <p>Command mode: Global configuration</p>
<p>[default] access telnet port [<1-65535>]</p> <p>Sets an optional Telnet server port number for cases where the server listens for Telnet sessions on a non-standard port.</p> <p>Command mode: Global configuration</p>
<p>[default] access tftp-port [<1-65535>]</p> <p>Sets the TFTP port for the switch. The default is port 69.</p> <p>Command mode: Global configuration</p>
<p>[no] access tsbbi enable</p> <p>Enables or disables Telnet/SSH configuration through the Browser-Based Interface (BBI).</p> <p>Command mode: Global configuration</p>

Table 169. *System Access Configuration Commands (continued)*

<p>Command Syntax and Usage</p>
<p>access user administrator-password</p> <p>Sets the administrator (<code>admin</code>) password. The administrator has complete access to all menus, information, and configuration commands on the CN4093, including the ability to change both the user and administrator passwords.</p> <p>This command will prompt for required information: current admin password, new password (up to 128 characters) and confirmation of the new password.</p> <p>Access includes “oper” functions.</p> <p>Note: You cannot disable the administrator password.</p> <p>Command Mode: Global configuration</p>
<p>access user operator-password</p> <p>Sets the operator (<code>oper</code>) password. The operator manages all functions of the switch. The operator can view all switch information and statistics and can reset ports.</p> <p>This command will prompt for required information: current admin password, new password (up to 128 characters) and confirmation of the new password.</p> <p>Note: To disable the operator account, set the password to null (no password). The default setting is <code>disabled</code> (no password).</p> <p>Command Mode: Global configuration</p>
<p>access user user-password</p> <p>Sets the user (<code>user</code>) password. The user has no direct responsibility for switch management. The user view switch status information and statistics, but cannot make any configuration changes.</p> <p>This command will prompt for required information: current admin password, new password (up to 128 characters) and confirmation of the new password.</p> <p>Note: To disable the user account, set the password to null (no password).</p> <p>Command Mode: Global configuration</p>
<p>[no] access userbbi enable</p> <p>Enables or disables user configuration access through the Browser-Based Interface (BBI).</p> <p>Command mode: Global configuration</p>
<p>show access</p> <p>Displays the current system access parameters.</p> <p>Command mode: All</p>

Management Network Configuration

These commands are used to define IP address ranges which are allowed to access the switch for management purposes.

Table 170. Management Network Configuration Commands

Command Syntax and Usage
<p>[no] access management-network <mgmt network IPv4 or IPv6 address> <mgmt network mask or prefix length></p> <p>Adds or removes a defined network through which switch access is allowed through Telnet, SNMP, RIP, or the Enterprise NOS browser-based interface. A range of IP addresses is produced when used with a network mask address. Specify an IP address and mask address in dotted-decimal notation.</p> <p>Note: If you configure the management network without including the switch interfaces, the configuration causes the Firewall Load Balancing health checks to fail and creates a “Network Down” state on the network.</p> <p>Command mode: Global configuration</p>
<p>access management-network <mgmt network IPv4 address> <mgmt network mask> {snmp-ro snmp-rw}</p> <p>Adds a defined IPv4 network through which SNMP read-only or SNMP read/write switch access is allowed. Specify an IP address and mask address in dotted-decimal notation.</p> <p>Command mode: Global configuration</p>
<p>no access management-network {snmp-ro snmp-rw}</p> <p>Clears the IPv4 SNMP read-only or SNMP read/write access control list for management purposes.</p> <p>Command mode: Global configuration</p>
<p>access management-network6 <mgmt network IPv6 address> <IPv6 prefix length> {snmp-ro snmp-rw}</p> <p>Adds a defined IPv6 network through which SNMP read-only or SNMP read/write switch access is allowed.</p> <p>Command mode: Global configuration</p>
<p>no access management-network6 {snmp-ro snmp-rw}</p> <p>Clears the IPv6 SNMP read-only or SNMP read/write access control list for management purposes.</p> <p>Command mode: Global configuration</p>
<p>show access management-network</p> <p>Displays the current management network configuration and SNMP access management IP list.</p> <p>Command mode: All</p>
<p>clear access management-network</p> <p>Removes all defined management networks.</p> <p>Command mode: All except User EXEC</p>

User Access Control Configuration

The following table describes user-access control commands.

Passwords can be a maximum of 128 characters.

Table 171. *User Access Control Configuration Commands*

Command Syntax and Usage
<p>access user <1-20></p> <p>Configures the User ID.</p> <p>Command mode: Global configuration</p>
<p>[no] access user administrator-enable</p> <p>Enables or disables the default administrator account.</p> <p>Command mode: Global configuration</p>
<p>access user administrator-password <1-128 characters></p> <p>Sets the administrator (admin) password. The super user administrator has complete access to all information and configuration commands on the CN4093, including the ability to change both the user and administrator passwords.</p> <p>Note: Access includes “oper” functions.</p> <p>Command mode: Global configuration</p>
<p>access user operator-password <1-128 characters></p> <p>Sets the operator (oper) password. The operator manages all functions of the switch. He or she can view all switch information and statistics and can reset ports.</p> <p>Command mode: Global configuration</p>
<p>access user user-password <1-128 characters></p> <p>Sets the user (user) password. The user has no direct responsibility for switch management. He or she can view switch status information and statistics, but cannot make any configuration changes.</p> <p>Command mode: Global configuration</p>
<p>access user eject {<user name> <session ID>}</p> <p>Ejects the specified user from the CN4093.</p> <p>Command mode: Global configuration</p>
<p>clear line <1-12></p> <p>Ejects the user with the corresponding session ID from the CN4093.</p> <p>Command mode: All except User EXEC</p>
<p>show access user</p> <p>Displays the current user status.</p> <p>Command mode: All</p>

System User ID Configuration

The following table describes user ID configuration commands.

Table 172. *User ID Configuration Commands*

Command Syntax and Usage
<p>[no] access user <1-20> enable Enables or disables the user ID. Command mode: Global configuration</p>
<p>access user <1-20> level {user operator administrator} Sets the Class-of-Service to define the user's authority level. Enterprise NOS defines these levels as: User, Operator, and Administrator, with User being the most restricted level. Command mode: Global configuration</p>
<p>access user <1-20> name <1-8 characters> Defines the user name of maximum eight characters. Command mode: Global configuration</p>
<p>access user <1-20> password Sets the user (user) password. This command will prompt for required information: current admin password, new password (up to 128 characters) and confirmation of the new password. Command mode: Global configuration</p>
<p>no access user <1-20> Deletes the user ID. Command mode: Global configuration</p>
<p>show access user Displays the current user ID configuration. Command mode: All</p>

Strong Password Configuration

The following table describes strong password configuration commands.

Table 173. *Strong Password Configuration Commands*

Command Syntax and Usage
<p>[no] access user strong-password enable Enables or disables Strong Password requirement. Command mode: Global configuration</p>
<p>access user strong-password clear local user {lockout fail-attempts} {<username> all} Enables locked out accounts or resets failed login counters for all users or for a specific user. Command mode: Global configuration</p>
<p>access user strong-password expiry <1-365> Configures the number of days allowed before the password must be changed. The default value is 60. Command mode: Global configuration</p>
<p>access user strong-password faillock <1-10> Configures the number of failed login attempts that trigger the account lockout. The default value is 6. Command mode: Global configuration</p>
<p>access user strong-password faillog <1-255> Configures the number of failed login attempts allowed before a security notification is logged. The default value is 3. Command mode: Global configuration</p>
<p>[no] access user strong-password lockout Enables or disables account lockout after a specified number of failed login attempts. The default setting is disabled. Command mode: Global configuration</p>

Table 173. *Strong Password Configuration Commands*

Command Syntax and Usage
access user strong-password warning <1-365> Configures the number of days before password expiration, that a warning is issued to users. The default value is 15. Command mode: Global configuration
show access user strong-password Displays the current Strong Password configuration. Command mode: All

HTTPS Access Configuration

The following table describes HTTPS access configuration commands.

Table 174. *HTTPS Access Configuration Commands*

Command Syntax and Usage
[no] access https enable Enables or disables BBI access (Web access) using HTTPS. The default setting is enabled. Command mode: Global configuration
access https generate-certificate Allows you to generate a certificate to connect to the SSL to be used during the key exchange. A default certificate is created when HTTPS is enabled for the first time. The user can create a new certificate defining the information that they want to be used in the various fields. For example: <ul style="list-style-type: none">o Country Name (2 letter code): CAo State or Province Name (full name): Ontarioo Locality Name (for example, city): Ottawao Organization Name (for example, company): Lenovoo Organizational Unit Name (for example, section): Operationso Common Name (for example, user's name): Mr Smitho Email (for example, email address): info@lenovo.com You will be asked to confirm if you want to generate the certificate. It will take approximately 30 seconds to generate the certificate. Then the switch will restart SSL agent. Command mode: Global configuration

Table 174. *HTTPS Access Configuration Commands*

Command Syntax and Usage
<p>access https generate-csr</p> <p>Allows you to generate a CSR (Certificate Signing Request) to connect to the SSL to be used during the key exchange. A default certificate is created when HTTPS is enabled for the first time. The user can create a new certificate defining the information that they want to be used in the various fields. For example:</p> <ul style="list-style-type: none">o Country Name (2 letter code): CAo State or Province Name (full name): Ontarioo Locality Name (for example, city): Ottawao Organization Name (for example, company): Lenovoo Organizational Unit Name (for example, section): Operationso Common Name (for example, user's name): Mr Smitho Email (for example, email address): info@lenovo.com <p>Unlike the generate-certificate command, this command will generate a certificate request that needs to be signed by a certificate authority (CA) recognized by both parties.</p> <p>Command mode: Global configuration</p>
<p>[default] access https port [<i><TCP port number></i>]</p> <p>Defines the HTTPS Web server port number.</p> <p>The default port is 443.</p> <p>Command mode: Global configuration</p>
<p>access https save-certificate</p> <p>Allows the client, or the Web browser, to accept the certificate and save the certificate to Flash to be used when the switch is rebooted.</p> <p>Command mode: Global configuration</p>
<p>copy cert-request {tftp ftp sftp} address <i><hostname or server IP address></i> filename <i><server-filename></i> [data-port mgt-port extm-port]</p> <p>Enables you to export a CSR to an external server using TFTP/SFTP/FTP.</p> <p>Command mode: Global configuration</p>
<p>show https host-csr pem-format</p> <p>Displays the generated CSR in PEM format.</p> <p>Command mode: Privileged EXEC</p>

Table 174. *HTTPS Access Configuration Commands*

Command Syntax and Usage
show https host-csr txt-format Displays the generated CSR in TXT format. Command mode: Privileged EXEC
show access Displays the current SSL Web Access configuration. Command mode: All

Custom Daylight Saving Time Configuration

Use these commands to configure custom Daylight Saving Time. The DST is defined by two rules, the start rule and end rule. The rules specify the dates when the DST starts and finishes. These dates are represented as specific calendar dates or as relative offsets in a month (for example, 'the second Sunday of September').

Relative offset example:

2070901 = Second Sunday of September, at 1:00 a.m.

Calendar date example:

0070901 = September 7, at 1:00 a.m.

Table 175. *Custom DST Configuration Commands*

Command Syntax and Usage
<p>[no] system custom-dst enable</p> <p>Enables or disables the Custom Daylight Saving Time settings.</p> <p>Command mode: Global configuration</p>
<p>system custom-dst start-rule <WDDMMhh></p> <p>Configures the start date for custom DST, as follows:</p> <p>WDDMMhh</p> <p>W = week (0-5, where 0 means use the calendar date)</p> <p>D = day of the week (01-07, where 01 is Monday)</p> <p>MM = month (1-12)</p> <p>hh = hour (0-23)</p> <p>Note: Week 5 is always considered to be the last week of the month.</p> <p>Command mode: Global configuration</p>
<p>system custom-dst end-rule <WDDMMhh></p> <p>Configures the end date for custom DST, as follows:</p> <p>WDDMMhh</p> <p>W = week (0-5, where 0 means use the calendar date)</p> <p>D = day of the week (01-07, where 01 is Monday)</p> <p>MM = month (1-12)</p> <p>hh = hour (0-23)</p> <p>Note: Week 5 is always considered to be the last week of the month.</p> <p>Command mode: Global configuration</p>
<p>show custom-dst</p> <p>Displays the current Custom DST configuration.</p> <p>Command mode: All</p>

sFlow Configuration

Enterprise NOS supports sFlow version 5. sFlow is a sampling method used for monitoring high speed switched networks. Use these commands to configure the sFlow agent on the switch.

Table 176. *sFlow Configuration Commands*

Command Syntax and Usage
[no] sflow enable Enables or disables the sFlow agent. Command mode: Global configuration
sflow port <1-65535> Configures the UDP port for the sFlow server. The default value is 6343. Command mode: Global configuration
sflow server <IP address> Defines the sFlow server address. Command mode: Global configuration
show sflow Displays sFlow configuration parameters. Command mode: All

sFlow Port Configuration

Use the following commands to configure the sFlow port on the switch.

Table 177. *sFlow Port Configuration Commands*

Command Syntax and Usage
[no] sflow polling <5-60> Configures the sFlow polling interval, in seconds. The default setting is disabled. Command mode: Interface port
[no] sflow sampling <256-65536> Configures the sFlow sampling rate, in packets per sample. The default setting is disabled. Command mode: Interface port

Port Configuration

Use the Port Configuration commands to configure settings for switch ports (INTx) and (EXTx). If you are configuring management ports (MGT1), see [“Management Port Configuration” on page 359](#).

Table 178. *Port Configuration Commands*

Command Syntax and Usage
<p>interface port <port alias or number> Enter Interface port mode. Command mode: Global configuration</p>
<p>[no] bpdu-guard Enables or disables BPDU guard, to avoid spanning-tree loops on ports with Port Fast Forwarding enabled. Command mode: Interface port</p>
<p>description <1-64 characters> Sets a description for the port. The assigned port name appears next to the port description on some information and statistics screens. The default is set to the port number. Command mode: Interface port</p>
<p>dot1p <0-7> Configures the port's 802.1p priority level. Command mode: Interface port</p>
<p>[no] dscp-marking Enables or disables DSCP re-marking on a port. Command mode: Interface port</p>
<p>[no] flood-blocking Enables or disables port Flood Blocking. When enabled, unicast and multicast packets with unknown destination MAC addresses are blocked from the port. Command mode: Interface port</p>
<p>ip dhcp snooping limit rate <1-2048> Configures the maximum number of DHCP packets allowed per second. Command mode: Interface port</p>
<p>no ip dhcp snooping limit rate Unlimits the maximum number of DHCP packets allowed per second. Command mode: Interface port</p>

Table 178. Port Configuration Commands (continued)

Command Syntax and Usage
[no] ip dhcp snooping trust Configures this port as a trusted port for DHCP packets from the server. Command mode: Interface port
[no] learning Enables or disables FDB learning on the port. Command mode: Interface port
port-channel min-links <1-16> Set the minimum number of links for the LACP LAG to which this port belongs. If the specified minimum number of ports are not available, the LAG is placed in the down state. Command mode: Interface port
[no] reflective-relay force Enables or disables constraint to always keep reflective relay active. The default setting is disabled. Command mode: Interface port
[no] rmon Enables or disables Remote Monitoring for the port. RMON must be enabled for any RMON configurations to function. Command mode: Interface port
shutdown Disables the port. (To temporarily disable a port without changing its configuration attributes, refer to “Temporarily Disabling a Port” on page 353.) Command mode: Interface port
no shutdown Enables the port. Command mode: Interface port
[no] storm-control broadcast level rate <0-2097151> Limits the number of broadcast packets per second to the specified value. If disabled, the port forwards all broadcast packets. Command mode: Interface port
[no] storm-control multicast level rate <0-2097151> Limits the number of multicast packets per second to the specified value. If disabled, the port forwards all multicast packets. Command mode: Interface port

Table 178. Port Configuration Commands (continued)

<p>Command Syntax and Usage</p>
<p>[no] storm-control unicast level rate <0-2097151></p> <p>Limits the number of unknown unicast packets per second to the specified value. If disabled, the port forwards all unknown unicast packets.</p> <p>Command mode: Interface port</p>
<p>switchport mode {access trunk private-vlan}</p> <p>Configures the port's trunking mode:</p> <ul style="list-style-type: none"> o access allows association to a single VLAN o trunk automatically adds the port to all created VLANs. To configure a specific allowed VLAN range for the port use the command: switchport trunk allowed vlan o private-vlan allows association to a private VLAN <p>The default mode is access.</p> <p>Note: When switching from access to trunk mode, the port inherits the access VLAN as the trunk Native-VLAN.</p> <p>Note: When switching from trunk to access mode, the port inherits the trunk Native-VLAN as the access VLAN.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>switchport trunk allowed vlan <VLAN ID range></p> <p>Configures the allowed VLANs in trunk mode for the current port or portchannel. If the allowed range does not have any existing VLANs, the lowest-numbered VLAN is created and becomes the Native-VLAN. If the allowed range contains an existing VLAN(s), but the Native-VLAN is not in the allowed range, the Native-VLAN is changed to the lowest-numbered existing VLAN. If a new VLAN is created and it is part of the allowed VLAN range, the port will also be added to that VLAN.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>switchport trunk allowed vlan {add remove} <VLAN ID range></p> <p>Updates the associated VLANs in trunk mode.</p> <ul style="list-style-type: none"> o add enables the VLAN range in addition to the current configuration. If any VLAN in the range does not exist, it will not be created and enabled automatically. o remove eliminates the VLAN range from the current configuration. <p>Command mode: Interface port/Interface portchannel</p>
<p>switchport trunk allowed vlan {all none}</p> <p>Updates the associated VLANs in trunk mode.</p> <ul style="list-style-type: none"> o all associates the port to all existing regular VLANs and to any other VLAN that gets created afterwards. o none removes the port from all currently associated VLANs and assigns the port to the default Native-VLAN (VLAN 1 for data ports). <p>Command mode: Interface port/Interface portchannel</p>

Table 178. Port Configuration Commands (continued)

Command Syntax and Usage
<p>no switchport trunk allowed vlan</p> <p>Assigns the port to all available data VLANs.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>switchport trunk native vlan <1-4094></p> <p>Configures the Port VLAN ID (PVID) or Native-VLAN used to carry untagged traffic in trunk mode. If the VLAN does not exist, it will be created and enabled automatically.</p> <p>Default value is 1 for data ports and 4095 for the management port.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>switchport access vlan <1-4094></p> <p>Configures the associated VLAN used in access mode. If the VLAN does not exist, it will be created and enabled automatically.</p> <p>Default value is 1 for data ports and 4095 for the management port.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>no switchport access vlan</p> <p>Resets the access VLAN to its default value.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>[no] switchport private-vlan mapping <primary VLAN></p> <p>Enables or disables a private VLAN promiscuous port to/from a primary VLAN.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>[no] switchport private-vlan host-association <primary VLAN> <secondary VLAN></p> <p>Adds or removes a private VLAN host port to/from a secondary VLAN.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>[no] tagpvid-ingress</p> <p>Enables or disables tagging the ingress frames with the port's VLAN ID. When enabled, the PVID tag is inserted into untagged and 802.1Q single-tagged ingress frames as outer VLAN ID.</p> <p>The default setting is disabled.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>unicast-bandwidth <10-100></p> <p>Configures the allocated bandwidth percentage for unicast traffic on the port. The remaining bandwidth is automatically allocated to multicast traffic.</p> <p>The default value is 50.</p> <p>Command mode: Interface port</p>

Table 178. Port Configuration Commands (continued)

Command Syntax and Usage
<p>unicast-bandwidth global <10-100></p> <p>Configures the allocated bandwidth percentage for unicast traffic on the egress ports. The remaining bandwidth is automatically allocated to multicast traffic.</p> <p>The default value is 50.</p> <p>Note: This applies to all ports.</p> <p>Command mode: Interface port</p>
<p>[no] vlan dot1q tag native</p> <p>Enables or disables VLAN tag persistence. When disabled, the VLAN tag is removed at egress from packets whose VLAN tag matches the port PVID/Native-vlan.</p> <p>The default setting is disabled.</p> <p>Note: In global configuration mode, this is an operational command used to set the VLAN tag persistence on all ports currently tagged at the moment of execution. VLAN tag persistence will not be set automatically for ports tagged afterward. Also, as an operational command, it will not be dumped into the configuration file.</p> <p>Command mode: Global configuration/Interface port/Interface portchannel</p>
<p>show interface port <port alias or number></p> <p>Displays current port parameters.</p> <p>Command mode: All</p>

Port Error Disable and Recovery Configuration

The Error Disable and Recovery feature allows the switch to automatically disable a port if an error condition is detected on the port. The port remains in the error-disabled state until it is re-enabled manually, or re-enabled automatically by the switch after a timeout period has elapsed. The error-disabled state of a port does not persist across a system reboot.

Table 179. *Port Error Disable Commands*

Command Syntax and Usage
<p>[no] errdisable link-flap enable</p> <p>Enables or disables Link Flap Dampening on the port. For more information, see “Link Flap Dampening Configuration” on page 307.</p> <p>Command mode: Interface port</p>
<p>[no] errdisable recovery</p> <p>Enables or disables automatic error-recovery for the port.</p> <p>The default setting is enabled.</p> <p>Note: Error-recovery must be enabled globally before port-level commands become active.</p> <p>Command mode: Interface port</p>
<p>show interface port <port alias or number> errdisable</p> <p>Displays current port Error Disable parameters.</p> <p>Command mode: All</p>

Port Link Configuration

Use these commands to set flow control for the port link.

Table 180. *Port Link Configuration Commands*

Command Syntax and Usage
[no] auto Enables or disables auto-negotiation on the port. Command mode: Interface port
duplex {full half auto} Sets the operating mode. The choices include: <ul style="list-style-type: none">– Auto negotiation (default)– Half-duplex– Full-duplex Command mode: Interface port
flowcontrol {receive send} {on off} Enables or disables flow control receive or transmit. Note: For external ports (EXTx) the default setting is <code>no flow control</code> , and for internal ports (INTx) the default setting is both receive and transmit. Command mode: Interface port
speed {1000 10000 auto} Sets the link speed. Some options are not valid on all ports. The choices include: <ul style="list-style-type: none">– 1000 Mbps– 10000 Mbps– any (auto negotiate port speed) Command mode: Interface port
show interface port <port alias or number> Displays current port parameters. Command mode: All

Temporarily Disabling a Port

To temporarily disable a port without changing its stored configuration attributes, enter the following command at any prompt:

```
CN 4093# interface port <port alias or number> shutdown
```

Because this configuration sets a temporary state for the port, you do not need to use a save operation. The port state will revert to its original configuration when the CN4093 10 Gb Converged Scalable Switch is reset. See the [“Operations Commands” on page 575](#) for other operations-level commands.

Unidirectional Link Detection Configuration

UDLD commands are described in the following table.

Table 181. *Port UDLD Configuration Commands*

Command Syntax and Usage
<p>[no] udld</p> <p>Enables or disables UDLD on the port.</p> <p>Command mode: Interface port</p>
<p>[no] udld aggressive</p> <p>Configures the UDLD mode for the selected port, as follows:</p> <ul style="list-style-type: none">o Normal: Detect unidirectional links that have mis-connected interfaces. The port is disabled if UDLD determines that the port is mis-connected. Use the "no" form to select normal operation.o Aggressive: In addition to the normal mode, the aggressive mode disables the port if the neighbor stops sending UDLD probes for 7 seconds. <p>Command mode: Interface port</p>
<p>show interface port <port number> udld</p> <p>Displays current port UDLD parameters.</p> <p>Command mode: All</p>

Port OAM Configuration

Operation, Administration, and Maintenance (OAM) protocol allows the switch to detect faults on the physical port links. OAM is described in the IEEE 802.3ah standard. OAM Discovery commands are described in the following table.

Table 182. *Port OAM Configuration Commands*

Command Syntax and Usage
oam [passive] Configures the OAM discovery mode, as follows: <ul style="list-style-type: none">o Passive: This port allows its peer link to initiate OAM discovery. If OAM determines that the port is in an anomalous condition, the port is disabled. Command mode: Interface port
no oam [passive] Disables OAM discovery on the port. Command mode: Interface port
show interface port <port number> oam Displays current port OAM parameters. Command mode: All

Port ACL Configuration

The following table describes port ACL configuration commands.

Table 183. *Port ACL/QoS Configuration Commands*

Command Syntax and Usage
<p>[no] access-control group <1-640> Adds or removes the specified ACL group. You can add multiple ACL groups to a port. Command mode: Interface port</p>
<p>[no] access-control list <1-640> Adds or removes the specified ACL. You can add multiple ACLs to a port. Command mode: Interface port</p>
<p>[no] access-control list6 <1-128> Adds or removes the specified IPv6 ACL. You can add multiple ACLs to a port. Command mode: Interface port</p>
<p>show interface port <port alias or number> access-control Displays current ACL QoS parameters. Command mode: All</p>

Port WRED Configuration

These commands allow you to configure Weighted Random Early Detection (WRED) parameters for a selected port. For global WRED configuration, see [“Weighted Random Early Detection Configuration” on page 367](#).

Table 184. *Port WRED Options*

Command Syntax and Usage
<p>[no] random-detect ecn enable</p> <p>Enables or disables Explicit Congestion Notification (ECN). When ECN is enabled, the switch marks the ECN bit of the packet (if applicable) instead of dropping the packet. ECN-aware devices are notified of the congestion and those devices can take corrective actions.</p> <p>Note: ECN functions only on TCP traffic.</p> <p>Command mode: Interface port</p>
<p>[no] random-detect enable</p> <p>Enables or disables Random Detection and avoidance.</p> <p>Command mode: Interface port</p>
<p>show interface port <i><port alias or number></i> random-detect</p> <p>Displays current Random Detection and avoidance parameters.</p> <p>Command mode: All</p>

Port WRED Transmit Queue Configuration

Use this menu to define WRED thresholds for the port's transmit queues. Set each threshold between 1% and 100%. When the average queue size grows beyond the minimum threshold, packets begin to be dropped. When the average queue size reaches the maximum threshold, all packets are dropped. The probability of packet-drop between the thresholds is defined by the drop rate.

Table 185. Port WRED Transmit Queue Options

Command Syntax and Usage
[no] random-detect transmit-queue <0-7> enable Sets the WRED transmit queue configuration to on or off. Command mode: Interface port
[no] random-detect transmit-queue <0-7> tcp <min. threshold (1-100)> <max. threshold (1-100)> <drop rate (1-100)> Configures the WRED thresholds for TCP traffic. Note: Use the no form to clear the WRED threshold value. Command mode: Interface port
[no] random-detect transmit-queue <0-7> non-tcp <min. threshold (1-100)> <max. threshold (1-100)> <drop rate (1-100)> Configures the WRED thresholds for non-TCP traffic. Note: Use the no form to clear the WRED threshold value. Command mode: Interface port

Management Port Configuration

You can use these commands to set port parameters for management ports (MGT1 and EXTM). Use these commands to set port parameters for the port link. For MGT1, only LLDP settings are configurable.

Table 186. *Management Port Configuration Commands*

Command Syntax and Usage
<p>[no] auto Enables or disables auto-negotiation on the port. Command mode: Interface port</p>
<p>duplex {full half auto} Sets the operating mode. The choices include: <ul style="list-style-type: none"> – Full-duplex – Half-duplex – Auto – for auto negotiation (default) Command mode: Interface port</p>
<p>flowcontrol {receive send} {on off} Activates or deactivates one type of flow control. The choices include: <ul style="list-style-type: none"> – Receive flow control – Transmit flow control Command mode: Interface port</p>
<p>shutdown Disables the port. Command mode: Interface port</p>
<p>no shutdown Enables the port. Command mode: Interface port</p>
<p>speed {10 100 1000 auto} Sets the link speed. The choices include: <ul style="list-style-type: none"> – 10 Mbps – 100 Mbps – 1000 Mbps – Auto – for auto negotiation Command mode: Interface port</p>
<p>show interface port <port alias or number> Displays current port parameters. Command mode: All</p>

Stacking Configuration

A *stack* is a group of switches that work together as a unified system. The network views a stack of switches as a single entity, identified by a single network IP address. The Stacking Configuration menu is used to configure a stack, and to define the Backup switch.

The Stacking Configuration menu is available only after Stacking is enabled and the switch is reset. For more information, see [“Stacking Boot Options” on page 590](#).

Table 187. *Stacking Commands*

Command Syntax and Usage
connect <attached switch number (1-16)> Provides console access to member switches from the master switch. Command mode: Privileged EXEC
[no] stack backup <csnum (1-8)> Defines the backup switch in the stack, based on its configured switch number (csnum). Command mode: Global configuration
[no] stack name <1-63 characters> Defines a name for the stack. Command mode: Global configuration
show stack switch-number <csnum (1-8)> Displays UUID and slot ID for all the configured switches from the stack. Command mode: All

Stacking Switch Configuration

The following table describes stacking switch configuration commands.

Table 188. *Stacking Switch Commands*

Command Syntax and Usage
<p>stack switch-number <csnum (1-8)> bay <1-4></p> <p>Binds the selected switch to the stack, based on its bay number in the chassis. You also must enter the UUID to specify the chassis in which the switch resides.</p> <p>Command mode: Global configuration</p>
<p>stack switch-number <csnum (1-8)> bind <asnum (1-16)></p> <p>Binds the selected switch to the stack, based on its attached switch number (asnum).</p> <p>Command mode: Global configuration</p>
<p>stack switch-number <csnum (1-8)> description <1-63 characters></p> <p>Defines a description for each configured switch number of the stack.</p> <p>Command mode: Global configuration</p>
<p>stack switch-number <csnum (1-8)> universal-unic-id <UUID></p> <p>Binds the selected switch to the stack, based on the UUID of the chassis in which the switch resides. You also must enter the bay number to specify a switch within the chassis. Following is an example UUID: uuid 49407441b1a511d7b95df58f4b6f99fe</p> <p>Command mode: Global configuration</p>
<p>no stack switch-number <csnum (1-8)></p> <p>Deletes the selected switch from the stack.</p> <p>Command mode: Global configuration</p>

Management Interface Configuration

To provide continuous Management IP reachability in the event of a Master node failover, an additional floating Management IP address can be set up on the management IP interface. The floating Management IP address will be used by the backup switch when taking over management from the failed master node.

To configure the floating Management IP address, use the following commands:

Table 189. *Management Interface Options*

Command Syntax and Usage
floating ip address <IP address> [<IP netmask>] Configures the specified IPv4 address as a floating Management IP address. Command mode: Interface IP
floating ip netmask <IP netmask> Configures the floating IP subnet mask address. Command mode: Interface IP
no floating Removes all floating IP addresses. Command mode: Interface IP
show interface ip Displays current IP address floating information. Command mode: Global configuration

Quality of Service Configuration

Quality of Service (QoS) commands configure the 802.1p priority value and DiffServ Code Point value of incoming packets. This allows you to differentiate between various types of traffic, and provide different priority levels.

802.1p Configuration

This feature provides the CN4093 the capability to filter IP packets based on the 802.1p bits in the packet's VLAN header. The 802.1p bits specify the priority that you should give to the packets while forwarding them. The packets with a higher (non-zero) priority bits are given forwarding preference over packets with numerically lower priority bits value.

Table 190. 802.1p Configuration Commands

Command Syntax and Usage
<p>qos transmit-queue mapping <priority (0-7)> <COSq number></p> <p>Maps the 802.1p priority of to the Class of Service queue (COSq) priority. Enter the 802.1p priority value (0-7), followed by the Class of Service queue that handles the matching traffic.</p> <p>Command mode: Global configuration</p>
<p>qos transmit-queue weight-cos <COSq number> <weight (0-15)></p> <p>Configures the weight of the selected Class of Service queue (COSq). Enter the queue number (0-1), followed by the scheduling weight (0-15).</p> <p>Command mode: Global configuration</p>
<p>qos unicast-bandwidth <10-100></p> <p>Configures the allocated bandwidth percentage for unicast traffic on the egress ports. The remaining bandwidth is automatically allocated to multicast traffic.</p> <p>The default value is 50.</p> <p>Note: This applies to all ports.</p> <p>Command mode: All</p>
<p>show qos transmit-queue</p> <p>Displays the current 802.1p parameters.</p> <p>Command mode: All</p>

DSCP Configuration

These commands map the DiffServ Code Point (DSCP) value of incoming packets to a new value or to an 802.1p priority value.

Table 191. *DSCP Configuration Commands*

Command Syntax and Usage
<p>qos dscp dot1p-mapping <DSCP (0-63)> <priority (0-7)></p> <p>Maps the DiffServ Code point value to an 802.1p priority value. Enter the DSCP value, followed by the corresponding 802.1p value.</p> <p>Command mode: Global configuration</p>
<p>qos dscp dscp-mapping <DSCP (0-63)> <new DSCP (0-63)></p> <p>Maps the initial DiffServ Code Point (DSCP) value to a new value. Enter the DSCP value (0-63) of incoming packets, followed by the new value.</p> <p>Command mode: Global configuration</p>
<p>[no] qos dscp re-marking</p> <p>Enables or disables DSCP re-marking globally.</p> <p>Command mode: Global configuration</p>
<p>show qos dscp</p> <p>Displays the current DSCP parameters.</p> <p>Command mode: All</p>

Control Plane Protection

To prevent switch instability if the switch is unable to process a high rate of control-plane traffic, the switch now supports CoPP. CoPP, allows you to assign control-plane traffic protocols to one of 48 queues, and can set bandwidth limits for each queue.

Table 192. *CoPP Commands*

Command Syntax and Usage
<p>qos protocol-packet-control packet-queue-map <i><packet queue number (0-47)> <packet type></i></p> <p>Configures a packet type to associate with each packet queue number. Enter a queue number, followed by the packet type. You may map multiple packet types to a single queue. The following packet types are allowed:</p> <ul style="list-style-type: none"> – 802.1x (IEEE 802.1x packets) – application-cri-packets (critical packets of various applications, such as Telnet, SSH) – arp-bcast (ARP broadcast packets) – arp-ucast (ARP unicast reply packets) – bgp (BGP packets) – bpdu (Spanning Tree Protocol packets) – cisco-bpdu (Cisco STP packets) – dest-unknown (packets with destination not yet learned) – dhcp (DHCP packets) – ecp (ECP packets) – fips (FIPS packets) – icmp (ICMP packets) – icmp6 (ICMPv6 packets) – igmp (IGMP packets) – ipv4-miscellaneous (IPv4 packets with IP options and TTL exception) – ipv6-nd (IPv6 Neighbor Discovery packets) – lACP (LACP/Link Aggregation protocol packets) – lldp (LLDP packets) – ospf (OSPF packets) – ospf3 (OSPF3 Packets) – pim (PIM packets) – rip (RIP packets) – system (system protocols, such as tftp, ftp, telnet, ssh) – udld (UDLD packets) – vlag (vLAG packets) – vrrp (VRRP packets) <p>Command mode: Global configuration</p>
<p>no qos protocol-packet-control packet-queue-map <i><packet type></i></p> <p>Clears the selected packet type from its associated packet queue.</p> <p>Command mode: Global configuration</p>

Table 192. CoPP Commands

Command Syntax and Usage
<p>qos protocol-packet-control rate-limit-packet-queue <i><packet queue number (0-47)> <1-10000></i></p> <p>Configures the number of packets per second allowed for each packet queue.</p> <p>Command mode: Global configuration</p>
<p>no qos protocol-packet-control rate-limit-packet-queue <i><packet queue number (0-47)></i></p> <p>Clears the packet rate configured for the selected packet queue.</p> <p>Command mode: Global configuration</p>
<p>show qos protocol-packet-control information protocol</p> <p>Displays of mapping of protocol packet types to each packet queue number. The status indicates whether the protocol is running or not running.</p> <p>Command mode: All</p>
<p>show qos protocol-packet-control information queue</p> <p>Displays the packet rate configured for each packet queue.</p> <p>Command mode: All</p>

Weighted Random Early Detection Configuration

Weighted Random Early Detection (WRED) provides congestion avoidance by pre-emptively dropping packets before a queue becomes full. CN4093 implementation of WRED defines TCP and non-TCP traffic profiles on a per-port, per COS queue basis. For each port, you can define a transmit-queue profile with thresholds that define packet-drop probability.

These commands allow you to configure global WRED parameters. For port WRED commands, see [“Port WRED Configuration” on page 357](#).

Table 193. *WRED Configuration Options*

Command Syntax and Usage
<p>[no] qos random-detect ecn</p> <p>Enables or disables Explicit Congestion Notification (ECN). When ECN is enabled, the switch marks the ECN bit of the packet (if applicable) instead of dropping the packet. ECN-aware devices are notified of the congestion and those devices can take corrective actions.</p> <p>Note: ECN functions only on TCP traffic.</p> <p>Command mode: Global configuration</p>
<p>[no] qos random-detect enable</p> <p>Enables or disables Random Detection and avoidance.</p> <p>Command mode: Global configuration</p>
<p>show qos random-detect</p> <p>Displays current Random Detection and avoidance parameters.</p> <p>Command mode: All</p>

WRED Transmit Queue Configuration

The following table displays WRED Transmit Queue configuration commands.

Table 194. *WRED Transmit Queue Options*

Command Syntax and Usage
<p>[no] qos random-detect transmit-queue <0-7> enable</p> <p>Sets the WRED transmit queue configuration to on or off.</p> <p>Command mode: Global configuration</p>
<p>qos random-detect transmit-queue <0-7> tcp <min. threshold (1-100)> <max. threshold (1-100)> <drop rate (1-100)></p> <p>Configures the WRED thresholds for TCP traffic.</p> <p>Command mode: Global configuration</p>

Table 194. WRED Transmit Queue Options

Command Syntax and Usage
<p>qos random-detect transmit-queue <0-7> non-tcp <min. threshold (1-100)> <max. threshold (1-100)> <drop rate (1-100)> Configures the WRED thresholds for non-TCP traffic. Command mode: Global configuration</p>
<p>no qos random-detect transmit-queue <0-7> {tcp non-tcp} Clears the specified WRED threshold value. Command mode: Global configuration</p>

Access Control Configuration

Use these commands to create Access Control Lists and ACL Groups. ACLs define matching criteria used for IP filtering and Quality of Service functions.

For information about assigning ACLs to ports, see [“Port ACL Configuration” on page 356](#).

Table 195. *General ACL Configuration Commands*

Command Syntax and Usage
[no] access-control group <1-640> Configures an ACL Group. To view command options, see page 386 . Command mode: Global configuration
[no] access-control list <1-640> Configures an Access Control List. To view command options, see page 370 . Command mode: Global configuration
[no] access-control list6 <1-128> Configures an IPv6 Access Control List. To view command options, see page 375 . Command mode: Global configuration
show access-control Displays the current ACL parameters. Command mode: All

Access Control List Configuration

These commands allow you to define filtering criteria for each Access Control List (ACL).

Table 196. *ACL Configuration Commands*

Command Syntax and Usage
<p>access-control list <1-640> action {permit deny set-priority <0-7>}</p> <p>Configures a filter action for packets that match the ACL definitions. You can choose to permit (pass) or deny (drop) packets, or set the 802.1p priority level (0-7).</p> <p>Command mode: Global configuration</p>
<p>[no] access-control list <1-640> egress-port port <port alias or number></p> <p>Configures the ACL to function on egress packets.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control list <1-640> log</p> <p>Enables or disables logging for the Access Control List.</p> <p>Note: Enabling the LOG feature neutralizes ACL deny filter actions for Telnet and SSH traffic that is addressed to the switch's Layer 3 interfaces.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control list <1-640> statistics</p> <p>Enables or disables the statistics collection for the Access Control List.</p> <p>Command mode: Global configuration</p>
<p>default access-control list <1-640></p> <p>Resets the ACL parameters to their default values.</p> <p>Command mode: Global configuration</p>
<p>show access-control list <1-640></p> <p>Displays the current ACL parameters.</p> <p>Command mode: All</p>
<p>[no] access-control list6 <1-128></p> <p>Configures an IPv6 Access Control List. To view command options, see page 375.</p> <p>Command mode: Global configuration</p>

Ethernet Filtering Configuration

These commands allow you to define Ethernet matching criteria for an ACL.

Table 197. *Ethernet Filtering Configuration Commands*

Command Syntax and Usage
<p>[no] access-control list <1-640> ethernet destination-mac-address <MAC address> [<MAC mask>] Defines the destination MAC address for this ACL. Command mode: Global configuration</p>
<p>[no] access-control list <1-640> ethernet source-mac-address <MAC address> [<MAC mask>] Defines the source MAC address for this ACL. Command mode: Global configuration</p>
<p>[no] access-control list <1-640> ethernet ethernet-type {any arp ip ipv6 mpls rarp <other (0x600-0xFFFF)>} Defines the Ethernet type for this ACL. Command mode: Global configuration</p>
<p>[no] access-control list <1-640> ethernet vlan <VLAN ID> [<VLAN mask>] Defines a VLAN number and mask for this ACL. Command mode: Global configuration</p>
<p>[no] access-control list <1-640> ethernet priority <0-7> Defines the Ethernet priority value for the ACL. Command mode: Global configuration</p>
<p>default access-control list <1-640> ethernet Resets Ethernet parameters for the ACL to their default values. Command mode: Global configuration</p>
<p>no access-control list <1-640> ethernet Removes Ethernet parameters for the ACL. Command mode: Global configuration</p>
<p>show access-control list <1-640> ethernet Displays the current Ethernet parameters for the ACL. Command mode: All</p>

IPv4 Filtering Configuration

These commands allow you to define IPv4 matching criteria for an ACL.

Table 198. *IP version 4 Filtering Configuration Commands*

Command Syntax and Usage															
<p>[no] access-control list <1-640> ipv4 destination-ip-address <IP address> [<i><IP mask></i>]</p> <p>Defines a destination IP address for the ACL. If defined, traffic with this destination IP address will match this ACL.</p> <p>Command mode: Global configuration</p>															
<p>[no] access-control list <1-640> ipv4 source-ip-address <IP address> [<i><IP mask></i>]</p> <p>Defines a source IP address for the ACL. If defined, traffic with this source IP address will match this ACL. Specify an IP address in dotted decimal notation.</p> <p>Command mode: Global configuration</p>															
<p>[no] access-control list <1-640> ipv4 protocol <0-255></p> <p>Defines an IP protocol for the ACL. If defined, traffic from the specified protocol matches this filter. Specify the protocol number. Listed below are some of the well-known protocols.</p> <table border="1"> <thead> <tr> <th>Number</th> <th>Name</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>icmp</td> </tr> <tr> <td>2</td> <td>igmp</td> </tr> <tr> <td>6</td> <td>tcp</td> </tr> <tr> <td>17</td> <td>udp</td> </tr> <tr> <td>89</td> <td>ospf</td> </tr> <tr> <td>112</td> <td>vrrp</td> </tr> </tbody> </table> <p>Command mode: Global configuration</p>	Number	Name	1	icmp	2	igmp	6	tcp	17	udp	89	ospf	112	vrrp	
Number	Name														
1	icmp														
2	igmp														
6	tcp														
17	udp														
89	ospf														
112	vrrp														
<p>[no] access-control list <1-640> ipv4 type-of-service <0-255></p> <p>Defines a Type of Service (ToS) value for the ACL. For more information on ToS, refer to RFC 1340 and 1349.</p> <p>Command mode: Global configuration</p>															
<p>default access-control list <1-640> ipv4</p> <p>Resets the IPv4 parameters for the ACL to their default values.</p> <p>Command mode: Global configuration</p>															
<p>show access-control list <1-640> ipv4</p> <p>Displays the current IPv4 parameters.</p> <p>Command mode: All</p>															

TCP/UDP Filtering Configuration

These commands allow you to define TCP/UDP matching criteria for an ACL.

Table 199. *TCP/UDP Filtering Configuration Commands*

Command Syntax and Usage																													
<p>[no] access-control list <1-640> tcp-udp source-port <1-65535> [<i><mask (0xFFFF)></i>]</p> <p>Defines a source port for the ACL. If defined, traffic with the specified TCP or UDP source port will match this ACL. Specify the port number. Listed below are some of the well-known ports:</p> <table border="1"> <thead> <tr> <th>Number</th> <th>Name</th> </tr> </thead> <tbody> <tr><td>20</td><td>ftp-data</td></tr> <tr><td>21</td><td>ftp</td></tr> <tr><td>22</td><td>ssh</td></tr> <tr><td>23</td><td>telnet</td></tr> <tr><td>25</td><td>smtp</td></tr> <tr><td>37</td><td>time</td></tr> <tr><td>42</td><td>name</td></tr> <tr><td>43</td><td>whois</td></tr> <tr><td>53</td><td>domain</td></tr> <tr><td>69</td><td>tftp</td></tr> <tr><td>70</td><td>gopher</td></tr> <tr><td>79</td><td>finger</td></tr> <tr><td>80</td><td>http</td></tr> </tbody> </table> <p>Command mode: Global configuration</p>	Number	Name	20	ftp-data	21	ftp	22	ssh	23	telnet	25	smtp	37	time	42	name	43	whois	53	domain	69	tftp	70	gopher	79	finger	80	http	
Number	Name																												
20	ftp-data																												
21	ftp																												
22	ssh																												
23	telnet																												
25	smtp																												
37	time																												
42	name																												
43	whois																												
53	domain																												
69	tftp																												
70	gopher																												
79	finger																												
80	http																												
<p>[no] access-control list <1-640> tcp-udp destination-port <1-65535> [<i><mask (0xFFFF)></i>]</p> <p>Defines a destination port for the ACL. If defined, traffic with the specified TCP or UDP destination port will match this ACL. Specify the port number, just as with source-port above.</p> <p>Command mode: Global configuration</p>																													
<p>[no] access-control list <1-640> tcp-udp flags <value (0x0-0x3f)> [<i><mask (0x0-0x3f)></i>]</p> <p>Defines a TCP/UDP flag for the ACL.</p> <p>Command mode: Global configuration</p>																													
<p>default access-control list <1-640> tcp-udp</p> <p>Resets the TCP/UDP parameters for the ACL to their default values.</p> <p>Command mode: Global configuration</p>																													
<p>show access-control list <1-640> tcp-udp</p> <p>Displays the current TCP/UDP Filtering parameters.</p> <p>Command mode: All</p>																													

Packet Format Filtering Configuration

These commands allow you to define Packet Format matching criteria for an ACL.

Table 200. *Packet Format Filtering Configuration Commands*

Command Syntax and Usage
[no] access-control list <1-640> packet-format ethernet {ethertype2 llc snap} Defines the Ethernet format for the ACL. Command mode: Global configuration
[no] access-control list <1-640> packet-format ip {ipv4 ipv6} Defines the IP format for the ACL. Command mode: Global configuration
[no] access-control list <1-640> packet-format tagging {any none tagged} Defines the tagging format for the ACL. Command mode: Global configuration
default access-control list <1-640> packet-format Resets Packet Format parameters for the ACL to their default values. Command mode: Global configuration
show access-control list <1-640> packet-format Displays the current Packet Format parameters for the ACL. Command mode: All

ACL IPv6 Configuration

These commands allow you to define filtering criteria for each IPv6 Access Control List (ACL).

Table 201. *IPv6 ACL Options*

Command Syntax and Usage
<p>access-control list6 <1-128> action {permit deny} [set-priority <0-7>}</p> <p>Configures a filter action for packets that match the ACL definitions. You can choose to permit (pass) or deny (drop) packets, or set the 802.1p priority level (0-7).</p> <p>Command mode: Global configuration</p>
<p>[no] access-control list6 <1-128> egress-port port <port alias or number></p> <p>Configures the ACL to function on egress packets.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control list6 <1-128> statistics</p> <p>Enables or disables the statistics collection for the Access Control List.</p> <p>Command mode: Global configuration</p>
<p>default access-control list6 <1-128></p> <p>Resets the ACL parameters to their default values.</p> <p>Command mode: Global configuration</p>
<p>show access-control list6 <1-128></p> <p>Displays the current ACL parameters.</p> <p>Command mode: All</p>

IPv6 Filtering Configuration

These commands allow you to define IPv6 matching criteria for an ACL.

Table 202. *IP version 6 Filtering Options*

Command Syntax and Usage
<p>[no] access-control list6 <1-128> ipv6 destination-address <IPv6 address> [<i><prefix length (1-128)></i>]</p> <p>Defines a destination IPv6 address for the ACL. If defined, traffic with this destination address will match this ACL.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control list6 <1-128> ipv6 source-address <IPv6 address> [<i><prefix length (1-128)></i>]</p> <p>Defines a source IPv6 address for the ACL. If defined, traffic with this source address will match this ACL.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control list6 <1-128> ipv6 flow-label <0-1048575></p> <p>Defines the flow label for the ACL. If defined, traffic with this flow label will match this ACL.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control list6 <1-128> ipv6 next-header <0-255></p> <p>Defines the next header value for the ACL. If defined, traffic with this next header value will match this ACL.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control list6 <1-128> ipv6 traffic-class <0-255></p> <p>Defines the traffic class for the ACL. If defined, traffic with this traffic class will match this ACL.</p> <p>Command mode: Global configuration</p>
<p>default access-control list6 <1-128> ipv6</p> <p>Resets the IPv6 parameters for the ACL to their default values.</p> <p>Command mode: Global configuration</p>
<p>show access-control list6 <1-128> ipv6</p> <p>Displays the current IPv6 parameters.</p> <p>Command mode: All</p>

IPv6 TCP/UDP Filtering Configuration

These commands allows you to define TCP/UDP matching criteria for an ACL.

Table 203. IPv6 ACL TCP/UDP Filtering Options

Command Syntax and Usage																													
<p>[no] access-control list6 <1-128> tcp-udp source-port <1-65535> [<mask (0xFFFF)>]</p> <p>Defines a source port for the ACL. If defined, traffic with the specified TCP or UDP source port will match this ACL. Specify the port number. Listed here are some of the well-known ports:</p> <table border="1"> <thead> <tr> <th>Number</th> <th>Name</th> </tr> </thead> <tbody> <tr><td>20</td><td>ftp-data</td></tr> <tr><td>21</td><td>ftp</td></tr> <tr><td>22</td><td>ssh</td></tr> <tr><td>23</td><td>telnet</td></tr> <tr><td>25</td><td>smtp</td></tr> <tr><td>37</td><td>time</td></tr> <tr><td>42</td><td>name</td></tr> <tr><td>43</td><td>whois</td></tr> <tr><td>53</td><td>domain</td></tr> <tr><td>69</td><td>tftp</td></tr> <tr><td>70</td><td>gopher</td></tr> <tr><td>79</td><td>finger</td></tr> <tr><td>80</td><td>http</td></tr> </tbody> </table> <p>Command mode: Global configuration</p>	Number	Name	20	ftp-data	21	ftp	22	ssh	23	telnet	25	smtp	37	time	42	name	43	whois	53	domain	69	tftp	70	gopher	79	finger	80	http	
Number	Name																												
20	ftp-data																												
21	ftp																												
22	ssh																												
23	telnet																												
25	smtp																												
37	time																												
42	name																												
43	whois																												
53	domain																												
69	tftp																												
70	gopher																												
79	finger																												
80	http																												
<p>[no] access-control list6 <1-128> tcp-udp destination-port <1-65535> [<mask (0xFFFF)>]</p> <p>Defines a destination port for the ACL. If defined, traffic with the specified TCP or UDP destination port will match this ACL. Specify the port number, just as with source-port above.</p> <p>Command mode: Global configuration</p>																													
<p>[no] access-control list6 <1-128> tcp-udp flags <value (0x0-0x3f)> [<mask (0x0-0x3f)>]</p> <p>Defines a TCP/UDP flag for the ACL.</p> <p>Command mode: Global configuration</p>																													
<p>default access-control list6 <1-128> tcp-udp</p> <p>Resets the TCP/UDP parameters for the ACL to their default values.</p> <p>Command mode: Global configuration</p>																													
<p>show access-control list6 <1-128> tcp-udp</p> <p>Displays the current TCP/UDP Filtering parameters.</p> <p>Command mode: All</p>																													

IPv6 Metering Configuration

These commands define the Access Control profile for the selected ACL.

Table 204. *IPv6 Metering Options*

Command Syntax and Usage
access-control list6 <1-128> meter action {drop pass} Configures the ACL Meter to either drop or pass out-of-profile traffic. Command mode: Global configuration
access-control list6 <1-128> meter committed-rate <64-4000000> Configures the committed rate, in kilobits per second. The committed rate must be a multiple of 64. Command mode: Global configuration
[no] access-control list6 <1-128> meter enable Enables or disables ACL Metering. Command mode: Global configuration
access-control list6 <1-128> meter maximum-burst-size <32-4096> Configures the maximum burst size, in kilobits. Enter one of the following values for mbsize: 32, 64, 128, 256, 512, 1024, 2048, 4096. Command mode: Global configuration
default access-control list6 <1-128> meter Sets the ACL meter configuration to its default values. Command mode: Global configuration
no access-control list6 <1-128> meter Deletes the selected ACL meter. Command mode: Global configuration
show access-control list6 <1-128> meter Displays current ACL Metering parameters. Command mode: All

Management ACL Filtering Configuration

These commands allow you to define matching criteria for a Management ACL.

Note: Management ACLs filter traffic received through data interfaces only. The management interface is not monitored.

Table 205. Management ACL Filtering Configuration Commands

Command Syntax and Usage															
[no] access-control macl <1-128> ipv4	Enables or disables the Management ACL. Command mode: Global configuration														
[no] access-control macl <1-128> ipv4 <destination IP address> [<address mask>]	Sets IPv4 filtering to filter on the destination IP address. Command mode: Global configuration														
[no] access-control macl <1-128> ipv4 <source IP address> [<address mask>]	Sets IPv4 filtering to filter on the source IP address. Command mode: Global configuration														
[no] access-control macl <1-128> ipv4 protocol <0-255>	Defines an IP protocol for the MAACL. If defined, traffic from the specified protocol matches this filter. Specify the protocol number. Listed here are some of the well-known protocols. <table border="1"> <thead> <tr> <th>Number</th> <th>Name</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>icmp</td> </tr> <tr> <td>2</td> <td>igmp</td> </tr> <tr> <td>6</td> <td>tcp</td> </tr> <tr> <td>17</td> <td>udp</td> </tr> <tr> <td>89</td> <td>ospf</td> </tr> <tr> <td>112</td> <td>vrrp</td> </tr> </tbody> </table> Command mode: Global configuration	Number	Name	1	icmp	2	igmp	6	tcp	17	udp	89	ospf	112	vrrp
Number	Name														
1	icmp														
2	igmp														
6	tcp														
17	udp														
89	ospf														
112	vrrp														
default access-control list <1-128> ipv4	Resets the IPv4 parameters for the ACL to their default values. Command mode: Global configuration														
show access-control list <1-128> packet-format	Displays the current Packet Format parameters for the ACL. Command mode: All														

TCP/UDP Filtering Configuration

The following commands allow you to define TCP/UDP matching criteria for a Management ACL.

Table 206. *Management ACL TCP/UDP Filtering Configuration Commands*

Command Syntax and Usage																													
<p>[no] access-control macl <1-128> tcp-udp source-port <1-65535> [<mask (0x0-0x3f)>]</p> <p>Defines a source port for the Management ACL. If defined, traffic with the specified TCP or UDP source port will match this Management ACL. Specify the port number. Listed here are some of the well-known ports:</p> <table border="1"> <thead> <tr> <th>Number</th> <th>Name</th> </tr> </thead> <tbody> <tr><td>20</td><td>ftp-data</td></tr> <tr><td>21</td><td>ftp</td></tr> <tr><td>22</td><td>ssh</td></tr> <tr><td>23</td><td>telnet</td></tr> <tr><td>25</td><td>smtp</td></tr> <tr><td>37</td><td>time</td></tr> <tr><td>42</td><td>name</td></tr> <tr><td>43</td><td>whois</td></tr> <tr><td>53</td><td>domain</td></tr> <tr><td>69</td><td>tftp</td></tr> <tr><td>70</td><td>gopher</td></tr> <tr><td>79</td><td>finger</td></tr> <tr><td>80</td><td>http</td></tr> </tbody> </table> <p>Command mode: Global configuration</p>	Number	Name	20	ftp-data	21	ftp	22	ssh	23	telnet	25	smtp	37	time	42	name	43	whois	53	domain	69	tftp	70	gopher	79	finger	80	http	
Number	Name																												
20	ftp-data																												
21	ftp																												
22	ssh																												
23	telnet																												
25	smtp																												
37	time																												
42	name																												
43	whois																												
53	domain																												
69	tftp																												
70	gopher																												
79	finger																												
80	http																												
<p>[no] access-control macl <1-128> tcp-udp destination-port <1-65535> [<mask (0xFFFF)>]</p> <p>Defines a destination port for the Management ACL. If defined, traffic with the specified TCP or UDP destination port will match this Management ACL. Specify the port number, just as with <code>source-port</code>.</p> <p>Command mode: Global configuration</p>																													
<p>default access-control list <1-640> tcp-udp</p> <p>Resets the TCP/UDP parameters for the ACL to their default values.</p> <p>Command mode: Global configuration</p>																													
<p>show access-control list <1-640> tcp-udp</p> <p>Displays the current TCP/UDP Filtering parameters.</p> <p>Command mode: All</p>																													

VMAP Configuration

A VLAN Map is an Access Control List (ACL) that can be assigned to a VLAN or a VM group instead of a port. In a virtualized environment where Virtual Machines move between physical servers, VLAN Maps allow you to create traffic filtering and metering policies associated with a VM's VLAN

For more information about VLAN Map configuration commands, see [“Access Control List Configuration” on page 370](#).

For more information about assigning VLAN Maps to a VLAN, see [“VLAN Configuration” on page 437](#).

For more information about assigning VLAN Maps to a VM group, see [“VM Group Configuration” on page 553](#).

[Table 207](#) lists the general VMAP configuration commands.

Table 207. *VMAP Configuration Commands*

Command Syntax and Usage
<p>access-control vmap <1-128> action {permit deny} set-priority <0-7>}</p> <p>Configures a filter action for packets that match the VMAP definitions. You can choose to permit (pass) or deny (drop) packets, or set the 802.1p priority level (0-7).</p> <p>Command mode: Global configuration</p>
<p>[no] access-control vmap <1-128> egress-port <port alias or number></p> <p>Configures the VMAP to function on egress packets.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control vmap <1-128> ethernet destination-mac-address <MAC address> <MAC mask></p> <p>Enables or disables filtering of VMAP statistics collection based on destination MAC.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control vmap <1-128> ethernet source-mac-address <MAC address> <MAC mask></p> <p>Enables or disables filtering of VMAP statistics collection based on source MAC.</p> <p>Command mode: Global configuration</p>

Table 207. VMAP Configuration Commands (continued)

Command Syntax and Usage
<p>[no] access-control vmap <1-128> ethernet ethernet-type {<0x600-0xFFF> any arp rarp ip ipv6 mpls}</p> <p>Enables or disables filtering of VMAP statistics collection based on the encapsulated protocol:</p> <ul style="list-style-type: none"> o <0x600-0xFFF> filters Ethernet frames with the specified EtherType o any filters all frames o arp filters Address Resolution Protocol frames o rarp filters Reverse Address Resolution Protocol frames o ip filters Internet Protocol version 4 frames o ipv6 filters Internet Protocol version 6 frames o mpls filters Multiprotocol Label Switching frames <p>Command mode: Global configuration</p>
<p>[no] access-control vmap <1-128> ethernet priority <0-7></p> <p>Enables or disables filtering of VMAP statistics collection based on the IEEE 802.1Q priority code point value.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control vmap <1-128> ethernet vlan <1-4094></p> <p>Enables or disables filtering of VMAP statistics collection based on VLAN ID.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control vmap <1-128> ipv4 destination-ip-address <IPv4 address> <IPv4 mask></p> <p>Enables or disables filtering of VMAP statistics collection based on destination IP address.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control vmap <1-128> ipv4 source-ip-address <IPv4 address> <IPv4 mask></p> <p>Enables or disables filtering of VMAP statistics collection based on source IP address.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control vmap <1-128> ipv4 protocol <0-255></p> <p>Enables or disables filtering of VMAP statistics collection based on protocol.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control vmap <1-128> ipv4 type-of-service <0-255></p> <p>Enables or disables filtering of VMAP statistics collection based on type of service.</p> <p>Command mode: Global configuration</p>

Table 207. VMAP Configuration Commands (continued)

Command Syntax and Usage
<p>access-control vmap <1-128> meter action {drop pass} Sets ACL port metering to drop or pass out-of-profile traffic. Command mode: Global configuration</p>
<p>access-control vmap <1-128> meter committed-rate <64-1000000> Sets the ACL port metering control rate in kilobits per second. Command mode: Global configuration</p>
<p>[no] access-control vmap <1-128> meter enable Enables or disables ACL port metering. Command mode: All except User EXEC</p>
<p>access-control vmap <1-128> meter maximum-burst-size <32-4096> Sets the ACL port metering maximum burst size in kilobytes. The following eight values are allowed:</p> <ul style="list-style-type: none"> – 32 – 64 – 128 – 256 – 512 – 1024 – 2048 – 4096 <p>Command mode: Global configuration</p>
<p>access-control vmap <1-128> mirror port <port> Sets the specified port as the mirror target. Command mode: Global configuration</p>
<p>no access-control vmap <1-128> mirror Turns off ACL mirroring. Command mode: Global configuration</p>
<p>access-control vmap <1-128> packet-format ethernet {ethernet-type2 llc snap} Sets to filter the specified ethernet packet format type. Command mode: Global configuration</p>
<p>access-control vmap <1-128> packet-format ip {ipv4 ipv6} Sets to filter the specified IP packet format type. Command mode: Global configuration</p>

Table 207. VMAP Configuration Commands (continued)

Command Syntax and Usage
<p>access-control vmap <1-128> packet-format tagging {any none tagged}</p> <p>Sets filtering based on packet tagging. The options are:</p> <ul style="list-style-type: none"> – any: Filter tagged & untagged packets – none: Filter only untagged packets – tagged: Filter only tagged packets <p>Command mode: Global configuration</p>
<p>no access-control vmap <1-128> packet-format {ethernet ip tagging}</p> <p>Disables filtering based on the specified packet format.</p> <p>Command mode: Global configuration</p>
<p>access-control vmap <1-128> re-mark dot1p <0-7></p> <p>Sets the ACL re-mark configuration user update priority.</p> <p>Command mode: Global configuration</p>
<p>no access-control vmap <1-128> re-mark dot1p</p> <p>Disables the use of dot1p for in-profile traffic ACL re-mark configuration.</p> <p>Command mode: Global configuration</p>
<p>access-control vmap <1-128> re-mark {in-profile out-profile} dscp <0-63></p> <p>Sets the ACL re-mark configuration user update priority.</p> <p>Command mode: Global configuration</p>
<p>no access-control vmap <1-128> re-mark {in-profile out-profile}</p> <p>Removes all re-mark in-profile or out-profile settings.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control vmap <1-128> re-mark use-tos-precedence</p> <p>Enables or disables the use of the TOS precedence for in-profile traffic.</p> <p>Command mode: Global configuration</p>
<p>[no] access-control vmap <1-128> statistics</p> <p>Enables or disables the statistics collection for the VMAP.</p> <p>Command mode: Global configuration</p>
<p>access-control vmap <1-128> tcp-udp {source-port destination-port} <1-65535> [<i><port mask (0x0001 - 0xFFFF)></i>]</p> <p>Sets the TCP/UDP filtering source port or destination port and port mask for this ACL.</p> <p>Command mode: Global configuration</p>

Table 207. VMAP Configuration Commands (continued)

Command Syntax and Usage
<p>access-control vmap <1-128> tcp-udp flags <value (0x0-0x3F)> [<flags mask (0x0-0x3F)>]</p> <p>Sets the TCP flags for this ACL.</p> <p>Command mode: Global configuration</p>
<p>no access-control vmap <1-128> tcp-udp</p> <p>Removes TCP/UDP filtering for this ACL.</p> <p>Command mode: Global configuration</p>
<p>default access-control vmap <1-128></p> <p>Resets the VMAP parameters to their default values.</p> <p>Command mode: Global configuration</p>
<p>show access-control vmap <1-128></p> <p>Displays the current VMAP parameters.</p> <p>Command mode: All</p>

ACL Group Configuration

These commands allow you to compile one or more ACLs into an ACL group. Once you create an ACL group, you can assign the ACL group to one or more ports.

Table 208. *ACL Group Configuration Commands*

Command Syntax and Usage
[no] access-control group <1-640> list <1-640> Adds or removes the selected ACL to/from the ACL group. Command mode: Global configuration
[no] access-control group <1-640> list6 <1-128> Adds or removes the selected IPv6 ACL to/from the ACL group. Command mode: Global configuration
show access-control group <1-640> Displays the current ACL group parameters. Command mode: All

ACL Metering Configuration

These commands define the Access Control profile for the selected ACL or ACL Group.

Table 209. *ACL Metering Configuration Commands*

Command Syntax and Usage
<p>access-control list <1-640> meter action {drop pass} Configures the ACL meter to either drop or pass out-of-profile traffic. Command mode: Global configuration</p>
<p>access-control list <1-640> meter committed-rate <64-1000000> Configures the committed rate, in Kilobits per second. The committed rate must be a multiple of 64. Command mode: Global configuration</p>
<p>[no] access-control list <1-640> meter enable Enables or disables ACL Metering. Command mode: Global configuration</p>
<p>access-control list <1-640> meter maximum-burst-size <32-4096> Configures the maximum burst size, in Kilobits. Enter one of the following values for mbsize: 32, 64, 128, 256, 512, 1024, 2048, 4096. Command mode: Global configuration</p>
<p>default access-control list <1-640> meter Sets the ACL meter configuration to its default values. Command mode: Global configuration</p>
<p>no access-control list <1-640> meter Deletes the selected ACL meter. Command mode: Global configuration</p>
<p>show access-control list <1-640> meter Displays current ACL Metering parameters. Command mode: All</p>

ACL Re-Mark Configuration

You can choose to re-mark IP header data for the selected ACL. You can configure different re-mark values, based on whether packets fall within the ACL metering profile, or out of the ACL metering profile.

Table 210. *ACL Re-Marking Configuration Commands*

Command Syntax and Usage
access-control list <1-640> re-mark dot1p <0-7> Defines 802.1p value. The value is the priority bits information in the packet structure. Command mode: Global configuration
no access-control list <1-640> re-mark dot1p Disables use of 802.1p value for re-marked packets. Command mode: Global configuration
[no] access-control list <1-640> re-mark use-tos-precedence Enable or disable mapping of TOS (Type of Service) priority to 802.1p priority for In-Profile packets. When enabled, the TOS value is used to set the 802.1p value. Command mode: Global configuration
default access-control list <1-640> re-mark Sets the ACL Re-mark configuration to its default values. Command mode: Global configuration
show access-control list <1-640> re-mark Displays current Re-mark parameters. Command mode: All

Re-Marking In-Profile Configuration

The following table displays Re-marking In-profile configuration commands.

Table 211. *ACL Re-Mark In-Profile Commands*

Command Syntax and Usage
access-control list <1-640> re-mark in-profile dscp <0-63> Sets the DiffServ Code Point (DSCP) of in-profile packets to the selected value. Command mode: Global configuration
no access-control list <1-640> re-mark in-profile dscp Disables use of DSCP value for in-profile traffic. Command mode: Global configuration
no access-control list <1-640> re-mark in-profile Removes all re-mark in-profile settings. Command mode: Global configuration
show access-control list <1-640> re-mark Displays current re-mark parameters. Command mode: All

Re-Marking Out-Profile Configuration

The following table displays Re-marking Out-profile configuration commands.

Table 212. *ACL Re-Mark Out-of-Profile Commands*

Command Syntax and Usage
access-control list <1-640> re-mark out-profile dscp <0-63> Sets the DiffServ Code Point (DSCP) of out-of-profile packets to the selected value. The switch sets the DSCP value on Out-of-Profile packets. Command mode: Global configuration
no access-control list <1-640> re-mark out-profile Removes all re-mark out-profile settings. Command mode: Global configuration
show access-control list <1-640> re-mark Displays current re-mark parameters. Command mode: All

IPv6 Re-Marking Configuration

You can choose to re-mark IPv6 header data for the selected ACL. You can configure different re-mark values, based on whether packets fall within or outside the ACL metering profile.

Table 213. *IPv6 General Re-Mark Options*

Command Syntax and Usage
access-control list6 <1-128> re-mark dot1p <0-7> Re-marks the 802.1p value. The value is the priority bits information in the packet structure. Command mode: Global configuration
no access-control list6 <1-128> re-mark dot1p Disables use of 802.1p value for re-marked packets. Command mode: Global configuration
[no] no access-control list6 <1-128> re-mark use-tos-precedence Enables or disables mapping of TOS (Type of Service) priority to 802.1p priority for in-profile packets. When enabled, the TOS value is used to set the 802.1p value. Command mode: Global configuration
default access-control list6 <1-128> re-mark Sets the ACL re-mark parameters to their default values. Command mode: Global configuration
show access-control list6 <1-128> re-mark Displays current re-mark parameters. Command mode: All

IPv6 Re-Marking In-Profile Configuration

The following table displays IPv6 Re-marking In-profile configuration commands.

Table 214. IPv6 Re-Mark In-Profile Options

Command Syntax and Usage
access-control list6 <1-128> re-mark in-profile dscp <0-63> Re-marks the DSCP value for in-profile traffic. Command mode: Global configuration
no access-control list6 <1-128> re-mark in-profile dscp Disables the use of DSCP for the in-profile traffic. Command mode: Global configuration
no access-control list6 <1-128> re-mark in-profile Removes all re-mark in-profile settings. Command mode: Global configuration
show access-control list6 <1-128> re-mark Displays current re-mark parameters. Command mode: All

IPv6 Re-Marking Out-Profile Configuration

The following table displays IPv6 Re-marking Out-profile configuration commands.

Table 215. IPv6 Re-Mark Out-of-Profile Options

Command Syntax and Usage
access-control list6 <1-128> re-mark out-profile dscp <0-63> Re-marks the DSCP value on out-of-profile packets for the ACL. Command mode: Global configuration
no access-control list6 <1-128> re-mark out-profile Removes all re-marking out-of-profile settings. Command mode: Global configuration
show access-control list6 <1-128> re-mark Displays current re-mark parameters. Command mode: All

Port Mirroring

Port mirroring is disabled by default. For more information about port mirroring on the CN4093, see “Appendix A: Troubleshooting” in the *Enterprise NOS 8.4 Application Guide*.

Note: Traffic on VLAN 4095 is not mirrored to the external ports.

Port Mirroring commands are used to configure, enable, and disable the monitor port. When enabled, network packets being sent and/or received on a target port are duplicated and sent to a monitor port. By attaching a network analyzer to the monitor port, you can collect detailed information about your network performance and usage.

Table 216. *Port Mirroring Configuration Commands*

Command Syntax and Usage
[no] port-mirroring enable Enables or disables port mirroring. Command mode: Global configuration
show port-mirroring Displays current settings of the mirrored and monitoring ports. Command mode: All

Port Mirroring Configuration

The following table displays Port Mirror configuration commands.

Table 217. *Port-Based Port Mirroring Configuration Commands*

Command Syntax and Usage
<p>port-mirroring monitor-port <i><port alias or number></i> mirroring-port <i><port alias or number></i> {in out both}</p> <p>Adds the port to be mirrored. This command also allows you to enter the direction of the traffic. It is necessary to specify the direction because:</p> <p>If the source port of the frame matches the mirrored port and the mirrored direction is ingress or both (ingress and egress), the frame is sent to the monitoring port.</p> <p>If the destination port of the frame matches the mirrored port and the mirrored direction is egress or both, the frame is sent to the monitoring port.</p> <p>Note: Up to two monitor ports with 2-way mirroring or four monitor ports with 1-way mirroring are supported in stand-alone mode. In stacking mode, the switch supports one monitor port with 2-way mirroring or two monitor ports with 1-way mirroring.</p> <p>Command mode: Global configuration</p>
<p>no port-mirroring monitor-port <i><port alias or number></i> mirroring-port <i><port alias or number></i></p> <p>Removes the mirrored port.</p> <p>Command mode: Global configuration</p>
<p>show port-mirroring</p> <p>Displays the current settings of the monitoring port.</p> <p>Command mode: All</p>

Layer 2 Configuration

The following table describes basic Layer 2 Configuration commands. The following sections provide more detailed information and commands.

Table 218. *Layer 2 Configuration Commands*

Command Syntax and Usage
<p>spanning-tree mode disable</p> <p>Globally turns Spanning Tree off (selects Spanning-Tree mode “disable”). All ports are placed into forwarding state. Any BPDU’s received are flooded. To enable Spanning-Tree, select another Spanning-Tree mode.</p> <p>Command mode: Global configuration</p>
<p>[no] spanning-tree stg-auto</p> <p>Enables or disables VLAN Automatic STG Assignment (VASA). When enabled, each time a new VLAN is configured, the switch will automatically assign the new VLAN its own STG. Conversely, when a VLAN is deleted, if its STG is not associated with any other VLAN, the STG is returned to the available pool.</p> <p>Note: VASA applies only to PVRST mode.</p> <p>Command mode: Global configuration</p>
<p>[no] spanning-tree pvst-compatibility</p> <p>Enables or disables VLAN tagging of Spanning Tree BPDUs. The default setting is enabled.</p> <p>Command mode: Global configuration</p>
<p>[no] spanning-tree loopguard</p> <p>Enables or disables Spanning Tree Loop Guard.</p> <p>Command mode: Global configuration</p>
<p>vlan <VLAN number></p> <p>Enter VLAN configuration mode. To view command options, see page 437.</p> <p>Command mode: Global configuration</p>
<p>show layer2</p> <p>Displays current Layer 2 parameters.</p> <p>Command mode: All</p>

802.1X Configuration

These commands allow you to configure the CN4093 as an IEEE 802.1X Authenticator, to provide port-based network access control.

Table 219. *802.1X Configuration Commands*

Command Syntax and Usage
[no] dot1x enable Globally enables or disables 802.1X. Command mode: Global configuration
show dot1x Displays current 802.1X parameters. Command mode: All

802.1X Global Configuration

The global 802.1X commands allow you to configure parameters that affect all ports in the CN4093.

Table 220. *802.1X Global Configuration Commands*

Command Syntax and Usage
dot1x max-request <1-10> Sets the maximum number of times the authenticator retransmits an EAP-Request packet to the supplicant (client). The default value is 2. Command mode: Global configuration
dot1x mode [force-unauthorized auto force-authorized] Sets the type of access control for all ports: <ul style="list-style-type: none">o force-unauthorized - the port is unauthorized unconditionally.o auto - the port is unauthorized until it is successfully authorized by the RADIUS server.o force-authorized - the port is authorized unconditionally, allowing all traffic. The default value is force-authorized . Command mode: Global configuration
dot1x quiet-time <0-65535> Sets the time, in seconds, the authenticator waits before transmitting an EAP-Request/ Identity frame to the supplicant (client) after an authentication failure in the previous round of authentication. The default value is 60. Command mode: Global configuration

Table 220. 802.1X Global Configuration Commands (continued)

Command Syntax and Usage
<p>[no] dot1x re-authenticate</p> <p>Sets the re-authentication status to on or off. The default value is off.</p> <p>Command mode: Global configuration</p>
<p>dot1x re-authentication-interval <1-604800></p> <p>Sets the time, in seconds, the authenticator waits before re-authenticating a supplicant (client) when periodic re-authentication is enabled. The default value is 3600.</p> <p>Command mode: Global configuration</p>
<p>dot1x server-timeout <1-65535></p> <p>Sets the time, in seconds, the authenticator waits for a response from the RADIUS server before declaring an authentication timeout. The default value is 30.</p> <p>The time interval between transmissions of the RADIUS Access-Request packet containing the supplicant's (client's) EAP-Response packet is determined by the current setting of radius-server timeout <timeout-value> (default is 3).</p> <p>Command mode: Global configuration</p>
<p>dot1x supplicant-timeout <1-65535></p> <p>Sets the time, in seconds, the authenticator waits for an EAP-Response packet from the supplicant (client) before retransmitting the EAP-Request packet from the authentication server. The default value is 30.</p> <p>Command mode: Global configuration</p>
<p>dot1x transmit-interval <1-65535></p> <p>Sets the time, in seconds, the authenticator waits for an EAP-Response/Identity frame from the supplicant (client) before retransmitting an EAP-Request/Identity frame. The default value is 30.</p> <p>Command mode: Global configuration</p>
<p>[no] dot1x vlan-assign</p> <p>Sets the dynamic VLAN assignment status to on or off. The default value is off.</p> <p>Command mode: Global configuration</p>

Table 220. 802.1X Global Configuration Commands (continued)

Command Syntax and Usage
default dot1x Resets the global 802.1X parameters to their default values. Command mode: Global configuration
show dot1x Displays current global 802.1X parameters. Command mode: All

802.1X Guest VLAN Configuration

The 802.1X Guest VLAN commands allow you to configure a Guest VLAN for unauthenticated ports. The Guest VLAN provides limited access to switch functions.

Table 221. 802.1X Guest VLAN Configuration Commands

Command Syntax and Usage
[no] dot1x guest-vlan enable Enables or disables the 802.1X Guest VLAN. Command mode: Global configuration
[no] dot1x guest-vlan vlan <VLAN number> Configures the Guest VLAN number. Command mode: Global configuration
show dot1x Displays current 802.1X parameters. Command mode: All

802.1X Port Configuration

The 802.1X port commands allows you to configure parameters that affect the selected port in the CN4093. These settings override the global 802.1X parameters.

Table 222. 802.1X Port Commands

Command Syntax and Usage
<p>dot1x apply-global</p> <p>Applies current global 802.1X configuration parameters to the port.</p> <p>Command mode: Interface port</p>
<p>dot1x max-request <1-10></p> <p>Sets the maximum number of times the authenticator retransmits an EAP-Request packet to the supplicant (client).</p> <p>The default value is 2.</p> <p>Command mode: Interface port</p>
<p>dot1x mode {force-unauthorized auto force-authorized}</p> <p>Sets the type of access control for the port:</p> <ul style="list-style-type: none">o force-unauthorized - the port is unauthorized unconditionally.o auto - the port is unauthorized until it is successfully authorized by the RADIUS server.o force-authorized - the port is authorized unconditionally, allowing all traffic. <p>The default value is force-authorized.</p> <p>Command mode: Interface port</p>
<p>dot1x quiet-time <0-65535></p> <p>Sets the time, in seconds, the authenticator waits before transmitting an EAP-Request/ Identity frame to the supplicant (client) after an authentication failure in the previous round of authentication.</p> <p>The default value is 60.</p> <p>Command mode: Interface port</p>
<p>[no] dot1x re-authenticate</p> <p>Sets the re-authentication status to on or off.</p> <p>The default value is off.</p> <p>Command mode: Interface port</p>
<p>dot1x re-authentication-interval <1-604800></p> <p>Sets the time, in seconds, the authenticator waits before re-authenticating a supplicant (client) when periodic re-authentication is enabled.</p> <p>The default value is 3600.</p> <p>Command mode: Interface port</p>

Table 222. 802.1X Port Commands (continued)

Command Syntax and Usage
<p>dot1x server-timeout <1-65535></p> <p>Sets the time, in seconds, the authenticator waits for a response from the RADIUS server before declaring an authentication timeout.</p> <p>The default value is 30.</p> <p>The time interval between transmissions of the RADIUS Access-Request packet containing the supplicant's (client's) EAP-Response packet is determined by the current setting of the <code>radius-server timeout</code> command.</p> <p>Command mode: Interface port</p>
<p>dot1x supplicant-timeout <1-65535></p> <p>Sets the time, in seconds, the authenticator waits for an EAP-Response packet from the supplicant (client) before retransmitting the EAP-Request packet from the authentication server.</p> <p>The default value is 30.</p> <p>Command mode: Interface port</p>
<p>dot1x transmit-interval <1-65535></p> <p>Sets the time, in seconds, the authenticator waits for an EAP-Response/Identity frame from the supplicant (client) before retransmitting an EAP-Request/Identity frame.</p> <p>The default value is 30.</p> <p>Command mode: Interface port</p>
<p>[no] dot1x vlan-assign</p> <p>Sets the dynamic VLAN assignment status to <code>on</code> or <code>off</code>.</p> <p>The default value is <code>off</code>.</p> <p>Command mode: Interface port</p>
<p>default dot1x</p> <p>Resets the 802.1X port parameters to their default values.</p> <p>Command mode: Interface port</p>
<p>show interface port <port alias or number> dot1x</p> <p>Displays current 802.1X port parameters.</p> <p>Command mode: All</p>

Spanning Tree Configuration

Lenovo Enterprise Network Operating System supports the IEEE 802.1D (2004) Rapid Spanning Tree Protocol (RSTP), the IEEE 802.1Q (2003) Multiple Spanning Tree Protocol (MSTP), and Per VLAN Rapid Spanning Tree Protocol (PVRST+). STP is used to prevent loops in the network topology.

Up to 256 Spanning Tree Groups can be configured on the switch (STG 256 is reserved for management). By default, 128 STGs are configured (STG 128 is reserved for management).

Note: When VRRP is used for active/active redundancy, STG must be enabled.

Table 223. *Spanning Tree Configuration Options*

Command Syntax and Usage
<p>spanning-tree mode [disable mst pvrst rstp]</p> <p>Selects and enables Multiple Spanning Tree mode (mst), Per VLAN Rapid Spanning Tree mode (pvrst), or Rapid Spanning Tree mode (rstp). The default mode is PVRST+.</p> <p>When you select spanning-tree mode disable, the switch globally turns Spanning Tree off. All ports are placed into forwarding state. Any BPDU's received are flooded.</p> <p>Command mode: Global configuration</p>
<p>[no] spanning-tree pvst-compatibility</p> <p>Enables or disables VLAN tagging of Spanning Tree BPDUs. The default setting is enabled.</p> <p>Command mode: Global configuration</p>
<p>[no] spanning-tree stg-auto</p> <p>Enables or disables VLAN Automatic STG Assignment (VASA). When enabled, each time a new VLAN is configured, the switch will automatically assign the new VLAN its own STG. Conversely, when a VLAN is deleted, if its STG is not associated with any other VLAN, the STG is returned to the available pool.</p> <p>Note: When using VASA, a maximum number of 127 automatically assigned STGs is supported.</p> <p>Note: VASA applies only to PVRST mode.</p> <p>Command mode: Global configuration</p>
<p>spanning-tree guard loop</p> <p>Enables STP loop guard. STP loop guard prevents the port from forwarding traffic if no BPDUs are received. The port is placed into a loop-inconsistent blocking state until a BPDU is received.</p> <p>Command mode: Interface port/Interface portchannel</p>

Table 223. *Spanning Tree Configuration Options (continued)*

Command Syntax and Usage
<p>spanning-tree guard root</p> <p>Enables STP root guard. STP root guard enforces the position of the root bridge. If the bridge receives a superior BPDU, the port is placed into a root-inconsistent state (listening).</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>spanning-tree guard none</p> <p>Disables STP loop guard and root guard.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>no spanning-tree guard</p> <p>Sets the Spanning Tree guard parameters to their default values.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>[no] spanning-tree link-type {p2p shared auto}</p> <p>Defines the type of link connected to the port, as follows:</p> <ul style="list-style-type: none">– auto: Configures the port to detect the link type, and automatically match its settings.– p2p: Configures the port for Point-To-Point protocol.– shared: Configures the port to connect to a shared medium (usually a hub). <p>The default link type is auto.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>[no] spanning-tree portfast</p> <p>Enables or disables this port as portfast or edge port. An edge port is not connected to a bridge, and can begin forwarding traffic as soon as the link is up. Configure server ports as edge ports (enabled).</p> <p>Note: After you configure the port as an edge port, you must disable the port and then re-enable the port for the change to take effect.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>[no] spanning-tree pvst-protection</p> <p>Enables or disables PVST Protection on the selected port. If the port receives any PVST+/PVRST+ BPDUs, it is error disabled.</p> <p>The default setting for this feature is disabled (no protection).</p> <p>Command mode: Interface port/Interface portchannel</p>

Table 223. *Spanning Tree Configuration Options (continued)*

Command Syntax and Usage
<p>show spanning-tree</p> <p>Displays Spanning Tree information, including the status (on or off), Spanning Tree mode (RSTP, PVRST, or MSTP), and VLAN membership.</p> <p>In addition to seeing if STG is enabled or disabled, you can view the following STG bridge information:</p> <ul style="list-style-type: none">– Priority– Hello interval– Maximum age value– Forwarding delay– Aging time <p>You can also see the following port-specific STG information:</p> <ul style="list-style-type: none">– Port alias and priority– Cost– State <p>For details, see page 77.</p> <p>Command mode: All</p>
<p>show spanning-tree blockedports</p> <p>Lists the ports blocked by each STP instance.</p> <p>Command mode: All</p>
<p>show spanning-tree root</p> <p>Displays the Spanning Tree configuration on the root bridge for each STP instance. For details, see page 85.</p> <p>Command mode: All</p>
<p>show spanning-tree [vlan <VLAN ID>] bridge</p> <p>Displays Spanning Tree bridge information. For details, see page 84.</p> <p>Command mode: All</p>

MSTP Configuration

Up to 32 Spanning Tree Groups can be configured in MSTP mode. MSTP is turned off by default and the default STP mode is PVRST+.

Note: When Multiple Spanning Tree is turned on, VLAN 4095 is moved from Spanning Tree Group 128 to the Common Internal Spanning Tree (CIST). When Multiple Spanning Tree is turned off, VLAN 4095 is moved back to Spanning Tree Group 128.

Table 224. Multiple Spanning Tree Configuration Options

Command Syntax and Usage
<p>[no] spanning-tree mst <MST instance or range> enable</p> <p>Enables or disables the specified MSTP instance.</p> <p>Command mode: Global configuration</p>
<p>spanning-tree mst forward-time <4-30></p> <p>Configures the forward delay time in seconds. The forward delay parameter specifies the amount of time that a bridge port has to wait before it changes from the listening state to the learning state and from the learning state to the forwarding state.</p> <p>The default value is 15.</p> <p>Command mode: Global configuration</p>
<p>spanning-tree mst max-age <6-40></p> <p>Configures the maximum age interval in seconds. The maximum age parameter specifies the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it reconfigures the MSTP network.</p> <p>The default value is 20.</p> <p>Command mode: Global configuration</p>
<p>spanning-tree mst <MST instance or range> priority <0-65535></p> <p>Configures the CIST bridge priority for the specified MSTP instance. The bridge priority parameter controls which bridge on the network is the MSTP root bridge. To make this switch the root bridge, configure the bridge priority lower than all other switches and bridges on your network. The lower the value, the higher the bridge priority. The range is 0 to 65535, in steps of 4096 (0, 4096, 8192...).</p> <p>The default value is 61440.</p> <p>Command mode: Global configuration</p>
<p>spanning-tree mst max-hops <4-60></p> <p>Configures the maximum number of bridge hops a packet may traverse before it is dropped.</p> <p>The default value is 20.</p> <p>Command mode: Global configuration</p>

Table 224. *Multiple Spanning Tree Configuration Options (continued)*

<p>Command Syntax and Usage</p>
<p>default spanning-tree mst <MST instance number or range> Restores the Spanning Tree instance to its default configuration. Command mode: Global configuration</p>
<p>no spanning-tree mst configuration Returns the MST region to its default values: no VLAN is mapped to any MST instance. Revision number is reset to 0. Command mode: Global configuration</p>
<p>spanning-tree mst configuration Enables MSTP configuration mode. Command mode: Global configuration</p>
<p>[no] instance <0-32> vlan <VLAN numbers> Maps or removes the specified VLANs to the Spanning Tree instance. If a VLAN does not exist, it will not be created automatically. Command mode: MST configuration</p>
<p>[no] name <1-32 characters> Configures a name for the MSTP region. All devices within an MSTP region must have the same region name. Command mode: MST configuration</p>
<p>[no] revision <0-65535> Configures a revision number for the MSTP region. The revision is used as a numerical identifier for the region. All devices within an MSTP region must have the same revision number. Command mode: MST configuration</p>
<p>show spanning-tree mst <MST instance or range> [information] Displays the current MSTP configuration for the specified instance. Command mode: All</p>
<p>show spanning-tree mst configuration Displays the current MSTP settings. Command mode: All</p>

MSTP Port Configuration

MSTP port parameters are used to modify MSTP operation on an individual port basis. MSTP parameters do not affect operation of RSTP/PVRST.

Table 225. *MSTP Port Configuration Options*

Command Syntax and Usage
<p>spanning-tree mst <i><MST instance or range></i> cost <i><0-200000000></i></p> <p>Configures the port path cost for the specified MSTP instance. The port path cost is used to help determine the designated port for a segment. Port path cost is based on the port speed, and is calculated as follows:</p> <ul style="list-style-type: none"> o 1Gbps = 20000 o 10Gbps = 2000 <p>The default value of 0 indicates that the default path cost will be computed for an auto negotiated link speed.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>[no] spanning-tree mst <i><MST instance or range></i> enable</p> <p>Enables or disables the specified MSTP instance on the port.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>spanning-tree mst hello-time <i><1-10></i></p> <p>Configures the port Hello time. The Hello time specifies how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge Hello value. The range is 1 to 10 seconds.</p> <p>The default value is 2.</p> <p>Command mode: Interface port/Interface portchannel</p>
<p>spanning-tree mst <i><MST instance or range></i> port-priority <i><0-240></i></p> <p>Configures the port priority for the specified MSTP instance. The port priority helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment.</p> <p>The range is 0 to 240, in steps of 16 (0, 16, 32...).</p> <p>The default value is 128.</p> <p>Command mode: Interface port/Interface portchannel</p>

Table 225. *MSTP Port Configuration Options (continued)*

Command Syntax and Usage
<p>[no] spanning-tree pvst-protection</p> <p>Configures PVST Protection on the selected port. If the port receives any PVST+/PVRST+ BPDUs, it error disabled. PVST Protection works only in MSTP mode.</p> <p>The default setting is disabled.</p> <p>Note: Not available in stacking.</p> <p>Command mode: Interface port</p>
<p>show interface port <i><port alias or number></i> spanning-tree mstp cist</p> <p>Displays the current CIST port configuration.</p> <p>Command mode: All</p>

RSTP/PVRST Configuration

[Table 226](#) describes the commands used to configure the Rapid Spanning Tree (RSTP) and Per VLAN Rapid Spanning Tree Protocol (PVRST+) protocols.

Table 226. *RSTP/PVRST Configuration Options*

Command Syntax and Usage
<p>boot spanning-tree max-instances {128 256}</p> <p>Configures the maximum number of Spanning Tree Groups (STGs) that can be used on the switch.</p> <p>The default value is 128.</p> <p>Note: The switch needs to be reloaded for the configuration to take effect.</p> <p>Command mode: Global configuration</p>
<p>no boot spanning-tree max-instances</p> <p>Reset the maximum number of STGs available on the switch to the default value of 128.</p> <p>Note: The switch needs to be reloaded for the configuration to take effect.</p> <p>Command mode: Global configuration</p>
<p>[no] spanning-tree stp <i><STP instance or range></i> enable</p> <p>Enables or disables Spanning Tree instance.</p> <p>The default settings is enabled.</p> <p>Command mode: Global configuration</p>
<p>spanning-tree stp <i><STP instance or range></i> vlan <i><VLAN number></i></p> <p>Associates a VLAN with a Spanning Tree Group and requires a VLAN ID as a parameter. If the VLAN does not exist, it will be created automatically, but it will be disabled by default.</p> <p>Command mode: Global configuration</p>

Table 226. RSTP/PVRST Configuration Options (continued)

Command Syntax and Usage
<p>no spanning-tree stp <STP instance or range> vlan <VLAN number></p> <p>Breaks the association between a VLAN and a Spanning Tree Group and requires a VLAN ID as a parameter.</p> <p>Command mode: Global configuration</p>
<p>no spanning-tree stp <STP instance or range> vlan all</p> <p>Removes all VLANs from a Spanning Tree Group.</p> <p>Command mode: Global configuration</p>
<p>default spanning-tree stp <STP instance or range></p> <p>Restores a Spanning Tree instance to its default configuration.</p> <p>Command mode: Global configuration</p>
<p>show spanning-tree stp <STP instance or range> [information]</p> <p>Displays current Spanning Tree Protocol parameters for the specified Spanning Tree Group. See page 82 for details about the information parameter.</p> <p>Command mode: All</p>

Bridge RSTP/PVRST Configuration

Spanning Tree bridge parameters affect the global STG operation of the switch. STG bridge parameters include:

- Bridge priority
- Bridge hello time
- Bridge maximum age
- Forwarding delay

Table 227. *Bridge Spanning Tree Configuration Options*

Command Syntax and Usage
<p>spanning-tree stp <STP instance or range> bridge forward-delay <4-30></p> <p>Configures the bridge forward delay parameter. The forward delay parameter specifies the amount of time that a bridge port has to wait before it changes from the listening state to the learning state and from the learning state to the forwarding state. The range is 4 to 30 seconds.</p> <p>The default value is 15.</p> <p>Note: This command does not apply to MSTP.</p> <p>Command mode: Global configuration</p>
<p>spanning-tree stp <STP instance or range> bridge hello-time <1-10></p> <p>Configures the bridge Hello time. The Hello time specifies how often the root bridge transmits a configuration bridge protocol data unit (BPDU). Any bridge that is not the root bridge uses the root bridge Hello value. The range is 1 to 10 seconds.</p> <p>The default value is 2.</p> <p>Note: This command does not apply to MSTP.</p> <p>Command mode: Global configuration</p>
<p>spanning-tree stp <STP instance or range> bridge maximum-age <6-40></p> <p>Configures the bridge maximum age. The maximum age parameter specifies the maximum time the bridge waits without receiving a configuration bridge protocol data unit before it re configures the STG network. The range is 6 to 40 seconds.</p> <p>The default value is 20.</p> <p>Note: This command does not apply to MSTP.</p> <p>Command mode: Global configuration</p>

Table 227. *Bridge Spanning Tree Configuration Options*

Command Syntax and Usage
<p>spanning-tree stp <STP instance or range> bridge priority <0-65535></p> <p>Configures the bridge priority. The bridge priority parameter controls which bridge on the network is the STG root bridge. To make this switch the root bridge, configure the bridge priority lower than all other switches and bridges on your network. The lower the value, the higher the bridge priority. The range is 0 to 65535, in steps of 4096 (0, 4096, 8192...).</p> <p>The default value is 61440.</p> <p>Command mode: Global configuration</p>
<p>show spanning-tree [vlan <VLAN ID>] bridge</p> <p>Displays the current Spanning Tree parameters either globally or for a specific VLAN. See page 84 for sample output.</p> <p>Command mode: All</p>

When configuring STG bridge parameters, the following formulas must be used:

- $2*(fwd-1) \geq mxage$
- $2*(hello+1) \leq mxage$

RSTP/PVRST Port Configuration

By default, Spanning Tree is turned off for management ports, and turned on for data ports. STG port parameters include:

- Port priority
- Port path cost

Table 228. *Spanning Tree Port Options*

Command Syntax and Usage
<p>[no] spanning-tree stp <STP instance or range> enable</p> <p>Enables or disables STG on the port.</p> <p>Command mode: Interface port</p>
<p>spanning-tree stp link-type {auto p2p shared}</p> <p>Defines the type of link connected to the port, as follows:</p> <ul style="list-style-type: none">o auto: Configures the port to detect the link type, and automatically match its settings.o p2p: Configures the port for Point-To-Point protocol.o shared: Configures the port to connect to a shared medium (usually a hub). <p>Command mode: Interface port</p>

Table 228. *Spanning Tree Port Options (continued)*

Command Syntax and Usage
<p>spanning-tree stp <i><STP instance or range></i> path-cost <i><1-200000000, 0 for default></i></p> <p>Configures the port path cost. The port path cost is used to help determine the designated port for a segment. Port path cost is based on the port speed, and is calculated as follows:</p> <ul style="list-style-type: none">o 1Gbps = 20000o 10Gbps = 2000 <p>The default value of 0 indicates that the default path cost will be computed for an auto negotiated link speed.</p> <p>Command mode: Interface port</p>
<p>spanning-tree stp <i><STP instance or range></i> priority <i><0-240></i></p> <p>Configures the port priority. The port priority helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment. The range is 0 to 240, in steps of 16 (0, 16, 32...).</p> <p>The default value is 128.</p> <p>Command mode: Interface port</p>
<p>show interface port <i><port alias or number></i> spanning-tree stp <i><STP instance or range></i></p> <p>Displays the current STG port parameters.</p> <p>Command mode: All</p>

Forwarding Database Configuration

Use the following commands to configure the Forwarding Database (FDB).

Table 229. *FDB Configuration Commands*

Command Syntax and Usage
<p>mac-address-table aging <i><0-65535></i></p> <p>Configures the aging value for FDB entries, in seconds.</p> <p>The default value is 300.</p> <p>Command mode: Global configuration</p>

Table 229. *FDB Configuration Commands*

Command Syntax and Usage
<p>[no] mac-address-table mac-notification</p> <p>Enables or disables MAC Address Notification. With MAC Address Notification enabled, the switch generates a syslog message when a MAC address is added or removed from the MAC address table.</p> <p>Note: This is applicable for internal ports only.</p> <p>Command mode: Global configuration</p>
<p>show mac-address-table</p> <p>Display current FDB configuration.</p> <p>Command mode: All</p>

Static Multicast MAC Configuration

The following options are available to control the forwarding of known and unknown multicast packets:

- All multicast packets are flooded to the entire VLAN. This is the default switch behavior.
- Known multicast packets are forwarded only to those ports specified. Unknown multicast packets are flooded to the entire VLAN. To configure this option, define the Multicast MAC address for the VLAN and specify ports that are to receive multicast packets (**mac-address-table multicast**).
- Known multicast packets are forwarded only to those ports specified. Unknown multicast packets are dropped. To configure this option:
 - Define the Multicast MAC address for the VLAN and specify ports that are to receive multicast packets (**mac-address-table multicast**).
 - Enable Flood Blocking on ports that are not to receive multicast packets (**interface port x**) (**flood-blocking**).

Use the following commands to configure static Multicast MAC entries in the Forwarding Database (FDB).

Table 230. *Static Multicast MAC Configuration Commands*

Command Syntax and Usage
<p>[no] mac-address-table multicast <MAC address> <VLAN number> <port alias or number></p> <p>Adds or deletes a permanent multicast FDB entry. You can list ports separated by a space, or enter a range of ports separated by a hyphen (-). For example:</p> <pre>mac-address-table multicast 01:00:00:23:3f:01 200 int1-int4</pre> <p>Command mode: Global configuration</p>
<p>no mac-address-table multicast all</p> <p>Deletes all permanent multicast FDB entries.</p> <p>Command mode: Global configuration</p>
<p>mac-address-table multicast reload</p> <p>Reloads all permanent multicast FDB entries.</p> <p>Command mode: Global configuration</p>
<p>show mac-address-table multicast</p> <p>Display the current permanent multicast FDB entries.</p> <p>Command mode: All</p>

Static FDB Configuration

Use the following commands to configure static entries in the Forwarding Database (FDB).

Table 231. FDB Configuration Commands

Command Syntax and Usage
<p>mac-address-table static <MAC address> vlan <VLAN number> {port <port alias or number> portchannel <LAG number> adminkey <1-65535>}</p> <p>Adds a permanent FDB entry. Enter the MAC address using the following format, xx:xx:xx:xx:xx:xx.</p> <p>For example, 08:00:20:12:34:56.</p> <p>You can also enter the MAC address as follows: xxxxxxxxxxxx.</p> <p>For example, 080020123456.</p> <p>Command mode: Global configuration</p>
<p>no mac-address-table static <MAC address> <VLAN number></p> <p>Deletes a permanent FDB entry.</p> <p>Command mode: Global configuration</p>
<p>show mac-address-table</p> <p>Display current FDB configuration.</p> <p>Command mode: All</p>

LLDP Configuration

Use the following commands to configure Link Layer Detection Protocol (LLDP).

Table 232. *LLDP Configuration Commands*

Command Syntax and Usage
<p>[no] lldp enable</p> <p>Globally enables or disables LLDP. The default setting is enabled.</p> <p>Command mode: Global configuration</p>
<p>lldp holdtime-multiplier <2-10></p> <p>Configures the message hold time multiplier. The hold time is configured as a multiple of the message transmission interval. The default value is 4.</p> <p>Command mode: Global configuration</p>
<p>no lldp holdtime-multiplier</p> <p>Sets the message hold time multiplier to its default value of 4.</p> <p>Command mode: Global configuration</p>
<p>lldp refresh-interval <5-32768></p> <p>Configures the message transmission interval, in seconds. The default value is 30.</p> <p>Command mode: Global configuration</p>
<p>no lldp refresh-interval</p> <p>Sets the message transmission interval to its default value of 30 seconds.</p> <p>Command mode: Global configuration</p>
<p>lldp reinit-delay <1-10></p> <p>Configures the re-initialization delay interval, in seconds. The re-initialization delay allows the port LLDP information to stabilize before transmitting LLDP messages. The default value is 2.</p> <p>Command mode: Global configuration</p>
<p>no lldp reinit-delay</p> <p>Sets the re-initialization delay interval to its default value of 2 seconds.</p> <p>Command mode: Global configuration</p>
<p>lldp transmission-delay <1-8192></p> <p>Configures the transmission delay interval, in seconds. The transmit delay timer represents the minimum time permitted between successive LLDP transmissions on a port. The default value is 2.</p> <p>Command mode: Global configuration</p>

Table 232. *LLDP Configuration Commands*

Command Syntax and Usage
no lldp transmission-delay Sets the transmission delay interval to its default value of 2 seconds. Command mode: Global configuration
lldp trap-notification-interval <1-3600> Configures the trap notification interval, in seconds. The default value is 5. Command mode: Global configuration
no lldp trap-notification-interval Sets the trap notification interval to its default value of 5 seconds. Command mode: Global configuration
show lldp Display current LLDP configuration. Command mode: All

LLDP Port Configuration

Use the following commands to configure LLDP port options.

Table 233. *LLDP Port Commands*

Command Syntax and Usage
lldp admin-status {tx_only rx_only tx_rx} Configures the LLDP transmission type for the port, as follows: <ul style="list-style-type: none">o Transmit onlyo Receive onlyo Transmit and receive The default setting is tx_rx. Command mode: Interface port
no lldp admin-status Disables LLDP transmission for the port. Command mode: Interface port
[no] lldp trap-notification Enables or disables SNMP trap notification for LLDP messages. Command mode: Interface port
show interface port <port alias or number> lldp Display current LLDP port configuration. Command mode: All

LLDP Optional TLV configuration

Use the following commands to configure LLDP port TLV (Type, Length, Value) options for the selected port.

Table 234. *Optional TLV Commands*

Command Syntax and Usage
[no] lldp tlv all Enables or disables all optional TLV information types. Command mode: Interface port
[no] lldp tlv dcbx Enables or disables the Data Center Bridging Capability Exchange (DCBX) information type. Command mode: Interface port
[no] lldp tlv framesz Enables or disables the Maximum Frame Size information type. Command mode: Interface port
[no] lldp tlv linkaggr Enables or disables the Link Aggregation information type. Command mode: Interface port
[no] lldp tlv macphy Enables or disables the MAC/Phy Configuration information type. Command mode: Interface port
[no] lldp tlv mgmtaddr Enables or disables the Management Address information type. Command mode: Interface port
[no] lldp tlv portdesc Enables or disables the Port Description information type. Command mode: Interface port
[no] lldp tlv portprot Enables or disables the Port and VLAN Protocol ID information type. Command mode: Interface port
[no] lldp tlv portvid Enables or disables the Port VLAN ID information type. Command mode: Interface port
[no] lldp tlv powermdi Enables or disables the Power via MDI information type. Command mode: Interface port

Table 234. *Optional TLV Commands (continued)*

Command Syntax and Usage
[no] lldp tlv protid Enables or disables the Protocol ID information type. Command mode: Interface port
[no] lldp tlv syscap Enables or disables the System Capabilities information type. Command mode: Interface port
[no] lldp tlv sysdescr Enables or disables the System Description information type. Command mode: Interface port
[no] lldp tlv sysname Enables or disables the System Name information type. Command mode: Interface port
[no] lldp tlv vlanname Enables or disables the VLAN Name information type. Command mode: Interface port
show interface port <i><port alias or number></i> lldp Display current LLDP port configuration. Command mode: All

Link Aggregation Group (LAG) Configuration

Link Aggregation Groups (LAGs) can provide super-bandwidth connections between CN4093 or other aggregation capable devices. A LAG is a group of ports that act together, combining their bandwidth to create a single, larger port. Two types of aggregation are available: static LAGs (portchannels) and dynamic LACP LAGs (portchannels).

The two types of aggregation can be configured using the following portchannel ranges:

- static LAGs: 1-64
- LACP LAGs: 65-128

Up to 52 static LAGs can be configured on the CN4093, with the following restrictions:

- Any physical switch port can belong to no more than one LAG.
- Up to 24 ports can belong to the same LAG.
- Configure all ports in a LAG with the same properties (speed, duplex, flow control, STG, VLAN and so on).
- Aggregation from non-Lenovo devices must comply with Cisco® EtherChannel® technology and exclude the PAgP networking protocol.

By default, each LAG is empty and disabled.

Table 235. LAG Configuration Commands

Command Syntax and Usage
<p>portchannel <1-52> port <port alias or number> [enable]</p> <p>Adds a physical port or ports to the current LAG. You can add several ports, with each port separated by a comma (,) or a range of ports, separated by a dash (-). The enable option also enables the LAG.</p> <p>Command mode: Global configuration</p>
<p>no portchannel <1-52> port <port alias or number></p> <p>Removes a physical port or ports from the current LAG.</p> <p>Command mode: Global configuration</p>
<p>[no] portchannel <1-52> enable</p> <p>Enables or disables the current LAG.</p> <p>Command mode: Global configuration</p>
<p>no portchannel <1-52></p> <p>Removes the current LAG configuration.</p> <p>Command mode: Global configuration</p>
<p>show portchannel <1-52></p> <p>Displays current LAG parameters.</p> <p>Command mode: All</p>

Link Aggregation Group (LAG) Hash Configuration

Use the following commands to configure Link Aggregation Group (LAG) hash settings for the CN4093. LAG hash parameters are set globally for the CN4093. The LAG hash settings affect both static LAGs and LACP LAGs.

To achieve the most even traffic distribution, select options that exhibit a wide range of values for your particular network. You may use the configuration settings listed in [Table 236](#) combined with the hash parameters listed in [Table 238](#).

Table 236. *LAG Hash Settings*

Command Syntax and Usage
[no] portchannel thash ingress Enables or disables use of the ingress port to compute the LAG hash value. The default setting is disabled . Command mode: Global configuration
[no] portchannel thash L4port Enables or disables use of Layer 4 service ports (TCP, UDP, etc.) to compute the hash value. The default setting is disabled . Command mode: Global configuration
show portchannel hash Display current LAG hash configuration. Command mode: All

FCoE LAG Hash Configuration

Use the following commands to configure FCoE LAG Hash parameters for the CN4093.

Table 237. *FCoE LAG Hash Configuration Commands*

Command Syntax and Usage
[no] portchannel thash fcoe cntag-id Enables or disables FCoE LAG hashing on the cntag id. Command mode: Global configuration
[no] portchannel thash fcoe destination-id Enables or disables FCoE LAG hashing on the destination id. Command mode: Global configuration
[no] portchannel thash fcoe fabric-id Enables or disables FCoE LAG hashing on the fabric id. Command mode: Global configuration
[no] portchannel thash fcoe originator-id Enables or disables FCoE LAG hashing on the originator id. Command mode: Global configuration
[no] portchannel thash fcoe responder-id Enables or disables FCoE LAG hashing on the responder id. Command mode: Global configuration
[no] portchannel thash fcoe source-id Enables or disables FCoE LAG hashing on the source id. Command mode: Global configuration
show portchannel hash Display current LAG hash configuration. Command mode: All

Layer 2 LAG Hash

Layer 2 LAG hash parameters are set globally. You can enable one or both parameters, to configure any of the following valid combinations:

- SMAC (source MAC only)
- DMAC (destination MAC only)
- SMAC and DMAC

Use the following commands to configure Layer 2 LAG hash parameters for the switch.

Table 238. *Layer 2 LAG Hash Options*

Command Syntax and Usage
[no] portchannel thash l2hash l2-destination-mac-address Enables or disables Layer 2 LAG hashing on the destination MAC. Command mode: Global configuration
[no] portchannel thash l2hash l2-source-mac-address Enables or disables Layer 2 LAG hashing on the source MAC. Command mode: Global configuration
[no] portchannel thash l2hash l2-source-destination-mac Enables or disables Layer 2 LAG hashing on both the source and destination MAC. Command mode: Global configuration
show portchannel hash Displays the current LAG hash settings. Command mode: All

Layer 3 LAG Hash

Layer 3 LAG hash parameters are set globally. You can enable one or both parameters, to configure any of the following valid combinations:

- SIP (source IP only)
- DIP (destination IP only)
- SIP and DIP

Use the following commands to configure Layer 3 LAG hash parameters for the switch.

Table 239. *Layer 3 LAG Hash Options*

Command Syntax and Usage
[no] portchannel thash l3thash l3-destination-ip-address Enables or disables Layer 3 LAG hashing on the destination IP address. Command mode: Global configuration
[no] portchannel thash l3thash l3-source-ip-address Enables or disables Layer 3 LAG hashing on the source IP address. Command mode: Global configuration
[no] portchannel thash l3thash l3-source-destination-ip Enables or disables Layer 3 LAG hashing on both the source and the destination IP address. Command mode: Global configuration
[no] portchannel thash l3thash l3-use-l2-hash Enables or disables use of Layer 2 hash parameters only. When enabled, Layer 3 hashing parameters are cleared. Command mode: Global configuration
show portchannel hash Displays the current LAG hash settings. Command mode: All

Virtual Link Aggregation Control Protocol Configuration

Use the following commands to configure Virtual Link Aggregation Control Protocol (vLAG) for the CN4093.

Table 240. *Virtual Link Aggregation Control Protocol Commands*

Command Syntax and Usage
<p>[no] vlag enable</p> <p>Enables or disables vLAG globally.</p> <p>Command mode: Global configuration</p>
<p>[no] vlag adminkey <1-65535> enable</p> <p>Enables or disables vLAG on the selected LACP <i>admin key</i>. LACP LAGs formed with this <i>admin key</i> will be included in the vLAG configuration.</p> <p>Command mode: Global configuration</p>
<p>vlag auto-recovery <240-3600></p> <p>Sets the duration in seconds of the auto-recovery timer. This timer configures how long after boot-up configuration load, the switch can assume the Primary role from an unresponsive ISL peer and bring up the vLAG ports.</p> <p>The default value is 300.</p> <p>Command mode: Global configuration</p>
<p>no vlag auto-recovery</p> <p>Sets the auto-recovery timer to the default 300 seconds duration.</p> <p>Command mode: Global configuration</p>
<p>[no] vlag peer-gateway</p> <p>Enables or disables the forwarding of packets intended for the switch's vLAG peer. If a packet is received by the switch, but has the MAC address of its vLAG peer, it will be locally forwarded without crossing the vLAG inter-switch link (ISL), thus avoiding the loss of traffic.</p> <p>If the vLAG peer gateway is disabled, packets addressed to the vLAG peer are sent across the ISL and then dropped by the vLAG peer.</p> <p>The default settings is disabled.</p> <p>Note: The vLAG peer gateway must be configured on both vLAG peers.</p> <p>Command mode: Global configuration</p>
<p>[no] vlag portchannel <1-64> enable</p> <p>Enables or disables the vLAG underlying LAG.</p> <p>Command mode: Global configuration</p>
<p>vlag priority <0-65535></p> <p>Configures the vLAG priority for the switch, used for election of Primary and Secondary vLAG switches. The switch with lower priority is elected to the role of Primary vLAG switch.</p> <p>Command mode: Global configuration</p>

Table 240. *Virtual Link Aggregation Control Protocol Commands (continued)*

Command Syntax and Usage
<p>vlag startup-delay <0-3600></p> <p>Sets the vLAG startup-delay value in seconds to the specified value.</p> <p>The default is 120 seconds.</p> <p>Note: Startup delay gives vLAG the ability to prevent traffic loss after a reboot. When a vLAG switch reboots, the vLAG ports are in an errdisabled state. After ISL is up, the vLAG ports are started one by one after the specified startup delay time. This specified time allows the switch to get BGP/OSFP ready through the uplinks so when the vLAG port starts up, all the traffic through those links flows smoothly. Admin status of the ports is honored by the vlag startup delay. For example, if the admin status of the vLAG port is down, those ports will be kept down even after the vLAG start-up delay.</p> <p>Command mode: Global configuration</p>
<p>no vlag startup-delay</p> <p>Sets the vLAG startup-delay to the default 120 seconds duration.</p> <p>Command mode: Global configuration</p>
<p>[no] vlag tier-id <1-512></p> <p>Sets the vLAG peer ID.</p> <p>Command mode: Global configuration</p>
<p>[no] vlag vrrp active</p> <p>Enables or disables vLAG VRRP active mode.</p> <p>Note: If active mode is disabled, the switch will be in passive mode.</p> <p>In active mode, Layer 3 traffic is forwarded in all vLAG related VRRP domains.</p> <p>In passive mode, Layer 3 traffic is forwarded in a vLAG related VRRP domain only if either the switch or its peer virtual router is the VRRP master.</p> <p>Command mode: Global configuration</p>
<p>show vlag</p> <p>Display current vLAG configuration.</p> <p>Command mode: All</p>

vLAG Health Check Configuration

These commands allow you to configure a health check of synchronization between vLAG peers.

Table 241. vLAG Health Check Configuration Options

Command Syntax and Usage
<p>[no] vlag hlthchk connect-retry-interval <1-300> Sets in seconds the vLAG health check connect retry interval, in seconds. The default value is 30. Command mode: Global configuration</p>
<p>[no] vlag hlthchk keepalive-attempts <1-24> Sets the number of vLAG keep alive attempts. The default value is 3. Command mode: Global configuration</p>
<p>[no] vlag hlthchk keepalive-interval <2-300> Sets the time between vLAG keep alive attempts, in seconds. The default value is 5. Command mode: Global configuration</p>
<p>vlag hlthchk peer-ip {<IP address> <IPv6 address>} Configures the IP address of the vLAG peer. Command mode: Global configuration</p>

vLAG ISL Configuration

These commands allow you to configure a dedicated inter-switch link (ISL) for synchronization between vLAG peers.

Table 242. vLAG ISL Configuration Options

Command Syntax and Usage
<p>[no] vlag isl adminkey <1-65535> Enables or disables vLAG Inter-Switch Link (ISL) on the selected LACP <i>admin key</i>. LACP LAGs formed with this <i>admin key</i> will be included in the ISL. Command mode: Global configuration</p>
<p>[no] vlag isl portchannel <1-64> Enables or disables vLAG Inter-Switch Link (ISL) on the selected LAG. Command mode: Global configuration</p>
<p>show vlag information Displays current vLAG parameters. Command mode: All</p>

Link Aggregation Control Protocol Configuration

Use the following commands to configure Link Aggregation Control Protocol (LACP) for the CN4093.

Table 243. *Link Aggregation Control Protocol Commands*

Command Syntax and Usage
<p>lacp system-priority <1-65535></p> <p>Defines the priority value for the CN4093. Lower numbers provide higher priority.</p> <p>The default value is 32768.</p> <p>Command mode: Global configuration</p>
<p>lacp timeout {short long}</p> <p>Defines the timeout period before invalidating LACP data from a remote partner. Choose short (3 seconds) or long (90 seconds).</p> <p>The default value is long.</p> <p>Note: It is recommended that you use a timeout value of long, to reduce LACPDU processing. If your CN4093's CPU utilization rate remains at 100% for periods of 90 seconds or more, consider using static LAGs instead of LACP.</p> <p>Command mode: Global configuration</p>
<p>default lacp [system-priority timeout]</p> <p>Restores either the VFSM priority value, timeout period or both to their default values.</p> <p>Command mode: Global configuration</p>
<p>no lacp <1-65535></p> <p>Deletes a selected LACP LAG, based on its <i>admin key</i>. This command is equivalent to disabling LACP on each of the ports configured with the same <i>admin key</i>.</p> <p>Command mode: Global configuration</p>
<p>portchannel <LAG ID (65-128)> lacp key <1-65535></p> <p>Enables a static LACP LAG. In this mode, ports sharing the same LACP admin key can form a single LAG, with the specified LAG ID. The active LAG is picked based on the ports which occupy first the LAG ID. Member ports that cannot join this LAG are prohibited from forming secondary LACP groups. Instead, they are set in a suspend state where they discard all non-LACP traffic.</p> <p>Command mode: Global configuration</p>

Table 243. *Link Aggregation Control Protocol Commands*

Command Syntax and Usage
no portchannel <LAG ID (65-128)> Deletes the specified static LACP LAG. Command mode: Global configuration
show lacp Display current LACP configuration. Command mode: All

LACP Port Configuration

Use the following commands to configure Link Aggregation Control Protocol (LACP) for the selected port.

Table 244. *Link Aggregation Control Protocol Commands*

Command Syntax and Usage
lacp key <1-65535> Set the admin key for this port. Only ports with the same <i>admin key</i> and <i>oper key</i> (operational state generated internally) can form a LACP LAG. Command mode: Interface port
lacp mode {off active passive} Set the LACP mode for this port, as follows: <ul style="list-style-type: none">o off turns LACP off for this port. You can use this port to manually configure a static LAG.o active turns LACP on and set this port to active. Active ports initiate LACPDU's.o passive turns LACP on and set this port to passive. Passive ports do not initiate LACPDU's, but respond to LACPDU's from active ports. The default value is off . Command mode: Interface port
lacp priority <1-65535> Sets the priority value for the selected port. Lower numbers provide higher priority. The default value is 32768. Command mode: Interface port
lacp suspend-individual Sets the port in LACP suspended state if it does not receive LACPDU's anymore. Note: The default value is individual for internal switch ports and suspend-individual for external switch ports. Command mode: Interface port/Interface portchannel

Table 244. *Link Aggregation Control Protocol Commands*

Command Syntax and Usage
no lacp suspend-individual Sets the port in LACP individual state if it does not receive LACPDU's anymore. Command mode: Interface port/Interface portchannel
port-channel min-links <1-16> Set the minimum number of links for the LACP LAG to which this port belongs. If the specified minimum number of ports are not available, the LAG is placed in the down state. Command mode: Interface port
default lacp [key mode priority suspend-individual] Restores the selected parameters to their default values. Command mode: Interface port/Interface portchannel
show interface port <port alias or number> lacp Displays the current LACP configuration for this port. Command mode: All

Layer 2 Failover Configuration

Use these commands to configure Layer 2 Failover. For more information about Layer 2 Failover, see “High Availability” in the *Enterprise NOS Application Guide*.

Table 245. *Layer 2 Failover Configuration Commands*

Command Syntax and Usage
<p>[no] failover enable</p> <p>Globally enables or disables Layer 2 Failover.</p> <p>Command mode: Global configuration</p>
<p>[no] failover vlan</p> <p>Globally turns VLAN monitor on or off.</p> <p>When the VLAN Monitor is on, the switch automatically disables only internal ports that belong to the same VLAN as ports in the failover trigger.</p> <p>When the VLAN Monitor is off, the switch automatically disables all of the internal ports.</p> <p>The default value is off.</p> <p>Command mode: Global configuration</p>
<p>show failover trigger [information]</p> <p>Displays current Layer 2 Failover parameters.</p> <p>Command mode: All</p>

Failover Trigger Configuration

The following table displays Failover Trigger configuration commands.

Table 246. *Failover Trigger Configuration Commands*

Command Syntax and Usage
[no] failover trigger <1-8> enable Enables or disables the Failover trigger. Command mode: Global configuration
no failover trigger <1-8> Deletes the Failover trigger. Command mode: Global configuration
failover trigger <1-8> limit <0-1024> Configures the minimum number of operational links allowed within each trigger before the trigger initiates a failover event. If you enter a value of zero (0), the switch triggers a failover event only when no links in the trigger are operational. Command mode: Global configuration
show failover trigger <1-8> Displays the current failover trigger settings. Command mode: All

Auto Monitor Configuration

The following table displays Auto Monitor configuration commands.

Table 247. *Auto Monitor Configuration Commands*

Command Syntax and Usage
[no] failover trigger <1-8> amon adminkey <1-65535> Adds or removes an LACP <i>admin key</i> to the Auto Monitor. LACP LAGs formed with this <i>admin key</i> will be included in the Auto Monitor. Command mode: Global configuration
[no] failover trigger <1-8> amon portchannel <LAG number> Adds or removes a LAG to the Auto Monitor. Command mode: Global configuration

Failover Manual Monitor Port Configuration

Use these commands to define the port link(s) to monitor. The Manual Monitor Port configuration accepts only external uplink ports.

Note: AMON and MMON configurations are mutually exclusive.

Table 248. Failover Manual Monitor Port Commands

Command Syntax and Usage
<p>[no] failover trigger <1-8> mmon monitor adminkey <1-65535></p> <p>Adds or removes an LACP <i>admin key</i> to the Manual Monitor Port configuration. LACP LAGs formed with this <i>admin key</i> will be included in the Manual Monitor Port configuration.</p> <p>Command mode: Global configuration</p>
<p>[no] failover trigger <1-8> mmon monitor member <port alias or number></p> <p>Adds or removes the selected port to the Manual Monitor Port configuration.</p> <p>Command mode: Global configuration</p>
<p>[no] failover trigger <1-8> mmon monitor portchannel <LAG number></p> <p>Adds or removes the selected LAG to the Manual Monitor Port configuration.</p> <p>Command mode: Global configuration</p>
<p>show failover trigger <1-8></p> <p>Displays the current Failover settings.</p> <p>Command mode: All</p>

Failover Manual Monitor Control Configuration

Use these commands to define the port link(s) to control. The Manual Monitor Control configuration accepts internal and external ports, but not management ports.

Table 249. *Failover Manual Monitor Control Commands*

Command Syntax and Usage
<p>[no] failover trigger <1-8> mmon control adminkey <1-65535></p> <p>Adds or removes an LACP <i>admin key</i> to the Manual Monitor Control configuration. LACP LAGs formed with this <i>admin key</i> will be included in the Manual Monitor Control configuration.</p> <p>Command mode: Global configuration</p>
<p>[no] failover trigger <1-8> mmon control member <port alias or number></p> <p>Adds or removes the selected port to the Manual Monitor Control configuration.</p> <p>Command mode: Global configuration</p>
<p>[no] failover trigger <1-8> mmon control portchannel <LAG number></p> <p>Adds or removes the selected LAG to the Manual Monitor Control configuration.</p> <p>Command mode: Global configuration</p>
<p>[no] failover trigger <1-8> mmon control vmember <UFP vport></p> <p>Adds or removes the specified Unified Fabric Port virtual port to the Manual Monitor Control configuration.</p> <p>Command mode: Global configuration</p>
<p>show failover trigger <1-8></p> <p>Displays the current Failover settings.</p> <p>Command mode: All</p>

Hot Links Configuration

Use these commands to configure Hot Links. For more information about Hot Links, see “Hot Links” in the *Enterprise NOS 8.4 Application Guide*.

Table 250. *Hot Links Configuration Commands*

Command Syntax and Usage
<p>[no] hotlinks bpdu</p> <p>Enables or disables flooding of Spanning-Tree BPDUs on the active Hot Links interface when the interface belongs to a Spanning Tree group that is globally turned off. This feature can prevent unintentional loop scenarios (for example, if two uplinks come up at the same time).</p> <p>The default setting is disabled.</p> <p>Command mode: Global configuration</p>
<p>[no] hotlinks enable</p> <p>Globally enables or disables Hot Links.</p> <p>Command mode: Global configuration</p>
<p>[no] hotlinks fdb-update</p> <p>Enables or disables FDB Update, which allows the switch to send FDB and MAC update packets over the active interface.</p> <p>The default value is disabled.</p> <p>Command mode: Global configuration</p>
<p>hotlinks fdb-update-rate <10-1000></p> <p>Configures the FDB Update rate, in packets per second.</p> <p>Command mode: Global configuration</p>
<p>show hotlinks</p> <p>Displays current Hot Links parameters.</p> <p>Command mode: All</p>

Hot Links Trigger Configuration

The following table displays Hot Links Trigger configuration commands.

Table 251. Hot Links Trigger Configuration Commands

Command Syntax and Usage
[no] hotlinks trigger <1-200> enable Enables or disables the Hot Links trigger. Command mode: Global configuration
hotlinks trigger <1-200> forward-delay <0-3600> Configures the Forward Delay interval, in seconds. The default value is 1. Command mode: Global configuration
[no] hotlinks trigger <1-200> name <1-32 characters> Defines a name for the Hot Links trigger. Command mode: Global configuration
[no] hotlinks trigger <1-200> preemption Enables or disables pre-emption, which allows the Master interface to transition to the Active state whenever it becomes available. The default setting is enabled. Command mode: Global configuration
no hotlinks trigger <1-200> Deletes the Hot Links trigger. Command mode: Global configuration
show hotlinks trigger <1-200> Displays the current Hot Links trigger settings. Command mode: All

Hot Links Master Configuration

Use the following commands to configure the Hot Links Master interface.

Table 252. Hot Links Master Configuration Commands

Command Syntax and Usage
<p>[no] hotlinks trigger <1-200> master adminkey <0-65535> Adds or removes an LACP <i>admin key</i> to the Master interface. LACP LAGs formed with this <i>admin key</i> will be included in the Master interface. Command mode: Global configuration</p>
<p>[no] hotlinks trigger <1-200> master port <port alias or number> Adds or removes the selected port to the Hot Links Master interface. Command mode: Global configuration</p>
<p>[no] hotlinks trigger <1-200> master portchannel <LAG number> Adds or removes the selected LAG to the Master interface. Command mode: Global configuration</p>
<p>show hotlinks trigger <1-200> Displays the current Hot Links trigger settings. Command mode: All</p>

Hot Links Backup Configuration

Use the following commands to configure the Hot Links Backup interface.

Table 253. Hot Links Backup Configuration Commands

Command Syntax and Usage
<p>[no] hotlinks trigger <1-200> backup adminkey <0-65535> Adds or removes an LACP <i>admin key</i> to the Backup interface. LACP LAGs formed with this <i>admin key</i> will be included in the Backup interface. Command mode: Global configuration</p>
<p>[no] hotlinks trigger <1-200> backup port <port alias or number> Adds or removes the selected port to the Hot Links Backup interface. Command mode: Global configuration</p>
<p>[no] hotlinks trigger <1-200> backup portchannel <LAG number> Adds or removes the selected LAG to the Backup interface. Command mode: Global configuration</p>
<p>show hotlinks trigger <1-200> Displays the current Hot Links trigger settings. Command mode: All</p>

VLAN Configuration

These commands configure VLAN attributes, change the status of each VLAN, change the port membership of each VLAN, and delete VLANs.

Up to 4094 VLANs can be configured on the CN4093. VLANs can be assigned any number between 1 and 4094, except the reserved VLANs.

Table 254. *VLAN Configuration Commands*

<p>Command Syntax and Usage</p>
<p>vlan <VLAN number></p> <p>Enter VLAN configuration mode.</p> <p>Command mode: Global configuration</p>
<p>[no] cpu</p> <p>Configures the switch to forward unregistered IP multicast traffic to the MP, which adds an entry in the IPMC table, as follows:</p> <ul style="list-style-type: none"> o If no Mrouter is present, drop subsequent packets with same IPMC. o If an Mrouter is present, forward subsequent packets to the Mrouter(s) on the ingress VLAN. <p>The default setting is enabled.</p> <p>Note: If both flood and cpu are disabled, then the switch drops all unregistered IPMC traffic.</p> <p>Command mode: VLAN</p>
<p>[no] flood</p> <p>Configures the switch to flood unregistered IP multicast traffic to all ports. The default setting is enabled.</p> <p>Note: If none of the IGMP hosts reside on the VLAN of the streaming server for a IPMC group, you must enable IGMP flooding to ensure that multicast data is forwarded across the VLANs for that IPMC group.</p> <p>Note: If both flood and cpu are disabled, then the switch drops all unregistered IPMC traffic.</p> <p>Command mode: VLAN</p>
<p>[no] management</p> <p>Configures this VLAN as a management VLAN. You must have at least one internal port in each new management VLAN. Management port (MGT1) is automatically added to management VLAN.</p> <p>Command mode: VLAN</p>
<p>name <1-32 characters></p> <p>Assigns a name to the VLAN or changes the existing name.</p> <p>The default VLAN name is the first one.</p> <p>Command mode: VLAN</p>

Table 254. *VLAN Configuration Commands (continued)*

Command Syntax and Usage
no name Resets the VLAN name to its default value. Command mode: VLAN
[no] optflood Enables or disables optimized flooding. When enabled, optimized flooding avoids packet loss during the learning period. The default setting is disabled . Command mode: VLAN
protocol-vlan <1-8> Configures the Protocol-based VLAN (PVLAN). Command mode: VLAN
shutdown Disables local traffic on the specified VLAN. Default setting is enabled (no shutdown). Command mode: VLAN
no shutdown Enables local traffic on the specified VLAN. Default setting is enabled (no shutdown). Command mode: VLAN
stg <STG number> Assigns a VLAN to a Spanning Tree Group. Note: For MST, no VLAN assignment is required. VLANs are mapped from CIST. Command mode: VLAN
[no] vmap <1-128> [extports intports] Adds or removes a VLAN Map to the VLAN membership. You can choose to limit operation of the VLAN Map to internal ports only or external ports only. If you do not select a port type, the VMAP is applied to the entire VLAN. Command mode: VLAN
show vlan information Displays the current VLAN configuration. Command mode: All

Note: All ports must belong to at least one VLAN. Any port which is removed from a VLAN and which is not a member of any other VLAN is automatically added to default VLAN 1. You cannot add a port to more than one VLAN unless the port has VLAN tagging turned **on**.

Protocol-Based VLAN Configuration

Use the following commands to configure Protocol-based VLAN for the selected VLAN.

Table 255. Protocol VLAN Configuration Commands

Command Syntax and Usage
<p>[no] protocol-vlan <1-8> enable Enables or disables the selected protocol on the VLAN. Command mode: VLAN</p>
<p>protocol-vlan <1-8> frame-type {ether2 llc snap} <Ethernet type> Configures the frame type and the Ethernet type for the selected protocol. Ethernet type consists of a 4-digit (16 bit) hex code, such as 0080 (IPv4). Command mode: VLAN</p>
<p>[no] protocol-vlan <1-8> member <port alias or number> Adds or removes a port to the selected PVLAN. Command mode: VLAN</p>
<p>protocol-vlan <1-8> priority <0-7> Configures the priority value for this PVLAN. Command mode: VLAN</p>
<p>protocol-vlan <1-8> protocol <protocol type> Selects a pre-defined protocol, as follows:</p> <ul style="list-style-type: none"> o decEther2: DEC Local Area Transport o ipv4Ether2: Internet IP (IPv4) o ipv6Ether2: IPv6 o ipx802.2: Novell IPX 802.2 o ipx802.3: Novell IPX 802.3 o ipxEther2: Novell IPX o ipxSnap: Novell IPX SNAP o netbios: NetBIOS 802.2 o rarpEther2: Reverse ARP o sna802.2: SNA 802.2 o snaEther2: Lenovo SNA Service on Ethernet o vinesEther2: Banyan VINES o xnsEther2: XNS Compatibility <p>Command mode: VLAN</p>
<p>[no] protocol-vlan <1-8> tag-pvlan <port alias or number> Defines a port that will be tagged by the selected protocol on this VLAN. Command mode: VLAN</p>

Table 255. *Protocol VLAN Configuration Commands (continued)*

Command Syntax and Usage
no protocol-vlan <1-8> Deletes the selected protocol configuration from the VLAN. Command mode: VLAN
show protocol-vlan <1-8> Displays current parameters for the selected PVLAN. Command mode: All

Private VLAN Configuration

Use the following commands to configure Private VLAN.

Table 256. *Private VLAN Configuration Commands*

Command Syntax and Usage
<p>private-vlan association [add remove] <secondary VLAN list></p> <p>Configures Private VLAN mapping between a primary VLAN and secondary VLANs. Enter the primary VLAN ID. If no optional parameter is specified, the list of secondary VLANs, replaces the currently associated secondary VLANs. Otherwise:</p> <ul style="list-style-type: none">o add appends the secondary VLANs to the ones currently associatedo remove excludes the secondary VLANs from the ones currently associated <p>Command mode: VLAN</p>
<p>[no] private-vlan community</p> <p>Enables or disables the VLAN type as a community VLAN.</p> <p>Community VLANs carry upstream traffic from host ports. A Private VLAN may have multiple community VLANs.</p> <p>Command mode: VLAN</p>
<p>[no] private-vlan isolated</p> <p>Enables or disables the VLAN type as an isolated VLAN.</p> <p>The isolated VLAN carries unidirectional traffic from host ports. A Private VLAN may have only one isolated VLAN.</p> <p>Command mode: VLAN</p>
<p>[no] private-vlan primary</p> <p>Enables or disables the VLAN type as a Primary VLAN.</p> <p>A Private VLAN must have only one primary VLAN. The primary VLAN carries unidirectional traffic to ports on the isolated VLAN or to community VLAN.</p> <p>Command mode: VLAN</p>
<p>show vlan private-vlan [type]</p> <p>Displays private VLAN information. The type option lists only the VLAN type for each private VLAN: community, isolated or primary.</p> <p>Command mode: All</p>

Layer 3 Configuration

The following table describes basic Layer 3 Configuration commands. The following sections provide more detailed information and commands.

Table 257. *Layer 3 Configuration Commands*

Command Syntax and Usage
<p>interface ip <interface number></p> <p>Configures the IP Interface. The CN4093 supports up to 128 IP interfaces. To view command options, see page 444.</p> <p>Command mode: Global configuration</p>
<p>ip pim component <1-2></p> <p>Enters Protocol Independent Multicast (PIM) component configuration mode. To view command options, see page 526.</p> <p>Command mode: Global configuration</p>
<p>ip router-id <IP address></p> <p>Sets the router ID.</p> <p>Command mode: Global configuration</p>
<p>route-map <1-32></p> <p>Enter IP Route Map mode. To view command options, see page 455.</p> <p>Command mode: Global configuration</p>
<p>router bgp</p> <p>Configures Border Gateway Protocol. To view command options, see page 485.</p> <p>Command mode: Global configuration</p>
<p>router ospf</p> <p>Configures OSPF. To view command options, see page 462.</p> <p>Command mode: Global configuration</p>
<p>router rip</p> <p>Configures the Routing Interface Protocol. To view command options, see page 459.</p> <p>Command mode: Global configuration</p>
<p>router vrrp</p> <p>Configures Virtual Router Redundancy. To view command options, see page 512.</p> <p>Command mode: Global configuration</p>

Table 257. *Layer 3 Configuration Commands*

Command Syntax and Usage
ipv6 router ospf Enters OSPFv3 configuration mode. To view command options, see page 471 . Command mode: Global configuration
show layer3 Displays the current IP configuration. Command mode: All

IP Interface Configuration

The CN4093 supports up to 128 IP interfaces. Each IP interface represents the CN4093 on an IP on your network. The Interface option is disabled by default.

IP Interfaces 127 and 128 are reserved for switch management. If the IPv6 feature is enabled on the switch, IP Interface 125 and 126 are also reserved.

Note: To maintain connectivity between the management module and the CN4093, use the management module interface to change the IP address of the switch.

Table 258. *IP Interface Configuration Commands*

Command Syntax and Usage
<p>interface ip <interface number> Enter IP interface mode. Command mode: Global configuration</p>
<p>[no] enable Enables or disables this IP interface. Command mode: Interface IP</p>
<p>ip address <IP address> [<IP netmask>] Configures the IP address of the switch interface, using dotted decimal notation. Command mode: Interface IP</p>
<p>ip netmask <IP netmask> Configures the IP subnet address mask for the interface, using dotted decimal notation. Command mode: Interface IP</p>
<p>[no] ip6host Enables or disables the IPv6 Host Mode on this interface. The default setting is disabled for data interfaces, and enabled for the management interface. Command mode: Interface IP</p>
<p>ipv6 address <IPv6 address> [enable] ipv6 address <IPv6 address> <IPv6 prefix length (1-128)> [enable] ipv6 address <IPv6 address> <IPv6 prefix length (1-128)> anycast [enable] Configures the IPv6 address of the switch interface, using hexadecimal format with colons. Command mode: Interface IP</p>
<p>ipv6 prefixlen <IPv6 prefix length (1-128)> Configures the subnet IPv6 prefix length. The default value is 0. Command mode: Interface IP</p>

Table 258. *IP Interface Configuration Commands (continued)*

Command Syntax and Usage
<p>ipv6 secaddr6 address <IPv6 address> <IPv6 prefix length (1-128)> [anycast]</p> <p>Configures the secondary IPv6 address of the switch interface, using hexadecimal format with colons.</p> <p>Command mode: Interface IP</p>
<p>no ipv6 secaddr6</p> <p>Removes the secondary IPv6 address of the switch interface.</p> <p>Command mode: Interface IP</p>
<p>[no] ipv6 unreachable</p> <p>Enables or disables sending of ICMP Unreachable messages.</p> <p>The default setting is enabled.</p> <p>Command mode: Interface IP</p>
<p>[no] relay</p> <p>Enables or disables the BOOTP relay on this interface.</p> <p>The default setting is enabled.</p> <p>Command mode: Interface IP</p>
<p>vlan <VLAN number></p> <p>Configures the VLAN number for this interface. Each interface can belong to one VLAN.</p> <p>Command mode: Interface IP</p>
<p>no interface ip <interface number></p> <p>Removes this IP interface.</p> <p>Command mode: Interface IP</p>
<p>show interface ip <interface number></p> <p>Displays the current interface settings.</p> <p>Command mode: All</p>

Default Gateway Configuration

The switch can be configured with up to 4 IPv4 gateways. Gateways 1–4 are reserved for default gateways.

Default gateway indices are:

- 1-2: Data gateways
- 3: External management gateway
- 4: Internal management gateway

This option is disabled by default.

Table 259. *Default Gateway Configuration Commands*

Command Syntax and Usage
<p>ip gateway <1-4> address <IP address> [enable]</p> <p>Configures the IP address of the default IP gateway using dotted decimal notation. The enable option also enables the IP gateway for use.</p> <p>Command mode: Global configuration</p>
<p>[no] ip gateway <1-4> arp-health-check</p> <p>Enables or disables Address Resolution Protocol (ARP) health checks. The default setting is disabled.</p> <p>Note: The arp option does not apply to management gateways.</p> <p>Command mode: Global configuration</p>
<p>[no] ip gateway <1-4> enable</p> <p>Enables or disables the gateway for use.</p> <p>Command mode: Global configuration</p>
<p>ip gateway <1-4> interval <0-60></p> <p>The switch pings the default gateway to verify that it's up. This command sets the time between health checks. The range is from 0 to 60 seconds.</p> <p>The default is 2.</p> <p>Command mode: Global configuration</p>
<p>ip gateway <1-4> retry <1-120></p> <p>Sets the number of failed health check attempts required before declaring this default gateway inoperative. The range is from 1 to 120 attempts.</p> <p>The default is 8 attempts.</p> <p>Command mode: Global configuration</p>

Table 259. *Default Gateway Configuration Commands (continued)*

Command Syntax and Usage
no ip gateway <1-4> Deletes the gateway from the configuration. Command mode: Global configuration
show ip gateway <1-4> Displays the current gateway settings. Command mode: All

IPv4 Static Route Configuration

Up to 128 IPv4 static routes can be configured.

Table 260. *IPv4 Static Route Configuration Commands*

Command Syntax and Usage
<p>ip route <i><IP subnet></i> <i><IP netmask></i> <i><IP nexthop></i> [<i><interface number></i>]</p> <p>Adds a static route. You will be prompted to enter a destination IP address, destination subnet mask, and gateway address. Enter all addresses using dotted decimal notation.</p> <p>Command mode: Global configuration</p>
<p>no ip route <i><IP subnet></i> <i><IP netmask></i> [<i><interface number></i>]</p> <p>Removes a static route. The destination address of the route to remove must be specified using dotted decimal notation.</p> <p>Command mode: Global configuration</p>
<p>no ip route destination-address <i><IP address></i></p> <p>Clears all IP static routes with this destination.</p> <p>Command mode: Global configuration</p>
<p>no ip route gateway <i><IP address></i></p> <p>Clears all IP static routes that use this gateway.</p> <p>Command mode: Global configuration</p>
<p>ip route interval <i><1-60></i></p> <p>Configures the ping interval for ECMP health checks, in seconds. The default value is 1.</p> <p>Command mode: Global configuration</p>
<p>ip route retries <i><1-60></i></p> <p>Configures the number of health check retries allowed before the switch declares that the gateway is down. The default value is 3.</p> <p>Command mode: Global configuration</p>
<p>show ip route static</p> <p>Displays the current IP static routes.</p> <p>Command mode: All</p>

IP Multicast Route Configuration

The following table describes the IP Multicast (IPMC) route commands.

Note: Before you can add an IPMC route, IGMP must be turned on, IGMP Snooping/Relay must be enabled, and the required VLANs must be added to IGMP Snooping/Relay.

Table 261. IP Multicast Route Configuration Commands

Command Syntax and Usage
<p>[no] ip mroute <IPMC destination> <VLAN number> <port alias or number> {primary backup host} [<virtual router ID> none]</p> <p>Adds or removes a static multicast route. The destination address, VLAN, member port of the route and route type (primary, backup or host) must be specified.</p> <p>Command mode: Global configuration</p>
<p>[no] ip mroute <IP address> <VLAN number> adminkey <1-65535> {primary backup host} [<virtual router ID> none]</p> <p>Adds or removes a static multicast route. The destination address, VLAN, member port of the route and route type (primary, backup or host) must be specified.</p> <p>Command mode: Global configuration</p>
<p>[no] ip mroute <IP address> <VLAN number> portchannel <LAG number> {primary backup host} [<virtual router ID> none]</p> <p>Adds or removes a static multicast route. The destination address, VLAN, and member LAG of the route must be specified. Indicate whether the route is used for a primary, backup, or host multicast router.</p> <p>Command mode: Global configuration</p>
<p>no ip mroute all</p> <p>Removes all the static multicast routes configured.</p> <p>Command mode: Global configuration</p>
<p>show ip mroute</p> <p>Displays the current IP multicast routes.</p> <p>Command mode: All</p>

ARP Configuration

Address Resolution Protocol (ARP) is the TCP/IP protocol that resides within the Internet layer. ARP resolves a physical address from an IP address. ARP queries machines on the local network for their physical addresses. ARP also maintains IP to physical address pairs in its cache memory. In any IP communication, the ARP cache is consulted to see if the IP address of the computer or the router is present in the ARP cache. Then the corresponding physical address is used to send a packet.

Table 262. *ARP Configuration Commands*

Command Syntax and Usage
ip arp rearp <2-120> Defines re-ARP period, in minutes, for entries in the switch arp table. When ARP entries reach this value the switch will re-ARP for the address to attempt to refresh the ARP cache. The default value is 5. Command mode: Global configuration
show ip arp Displays the current ARP configurations. Command mode: All

ARP Static Configuration

Static ARP entries are permanent in the ARP cache and do not age out like the ARP entries that are learned dynamically. Static ARP entries enable the switch to reach the hosts without sending an ARP broadcast request to the network. Static ARPs are also useful to communicate with devices that do not respond to ARP requests. Static ARPs can also be configured on some gateways as a protection against malicious ARP Cache corruption and possible DOS attacks.

Table 263. ARP Static Configuration Commands

Command Syntax and Usage
<p>ip arp <IP address> <MAC address> vlan <vlan number> port <port alias or number></p> <p>Adds a permanent ARP entry. To enable ARP on a LAG, add the port number of a member of the LAG.</p> <p>Command mode: Global configuration</p>
<p>ip arp <destination unicast IP address> <destination multicast MAC address> vlan <cluster vlan number></p> <p>Adds a static multicast ARP entry for Network Load Balancing (NLB).</p> <p>Command mode: Global configuration</p>
<p>no ip arp [<IP address> all]</p> <p>Deletes a specific permanent ARP entry or all ARP entries.</p> <p>Command mode: Global configuration</p>
<p>show ip arp static</p> <p>Displays current static ARP configuration.</p> <p>Command mode: All</p>

Dynamic ARP Inspection Configuration

Dynamic ARP Inspection (DAI) is a security feature that enables the device to intercept and examine all ARP request and response packets in a subnet and discard those packets with invalid IP to MAC address bindings.

DAI uses information gathered by DHCP Snooping to validate ARP information that travels through ports marked as being not trusted.

Table 264. *Dynamic ARP Inspection Configuration Options*

Command Syntax and Usage
[no] ip arp inspection vlan <VLAN ID (1-4094)> Enables or disables DAI on the selected VLANs. Command mode: Global configuration
[no] ip arp inspection trust Configures the current port to be a DAI trusted port. On a DAI trusted port, all ARP packets skip the security check. The default settings is untrusted. Note: Configuring trusted interfaces as being untrusted can result in a loss of connectivity. Command mode: Interface port
[no] logging log arp-inspection Enables or disables logging for DAI. The default setting is enabled. Command mode: Global configuration
show ip arp inspection Displays the current DAI configuration settings. For mode details, see page 99 . Command mode: All

IP Forwarding Configuration

The following table displays IP Forwarding configuration commands.

Table 265. *IP Forwarding Configuration Commands*

Command Syntax and Usage
[no] ip routing Enables or disables IP forwarding (routing) on the CN4093. The default setting is enabled . Command mode: Global configuration
[no] ip routing directed-broadcasts Enables or disables forwarding directed broadcasts. The default setting is disabled . Command mode: Global configuration
[no] ip routing icmp6-redirect Enables or disables IPv6 ICMP re-directs. The default setting is disabled . Command mode: Global configuration
[no] ip routing no-icmp-redirect Enables or disables ICMP re-directs. The default setting is disabled . Command mode: Global configuration
show ip routing Displays the current IP forwarding settings. Command mode: All

Network Filter Configuration

The following table displays Network Filter configuration commands.

Table 266. *IP Network Filter Configuration Commands*

Command Syntax and Usage
<p>ip match-address <1-256> <IP address> <IP netmask></p> <p>Sets the starting IP address and IP Netmask for this filter to define the range of IP addresses that will be accepted by the peer when the filter is enabled.</p> <p>The default address is 0.0.0.0 0.0.0.0.</p> <p>Note: For Border Gateway Protocol (BGP), assign the network filter to an access-list in a route map, then assign the route map to the peer.</p> <p>Command mode: Global configuration.</p>
<p>[no] ip match-address <1-256> enable</p> <p>Enables or disables the Network Filter configuration.</p> <p>Command mode: Global configuration</p>
<p>no ip match-address <1-256></p> <p>Deletes the Network Filter configuration.</p> <p>Command mode: Global configuration</p>
<p>show ip match-address [<1-256>]</p> <p>Displays the current the Network Filter configuration.</p> <p>Command mode: All</p>

Routing Map Configuration

Note: The *map number* (1-32) represents the routing map you wish to configure. Routing maps control and modify routing information.

Table 267. *Routing Map Configuration Commands*

Command Syntax and Usage
<p>route-map <1-32> Enter route map configuration mode. Command mode: Global configuration</p>
<p>[no] access-list <1-8> Configures the Access List. For more information, see page 457. Command mode: Route map</p>
<p>[no] as-path-list <1-8> Configures the Autonomous System (AS) Filter. For more information, see page 458. Command mode: Route map</p>
<p>[no] as-path-preference <1-65535> Sets the AS path preference of the matched route. You can configure up to 32 path preferences. Command mode: Route map</p>
<p>[no] enable Enables or disables the route map. Command mode: Route map</p>
<p>[no] local-preference <0-4294967294> Sets the local preference of the matched route, which affects both inbound and outbound directions. The path with the higher preference is preferred. Command mode: Route map</p>
<p>[no] metric <1-4294967294> Sets the metric of the matched route. Command mode: Route map</p>
<p>[no] metric-type {1 2} Assigns the type of OSPF metric. The default is type 1.</p> <ul style="list-style-type: none"> o Type 1—External routes are calculated using both internal and external metrics. o Type 2—External routes are calculated using only the external metrics. Type 1 routes have more cost than Type 2. o none—Removes the OSPF metric. <p>Command mode: Route map</p>

Table 267. *Routing Map Configuration Commands (continued)*

Command Syntax and Usage
<p>precedence <1-255></p> <p>Sets the precedence of the route map. The smaller the value, the higher the precedence.</p> <p>The default value is 10.</p> <p>Command mode: Route map</p>
<p>[no] weight <0-65534></p> <p>Sets the weight of the route map.</p> <p>Command mode: Route map</p>
<p>no route-map <1-32></p> <p>Deletes the route map.</p> <p>Command mode: Route map</p>
<p>show route-map [<1-32>]</p> <p>Displays the current route configuration.</p> <p>Command mode: All</p>

IP Access List Configuration

Note: The *route map number* (1-32) and the *access list number* (1-8) represent the IP access list you wish to configure.

Table 268. IP Access List Configuration Commands

Command Syntax and Usage
access-list <1-8> action { permit deny } Permits or denies action for the access list. Command mode: Route map
[no] access-list <1-8> enable Enables or disables the access list. Command mode: Route map
[no] access-list <1-8> match-address <1-256> Sets the network filter number. See “Network Filter Configuration” on page 454 for details. Command mode: Route map
[no] access-list <1-8> metric <1-4294967294> Sets the metric value in the AS-External (ASE) LSA. Command mode: Route map
no access-list <1-8> Deletes the access list. Command mode: Route map
show route-map <1-32> access-list <1-8> Displays the current Access List configuration. Command mode: All

Autonomous System Filter Path Configuration

Note: The *rmap number* and the *path number* represent the AS path you wish to configure.

Table 269. AS Filter Configuration Commands

Command Syntax and Usage
as-path-list <1-8> action { permit deny } Permits or denies Autonomous System filter action. Command mode: Route map
as-path-list <1-8> as-path <1-65535> Sets the Autonomous System filter's path number. Command mode: Route map
[no] as-path-list <1-8> enable Enables or disables the Autonomous System filter. Command mode: Route map
no as-path-list <1-8> Deletes the Autonomous System filter. Command mode: Route map
show route-map <1-32> as-path-list <1-8> Displays the current Autonomous System filter configuration. Command mode: All

Routing Information Protocol Configuration

RIP commands are used for configuring Routing Information Protocol parameters. This option is turned off by default.

Table 270. *Routing Information Protocol Commands*

Command Syntax and Usage
router rip Enter Router RIP configuration mode. Command mode: Global Configuration
[no] enable Globally enables or disables RIP. Command mode: Router RIP
timers update <1-120> Configures the time interval for sending for RIP table updates, in seconds. The default value is 30. Command mode: Router RIP
show ip rip Displays the current RIP configuration. Command mode: All

RIP Interface Configuration

The RIP Interface commands are used for configuring Routing Information Protocol parameters for the selected interface.

Note: Do not configure RIP version 1 parameters if your routing equipment uses RIP version 2.

Table 271. *RIP Interface Commands*

Command Syntax and Usage
[no] ip rip authentication key <password> Configures the authentication key password. Command mode: Interface IP
[no] ip rip authentication type [<password>] Configures the authentication type. The default is none. Command mode: Interface IP

Table 271. *RIP Interface Commands (continued)*

Command Syntax and Usage
<p>[no] ip rip default-action {listen supply both}</p> <p>When enabled, the switch accepts RIP default routes from other routers, but gives them lower priority than configured default gateways. When disabled, the switch rejects RIP default routes.</p> <p>The default value is none.</p> <p>Command mode: Interface IP</p>
<p>[no] ip rip enable</p> <p>Enables or disables this RIP interface.</p> <p>Command mode: Interface IP</p>
<p>[no] ip rip listen</p> <p>When enabled, the switch learns routes from other routers.</p> <p>The default value is enabled.</p> <p>Command mode: Interface IP</p>
<p>[no] ip rip metric [<1-15>]</p> <p>Configures the route metric, which indicates the relative distance to the destination.</p> <p>The default value is 1.</p> <p>Command mode: Interface IP</p>
<p>[no] ip rip multicast-updates</p> <p>Enables or disables multicast updates of the routing table (using address 224.0.0.9).</p> <p>The default value is enabled.</p> <p>Command mode: Interface IP</p>
<p>[no] ip rip poison</p> <p>When enabled, the switch uses split horizon with poisoned reverse. When disabled, the switch uses only split horizon.</p> <p>The default value is disabled.</p> <p>Command mode: Interface IP</p>
<p>[no] ip rip split-horizon</p> <p>Enables or disables split horizon.</p> <p>The default value is enabled.</p> <p>Command mode: Interface IP</p>
<p>[no] ip rip supply</p> <p>When enabled, the switch supplies routes to other routers.</p> <p>The default value is enabled.</p> <p>Command mode: Interface IP</p>

Table 271. *RIP Interface Commands (continued)*

Command Syntax and Usage
<p>[no] ip rip triggered</p> <p>Enables or disables Triggered Updates. Triggered Updates are used to speed convergence. When enabled, Triggered Updates force a router to send update messages immediately, even if it is not yet time for the update message.</p> <p>The default value is enabled.</p> <p>Command mode: Interface IP</p>
<p>ip rip version {1 2 both}</p> <p>Configures the RIP version used by this interface.</p> <p>The default value is version 2.</p> <p>Command mode: Interface IP</p>
<p>show interface ip <interface number> rip</p> <p>Displays the current RIP configuration.</p> <p>Command mode: All</p>

RIP Route Redistribution Configuration

The following table describes the RIP Route Redistribution commands.

Table 272. *RIP Redistribution Commands*

Command Syntax and Usage
<p>[no] redistribute {fixed static ospf eospf ebgp ibgp} <1-32></p> <p>Adds or removes the selected routing maps to the RIP route redistribution list. To add specific route maps, enter routing map numbers, separated by a comma (,). To add or removes all 32 route maps, type all.</p> <p>The routes of the redistribution protocol matched by the route maps in the route redistribution list will be redistributed.</p> <p>Command mode: Router RIP</p>
<p>redistribute {fixed static ospf eospf ebgp ibgp} export <1-15></p> <p>Exports the routes of this protocol in which the metric and metric type are specified.</p> <p>Command mode: Router RIP</p>
<p>no redistribute {fixed static ospf eospf ebgp ibgp} export</p> <p>Stops exporting the routes of the protocol.</p> <p>Command mode: RIP</p>
<p>show ip rip redistribute</p> <p>Displays the current RIP route redistribute configuration.</p> <p>Command mode: All</p>

Open Shortest Path First Configuration

The following table describes the OSPF commands.

Table 273. *OSPF Configuration Commands*

Command Syntax and Usage
<p>router ospf</p> <p>Enter Router OSPF configuration mode.</p> <p>Command mode: Global configuration</p>
<p>ip ospf <i><interface number></i></p> <p>Configures the OSPF interface. See page 466 to view command options.</p> <p>Command mode: Interface IP</p>
<p>area <i><0-2></i></p> <p>Configures the OSPF area index. See page 463 to view command options.</p> <p>Command mode: Router OSPF</p>
<p>area-virtual-link <i><1-3></i></p> <p>Configures the Virtual Links used to configure OSPF for a Virtual Link. See page 468 to view command options.</p> <p>Command mode: Router OSPF</p>
<p>area-range <i><1-16></i></p> <p>Configures summary routes for up to 16 IP addresses. See page 465 to view command options.</p> <p>Command mode: Router OSPF</p>
<p>default-information <i><1-1677214></i> <i><AS external metric type (1-2)></i></p> <p>Sets one default route among multiple choices in an area.</p> <p>Command mode: Router OSPF</p>
<p>no default-information</p> <p>Removes the default route information.</p> <p>Command mode: Router OSPF</p>
<p>[no] enable</p> <p>Enables or disables OSPF on the CN4093.</p> <p>Command mode: Router OSPF</p>
<p>host <i><1-128></i></p> <p>Configures OSPF for the host routes. Up to 128 host routes can be configured. Host routes are used for advertising network device IP addresses to external networks to perform server load balancing within OSPF. It also makes Area Border Route (ABR) load sharing and ABR failover possible. See page 469 to view command options.</p> <p>Command mode: Router OSPF</p>

Table 273. OSPF Configuration Commands (continued)

Command Syntax and Usage
lsdb-limit <LSDB limit (0-2048, 0 for no limit)> Sets the link state database limit. Command mode: Router OSPF
message-digest-key <1-255> md5-key <text string> Assigns a string to MD5 authentication key. Command mode: Router OSPF
redistribute Configures OSPF route redistribution. See page 470 to view command options. Command mode: Router OSPF
show ip ospf Displays the current OSPF configuration settings. Command mode: All

Area Index Configuration

The following table describes the Area Index commands.

Table 274. Area Index Configuration Commands

Command Syntax and Usage
area <0-2> area-id <IP address> Defines the IP address of the OSPF area number. Command mode: Router OSPF
[no] area <0-2> authentication-type {password md5} None: No authentication required. Password: Authenticates simple passwords so that only trusted routing devices can participate. md5: This parameter is used when MD5 cryptographic authentication is required. Command mode: Router OSPF
[no] area <0-2> enable Enables or disables the OSPF area. Command mode: Router OSPF
area <0-2> spf-interval <1-255> Configures the minimum time interval, in seconds, between two successive SPF (shortest path first) calculations of the shortest path tree using the Dijkstra's algorithm. The default value is 10. Command mode: Router OSPF

Table 274. *Area Index Configuration Commands*

Command Syntax and Usage
<p>area <0-2> stub-metric <1-65535></p> <p>Configures a stub area to send a numeric metric value. All routes received via that stub area carry the configured metric to potentially influencing routing decisions.</p> <p>Metric value assigns the priority for choosing the switch for default route. Metric type determines the method for influencing routing decisions for external routes.</p> <p>Command mode: Router OSPF</p>
<p>area <0-2> type {transit stub nssa}</p> <p>Defines the type of area. For example, when a virtual link has to be established with the backbone, the area type must be defined as transit.</p> <p>Transit area: allows area summary information to be exchanged between routing devices. Any area that is not a stub area or NSSA is considered to be transit area.</p> <p>Stub area: is an area where external routing information is not distributed. Typically, a stub area is connected to only one other area.</p> <p>NSSA: Not-So-Stubby Area (NSSA) is similar to stub area with additional capabilities. For example, routes originating from within the NSSA can be propagated to adjacent transit and backbone areas.</p> <p>Command mode: Router OSPF</p>
<p>no area <0-2></p> <p>Deletes the OSPF area.</p> <p>Command mode: Router OSPF</p>
<p>show ip ospf area <0-2></p> <p>Displays the current OSPF configuration.</p> <p>Command mode: All</p>

OSPF Summary Range Configuration

The following table describes the OSPF Summary Range commands.

Table 275. *OSPF Summary Range Configuration Commands*

Command Syntax and Usage
area-range <1-16> address <IP address> <IP netmask> Displays the base IP address or the IP address mask for the range. Command mode: Router OSPF
area-range <1-16> area <0-2> Displays the area index used by the CN4093. Command mode: Router OSPF
[no] area-range <1-16> enable Enables or disables the OSPF summary range. Command mode: Router OSPF
[no] area-range <1-16> hide Hides or shows the OSPF summary range. Command mode: Router OSPF
no area-range <1-16> Deletes the OSPF summary range. Command mode: Router OSPF
show ip ospf area-range <1-16> Displays the current OSPF summary range. Command mode: Router OSPF

OSPF Interface Configuration

The following table describes the OSPF Interface commands.

Table 276. *OSPF Interface Configuration Commands*

Command Syntax and Usage
<p>ip ospf area <0-2></p> <p>Configures the OSPF area index.</p> <p>Command mode: Interface IP</p>
<p>ip ospf cost <1-65535></p> <p>Configures cost set for the selected path—preferred or backup. Usually the cost is inversely proportional to the bandwidth of the interface. Low cost indicates high bandwidth.</p> <p>Command mode: Interface IP</p>
<p>ip ospf dead-interval <1-65535> ip ospf dead-interval <1000-65535ms></p> <p>Configures the health parameters of a hello packet, in seconds or milliseconds, before declaring a silent router to be down.</p> <p>Command mode: Interface IP</p>
<p>[no] ip ospf enable</p> <p>Enables or disables OSPF interface.</p> <p>Command mode: Interface IP</p>
<p>ip ospf hello-interval <1-65535> ip ospf hello-interval <50-65535ms></p> <p>Configures the interval, in seconds or milliseconds, between the hello packets for the interfaces.</p> <p>Command mode: Interface IP</p>
<p>[no] ip ospf message-digest-key <1-255></p> <p>Assigns an MD5 key to the interface.</p> <p>Command mode: Interface IP</p>
<p>[no] ip ospf key <key string></p> <p>Sets the authentication key to clear the password.</p> <p>Command mode: Interface IP</p>
<p>[no] ip ospf passive-interface</p> <p>Sets the interface as passive. On a passive interface, you can disable OSPF protocol exchanges, but the router advertises the interface in its LSAs so that IP connectivity to the attached network segment will be established.</p> <p>Command mode: Interface IP</p>
<p>[no] ip ospf point-to-point</p> <p>Sets the interface as point-to-point.</p> <p>Command mode: Interface IP</p>

Table 276. OSPF Interface Configuration Commands (continued)

Command Syntax and Usage
<p>ip ospf priority <0-255></p> <p>Configures the priority value for the CN4093's OSPF interfaces.</p> <p>A priority value of 255 is the highest and 1 is the lowest. A priority value of 0 specifies that the interface cannot be used as Designated Router (DR) or Backup Designated Router (BDR).</p> <p>Command mode: Interface IP</p>
<p>ip ospf retransmit-interval <1-3600></p> <p>Configures the retransmit interval in seconds.</p> <p>Command mode: Interface IP</p>
<p>ip ospf transit-delay <1-3600></p> <p>Configures the transit delay in seconds.</p> <p>Command mode: Interface IP</p>
<p>no ip ospf</p> <p>Deletes the OSPF interface.</p> <p>Command mode: Interface IP</p>
<p>show interface ip <interface number> ospf</p> <p>Displays the current settings for OSPF interface.</p> <p>Command mode: All</p>

OSPF Virtual Link Configuration

The following table describes the OSPF Virtual Link commands.

Table 277. *OSPF Virtual Link Configuration Commands*

Command Syntax and Usage
<p>area-virtual-link <1-3> area <0-2></p> <p>Configures the OSPF area index for the virtual link.</p> <p>Command mode: Router OSPF</p>
<p>area-virtual-link <1-3> dead-interval <1-65535> area-virtual-link <1-3> dead-interval <1000-65535ms></p> <p>Configures the health parameters of a hello packet, in seconds or milliseconds. The default value is 40.</p> <p>Command mode: Router OSPF</p>
<p>[no] area-virtual-link <1-3> enable</p> <p>Enables or disables OSPF virtual link.</p> <p>Command mode: Router OSPF</p>
<p>area-virtual-link <1-3> hello-interval <1-65535> area-virtual-link <1-3> hello-interval <50-65535ms></p> <p>Configures the authentication parameters of a hello packet, in seconds or milliseconds. The default value is 10.</p> <p>Command mode: Router OSPF</p>
<p>[no] area-virtual-link <1-3> key <password></p> <p>Configures the password (up to eight characters) for each virtual link. The default setting is none.</p> <p>Command mode: Router OSPF</p>
<p>area-virtual-link <1-3> message-digest-key <1-255></p> <p>Sets MD5 key ID for each virtual link. The default setting is none.</p> <p>Command mode: Router OSPF</p>
<p>area-virtual-link <1-3> neighbor-router <IP address></p> <p>Configures the router ID of the virtual neighbor. The default value is 0.0.0.0.</p> <p>Command mode: Router OSPF</p>
<p>area-virtual-link <1-3> retransmit-interval <1-3600></p> <p>Configures the retransmit interval, in seconds. The default value is 5.</p> <p>Command mode: Router OSPF</p>

Table 277. *OSPF Virtual Link Configuration Commands (continued)*

Command Syntax and Usage
area-virtual-link <1-3> transit-delay <1-3600> Configures the delay in transit, in seconds. The default value is 1. Command mode: Router OSPF
no area-virtual-link <1-3> Deletes OSPF virtual link. Command mode: Router OSPF
show ip ospf area-virtual-link <1-3> Displays the current OSPF virtual link settings. Command mode: All

OSPF Host Entry Configuration

The following table describes the OSPF Host Entry commands.

Table 278. *OSPF Host Entry Configuration Commands*

Command Syntax and Usage
host <1-128> address <IP address> Configures the base IP address for the host entry. Command mode: Router OSPF
host <1-128> area <0-2> Configures the area index of the host. Command mode: Router OSPF
host <1-128> cost <1-65535> Configures the cost value of the host. Command mode: Router OSPF
[no] host <1-128> enable Enables or disables OSPF host entry. Command mode: Router OSPF
no host <1-128> Deletes OSPF host entry. Command mode: Router OSPF
show ip ospf host <1-128> Displays the current OSPF host entries. Command mode: All

OSPF Route Redistribution Configuration

The following table describes the OSPF Route Redistribution commands.

Table 279. *OSPF Route Redistribution Configuration Commands*

Command Syntax and Usage
<p>[no] redistribute {fixed static rip ebgp ibgp} <rmap ID (1-32)></p> <p>Adds or removes selected routing map to the rmap list.</p> <p>This option adds or removes a route map to the route redistribution list. The routes of the redistribution protocol matched by the route maps in the route redistribution list will be redistributed.</p> <p>Command mode: Router OSPF</p>
<p>[no] redistribute {fixed static rip ebgp ibgp} export metric <1-16777214> metric-type {type1 type2}</p> <p>Exports the routes of this protocol as external OSPF AS-external LSAs in which the metric and metric type are specified. To remove a previous configuration and stop exporting the routes of the protocol, enter none.</p> <p>Command mode: Router OSPF</p>
<p>show ip ospf redistribute</p> <p>Displays the current route map settings.</p> <p>Command mode: All</p>

OSPF MD5 Key Configuration

The following table describes the OSPF MD5 Key commands.

Table 280. *OSPF MD5 Key Commands*

Command Syntax and Usage
<p>message-digest-key <1-255> md5-key <1-16 characters></p> <p>Sets the authentication key for this OSPF packet.</p> <p>Command mode: Router OSPF</p>
<p>no message-digest-key <1-255></p> <p>Deletes the authentication key for this OSPF packet.</p> <p>Command mode: Router OSPF</p>
<p>show ip ospf message-digest-key <1-255></p> <p>Displays the current MD5 key configuration.</p> <p>Command mode: All</p>

Open Shortest Path First Version 3 Configuration

The following table describes the OSPFv3 commands.

Table 281. *OSPFv3 Configuration Commands*

Command Syntax and Usage
<p>[no] ipv6 router ospf Enter OSPFv3 configuration mode. Enables or disables OSPFv3 routing protocol. Command mode: Global configuration</p>
<p>abr-type [standard cisco ibm] Configures the Area Border Router (ABR) type, as follows:</p> <ul style="list-style-type: none"> o Standard o Cisco o IBM <p>The default setting is standard. Command mode: Router OSPF3</p>
<p>as-external lsdb-limit <LSDB limit (0-2147483647, -1 for no limit)> Sets the link state database limit. Command mode: Router OSPF3</p>
<p>[no] enable Enables or disables OSPFv3 on the switch. Command mode: Router OSPF3</p>
<p>exit-overflow-interval <0-4294967295> Configures the number of seconds that a router takes to exit Overflow State. The default value is 0. Command mode: Router OSPF3</p>
<p>[no] nssaAsbrDfRtTrans Enables or disables setting of the P-bit in the default Type 7 LSA generated by an NSSA internal ASBR. The default setting is disabled. Command mode: Router OSPF3</p>

Table 281. *OSPFv3 Configuration Commands (continued)*

Command Syntax and Usage
<p>neighbor <1-256> {address <IPv6 address> enable interface <1-126> priority <0-255>}</p> <p>Configures directly reachable routers over non-broadcast networks. This is required for non-broadcast multiple access (NBMA) networks and optional for Point-to-Multipoint networks.</p> <ul style="list-style-type: none">o address configures the neighbor's IPv6 address.o enable activates a previously disabled neighbor.o interface configures the OSPFv3 interface used for the neighbor entry.o priority configures the priority value used for the neighbor entry. A priority value of 255 is the highest and 1 is the lowest. A priority value of 0 specifies that the neighbor cannot be used as Designated Router. <p>The default value is 1.</p> <p>Command mode: Router OSPF3</p>
<p>no neighbor <1-256> [enable]</p> <p>Deletes the neighbor entry.</p> <p>Using the enable option only disables the neighbor, while preserving its settings.</p> <p>Command mode: Router OSPF3</p>
<p>reference-bandwidth <0-4294967295></p> <p>Configures the reference bandwidth, in kilobits per second, used to calculate the default interface metric.</p> <p>The default value is 100,000.</p> <p>Command mode: Router OSPF3</p>
<p>router-id <IPv4 address></p> <p>Defines the router ID.</p> <p>Command mode: Router OSPF3</p>
<p>timers spf {<SPF delay (0-65535)>} {<SPF hold time (0-65535)>}</p> <p>Configures the number of seconds that SPF calculation is delayed after a topology change message is received.</p> <p>The default value is 5.</p> <p>Configures the number of seconds between SPF calculations.</p> <p>The default value is 10.</p> <p>Command mode: Router OSPF3</p>
<p>show ipv6 ospf</p> <p>Displays the current OSPF configuration settings.</p> <p>Command mode: All</p>

OSPFv3 Area Index Configuration

The following table describes the OSPFv3 Area Index commands.

Table 282. *OSPFv3 Area Index Configuration Options*

Command Syntax and Usage
<p>area <area index> area-id <IP address></p> <p>Defines the IP address of the OSPFv3 area number.</p> <p>Command mode: Router OSPF3</p>
<p>area <area index> default-metric <metric value (1-16777215)></p> <p>Configures the cost for the default summary route in a stub area or NSSA.</p> <p>Command mode: Router OSPF3</p>
<p>area <area index> default-metric type <1-3></p> <p>Configures the default metric type applied to the route.</p> <p>Note: This command applies only to area type of Stub/NSSA.</p> <p>Command mode: Router OSPF3</p>
<p>[no] area <area index> enable</p> <p>Enables or disables the OSPF area.</p> <p>Command mode: Router OSPF3</p>
<p>area <area index> stability-interval <1-255></p> <p>Configures the stability interval for an NSSA, in seconds. When the interval expires, an elected translator determines that its services are no longer required.</p> <p>The default value is 40.</p> <p>Command mode: Router OSPF3</p>
<p>area <area index> translation-role {always candidate}</p> <p>Configures the translation role for an NSSA area, as follows:</p> <ul style="list-style-type: none"> o always: Type 7 LSAs are always translated into Type 5 LSAs. o candidate: An NSSA border router participates in the translator election process. <p>The default setting is candidate.</p> <p>Command mode: Router OSPF3</p>

Table 282. OSPFv3 Area Index Configuration Options (continued)

Command Syntax and Usage	
area <i><area index></i> type { transit stub nssa } { no-summary }	<p>Defines the type of area. For example, when a virtual link has to be established with the backbone, the area type must be defined as transit.</p> <p>Transit area: allows area summary information to be exchanged between routing devices. Any area that is not a stub area or NSSA is considered to be transit area.</p> <p>Stub area: is an area where external routing information is not distributed. Typically, a stub area is connected to only one other area.</p> <p>NSSA: Not-So-Stubby Area (NSSA) is similar to stub area with additional capabilities. For example, routes originating from within the NSSA can be propagated to adjacent transit and backbone areas. External routes from outside the Autonomous System (AS) can be advertised within the NSSA but are not distributed into other areas.</p> <p>Enables or disables the no-summary option. When enabled, the area-border router neither originates nor propagates Inter-Area-Prefix LSAs into stub/NSSA areas. Instead it generates a default Inter-Area-Prefix LSA.</p> <p>The default setting is disabled.</p> <p>Command mode: Router OSPF3</p>
no area <i><area index></i>	<p>Deletes the OSPF area.</p> <p>Command mode: Router OSPF3</p>
show ipv6 ospf areas	<p>Displays the current OSPFv3 area configuration.</p> <p>Command mode: All</p>

OSPFv3 Summary Range Configuration

The following table describes the OSPFv3 Summary Range commands.

Table 283. *OSPFv3 Summary Range Configuration Options*

Command Syntax and Usage
<p>area-range <1-16> address <IPv6 address> <prefix length (1-128)></p> <p>Configures the base IPv6 address and subnet prefix length for the range.</p> <p>Command mode: Router OSPF3</p>
<p>area-range <1-16> area <area index (0-2)></p> <p>Configures the area index used by the switch.</p> <p>Command mode: Router OSPF3</p>
<p>[no] area-range <1-16> enable</p> <p>Enables or disables the OSPFv3 summary range.</p> <p>Command mode: Router OSPF3</p>
<p>[no] area-range <1-16> hide</p> <p>Hides or shows the OSPFv3 summary range.</p> <p>Command mode: Router OSPF3</p>
<p>area-range <1-16> lsa-type {summary Type7}</p> <p>Configures the LSA type, as follows:</p> <ul style="list-style-type: none"> o Summary LSA o Type7 LSA <p>Command mode: Router OSPF3</p>
<p>area-range <1-16> tag <0-4294967295></p> <p>Configures the route tag.</p> <p>Command mode: Router OSPF3</p>
<p>no area-range <1-16></p> <p>Deletes the OSPFv3 summary range.</p> <p>Command mode: Router OSPF3</p>
<p>show ipv6 ospf area-range</p> <p>Displays the current OSPFv3 summary range.</p> <p>Command mode: All</p>

OSPFv3 AS-External Range Configuration

The following table describes the OSPFv3 AS-External Range commands.

Table 284. OSPFv3 AS-External Range Configuration Options

Command Syntax and Usage
<p>summary-prefix <1-16> address <IPv6 address> <IPv6 prefix length (1-128)></p> <p>Configures the base IPv6 address and the subnet prefix length for the range.</p> <p>Command mode: Router OSPF3</p>
<p>summary-prefix <1-16> aggregation-effect {allowAll denyAll advertise not-advertise}</p> <p>Configures the aggregation effect, as follows:</p> <ul style="list-style-type: none">– allowAll: If the area ID is 0.0.0.0, aggregated Type-5 LSAs are generated. Aggregated Type-7 LSAs are generated in all the attached NSSAs for the range.– denyAll: Type-5 and Type-7 LSAs are not generated.– advertise: If the area ID is 0.0.0.0, aggregated Type-5 LSAs are generated. For other area IDs, aggregated Type-7 LSAs are generated in the NSSA area.– not-advertise: If the area ID is 0.0.0.0, Type-5 LSAs are not generated, while all NSSA LSAs within the range are cleared and aggregated Type-7 LSAs are generated for all NSSAs. For other area IDs, aggregated Type-7 LSAs are not generated in the NSSA area. <p>Command mode: Router OSPF3</p>
<p>summary-prefix <1-16> area <area index (0-2)></p> <p>Configures the area index used by the switch.</p> <p>Command mode: Router OSPF3</p>
<p>[no] summary-prefix <1-16> enable</p> <p>Enables or disables the OSPFv3 AS-external range.</p> <p>Command mode: Router OSPF3</p>
<p>[no] summary-prefix <1-16> translation</p> <p>When enabled, the P-bit is set in the generated Type-7 LSA. When disabled, the P-bit is cleared.</p> <p>The default setting is disabled.</p> <p>Command mode: Router OSPF3</p>
<p>no summary-prefix <1-16></p> <p>Deletes the OSPFv3 AS-external range.</p> <p>Command mode: Router OSPF3</p>
<p>show ipv6 ospf summary-prefix <1-16></p> <p>Displays the current OSPFv3 AS-external range.</p> <p>Command mode: All</p>

OSPFv3 Interface Configuration

The following table describes the OSPFv3 Interface commands.

Table 285. *OSPFv3 Interface Configuration Options*

Command Syntax and Usage
<p>interface ip <interface number> Enter Interface IP mode, from Global Configuration mode. Command mode: Global configuration</p>
<p>[no] ipsec dynamic-policy <1-10> Adds or removes an IP security dynamic policy to the OSPFv3 interface. Command mode: Interface IP</p>
<p>[no] ipsec manual-policy <1-10> Adds or removes an IP security manual policy to the OSPFv3 interface. Command mode: Interface IP</p>
<p>ipv6 ospf area <area index (0-2)> Configures the OSPFv3 area index. Command mode: Interface IP</p>
<p>ipv6 ospf area <area index (0-2)> instance <0-255> Configures the instance ID for the interface. Command mode: Interface IP</p>
<p>[no] ipv6 ospf cost <1-65535> Configures the metric value for sending a packet on the interface. Command mode: Interface IP</p>
<p>[no] ipv6 ospf dead-interval <1-65535> Configures the health parameters of a hello packet, in seconds, before declaring a silent router to be down. Command mode: Interface IP</p>
<p>[no] ipv6 ospf enable Enables or disables OSPFv3 on the interface. Command mode: Interface IP</p>
<p>[no] ipv6 ospf hello-interval <1-65535> Configures the indicated interval, in seconds, between the hello packets, that the router sends on the interface. Command mode: Interface IP</p>

Table 285. OSPFv3 Interface Configuration Options (continued)

Command Syntax and Usage
<p>[no] ipv6 ospf linklsasuppress</p> <p>Enables or disables Link LSA suppression. When suppressed, no Link LSAs are originated.</p> <p>The default setting is disabled.</p> <p>Command mode: Interface IP</p>
<p>ipv6 ospf network {broadcast non-broadcast point-to-multipoint point-to-point}</p> <p>Configures the network type for the OSPFv3 interface:</p> <ul style="list-style-type: none">o broadcast: network where all routers use the broadcast capabilityo non-broadcast: non-broadcast multiple access (NBMA) network supporting pseudo-broadcast (multicast and broadcast traffic is configured manually)o point-to-multipoint: network where multiple point-to-point links are set up on the same interfaceo point-to-point: network that joins a single pair of routers <p>The default value is broadcast.</p> <p>Command mode: Interface IP</p>
<p>[no] ipv6 ospf passive-interface</p> <p>Enables or disables the passive setting on the interface. On a passive interface, OSPFv3 protocol packets are suppressed.</p> <p>Command mode: Interface IP</p>
<p>ipv6 ospf poll-interval <0-4294967295></p> <p>Configures the poll interval in seconds for neighbors in NBMA networks.</p> <p>The default value is 120.</p> <p>Command mode: Interface IP</p>
<p>no ipv6 ospf poll-interval</p> <p>Configures the poll interval in seconds for neighbors in NBMA and point-to-multipoint networks to its default 120 seconds value.</p> <p>Command mode: Interface IP</p>
<p>[no] ipv6 ospf priority <priority value (0-255)></p> <p>Configures the priority value for the switch's OSPFv3 interface.</p> <p>A priority value of 255 is the highest and 1 is the lowest. A priority value of 0 specifies that the interface cannot be used as Designated Router (DR).</p> <p>Command mode: Interface IP</p>
<p>[no] ipv6 ospf retransmit-interval <1-1800></p> <p>Configures the interval in seconds, between LSA retransmissions for adjacencies belonging to interface.</p> <p>Command mode: Interface IP</p>

Table 285. OSPFv3 Interface Configuration Options (continued)

Command Syntax and Usage
[no] ipv6 ospf transmit-delay <1-1800> Configures the estimated time, in seconds, taken to transmit LS update packet over this interface. Command mode: Interface IP
no ipv6 ospf Deletes OSPFv3 from interface. Command mode: Interface IP
show ipv6 ospf interface Displays the current settings for OSPFv3 interface. Command mode: Interface IP

OSPFv3 over IPsec Configuration

The following table describes the OSPFv3 over IPsec Configuration commands.

Table 286. Layer 3 IPsec Configuration Options

Command Syntax and Usage
ipv6 ospf authentication ipsec enable Enables IPsec authentication. Command mode: Interface IP
ipv6 ospf authentication ipsec spi <256-4294967295> {md5 sha1} <authentication key (hexadecimal)> Configures the Security Parameters Index (SPI), algorithm, and authentication key for the Authentication Header (AH). The algorithms supported are: <ul style="list-style-type: none">o MD5 (hexadecimal key length is 32)o SHA1 (hexadecimal key length is 40) Command mode: Interface IP
ipv6 ospf authentication ipsec default Resets the Authentication Header (AH) configuration to default values. Command mode: Interface IP
no ipv6 ospf authentication ipsec spi <256-4294967295> Disables the specified Authentication Header (AH) SPI. Command mode: Interface IP

Table 286. Layer 3 IPsec Configuration Options (continued)

Command Syntax and Usage
<p>ipv6 ospf encryption ipsec enable</p> <p>Enables OSPFv3 encryption for this interface.</p> <p>Command mode: Interface IP</p>
<p>ipv6 ospf encryption ipsec spi <256-4294967295> esp {3des aes-cbc des null} <encryption key (hexadecimal)> null} {md5 sha1 none} <authentication key (hexadecimal)></p> <p>Configures the Security Parameters Index (SPI), encryption algorithm, authentication algorithm, and authentication key for the Encapsulating Security Payload (ESP). The ESP algorithms supported are:</p> <ul style="list-style-type: none"> o 3DES (hexadecimal key length is 48) o AES-CBC (hexadecimal key length is 32) o DES (hexadecimal key length is 16) <p>The authentication algorithms supported are:</p> <ul style="list-style-type: none"> o MD5 (hexadecimal key length is 32) o SHA1 (hexadecimal key length is 40) o none <p>Note: If the encryption algorithm is null, the authentication algorithm must be either MD5 or SHA1. (hexadecimal key length is 40). If an encryption algorithm is specified (3DES, AES-CBC, or DES), the authentication algorithm can be none.</p> <p>Command mode: Interface IP</p>
<p>ipv6 ospf encryption ipsec default</p> <p>Resets the Encapsulating Security Payload (ESP) configuration to default values.</p> <p>Command mode: Interface IP</p>
<p>no ipv6 ospf encryption ipsec spi <256-4294967295></p> <p>Disables the specified Encapsulating Security Payload (ESP) SPI.</p> <p>Command mode: Interface IP</p>

OSPFv3 Virtual Link Configuration

The following table describes the OSPFv3 Virtual Link commands.

Table 287. *OSPFv3 Virtual Link Configuration Options*

Command Syntax and Usage
<p>area-virtual-link <1-3> area <area index (0-2)></p> <p>Configures the OSPF area index.</p> <p>Command mode: Router OSPF3</p>
<p>area-virtual-link <1-3> dead-interval <1-65535></p> <p>Configures the time period, in seconds, for which the router waits for hello packet from the neighbor before declaring this neighbor down.</p> <p>Command mode: Router OSPF3</p>
<p>[no] area-virtual-link <1-3> enable</p> <p>Enables or disables OSPF virtual link.</p> <p>Command mode: Router OSPF3</p>
<p>area-virtual-link <1-3> hello-interval <1-65535></p> <p>Configures the indicated interval, in seconds, between the hello packets, that the router sends on the interface.</p> <p>Command mode: Router OSPF3</p>
<p>area-virtual-link <1-3> neighbor-router <NBR router ID (IP address)></p> <p>Configures the router ID of the virtual neighbor. The default setting is 0.0.0.0.</p> <p>Command mode: Router OSPF3</p>
<p>area-virtual-link <1-3> retransmit-interval <1-1800></p> <p>Configures the interval, in seconds, between link-state advertisement (LSA) retransmissions for adjacencies belonging to the OSPFv3 virtual link interface. The default value is five seconds.</p> <p>Command mode: Router OSPF3</p>
<p>area-virtual-link <1-3> transmit-delay <1-1800></p> <p>Configures the estimated time, in seconds, taken to transmit LS update packet over this interface.</p> <p>Command mode: Router OSPF3</p>
<p>no area-virtual-link <1-3></p> <p>Deletes OSPF virtual link.</p> <p>Command mode: Router OSPF3</p>
<p>show ipv6 ospf area-virtual-link</p> <p>Displays the current OSPFv3 virtual link settings.</p> <p>Command mode: All</p>

OSPFv3 over IPsec for Virtual Link Configuration

The following table describes the OSPFv3 over IPsec for Virtual Link Configuration commands.

Table 288. *Layer 3 IPsec Configuration Options*

Command Syntax and Usage
<p>area-virtual-link <1-3> authentication ipsec {default enable spi <256-4294967295>} Sets OSPFv3 authentication mode. Command mode: Router OSPF3</p>
<p>area-virtual-link <1-3> authentication ipsec spi <256-4294967295> {md5 <md5 key> sha1 <sha1 key>} Configures the OSPFv3 security parameter index authentication. Command mode: Router OSPF3</p>
<p>area-virtual-link <1-3> encryption ipsec {default enable spi <256-4294967295>} Sets OSPFv3 encryption. Command mode: Router OSPF3</p>
<p>area-virtual-link <1-3> encryption ipsec spi <256-4294967295> esp {3des <3des key> aes-cbc <aes-cbc key> null} {md5 none sha1} Configures the OSPFv3 security parameter index encryption. Command mode: Router OSPF3</p>
<p>show ipv6 ospf area-virtual-link Displays the current OSPFv3 virtual link settings. Command mode: All</p>

OSPFv3 Host Entry Configuration

The following table describes the OSPFv3 Host Entry commands.

Table 289. *OSPFv3 Host Entry Configuration Options*

Command Syntax and Usage
host <1-128> address <IPv6 address> <prefix length (1-128)> Configures the base IPv6 address and the subnet prefix length for the host entry. Command mode: Router OSPF3
host <1-128> area <area index (0-2)> Configures the area index of the host. Command mode: Router OSPF3
host <1-128> cost <1-65535> Configures the cost value of the host. Command mode: Router OSPF3
[no] host <1-128> enable Enables or disables the host entry. Command mode: Router OSPF3
no host <1-128> Deletes the host entry. Command mode: Router OSPF3
show ipv6 ospf host [<1-128>] Displays the current OSPFv3 host entries. Command mode: All

OSPFv3 Redistribute Entry Configuration

The following table describes the OSPFv3 Redistribute Entry commands.

Table 290. *OSPFv3 Redist Entry Configuration Options*

Command Syntax and Usage
redist-config <1-128> address <IPv6 address> <IPv6 prefix length (1-128)> Configures the base IPv6 address and the subnet prefix length for the redistribution entry. Command mode: Router OSPF3
[no] redist-config <1-128> enable Enables or disables the OSPFv3 redistribution entry. Command mode: Router OSPF3

Table 290. *OSPFv3 Redist Entry Configuration Options*

Command Syntax and Usage
redist-config <1-128> metric-type asExttype1 asExttype2 Configures the metric type applied to the route before it is advertised into the OSPFv3 domain. Command mode: Router OSPF3
redist-config <1-128> metric-value <1-16777215> Configures the route metric value applied to the route before it is advertised into the OSPFv3 domain. Command mode: Router OSPF3
[no] redist-config <1-128> tag <0-4294967295> Configures the route tag. Command mode: Router OSPF3
no redist-config <1-128> Deletes the OSPFv3 redistribution entry. Command mode: Router OSPF3
show ipv6 ospf redist-config Displays the current OSPFv3 redistribution configuration entries. Command mode: Router OSPF3

OSPFv3 Redistribute Configuration

The following table describes the OSPFv3 Redistribute commands.

Table 291. *OSPFv3 Redistribute Configuration Options*

Command Syntax and Usage
[no] redistribute {connected static} export <metric value (1-16777215)> <metric type (1-2)> <tag (0-4294967295)> Exports the routes of this protocol as external OSPFv3 AS-external LSAs in which the metric, metric type, and route tag are specified. To remove a previous configuration and stop exporting the routes of the protocol, use the no form of the command. Command mode: Router OSPF3
show ipv6 ospf Displays the current OSPFv3 route redistribution settings. Command mode: All

Border Gateway Protocol Configuration

Border Gateway Protocol (BGP) is an Internet protocol that enables routers on a network to share routing information with each other and advertise information about the segments of the IP address space they can access within their network with routers on external networks. BGP allows you to decide what is the “best” route for a packet to take from your network to a destination on another network, rather than simply setting a default route from your border router(s) to your upstream provider(s). You can configure BGP either within an autonomous system or between different autonomous systems. When run within an autonomous system, it's called internal BGP (iBGP). When run between different autonomous systems, it's called external BGP (eBGP). BGP is defined in RFC 1771.

BGP commands enable you to configure the switch to receive routes and to advertise static routes, fixed routes and virtual server IP addresses with other internal and external routers. In the current Enterprise NOS implementation, the CN4093 10 Gb Converged Scalable Switch does not advertise BGP routes that are learned from one iBGP *speaker* to another iBGP *speaker*.

BGP is turned off by default.

Note: Fixed routes are subnet routes. There is one fixed route per IP interface.

Table 292. *Border Gateway Protocol Commands*

Command Syntax and Usage
<p>router bgp</p> <p>Enter Router BGP configuration mode.</p> <p>Command mode: Global configuration</p>
<p>as <0-65535></p> <p>Set Autonomous System number.</p> <p>Command mode: Router BGP</p>
<p>[no] asn4comp</p> <p>Enables or disables ASN4 to ASN2 compatibility.</p> <p>Command mode: Router BGP</p>
<p>[no] enable</p> <p>Globally enables or disables BGP.</p> <p>Command mode: Router BGP</p>
<p>local-preference <0-4294967294></p> <p>Sets the local preference. The path with the higher value is preferred.</p> <p>When multiple peers advertise the same route, use the route with the shortest AS path as the preferred route if you are using eBGP, or use the local preference if you are using iBGP.</p> <p>Command mode: Router BGP</p>

Table 292. *Border Gateway Protocol Commands (continued)*

Command Syntax and Usage
<p>neighbor <1-12></p> <p>Configures each BGP <i>peer</i>. Each border router, within an autonomous system, exchanges routing information with routers on other external networks.</p> <p>To view command options, see page 486.</p> <p>Command mode: Router BGP</p>
<p>show ip bgp</p> <p>Displays the current BGP configuration.</p> <p>Command mode: All</p>

BGP Peer Configuration

These commands are used to configure BGP peers, which are border routers that exchange routing information with routers on internal and external networks. The peer option is disabled by default.

Table 293. *BGP Peer Configuration Commands*

Command Syntax and Usage
<p>neighbor <1-12> advertisement-interval <1-65535></p> <p>Sets time, in seconds, between advertisements.</p> <p>The default value is 60.</p> <p>Command mode: Router BGP</p>
<p>[no] neighbor <1-12> passive</p> <p>Enables or disables BGP passive mode, which prevents the switch from initiating BGP connections with peers. Instead, the switch waits for the peer to send an open message first.</p> <p>Command mode: Router BGP</p>
<p>[no] neighbor <1-12> password <1-16 characters></p> <p>Configures the BGP peer password.</p> <p>Command mode: Router BGP</p>
<p>neighbor <peer numer (1-12)> redistribute</p> <p>Configures BGP neighbor redistribution. To view command options, see page 490.</p> <p>Command mode: Router BGP</p>
<p>neighbor <1-12> remote-address <IP address></p> <p>Defines the IP address for the specified peer (border router), using dotted decimal notation.</p> <p>The default address is 0.0.0.0.</p> <p>Command mode: Router BGP</p>

Table 293. BGP Peer Configuration Commands (continued)

Command Syntax and Usage
<p>neighbor <1-12> remote-as <1-65535></p> <p>Sets the remote autonomous system number for the specified peer.</p> <p>Command mode: Router BGP</p>
<p>neighbor <1-12> retry-interval <1-65535></p> <p>Sets connection retry interval, in seconds.</p> <p>The default value is 120.</p> <p>Command mode: Router BGP</p>
<p>[no] neighbor <1-12> route-map in <1-32></p> <p>Adds or removes route map into in-route map list.</p> <p>Command mode: Router BGP</p>
<p>[no] neighbor <1-12> route-map out <1-32></p> <p>Adds or removes route map into out-route map list.</p> <p>Command mode: Router BGP</p>
<p>neighbor <1-12> route-origination-interval <1-65535></p> <p>Sets the minimum time between route originations, in seconds.</p> <p>The default value is 15.</p> <p>Command mode: Router BGP</p>
<p>neighbor <1-12> shutdown</p> <p>Disables this peer configuration.</p> <p>Command mode: Router BGP</p>
<p>no neighbor <1-12> shutdown</p> <p>Enables this peer configuration.</p> <p>Command mode: Router BGP</p>
<p>neighbor <1-12> time-to-live <1-255></p> <p>Time-to-live (TTL) is a value in an IP packet that tells a network router whether or not the packet has been in the network too long and should be discarded. TTL specifies a certain time span in seconds that, when exhausted, would cause the packet to be discarded. The TTL is determined by the number of router hops the packet is allowed before it must be discarded.</p> <p>This command specifies the number of router hops that the IP packet can make. This value is used to restrict the number of "hops" the advertisement makes. It is also used to support multi-hops, which allow BGP peers to talk across a routed network.</p> <p>The default number is set at 1.</p> <p>Note: The TTL value is significant only to eBGP peers, for iBGP peers the TTL value in the IP packets is always 255 (regardless of the configured value).</p> <p>Command mode: Router BGP</p>

Table 293. BGP Peer Configuration Commands (continued)

Command Syntax and Usage
neighbor <1-12> timers hold-time <0, 3-65535> Sets the period of time, in seconds, that will elapse before the peer session is torn down because the switch hasn't received a "keep alive" message from the peer. The default value is 180. Command mode: Router BGP
neighbor <1-12> timers keep-alive <0, 1-21845> Sets the keep-alive time for the specified peer, in seconds. The default value is 60. Command mode: Router BGP
neighbor <1-12> update-source {<interface number> loopback <1-5>} Sets the source interface number for this peer. Command mode: Router BGP
no neighbor <1-12> Deletes this peer configuration. Command mode: Router BGP
show ip bgp neighbor [<1-12>] Displays the current BGP peer configuration. Command mode: All

BGP Aggregation Configuration

These commands enable you to configure BGP aggregation to specify the routes/range of IP destinations a peer router accepts from other peers. All matched routes are aggregated to one route, to reduce the size of the routing table. By default, the first aggregation number is enabled and the rest are disabled.

Table 294. BGP Aggregation Configuration Commands

Command Syntax and Usage
aggregate-address <1-16> <IP address> <IP netmask> Defines the starting subnet IP address for this aggregation, using dotted decimal notation. The default address is 0.0.0.0. Command mode: Router BGP
[no] aggregate-address <1-16> enable Enables or disables this BGP aggregation. Command mode: Router BGP

Table 294. *BGP Aggregation Configuration Commands*

Command Syntax and Usage
no aggregate-address <1-16> Deletes this BGP aggregation. Command mode: Router BGP
show ip bgp aggregate-address [<1-16>] Displays the current BGP aggregation configuration. Command mode: All

BGP Neighbor Redistribution Configuration

This menu enables you to redistribute routes learned from various routing information sources into BGP.

Table 295. BGP Redistribution Configuration Commands

Command Syntax and Usage
<p>[no] neighbor <1-12> redistribute default-action {import originate redistribute}</p> <p>Sets default route action. Defaults routes can be configured as import, originate, redistribute, or none.</p> <p>None: No routes are configured.</p> <p>Import: Import these routes.</p> <p>Originate: The switch sends a default route to peers if it does not have any default routes in its routing table.</p> <p>Redistribute: Default routes are either configured through default gateway or learned through other protocols and redistributed to peer. If the routes are learned from default gateway configuration, you have to enable static routes since the routes from default gateway are static routes. Similarly, if the routes are learned from a certain routing protocol, you have to enable that protocol.</p> <p>Command mode: Router BGP</p>
<p>[no] neighbor <1-12> redistribute default-metric <1-4294967294></p> <p>Sets default metric of advertised routes.</p> <p>Command mode: Router BGP</p>
<p>[no] neighbor <1-12> redistribute fixed</p> <p>Enables or disables advertising fixed routes.</p> <p>Command mode: Router BGP</p>
<p>[no] neighbor <1-12> redistribute ospf</p> <p>Enables or disables advertising OSPF routes.</p> <p>Command mode: Router BGP</p>
<p>[no] neighbor <1-12> redistribute rip</p> <p>Enables or disables advertising RIP routes.</p> <p>Command mode: Router BGP</p>
<p>[no] neighbor <1-12> redistribute static</p> <p>Enables or disables advertising static routes.</p> <p>Command mode: Router BGP</p>
<p>show ip bgp neighbor <1-12> redistribute</p> <p>Displays current redistribution configuration.</p> <p>Command mode: All</p>

Multicast Listener Discovery Protocol Configuration

Table 296 describes the commands used to configure MLD parameters.

Table 296. *MLD Protocol Configuration Commands*

Command Syntax and Usage
ipv6 mld Enter MLD global configuration mode. Command mode: Global configuration
default Resets MLD parameters to their default values. Command mode: MLD Configuration
[no] enable Globally enables or disables MLD. Command mode: MLD Configuration
exit Exit from MLD configuration mode. Command mode: MLD Configuration
show ipv6 mld Displays the current MLD configuration parameters. Command mode: All

MLD Interface Configuration

Table 297 describes the commands used to configure MLD parameters for an interface.

Table 297. *MLD Interface Configuration Commands*

Command Syntax and Usage
ipv6 mld default Resets MLD parameters for the selected interface to their default values. Command mode: Interface IP
ipv6 mld dmrtr {enable disable} Enables or disables dynamic Mrouter learning on the interface. The default setting is disabled. Command mode: Interface IP
[no] ipv6 mld enable Enables or disables this MLD interface. Command mode: Interface IP

Table 297. MLD Interface Configuration Commands (continued)

Command Syntax and Usage
<p>ipv6 mld llistnr <1-32></p> <p>Configures the Last Listener query interval, in seconds. The default value is 1.</p> <p>Command mode: Interface IP</p>
<p>ipv6 mld qintrval <2-65535></p> <p>Configures the interval for MLD Query Reports, in seconds. The default value is 125.</p> <p>Command mode: Interface IP</p>
<p>ipv6 mld qri <1000-65535></p> <p>Configures the interval for MLD Query Response Reports, in milliseconds. The default value is 10,000.</p> <p>Command mode: Interface IP</p>
<p>ipv6 mld robust <2-10></p> <p>Configures the MLD Robustness variable, which allows you to tune the switch for expected packet loss on the subnet. If the subnet is expected to be lossy (high rate of packet loss), increase the value. The default value is 2.</p> <p>Command mode: Interface IP</p>
<p>ipv6 mld version <1-2></p> <p>Defines the MLD protocol version number.</p> <p>Command mode: Interface IP</p>
<p>show ipv6 mld interface <interface number></p> <p>Displays the current MLD interface configuration.</p> <p>Command mode: All</p>

IGMP Configuration

[Table 298](#) describes the commands used to configure basic IGMP parameters.

Table 298. *IGMP Configuration Commands*

Command Syntax and Usage
[no] ip igmp aggregate Enables or disables IGMP Membership Report aggregation. Command mode: Global configuration
[no] ip igmp enable Globally enables or disables IGMP. Command mode: Global configuration
show ip igmp Displays the current IGMP configuration parameters. Command mode: All

The following sections describe the IGMP configuration options.

- [“IGMP Snooping Configuration” on page 494](#)
- [“IGMPv3 Configuration” on page 495](#)
- [“IGMP Relay Configuration” on page 496](#)
- [“IGMP Relay Multicast Router Configuration” on page 498](#)
- [“IGMP Static Multicast Router Configuration” on page 499](#)
- [“IGMP Filtering Configuration” on page 496](#)
- [“IGMP Advanced Configuration” on page 500](#)
- [“IGMP Querier Configuration” on page 501](#)

IGMP Snooping Configuration

IGMP Snooping allows the switch to forward multicast traffic only to those ports that request it. IGMP Snooping prevents multicast traffic from being flooded to all ports. The switch learns which server hosts are interested in receiving multicast traffic, and forwards it only to ports connected to those servers.

[Table 299](#) describes the commands used to configure IGMP Snooping.

Table 299. *IGMP Snooping Configuration Commands*

Command Syntax and Usage
[no] ip igmp snoop enable Enables or disables IGMP Snooping. Command mode: Global configuration
ip igmp snoop source-ip <IP address> Configures the source IP address used as a proxy for IGMP Group Specific Queries. Command mode: Global configuration
[no] ip igmp snoop vlan <VLAN number> Adds or removes the selected VLAN(s) to IGMP Snooping. Command mode: Global configuration
no ip igmp snoop vlan all Removes all VLANs from IGMP Snooping. Command mode: Global configuration
ip igmp snoop mrouter-timeout <1-600> Configures the timeout value for IGMP Membership Queries (mrouter). Once the timeout value is reached, the switch removes the multicast router from its IGMP table, if the proper conditions are met. The range is from 1 to 600 seconds. The default is 255. Command mode: Global configuration
show ip igmp snoop Displays the current IGMP Snooping parameters. Command mode: All

IGMPv3 Configuration

Table 300 describes the commands used to configure IGMP version 3.

Table 300. *IGMP version 3 Configuration Commands*

Command Syntax and Usage
<p>[no] ip igmp snoop igmpv3 enable</p> <p>Enables or disables IGMP version 3. The default setting is disabled.</p> <p>Command mode: Global configuration</p>
<p>[no] ip igmp snoop igmpv3 exclude</p> <p>Enables or disables snooping on IGMPv3 Exclude Reports. When disabled, the switch ignores Exclude Reports. The default setting is enabled.</p> <p>Command mode: Global configuration</p>
<p>ip igmp snoop igmpv3 sources <1-64></p> <p>Configures the maximum number of IGMP multicast sources to snoop from within the group record. Use this command to limit the number of IGMP sources to provide more refined control. The default value is 8.</p> <p>Command mode: Global configuration</p>
<p>[no] ip igmp snoop igmpv3 v1v2</p> <p>Enables or disables snooping on IGMP version 1 and version 2 reports. When disabled, the switch drops IGMPv1 and IGMPv2 reports. The default setting is enabled.</p> <p>Command mode: Global configuration</p>
<p>show ip igmp snoop igmpv3</p> <p>Displays the current IGMP v3 Snooping configuration.</p> <p>Command mode: All</p>

IGMP Relay Configuration

When you configure IGMP Relay, also configure the IGMP Relay multicast routers.

[Table 301](#) describes the commands used to configure IGMP Relay.

Table 301. IGMP Relay Configuration Commands

Command Syntax and Usage
[no] ip igmp relay enable Enables or disables IGMP Relay. Command mode: Global configuration
ip igmp relay report <0-150> Configures the interval between unsolicited Join reports sent by the switch, in seconds. The default value is 10. Command mode: Global configuration
[no] ip igmp relay vlan <VLAN number> Adds or removes the VLAN to the list of IGMP Relay VLANs. Command mode: Global configuration
show ip igmp relay Displays the current IGMP Relay configuration. Command mode: All

IGMP Filtering Configuration

[Table 302](#) describes the commands used to configure an IGMP filter.

Table 302. IGMP Filtering Configuration Commands

Command Syntax and Usage
ip igmp profile <1-16> Configures the IGMP filter. To view command options, see page 497 . Command mode: Global configuration
[no] ip igmp filtering Enables or disables IGMP filtering globally. Command mode: Global configuration
show ip igmp filtering Displays the current IGMP Filtering parameters. Command mode: All

IGMP Filter Definition

Table 303 describes the commands used to define an IGMP filter.

Table 303. *IGMP Filter Definition Commands*

Command Syntax and Usage
ip igmp profile <1-16> action {allow deny} Allows or denies multicast traffic for the IP multicast addresses specified. The default action is deny. Command mode: Global configuration
[no] ip igmp profile <1-16> enable Enables or disables this IGMP filter. Command mode: Global configuration
ip igmp profile <1-16> range <IP address 1> <IP address 2> Configures the range of IP multicast addresses for this filter. Command mode: Global configuration
no ip igmp profile <1-16> Deletes this filter's parameter definitions. Command mode: Global configuration
show ip igmp profile <1-16> Displays the current IGMP filter. Command mode: All

IGMP Filtering Port Configuration

Table 304 describes the commands used to configure a port for IGMP filtering.

Table 304. *IGMP Filter Port Configuration Commands*

Command Syntax and Usage
[no] ip igmp filtering Enables or disables IGMP filtering on this port. Command mode: Interface port
[no] ip igmp profile <1-16> Adds or removes an IGMP filter to this port. Command mode: Interface port
show interface port <port alias or number> igmp-filtering Displays the current IGMP filter parameters for this port. Command mode: All

IGMP Relay Multicast Router Configuration

Table 305 describes the commands used to configure multicast routers for IGMP Relay.

Table 305. IGMP Relay Mrouter Configuration Commands

Command Syntax and Usage
<p>ip igmp relay mrouter <1-2> address <IP address></p> <p>Configures the IP address of the IGMP multicast router used for IGMP Relay.</p> <p>Command mode: Global configuration</p>
<p>ip igmp relay mrouter <1-2> attempt <1-128></p> <p>Configures the number of successful ping attempts required before the switch declares this Mrouter is up.</p> <p>The default value is 5.</p> <p>Command mode: Global configuration</p>
<p>[no] ip igmp relay mrouter <1-2> enable</p> <p>Enables or disables the multicast router.</p> <p>Command mode: Global configuration</p>
<p>ip igmp relay mrouter <1-2> interval <1-60></p> <p>Configures the time interval between ping attempts to the upstream Mrouters, in seconds.</p> <p>The default value is 2.</p> <p>Command mode: Global configuration</p>
<p>ip igmp relay mrouter <1-2> retry <1-120></p> <p>Configures the number of failed ping attempts required before the switch declares this Mrouter is down.</p> <p>The default value is 4.</p> <p>Command mode: Global configuration</p>
<p>ip igmp relay mrouter <1-2> version <1-2></p> <p>Configures the IGMP version (1 or 2) of the multicast router.</p> <p>Command mode: Global configuration</p>
<p>no ip igmp relay mrouter <1-2></p> <p>Deletes the multicast router from IGMP Relay.</p> <p>Command mode: Global configuration</p>
<p>show ip igmp relay</p> <p>Displays the current IGMP Relay configuration.</p> <p>Command mode: All</p>

IGMP Static Multicast Router Configuration

Table 306 describes the commands used to configure a static multicast router.

Note: When static Mrouters are used, the switch continues learning dynamic Mrouters via IGMP snooping. However, dynamic Mrouters may not replace static Mrouters. If a dynamic Mrouter has the same port and VLAN combination as a static Mrouter, the dynamic Mrouter is not learned.

Table 306. IGMP Static Multicast Router Configuration Commands

Command Syntax and Usage
ip igmp mrouter port <port alias or number> <VLAN number> <version (1-3)> Selects a port/VLAN combination on which the static multicast router is connected, and configures the IGMP version (1, 2 or 3) of the multicast router. Command mode: Global configuration
no ip igmp mrouter port <port alias or number> <VLAN number> <version (1-3)> Removes a static multicast router from the selected port/VLAN combination. Command mode: Global configuration
no ip igmp mrouter all Removes all static multicast routers. Command mode: Global configuration
clear ip igmp mrouter Clears the Dynamic router port table. Command mode: Global configuration
show ip igmp mrouter Displays the current IGMP Static Multicast Router parameters. Command mode: All

IGMP Advanced Configuration

Table 307 describes the commands used to configure advanced IGMP parameters.

Table 307. IGMP Advanced Configuration Commands

Command Syntax and Usage
<p>[no] ip igmp fastleave <VLAN number></p> <p>Enables or disables Fastleave processing. Fastleave lets the switch immediately remove a port from the IGMP port list if the host sends a Leave message and the proper conditions are met.</p> <p>The default setting is disabled.</p> <p>Command mode: Global configuration</p>
<p>ip igmp query-interval <1-600></p> <p>Sets the IGMP router query interval, in seconds.</p> <p>The default value is 125.</p> <p>Command mode: Global configuration</p>
<p>ip igmp robust <1-10></p> <p>Configures the IGMP Robustness variable, which allows you to tune the switch for expected packet loss on the subnet. If you expect the subnet to have a high rate of packet loss, increase the value.</p> <p>The default value is 2.</p> <p>Command mode: Global configuration</p>
<p>[no] ip igmp rtralert</p> <p>Enables or disables the Router Alert option in IGMP messages.</p> <p>Command mode: Global configuration</p>
<p>ip igmp timeout <1-255></p> <p>Configures the Query Response Interval. This is a value used to determine the Group Membership Interval, together with the Robustness Variable and the Query Interval. The range is from 1 to 255 seconds.</p> <p>The default value is 10.</p> <p>Command mode: Global configuration</p>

IGMP Querier Configuration

Table 308. describes the commands used to configure IGMP Querier.

Table 308. *IGMP Querier Configuration Options*

Command Syntax and Usage
<p>[no] ip igmp querier enable Globally enables or disables IGMP Querier. Command mode: Global configuration</p>
<p>[no] ip igmp querier vlan <VLAN number> enable Enables or disables the IGMP Querier for the specified VLAN. Command mode: Global configuration</p>
<p>ip igmp querier vlan <VLAN number> election-type [ipv4 mac] Sets the IGMP Querier election criteria as IP address or Mac address. The default setting is IPV4. Command mode: Global configuration</p>
<p>ip igmp querier vlan <VLAN number> max-response <1-256> Configures the maximum time, in tenths of a second, allowed before responding to a Membership Query message. By varying the Query Response Interval, an administrator may tune the burstiness of IGMP messages on the subnet; larger values make the traffic less bursty, as host responses are spread out over a larger interval. The default value is 100. Command mode: Global configuration</p>
<p>ip igmp querier vlan <VLAN number> query-interval <1-608> Configures the interval between IGMP Query broadcasts, in seconds. The default value is 125. Command mode: Global configuration</p>
<p>ip igmp querier vlan <VLAN number> robustness <1-10> Configures the IGMP Robustness variable, which is the number of times that the switch sends each IGMP message. The default value is 2. Command mode: Global configuration</p>
<p>ip igmp querier vlan <VLAN number> source-ip <IP address> Configures the IGMP source IP address for the selected VLAN. Command mode: Global configuration</p>

Table 308. IGMP Querier Configuration Options (continued)

Command Syntax and Usage
<p>ip igmp querier vlan <VLAN number> startup-count <1-10></p> <p>Configures the Startup Query Count, which is the number of IGMP Queries sent out at startup. Each Query is separated by the Startup Query Interval.</p> <p>The default value is 2.</p> <p>Command mode: Global configuration</p>
<p>ip igmp querier vlan <VLAN number> startup-interval <1-608></p> <p>Configures the Startup Query Interval, which is the interval between General Queries sent out at startup.</p> <p>The default value is 31 seconds.</p> <p>Command mode: Global configuration</p>
<p>ip igmp querier vlan <VLAN number> version [v1 v2 v3]</p> <p>Configures the IGMP version.</p> <p>The default version is v3.</p> <p>Command mode: Global configuration</p>
<p>show ip igmp querier</p> <p>Displays the current IGMP Querier parameters.</p> <p>Command mode: All</p>
<p>show ip igmp querier vlan <VLAN number></p> <p>Displays IGMP Querier information for the selected VLAN.</p> <p>Command mode: Global configuration</p>

IKEv2 Configuration

Table 309 describes the commands used to configure IKEv2.

Table 309. *IKEv2 Options*

Command Syntax and Usage
[no] ikev2 cookie Enables or disables cookie notification. Command mode: Global configuration
ikev2 retransmit-interval <1-20> Sets the interval, in seconds, the timeout value in case a packet is not received by the peer and needs to be retransmitted. The default value is 20. Command mode: Global configuration
show ikev2 Displays the current IKEv2 settings. Command mode: All

IKEv2 Proposal Configuration

Table 310 describes the commands used to configure an IKEv2 proposal.

Table 310. *IKEv2 Proposal Options*

Command Syntax and Usage
ikev2 proposal Enter IKEv2 proposal mode. Command mode: Global configuration
encryption {3des aes-cbc} Configures IKEv2 encryption mode. The default value is 3des. Command mode: IKEv2 proposal
group {24} Configures the the DH group. The default group is 24. Command mode: IKEv2 proposal
integrity {sha1} Configures the IKEv2 authentication algorithm type. The default value is sha1. Command mode: IKEv2 proposal

IKEv2 Preshare Key Configuration

Table 311 describes the commands used to configure IKEv2 preshare keys.

Table 311. *IKEv2 Preshare Key Options*

Command Syntax and Usage
ikev2 preshare-key local <1-32 characters> Configures the local preshare key. The default value is <code>ibm123</code> . Command mode: Global configuration
ikev2 preshare-key remote <1-32 characters> <IPv6 address> Configures the remote preshare key for the IPv6 address. Command mode: Global configuration
show ikev2 preshare-key Displays the current IKEv2 Preshare key settings. Command mode: Global configuration

IKEv2 Identification Configuration

Table 312 describes the commands used to configure IKEv2 identification.

Table 312. *IKEv2 Identification Options*

Command Syntax and Usage
ikev2 identity local address Configures the switch to use the supplied IPv6 address as identification. Command mode: Global configuration
ikev2 identity local email <1-32 characters> Configures the switch to use the supplied email address (such as "xyz@example.com") as identification. Command mode: Global configuration
ikev2 identity local fqdn <1-32 characters> Configures the switch to use the fully-qualified domain name (such as "example.com") as identification. Command mode: Global configuration
show ikev2 identity Displays the current IKEv2 identification settings. Command mode: All

IPsec Configuration

Table 313 describes the commands used to configure IPsec.

Table 313. *IPsec Options*

Command Syntax and Usage
<p>[no] ipsec enable Enables or disables IPsec. Command mode: Global configuration</p>
<p>show ipsec Displays the current IPsec settings. Command mode: All</p>

IPsec Transform Set Configuration

Table 314 describes the commands used to configure IPsec transforms.

Table 314. *IPsec Transform Set Options*

Command Syntax and Usage
<p>ipsec transform-set <1-10> {ah-sha1 esp-3des esp-aes-cbc esp-null} Sets the AH or ESP authentication, encryption, or integrity algorithm. The available algorithms are as follows:</p> <ul style="list-style-type: none"> o ah-md5 o ah-sha1 o esp-3des o esp-aes-cbc o esp-des o esp-md5 o esp-null o esp o sha1 <p>Command mode: Global configuration</p>
<p>ipsec transform-set <1-10> transport {ah-md5 ah-sha1 esp-3des esp-aes-cbc esp-md5 esp-null} Sets transport mode and the AH or ESP authentication, encryption, or integrity algorithm. Command mode: Global configuration</p>
<p>ipsec transform-set <1-10> tunnel {ah-md5 ah-sha1 esp-3des esp-aes-cbc esp-md5 esp-null} Sets tunnel mode and the AH or ESP authentication, encryption, or integrity algorithm. Command mode: Global configuration</p>

Table 314. *IPsec Transform Set Options (continued)*

Command Syntax and Usage
no ipsec transform <1-10> Deletes the transform set. Command mode: Global configuration
show ipsec transform-set <1-10> Displays the current IPsec Transform Set settings. Command mode: All

IPsec Traffic Selector Configuration

[Table 315](#) describes the commands used to configure an IPsec traffic selector.

Table 315. *IPsec Traffic Selector Options*

Command Syntax and Usage
ipsec traffic-selector <1-10> { permit deny } { any icmp tcp } {<IPv6 address> any } Sets the traffic selector to permit or deny the specified type of traffic. Command mode: Global configuration
no ipsec traffic-selector <1-10> Resets the specified traffic selector to its default settings. Command mode: Global configuration

IPsec Dynamic Policy Configuration

[Table 316](#) describes the commands used to configure an IPsec dynamic policy.

Table 316. *IPsec Dynamic Policy Options*

Command Syntax and Usage
ipsec dynamic-policy <1-10> Enter IPsec dynamic policy mode. Command mode: Global configuration
peer <IPv6 address> Sets the remote peer IP address. Command mode: IPsec dynamic policy
pfs { enable disable } Enables/disables perfect forward security. Command mode: IPsec dynamic policy

Table 316. *IPsec Dynamic Policy Options (continued)*

Command Syntax and Usage
sa-lifetime <120-86400> Sets the IPsec SA lifetime in seconds. The default value is 86400. Command mode: IPsec dynamic policy
traffic-selector <1-10> Sets the traffic selector for the IPsec policy. Command mode: IPsec dynamic policy
transform-set <1-10> Sets the transform set for the IPsec policy. Command mode: IPsec dynamic policy
show ipsec dynamic-policy <1-10> Displays the current IPsec dynamic policy settings. Command mode: All

IPsec Manual Policy Configuration

[Table 317](#) describes the commands used to configure an IPsec manual policy.

Table 317. *IPsec Manual Policy Options*

Command Syntax and Usage
ipsec manual-policy <1-10> Enter IPsec manual policy mode. Command mode: Global configuration
in-ah auth-key <key code (hexadecimal)> Sets inbound Authentication Header (AH) authenticator key. Note: For manual policies, when peering with a third-party device, key lengths are fixed to 20 characters for SHA1. Command mode: IPsec manual policy
in-ah spi <256-4294967295> Sets the inbound Authentication Header (AH) Security Parameter Index (SPI). Note: For manual policies, when peering with a third-party device, key lengths are fixed to 20 characters for SHA1. Command mode: IPsec manual policy

Table 317. *IPsec Manual Policy Options (continued)*

Command Syntax and Usage
<p>in-esp auth-key <<i>key code (hexadecimal)</i>></p> <p>Sets the inbound Encapsulating Security Payload (ESP) authenticator key.</p> <p>Note: For manual policies, when peering with a third-party device, key lengths are fixed to 8 characters for DES and to 24 characters for 3DES and AES-CBC encryption.</p> <p>Command mode: IPsec manual policy</p>
<p>in-esp cipher-key <<i>key code (hexadecimal)</i>></p> <p>Sets the inbound Encapsulating Security Payload (ESP) cipher key.</p> <p>Note: For manual policies, when peering with a third-party device, key lengths are fixed to 8 characters for DES and to 24 characters for 3DES and AES-CBC encryption.</p> <p>Command mode: IPsec manual policy</p>
<p>in-esp spi <<i>256-4294967295</i>></p> <p>Sets the inbound Encapsulating Security Payload (ESP) Security Parameter Index (SPI).</p> <p>Note: For manual policies, when peering with a third-party device, key lengths are fixed to 20 characters for SHA1.</p> <p>Command mode: IPsec manual policy</p>
<p>out-ah auth-key <<i>key code (hexadecimal)</i>></p> <p>Sets the outbound Authentication Header (AH) authenticator key.</p> <p>Note: For manual policies, when peering with a third-party device, key lengths are fixed to 20 characters for SHA1.</p> <p>Command mode: IPsec manual policy</p>
<p>out-ah spi <<i>256-4294967295</i>></p> <p>Sets the outbound Authentication Header (AH) Security Parameter Index (SPI).</p> <p>Note: For manual policies, when peering with a third-party device, key lengths are fixed to 20 characters for SHA1.</p> <p>Command mode: IPsec manual policy</p>
<p>out-esp auth-key <<i>key code (hexadecimal)</i>></p> <p>Sets the outbound Encapsulating Security Payload (ESP) authenticator key.</p> <p>Note: For manual policies, when peering with a third-party device, key lengths are fixed to 8 characters for DES and to 24 characters for 3DES and AES-CBC encryption.</p> <p>Command mode: IPsec manual policy</p>

Table 317. *IPsec Manual Policy Options (continued)*

Command Syntax and Usage	
out-esp cipher-key <key code (hexadecimal)>	<p>Sets the outbound Encapsulating Security Payload (ESP) cipher key.</p> <p>Note: For manual policies, when peering with a third-party device, key lengths are fixed to 8 characters for DES and to 24 characters for 3DES and AES-CBC encryption.</p> <p>Command mode: IPsec manual policy</p>
out-esp spi <256-4294967295>	<p>Sets the outbound Encapsulating Security Payload (ESP) Security Parameter Index (SPI).</p> <p>Note: For manual policies, when peering with a third-party device, key lengths are fixed to 20 characters for SHA1.</p> <p>Command mode: IPsec manual policy</p>
peer <IPv6 address>	<p>Sets the remote peer IP address.</p> <p>Command mode: IPsec manual policy</p>
traffic-selector <1-10>	<p>Sets the traffic selector for the IPsec policy.</p> <p>Command mode: IPsec manual policy</p>
transform-set <1-10>	<p>Sets the transform set for the IPsec policy.</p> <p>Command mode: IPsec manual policy</p>
show ipsec manual-policy <1-10>	<p>Displays the current IPsec manual policy settings.</p> <p>Command mode: All</p>

Domain Name System Configuration

The Domain Name System (DNS) commands are used for defining the primary and secondary DNS servers on your local network, and for setting the default domain name served by the switch services. DNS parameters must be configured prior to using hostname parameters with the `ping`, `traceroute`, and `tftp` commands.

Table 318. *Domain Name Service Commands*

Command Syntax and Usage
<p>[no] ip dns domain-name <string></p> <p>Sets the default domain name used by the switch.</p> <p>For example: mycompany.com</p> <p>Command mode: Global configuration</p>
<p>[no] ip dns primary-server <IP address></p> <p>You are prompted to set the IPv4 address for your primary DNS server, using dotted decimal notation.</p> <p>Command mode: Global configuration</p>
<p>[no] ip dns secondary-server <IP address></p> <p>You are prompted to set the IPv4 address for your secondary DNS server, using dotted decimal notation. If the primary DNS server fails, the configured secondary will be used instead.</p> <p>Command mode: Global configuration</p>
<p>[no] ip dns ipv6 primary-server <IP address></p> <p>You are prompted to set the IPv6 address for your primary DNS server, using hexadecimal format with colons.</p> <p>Command mode: Global configuration</p>
<p>[no] ip dns ipv6 secondary-server <IP address></p> <p>You are prompted to set the IPv6 address for your secondary DNS server, using hexadecimal format with colons. If the primary DNS server fails, the configured secondary will be used instead.</p> <p>Command mode: Global configuration</p>
<p>ip dns ipv6 request-version {ipv4 ipv6}</p> <p>Sets the protocol used for the first request to the DNS server, as follows:</p> <ul style="list-style-type: none"> o IPv4 o IPv6 <p>Command mode: Global configuration</p>
<p>show ip dns</p> <p>Displays the current Domain Name System settings.</p> <p>Command mode: All</p>

Bootstrap Protocol Relay Configuration

The Bootstrap Protocol (BOOTP) Relay commands are used to let hosts get their configurations from a Dynamic Host Configuration Protocol (DHCP) server. The BOOTP configuration enables the switch to forward a client request for an IP address to two DHCP/BOOTP servers with IP addresses that have been configured on the CN4093.

BOOTP relay is turned off by default.

Table 319. *Global BOOTP Relay Configuration Options*

Command Syntax and Usage
<p>[no] ip bootp-relay server <1-4> address <IP address> Sets the IP address of the selected global BOOTP server. Command mode: Global configuration</p>
<p>[no] ip bootp-relay enable Globally enables or disables BOOTP relay. Command mode: Global configuration</p>

BOOTP Relay Broadcast Domain Configuration

These commands allow you to configure a BOOTP server for a specific broadcast domain, based on its associated VLAN.

Table 320. *BOOTP Relay Broadcast Domain Configuration Options*

Command Syntax and Usage
<p>[no] ip bootp-relay bcast-domain <1-10> enable Enables or disables BOOTP Relay for the broadcast domain. When disabled, BOOTP Relay is performed by one of the global BOOTP servers. Command mode: Global configuration</p>
<p>ip bootp-relay bcast-domain <1-10> server <1-4> address <IPv4 address> Sets the IP address of the BOOTP server. Command mode: Global configuration</p>
<p>ip bootp-relay bcast-domain <1-10> vlan <VLAN number> Configures the VLAN of the broadcast domain. Each broadcast domain must have a unique VLAN. Command mode: Global configuration</p>
<p>no ip bootp-relay bcast-domain <1-10> Deletes the selected broadcast domain configuration. Command mode: Global configuration</p>
<p>show ip bootp-relay Displays the current parameters for the BOOTP Relay broadcast domain. Command mode: All</p>

VRRP Configuration

Virtual Router Redundancy Protocol (VRRP) support on the CN4093 provides redundancy between routers in a LAN. This is accomplished by configuring the same virtual router IP address and ID number on each participating VRRP-capable routing device. One of the virtual routers is then elected as the master, based on a number of priority criteria, and assumes control of the shared virtual router IP address. If the master fails, one of the backup virtual routers will assume routing authority and take control of the virtual router IP address.

By default, VRRP is disabled. Enterprise NOS has extended VRRP to include virtual servers as well, allowing for full active/active redundancy between switches. For more information on VRRP, see the “High Availability” chapter in the *Enterprise NOS 8.4 Application Guide*.

Table 321. *Virtual Router Redundancy Protocol Commands*

Command Syntax and Usage
router vrrp Enter Router VRRP configuration mode. Command mode: Global configuration
[no] enable Globally enables or disables VRRP on this switch. Command mode: Router VRRP
group Configures VRRP virtual routers groups. To view command options, see page 517 . Command mode: Router VRRP
holdoff <0-255> Globally sets the time, in seconds, VRRP waits from when the master switch goes down until elevating a new switch to be the master switch. Command mode: Router VRRP
[no] hot-standby Enables or disables hot standby processing, in which two or more switches provide redundancy for each other. By default, this option is disabled. Command mode: Router VRRP
interface <interface number> Configures VRRP authentication parameters for the IP interfaces used with the virtual routers. To view command options, see page 520 . Command mode: Router VRRP

Table 321. *Virtual Router Redundancy Protocol Commands*

Command Syntax and Usage
<p>tracking-priority-increment</p> <p>Configures weights for the various criteria used to modify priority levels during the master router election process. To view command options, see page 521.</p> <p>Command mode: Router VRRP</p>
<p>virtual-router <1-128></p> <p>Configures virtual routers for the switch. To view command options, see page 514.</p> <p>Command mode: Router VRRP</p>
<p>show ip vrrp</p> <p>Displays the current VRRP parameters.</p> <p>Command mode: All</p>

Virtual Router Configuration

These commands are used for configuring virtual routers for this switch. A virtual router is defined by its virtual router ID and an IP address. On each VRRP-capable routing device participating in redundancy for this virtual router, a virtual router will be configured to share the same virtual router ID and IP address.

Virtual routers are disabled by default.

Table 322. VRRP Virtual Router Configuration Commands

Command Syntax and Usage
<p>[no] virtual-router <1-128> address <IP address></p> <p>Defines the IP address for this virtual router using dotted decimal notation. This is used in conjunction with the VRID (above) to configure the same virtual router on each participating VRRP device.</p> <p>The default address is 0.0.0.0.</p> <p>Command mode: Router VRRP</p>
<p>[no] virtual-router <1-128> enable</p> <p>Enables or disables this virtual router.</p> <p>Command mode: Router VRRP</p>
<p>virtual-router <1-128> interface <interface number></p> <p>Selects a switch IP interface. If the IP interface has the same IP address as the addr option above, this switch is considered the “owner” of the defined virtual router. An owner has a special priority of 255 (highest) and will always assume the role of master router, even if it must pre-empt another virtual router which has assumed master routing authority. This pre-emption occurs even if the preem option below is disabled.</p> <p>The default value is 1.</p> <p>Command mode: Router VRRP</p>
<p>[no] virtual-router <1-128> preemption</p> <p>Enables or disables master preemption. When enabled, if this virtual router is in backup mode but has a higher priority than the current master, this virtual router will preempt the lower priority master and assume control. Note that even when preemption is disabled, this virtual router will always pre-empt any other master if this switch is the owner (the IP interface address and virtual router addr are the same).</p> <p>The default setting is enabled.</p> <p>Command mode: Router VRRP</p>

Table 322. VRRP Virtual Router Configuration Commands (continued)

Command Syntax and Usage	
virtual-router <1-128> priority <1-254>	<p>Defines the election priority bias for this virtual server. The priority value can be any integer between 1 and 254.</p> <p>During the master router election process, the routing device with the highest virtual router priority number wins. If there is a tie, the device with the highest IP interface address wins. If this virtual router's IP address is the same as the one used by the IP interface, the priority for this virtual router will automatically be set to 255 (highest).</p> <p>When priority tracking is used, this base priority value can be modified according to a number of performance and operational criteria.</p> <p>The default value is 100.</p> <p>Command mode: Router VRRP</p>
virtual-router <1-128> timers advertise <1-255>	<p>Defines the time interval between VRRP master advertisements. This can be any integer between 1 and 255 seconds.</p> <p>The default value is 1.</p> <p>Command mode: Router VRRP</p>
virtual-router <1-128> track	<p>Enables the priority system used when electing the master router from a pool of virtual routers. To view command options, see page 516.</p> <p>Command mode: Router VRRP</p>
virtual-router <1-128> virtual-router-id <1-255>	<p>Defines the virtual router ID (VRID). This is used in conjunction with the [no] virtual-router <128> address <IP address> command below to define a virtual router on this switch. To create a pool of VRRP-enabled routing devices which can provide redundancy to each other, each participating VRRP device must be configured with the same virtual router.</p> <p>The VRID for standard virtual routers (where the virtual router IP address is not the same as any virtual server) can be any integer between 1 and 255.</p> <p>The default value is 1.</p> <p>Note: All VRID values must be unique within the VLAN to which the virtual router's IP interface belongs.</p> <p>Command mode: Router VRRP</p>
no virtual-router <1-128>	<p>Deletes this virtual router from the switch configuration.</p> <p>Command mode: Router VRRP</p>
show ip vrrp virtual-router <1-128>	<p>Displays the current configuration information for this virtual router.</p> <p>Command mode: All</p>

Virtual Router Priority Tracking Configuration

These commands are used for modifying the priority system used when electing the master router from a pool of virtual routers. Various tracking criteria can be used to bias the election results. Each time one of the tracking criteria is met, the priority level for the virtual router is increased by an amount defined through the VRRP Tracking commands.

Criteria are tracked dynamically, continuously updating virtual router priority levels when enabled. If the virtual router preemption option is enabled, this virtual router can assume master routing authority when its priority level rises above that of the current master.

Some tracking criteria apply to standard virtual routers, otherwise called “virtual interface routers.” A virtual *server* router is defined as any virtual router whose IP address is the same as any configured virtual server IP address.

Table 323. VRRP Priority Tracking Configuration Commands

Command Syntax and Usage
<p>[no] virtual-router <1-128> track interfaces</p> <p>When enabled, the priority for this virtual router will be increased for each other IP interface active on this switch. An IP interface is considered active when there is at least one active port on the same VLAN. This helps elect the virtual routers with the most available routes as the master.</p> <p>This command is disabled by default.</p> <p>Command mode: Router VRRP</p>
<p>[no] virtual-router <1-128> track ports</p> <p>When enabled, the priority for this virtual router will be increased for each active port on the same VLAN. A port is considered “active” if it has a link and is forwarding traffic. This helps elect the virtual routers with the most available ports as the master.</p> <p>This command is disabled by default.</p> <p>Command mode: Router VRRP</p>
<p>[no] virtual-router <1-128> track virtual-routers</p> <p>When enabled, the priority for this virtual router will be increased for each virtual router in master mode on this switch. This is useful for making sure that traffic for any particular client/server pairing are handled by the same switch, increasing routing and load balancing efficiency.</p> <p>This command is disabled by default.</p> <p>Command mode: Router VRRP</p>
<p>show ip vrrp virtual-router <1-128> track</p> <p>Displays the current configuration for priority tracking for this virtual router.</p> <p>Command mode: All</p>

Virtual Router Group Configuration

Virtual Router Group commands are used for associating all virtual routers into a single logical virtual router, which forces all virtual routers on the CN4093 to either be master or backup as a group. A virtual router is defined by its virtual router ID and an IP address. On each VRRP-capable routing device participating in redundancy for this virtual router, a virtual router will be configured to share the same virtual router ID and IP address.

Note: This option is required to be configured only when using at least two CN4093s in a hot-standby failover configuration, where only one switch is active at any time.

Table 324. VRRP Virtual Router Group Configuration Commands

Command Syntax and Usage
<p>group advertisement <1-255></p> <p>Defines the time interval between VRRP master advertisements. This can be any integer between 1 and 255 seconds.</p> <p>The default value is 1.</p> <p>Command mode: Router VRRP</p>
<p>[no] group enable</p> <p>Enables or disables the virtual router group.</p> <p>Command mode: Router VRRP</p>
<p>group interface <interface number></p> <p>Selects a switch IP interface.</p> <p>The default switch IP interface number is 1.</p> <p>Command mode: Router VRRP</p>
<p>group preempt-delay-time <0-255></p> <p>Configures the preempt delay interval (in seconds). This timer is configured on the virtual router group and prevents the switch from transitioning back to Master state until the preempt delay interval has expired. Ensure that the interval is long enough for OSPF or other routing protocols to converge.</p> <p>The default is 0 seconds.</p> <p>Command mode: Router VRRP</p>
<p>[no] group preemption</p> <p>Enables or disables master pre-emption. When enabled, if the virtual router group is in backup mode but has a higher priority than the current master, this virtual router will pre-empt the lower priority master and assume control. Note that even when preemption is disabled, this virtual router will always pre-empt any other master if this switch is the owner (the IP interface address and virtual router address are the same).</p> <p>The default setting is enabled.</p> <p>Command mode: Router VRRP</p>

Table 324. VRRP Virtual Router Group Configuration Commands (continued)

Command Syntax and Usage
<p>group priority <1-254></p> <p>Defines the election priority bias for this virtual router group. This can be any integer between 1 and 254.</p> <p>During the master router election process, the routing device with the highest virtual router priority number wins.</p> <p>Each virtual router group is treated as one entity regardless of how many virtual routers are in the group. When the switch tracks the virtual router group, it measures the resources contained in the group (such as interfaces, VLAN ports, real servers). The priority is updated as a group. Every virtual router in the group has the same priority.</p> <p>The <i>owner</i> parameter does not apply to the virtual router group. The group itself cannot be an owner and therefore the priority is 1-254.</p> <p>The default value is 100.</p> <p>Command mode: Router VRRP</p>
<p>group track</p> <p>Enables the priority system used when electing the master router from a pool of virtual router groups. To view command options, see page 519.</p> <p>Command mode: Router VRRP</p>
<p>group virtual-router-id <1-255></p> <p>Defines the virtual router ID (VRID).</p> <p>The VRID for standard virtual routers (where the virtual router IP address is not the same as any virtual server) can be any integer between 1 and 255. All VRID values must be unique within the VLAN to which the virtual router's IP interface (see interface below) belongs.</p> <p>The default virtual router ID is 1.</p> <p>Command mode: Router VRRP</p>
<p>no group</p> <p>Deletes the virtual router group from the switch configuration.</p> <p>Command mode: Router VRRP</p>
<p>show ip vrrp group</p> <p>Displays the current configuration information for the virtual router group.</p> <p>Command mode: All</p>

Virtual Router Group Priority Tracking Configuration

Note: If *Virtual Router Group Tracking* is enabled, the tracking option will be available only under *group* option. The tracking setting for the other individual virtual routers will be ignored.

Table 325. *Virtual Router Group Priority Tracking Configuration Commands*

Command Syntax and Usage
<p>[no] group track interfaces</p> <p>When enabled, the priority for this virtual router will be increased for each other IP interface active on this switch. An IP interface is considered active when there is at least one active port on the same VLAN. This helps elect the virtual routers with the most available routes as the master.</p> <p>The default setting is disabled.</p> <p>Command mode: Router VRRP</p>
<p>[no] group track ports</p> <p>When enabled, the priority for this virtual router will be increased for each active port on the same VLAN. A port is considered “active” if it has a link and is forwarding traffic. This helps elect the virtual routers with the most available ports as the master.</p> <p>The default setting is disabled.</p> <p>Command mode: Router VRRP</p>
<p>show ip vrrp group track</p> <p>Displays the current configuration for priority tracking for this virtual router.</p> <p>Command mode: All</p>

VRRP Interface Configuration

Note: The *interface* represents the IP interface on which authentication parameters must be configured.

These commands are used for configuring VRRP authentication parameters for the IP interfaces used with the virtual routers.

Table 326. VRRP Interface Commands

Command Syntax and Usage
interface <i><interface number></i> authentication { password none } Defines the type of authentication that will be used: none (no authentication) or password (password authentication). Command mode: Router VRRP
[no] interface <i><interface number></i> password <i><password></i> Defines a plain text password up to eight characters long. This password will be added to each VRRP packet transmitted by this interface when password authentication is chosen (see interface authentication above). Command mode: Router VRRP
no interface <i><interface number></i> Clears the authentication configuration parameters for this IP interface. The IP interface itself is not deleted. Command mode: Router VRRP
show ip vrrp interface <i><interface number></i> Displays the current configuration for this IP interface's authentication parameters. Command mode: All

VRRP Tracking Configuration

These commands are used for setting weights for the various criteria used to modify priority levels during the master router election process. Each time one of the tracking criteria is met (see “VRRP Virtual Router Priority Tracking Commands” on [page 516](#)), the priority level for the virtual router is increased by a defined amount.

Table 327. VRRP Tracking Configuration Commands

Command Syntax and Usage
tracking-priority-increment interfaces <0-254> Defines the priority increment value for active IP interfaces detected on this switch. The default value is 2. Command mode: Router VRRP
tracking-priority-increment ports <0-254> Defines the priority increment value for active ports on the virtual router’s VLAN. The default value is 2. Command mode: Router VRRP
tracking-priority-increment virtual-routers <0-254> Defines the priority increment value (0 through 254) for virtual routers in master mode detected on this switch. The default value is 2. Command mode: Router VRRP
show ip vrrp tracking-priority-increment Displays the current configuration of priority tracking increment values. Command mode: All

Note: These priority tracking options only define increment values. These options do not affect the VRRP master router election process until options under the VRRP Virtual Router Priority Tracking Commands (see [page 516](#)) are enabled.

Protocol Independent Multicast Configuration

The following table displays Protocol Independent Multicast configuration commands:

Table 328. *PIM Configuration Options*

Command Syntax and Usage
ip pim component <1-2> Enter PIM component mode. See page 523 to view options. Command mode: Global configuration
[no] ip pim enable Globally enables or disables PIM. Command mode: Global configuration
[no] ip pim pmbr enable Enables or disables PIM border router. The default setting is disabled . Command mode: Global configuration
ip pim regstop-ratelimit-period <0-2147483647> Configures the register stop rate limit, in seconds. The default value is 5. Command mode: Global configuration
[no] ip pim static-rp enable Enables or disables static RP configuration. The default setting is disabled . Command mode: Global configuration
clear ip pim mroute Clears PIM multicast router entries. Command mode: Global configuration

PIM Component Configuration

Use these commands to configure a PIM Component:

Table 329. PIM Component Configuration Options

Command Syntax and Usage
ip pim component <1-2> Enter PIM component mode. Command mode: Global configuration
mode {dense sparse} Configures the operational mode of the PIM router (dense or sparse). Command mode: PIM Component
show ip pim component [<1-2>] Displays the current PIM component configuration settings. Command mode: All

RP Candidate Configuration

Use these commands to configure a PIM router Rendezvous Point (RP) candidate.

Table 330. RP Candidate Configuration Options

Command Syntax and Usage
rp-candidate holdtime <0-255> Configures the hold time of the RP candidate, in seconds. Command mode: PIM Component
[no] rp-candidate rp-address <group multicast address> <group subnet mask> <IP address> Adds or removes an RP candidate. Command mode: PIM Component

RP Static Configuration

Use these commands to configure a static PIM router Rendezvous Point (RP).

Table 331. RP Static Configuration Options

Command Syntax and Usage
[no] rp-static rp-address <group multicast address> <group subnet mask> <IP address> Adds or removes a static RP. Command mode: PIM Component

PIM Interface Configuration

The following table displays PIM Interface configuration commands:

Table 332. PIM Interface Configuration Options

Command Syntax and Usage
<p>interface ip <interface number> Enter Interface IP mode. Command mode: Global Configuration</p>
<p>[no] ip pim border-bit Enables or disables the interface as a border router. The default setting is disabled. Command mode: Interface IP</p>
<p>[no] ip pim cbsr-preference <0-255> Configures the candidate bootstrap router preference. Command mode: Interface IP</p>
<p>ip pim component-id <1-2> Defines the component ID for the interface. Command mode: Interface IP</p>
<p>ip pim dr-priority <0-4294967294> Configures the designated router priority. The default value is 1. Command mode: Interface IP</p>
<p>[no] ip pim enable Enables or disables PIM on the interface. Command mode: Interface IP</p>
<p>ip pim hello-interval <0-65535> Configures the time interval, in seconds, between PIM Hello packets. The default value is 30. Command mode: Interface IP</p>
<p>ip pim hello-holdtime <1-65535> Configures the time period for which a neighbor is to consider this switch to be operative (up). The default value is 105. Command mode: Interface IP</p>
<p>ip pim join-prune-interval <0-65535> Configures the interval between Join Prune messages, in seconds. The default value is 60. Command mode: Interface IP</p>

Table 332. PIM Interface Configuration Options (continued)

Command Syntax and Usage	
ip pim lan-delay <0-32767>	Configures the LAN delay value for the router interface, in seconds. Command mode: Interface IP
[no] ip pim lan-prune-delay	Enables or disables LAN delay advertisements on the interface. The default setting is disabled. Command mode: Interface IP
ip pim neighbor-addr <IP address> {allow deny}	Allows or denies PIM access to the specified neighbor. You can configure a list of up to 72 neighbors that bypass the neighbor filter. Once you configure the interface to allow a neighbor, you can configure the interface to deny the neighbor. Command mode: Interface IP
[no] ip pim neighbor-filter	Enables or disables the PIM neighbor filter on the interface. When enabled, this interface does not accept any PIM neighbors, unless specifically permitted using the following command: ip pim neighbor-addr <IP address> Command mode: Interface IP
ip pim override-interval <0-65535>	Configures the override interval for the router interface, in seconds. Command mode: Interface IP
show ip pim interface [<interface number> detail]	Displays the current PIM interface parameters. Command mode: All
show ip pim neighbor-filters	Displays the configured PIM neighbor filters. Command mode: All

IPv6 Default Gateway Configuration

The switch supports IPv6 default gateways.

- Gateway 1 is used for data traffic.
- Gateways 3 and 4 are used for management traffic.

[Table 333](#) describes the IPv6 Default Gateway Configuration commands.

Table 333. *IPv6 Default Gateway Configuration Commands*

Command Syntax and Usage
<p>ip gateway6 <1,3-4> address <IPv6 address> [enable]</p> <p>Configures the IPv6 address of the default gateway, in hexadecimal format with colons (such as 3001:0:0:0:0:0:abcd:12). The enable option also enable the default gateway.</p> <p>Command mode: Global configuration</p>
<p>[no] ip gateway6 <1,3-4> enable</p> <p>Enables or disables the default gateway.</p> <p>Command mode: Global configuration</p>
<p>no ip gateway6 <1,3-4></p> <p>Deletes the default gateway.</p> <p>Command mode: Global configuration</p>
<p>show ipv6 gateway6 <1,3-4></p> <p>Displays the current IPv6 default gateway configuration.</p> <p>Command mode: All</p>

IPv6 Static Route Configuration

Table 334 describes the IPv6 static route configuration commands.

Table 334. IPv6 Static Route Configuration Commands

Command Syntax and Usage
<p>ip route6 <IPv6 address> <prefix length> <IPv6 gateway address> [<i><interface number></i>]</p> <p>Adds an IPv6 static route.</p> <p>Command mode: Global configuration</p>
<p>no ip route6 <IPv6 address> <prefix length></p> <p>Removes the selected route.</p> <p>Command mode: Global configuration</p>
<p>no ip route6 [destination-address <IPv6 address> gateway <default gateway address> interface <1-128> all]</p> <p>Clears IPv6 static routes. You are prompted to select the routes to clear, based on the following criteria:</p> <ul style="list-style-type: none"> o destination-address: Destination IPv6 address of the route o gateway: Default gateway address used by the route o interface: Interface used by the route o all: All IPv6 static routes <p>Command mode: Global configuration</p>
<p>show ipv6 route static</p> <p>Displays the current static route configuration.</p> <p>Command mode: All</p>

IPv6 Neighbor Discovery Cache Configuration

Table 335 describes the IPv6 Neighbor Discovery cache configuration commands.

Table 335. IPv6 Neighbor Discovery Cache Configuration Commands

Command Syntax and Usage
<p>ip neighbors <IPv6 address> <MAC address> vlan <VLAN number> port <port number or alias></p> <p>Adds a static entry to the Neighbor Discovery cache table.</p> <p>Command mode: Global configuration</p>
<p>no ip neighbors {<IPv6 address> all}</p> <p>Deletes the selected entry from the static Neighbor Discovery cache table.</p> <p>Command mode: Global configuration</p>
<p>no ip neighbors all [if <1-128> interface port <port alias or number> vlan <VLAN number>]</p> <p>Clears the selected static entries in the Neighbor Discovery cache table.</p> <p>Command mode: Global configuration</p>

IPv6 Neighbor Discovery Prefix Configuration

The following table describes the Neighbor Discovery prefix configuration options. These commands allow you to define a list of prefixes to be placed in Prefix Information options in Router Advertisement messages sent from an interface.

Table 336. IPv6 Neighbor Discovery Prefix Commands

Command Syntax and Usage
<p>interface ip <1-127></p> <p>Enters Interface IP mode.</p> <p>Command mode: Global configuration</p>
<p>ipv6 nd prefix {<IPv6 prefix> <prefix length>} [no-advertise]</p> <p>Adds a Neighbor Discovery prefix to the interface.</p> <p>The default setting is enabled.</p> <p>To disable the prefix and not advertise it in the Prefix Information options in Router Advertisement messages sent from the interface use the no-advertise option.</p> <p>Additional prefix options are listed in this table.</p> <p>Command mode: Interface IP</p>
<p>no ipv6 nd prefix {<IPv6 prefix> <prefix length>} [interface all]</p> <p>Removes the selected Neighbor Discovery prefix(es). If you specify an interface number, all prefixes for the interface are removed.</p> <p>Command mode: Interface IP</p>

Table 336. IPv6 Neighbor Discovery Prefix Commands (continued)

Command Syntax and Usage
<p>ipv6 nd prefix {<IPv6 prefix> <prefix length>} no-autoconfig</p> <p>Disables the autonomous flag. When enabled, the autonomous flag indicates that the prefix can be used for stateless address configuration.</p> <p>The default setting is enabled.</p> <p>Command mode: Interface IP</p>
<p>ipv6 nd prefix {<IPv6 prefix> <prefix length>} off-link [no-autoconfig]</p> <p>Disables the on-link flag. When enabled, the on-link flag indicates that this prefix can be used for on-link determination. When disabled, the advertisement makes no statement about on-link or off-link properties of the prefix.</p> <p>The default setting is enabled.</p> <p>To clear the off-link flag, omit the off-link parameter when you issue this command.</p> <p>Command mode: Interface IP</p>
<p>ipv6 nd prefix {<IPv6 prefix> <prefix length>} valid-lifetime <0-4294967295> [infinite variable] preferred-lifetime <0-4294967295> [infinite variable]</p> <p>Configures the Valid Lifetime and (optionally) the Preferred Lifetime of the prefix, in seconds.</p> <p>The Valid Lifetime is the length of time (relative to the time the packet is sent) that the prefix is valid for the purpose of on-link determination.</p> <p>The default value is 2592000.</p> <p>The Preferred Lifetime is the length of time (relative to the time the packet is sent) that addresses generated from the prefix via stateless address autoconfiguration remain preferred.</p> <p>The default value is 604800.</p> <p>Note: The Preferred Lifetime value must not exceed the Valid Lifetime value.</p> <p>Command mode: Interface IP</p>
<p>show ipv6 prefix {<interface number>}</p> <p>Displays current Neighbor Discovery prefix parameters.</p> <p>Command mode: All</p>

IPv6 Prefix Policy Table Configuration

The following table describes the configuration options for the IPv6 Prefix Policy Table. The Prefix Policy Table allows you to override the default address selection criteria.

Table 337. *IPv6 Prefix Policy Table Options*

Command Syntax and Usage
<p>[no] ip prefix-policy <IPv6 prefix> <prefix length> <precedence (0-100)> <label (0-100)></p> <p>Adds or removes a Prefix Policy Table entry. Enter the following parameters:</p> <ul style="list-style-type: none">o IPv6 address prefixo Prefix lengtho Precedence: The precedence is used to sort destination addresses. Prefixes with a higher precedence are sorted before those with a lower precedence.o Label: The label allows you to select prefixes based on matching labels. Source prefixes are coupled with destination prefixes if their labels match. <p>Command mode: Global configuration</p>
<p>show ip prefix-policy</p> <p>Displays the current Prefix Policy Table configuration.</p> <p>Command mode: All</p>

IPv6 Path MTU Configuration

The following table describes the configuration options for Path MTU (Maximum Transmission Unit). The Path MTU cache can consume system memory and affect performance. These commands allow you to manage the Path MTU cache.

Table 338. *IPv6 Path MTU Commands*

Command Syntax and Usage
<p>ip pmtu6 timeout {0 <10-100>}</p> <p>Sets the timeout value for Path MTU cache entries, in minutes. Enter 0 (zero) to set the timeout to infinity (no timeout).</p> <p>The default value is 10.</p> <p>Command mode: Global configuration</p>
<p>clear ipv6 pmtu</p> <p>Clears all entries in the Path MTU cache.</p> <p>Command mode: All Except User EXEC</p>
<p>show ipv6 pmtu</p> <p>Displays the current Path MTU configuration.</p> <p>Command mode: All</p>

IP Loopback Interface Configuration

An IP loopback interface is not connected to any physical port. A loopback interface is always accessible over the network.

Table 339. *IP Loopback Interface Commands*

Command Syntax and Usage
interface loopback <1-5> Enter Interface Loopback mode. Command mode: Global configuration
[no] enable Enables or disables the loopback interface. Command mode: Interface loopback
ip address <IP address> Defines the loopback interface IP address. Command mode: Interface loopback
ip netmask <subnet mask> Defines the loopback interface subnet mask. Command mode: Interface loopback
ip ospf area <area number> Configures the OSPF area index used by the loopback interface. Command mode: Interface loopback
[no] ip ospf enable Enables or disables OSPF for the loopback interface. Command mode: Interface loopback
no interface loopback <1-5> Deletes the selected loopback interface. Command mode: Global configuration
show interface loopback <1-5> Displays the current IP loopback interface parameters. Command mode: All

DHCP Snooping

DHCP Snooping provides security by filtering untrusted DHCP packets and by maintaining a binding table of trusted interfaces.

Table 340. *DHCP Snooping Options*

Command Syntax and Usage
<p>[no] ip dhcp snooping Enables or disables DHCP Snooping. Command mode: Global configuration</p>
<p>ip dhcp snooping binding <MAC address> vlan <VLAN ID (1-4094)> <IP address> port <port alias or number> expiry <1-4294967295> Adds a manual entry to the binding table. Command mode: Global configuration</p>
<p>no ip dhcp snooping binding {<MAC address> all [interface port <port alias or number> vlan <VLAN ID (1-4094)>]} Removes an entry from the binding table. Command mode: Global configuration</p>
<p>[no] ip dhcp snooping information option-insert Enables or disables option 82 support for DHCP Snooping. When enabled, DHCP Snooping performs the following functions:</p> <ul style="list-style-type: none"> o if a DHCP packet from a client contains option 82 information, the information is retained. o when DHCP Snooping forwards a DHCP packet from a client, option 82 information is added to the packet. <p>owhen DHCP snooping forward a DHCP packet from a server, option 82 information is removed from the packet. Command mode: Global configuration</p>
<p>[no] ip dhcp snooping vlan <VLAN ID (1-4094)> Adds or removes the selected VLAN to DHCP Snooping. Member ports participate in DHCP Snooping. Command mode: Global configuration</p>
<p>show ip dhcp snooping Displays the current DHCP Snooping parameters. Command mode: All</p>

Converged Enhanced Ethernet Configuration

Table 341 describes the Converged Enhanced Ethernet (CEE) configuration commands.

Table 341. *CEE Commands*

Command Syntax and Usage
[no] cee enable Globally enables or disables CEE. Command mode: Global configuration
[no] cee iscsi enable Enables or disables ISCSI TLV advertisements. Command mode: Global configuration
show cee Displays the current CEE parameters. Command mode: All
show cee iscsi Displays the current ISCSI TLV parameters. Command mode: All

ETS Global Configuration

Enhanced Transmission Selection (ETS) allows you to allocate bandwidth to different traffic types, based on 802.1p priority.

Note: ETS configuration supersedes the QoS 802.1p menu. When ETS is enabled, you cannot configure the 802.1p menu options.

ETS Global Priority Group Configuration

Table 342 describes the global ETS Priority Group configuration options.

Table 342. Global ETS Priority Group Commands

Command Syntax and Usage
<p>[no] cee global ets mcast-priority-group mcpgid <0-3> [bandwidth percentage <0, 10-100>] [priority <0-7>]</p> <p>Configures Multicast Priority Group parameters. You can enter the link bandwidth percentage allocated to the Multicast Priority Group, and assign one or more 802.1p values to the Multicast Priority Group.</p> <p>Command mode: Global configuration</p>
<p>cee global ets mcast-priority-group mcpgid <0-3> description <1-31 characters></p> <p>Enter text that describes the multicast priority group.</p> <p>Command mode: Global configuration</p>
<p>no cee global ets mcast-priority-group mcpgid <0-3> description</p> <p>Removes the description for the specified multicast priority group.</p> <p>Command mode: Global configuration</p>
<p>cee global ets priority-group pgid <0-7, 15> bandwidth <802.1p priority (0-7)> <bandwidth percentage (0, 10-100)></p> <p>Allows you to configure Priority Group parameters. You can enter the link bandwidth percentage allocated to the Priority Group, and also assign one or more 802.1p values to the Priority Group.</p> <p>Command mode: Global configuration</p>
<p>cee global ets priority-group pgid <0-7, 15> description <1-31 characters></p> <p>Enter text that describes this Priority Group.</p> <p>Command mode: Global configuration</p>
<p>no cee global ets priority-group <0-7, 15> description</p> <p>Removes the description for the specified Priority Group.</p> <p>Command mode: Global configuration</p>

Table 342. *Global ETS Priority Group Commands*

Command Syntax and Usage
cee global ets priority-group pgid <0-7, 15> priority <0-7> Adds one or more 802.1p priority values to the Priority Group. Enter one value per line, null to end. Command mode: Global configuration
show cee global ets Displays the current global ETS Priority Group parameters. Command mode: All
show cee global ets mcast-priority-group <0-3> Displays the current global ETS Multicast Priority Group parameters. Command mode: All
show cee global ets priority-group <0-7, 15> Displays the current global ETS Priority Group parameters. Command mode: All

Priority Flow Control Configuration

Priority-based Flow Control (PFC) enhances flow control by allowing the switch to pause traffic based on its 802.1p priority value, while allowing traffic at other priority levels to continue.

Global Priority Flow Control Configuration

Table 343 describes the global PFC Priority Group configuration options.

Table 343. *Global PFC Priority Group Commands*

Command Syntax and Usage
[no] cee global pfc enable Globally enables or disables Priority Flow Control on all ports. Command mode: Global configuration
cee global pfc priority <0-7> description <1-31 characters> Enter text that describes this Priority Group. Command mode: Global configuration
no cee global pfc priority <0-7> description Removes the description for the specified Priority Group. Command mode: Global configuration
[no] cee global pfc priority <0-7> enable Enables or disables Priority Flow Control for the specified priority level. Command mode: Global configuration
show cee global pfc Displays the current Priority Flow Control global configuration. Command mode: All

Port-level 802.1p PFC Configuration

Table 344 describes the 802.1p Priority Flow Control (PFC) configuration options for the selected port.

Table 344. Port 802.1p PFC Options

Command Syntax and Usage
<p>[no] cee port <port alias or number> pfc enable</p> <p>Enables or disables Priority Flow Control on the selected port.</p> <p>Command mode: Global configuration</p>
<p>cee port <port alias or number> pfc priority <0-7> description <1-31 characters></p> <p>Enter text to describe the priority value.</p> <p>Command mode: Global configuration</p>
<p>no cee port <port alias or number> pfc priority <0-7> description</p> <p>Deletes the description from the specified priority value.</p> <p>Command mode: Global configuration</p>
<p>[no] cee port <port alias or number> pfc priority <0-7> enable</p> <p>Enables or disables Priority Flow Control on the selected 802.1p priority.</p> <p>Note: PFC can be enabled on 802.1p priority 3 and one other priority only.</p> <p>Command mode: Global configuration</p>
<p>show cee port <port alias or number> pfc priority <0-7></p> <p>Displays the current 802.1p PFC parameters for the selected port.</p> <p>Command mode: All</p>
<p>show cee port <port alias or number> pfc</p> <p>Displays the current PFC parameters for the selected port.</p> <p>Command mode: All</p>

DCBX Port Configuration

Table 345 describes the port DCB Capability Exchange Protocol (DCBX) configuration options.

Table 345. *Port DCBX Commands*

Command Syntax and Usage
<p>[no] cee port <port alias or number> dcbx app_proto advertise</p> <p>Enables or disables DCBX Application Protocol advertisements of configuration data. When enabled, the Advertisement flag is set to 1 (advertise data to the peer device).</p> <p>Command mode: Global configuration</p>
<p>[no] cee port <port alias or number> dcbx app_proto willing</p> <p>Enables or disables Application Protocol willingness to accept configuration data from the peer device. When enabled, the Willing flag is set to 1 (willing to accept data).</p> <p>Command mode: Global configuration</p>
<p>[no] cee port <port alias or number> dcbx enable</p> <p>Enables or disables DCBX on the port.</p> <p>Command mode: Global configuration</p>
<p>[no] cee port <port alias or number> dcbx ets advertise</p> <p>Enables or disables DCBX ETS advertisements of configuration data. When enabled, the Advertisement flag is set to 1 (advertise data to the peer device).</p> <p>Command mode: Global configuration</p>
<p>[no] cee port <port alias or number> dcbx ets willing</p> <p>Enables or disables ETS willingness to accept configuration data from the peer device. When enabled, the Willing flag is set to 1 (willing to accept data).</p> <p>Command mode: Global configuration</p>
<p>[no] cee port <port alias or number> dcbx pfc advertise</p> <p>Enables or disables DCBX PFC advertisements of configuration data. When enabled, the Advertisement flag is set to 1 (advertise data to the peer device).</p> <p>Command mode: Global configuration</p>
<p>[no] cee port <port alias or number> dcbx pfc willing</p> <p>Enables or disables PFC willingness to accept configuration data from the peer device. When enabled, the Willing flag is set to 1 (willing to accept data).</p> <p>Command mode: Global configuration</p>
<p>show cee port <port alias or number> dcbx</p> <p>Displays the current port DCBX parameters.</p> <p>Command mode: All</p>

Fibre Channel Configuration

As a converged switch, the CN4093 provides combined support for Ethernet and Fibre Channel (FC) networks. Ports EXT11-EXT16 are hybrid, allowing them to operate in either Ethernet mode (the default), or in Fibre Channel mode for direct connection to Fibre Channel devices.

The CN4093 can be used in the following Fibre Channel applications:

- As an FCoE gateway for bridging FCoE and Fibre Channel networks
- As a Node Port Virtualized (NPV) Gateway for uplinking multiple Fibre Channel nodes to a full fabric switch
- As a Full-Fabric Switch — a central element of a Fibre Channel network

[Table 351](#) describes generic Fibre Channel configuration options.

Table 346. *Fibre Channel Configuration Commands*

Command Syntax and Usage
<p>[no] system port <port number or range> type fc</p> <p>Enables or disables Fibre Channel mode on the specified port range. Fibre Channel can be enabled only for port pairs, specifically for: EXT11-EXT12, EXT13-EXT14 and EXT15-EXT16. Default setting is disabled (ports are in Ethernet mode).</p> <p>Note: VLAN tagging is automatically enabled on any ports placed in Fibre Channel mode.</p> <p>Command mode: Global configuration</p>
<p>[no] fcalias <1-64 characters> wwn <port World Wide Name> <VLAN number></p> <p>Configures or removes an FC alias name for the specified port World Wide Name.</p> <p>Command mode: Global configuration</p>
<p>fcdomain domain <0-239> {preferred static} <VLAN number></p> <p>Configures the domain type for the specified FC domain ID:</p> <ul style="list-style-type: none">o preferred allows the domain ID to be re-assigned. If the switch does not get its requested domain ID, it accepts any assigned domain ID.o static does not allow the domain ID to be re-assigned. If the switch does not get that domain ID, it does not join the fabric. <p>Default setting is preferred.</p> <p>Command mode: Global configuration</p>
<p>clear zone database <VLAN number></p> <p>Erases all FC zones and zonesets.</p> <p>Command mode: Global configuration</p>

FC Port Configuration

Use the following commands to configure Fibre Channel ports.

Table 347. *Fibre Channel Port Configuration Commands*

Command Syntax and Usage
interface fc <FC port alias or number> Enter Fibre Channel port configuration mode. Command mode: Global configuration
shutdown Disables the FC port. The default setting is enabled (no shutdown). Command mode: FC Port configuration
no shutdown Enables the FC port. The default setting is enabled (no shutdown). Command mode: FC Port configuration
fc-speed {4 8 auto} Configures the Fibre Channel port speed in Gbps or allows the port to negotiate its speed automatically. The default setting is auto. Command mode: FC Port configuration
[no] type e Enable the FC port to type E or disable the E port. Command mode: FC Port configuration

FC VLAN Configuration

Use the following commands to configure the Fibre Channel Forwarding VLAN.

Table 348. *FCF VLAN Configuration Commands*

Command Syntax and Usage
vlan <VLAN number> Enter VLAN configuration mode. Command mode: Global configuration
[no] fcf enable Enables or disables the VLAN as Fibre Channel Forwarding VLAN. The default setting is disabled. Command mode: VLAN configuration

Table 348. FCF VLAN Configuration Commands

Command Syntax and Usage
<p>npv disruptive-load-balance</p> <p>Triggers a disruptive load-balance among the logged-in nodes in the current NPV VLAN.</p> <p>Command mode: VLAN configuration</p>
<p>[no] npv auto-disruptive-load-balance enable</p> <p>Automatically triggers a load-balance if an imbalance is detected in the current NPV VLAN. Any new uplinks are monitored and the switch will assess the load on existing links. If necessary, the enodes will be redistributed to the new uplink.</p> <p>The no form of the command removes the automated option. Any new uplinks will not trigger a disruptive load balance.</p> <p>Note: A switch reboot will not affect the status of this command.</p> <p>Command mode: VLAN configuration</p>
<p>[no] npv enable</p> <p>Enables or disables NPV gateway functionality for the VLAN.</p> <p>The default setting is disabled.</p> <p>Command mode: VLAN configuration</p>
<p>[no] npv traffic-map external-interface <i><port numbers or range></i></p> <p>Enables or disables the selected ports as NP (external uplink) ports.</p> <p>Command mode: VLAN configuration</p>
<p>fcoe fcmmap <i><fabric map ID></i></p> <p>Configures the global FC-map that identifies the FC fabric used by the switch. The switch will discard MAC addresses that are not part of the current fabric, which avoids cross-fabric talk.</p> <p>The FC-map is a 24-bit hexadecimal value.</p> <p>The default value is 0x0efc00.</p> <p>Command mode: VLAN configuration</p>
<p>no fcoe fcmmap</p> <p>Resets the FC-map to the default 0x0efc00 value.</p> <p>Command mode: VLAN configuration</p>
<p>fcoe fcf-priority <i><0-255></i></p> <p>Configures the FCF priority. When an FC initiator sends login requests to multiple FCFs, it selects the one with the highest priority value.</p> <p>The default value is 128.</p> <p>Command mode: VLAN configuration</p>

Table 348. FCF VLAN Configuration Commands

Command Syntax and Usage
no fcoe fcf-priority Resets the FCF priority to the default 128 value. Command mode: VLAN configuration
fcoe fka-adv-period <8-90> Configures the FIP Keep Alive advertising period, in seconds. Command mode: VLAN configuration

FC Zone Configuration

Use the following commands to configure Fibre Channel zones.

Table 349. Fibre Channel Zone Configuration Commands

Command Syntax and Usage
[no] zone name <1-64 characters> <VLAN number> Enter FC Zone configuration mode for the specified zone. If the zone doesn't exist, it is created. The no form of the command erases the zone. Command mode: Global configuration
zone clone <selected_zone_name> <new_zone_name> <VLAN number> Creates a new zone with the attributes of the selected zone. Command mode: Global configuration
zone rename <current_name> <new_name> <VLAN number> Renames the FC zone. Command mode: Global configuration
[no] zone default-zone permit <VLAN number> Permits or denies traffic flow to default zone members. Command mode: Global configuration
[no] member {pwwn <pwwn> fcid <ID number> fcalias <alias ID>} Adds or removes zone members based on: <ul style="list-style-type: none">o pwwn: Port World Wide Numbero fcid: FC ID of the port, in hex format (for example, 0xce00d1).o fcalias: Alias name of the FC device. Command mode: FC Zone configuration

FC Zoneset Configuration

Use the following commands to configure Fibre Channel zonesets.

Table 350. *Fibre Channel Zoneset Configuration Commands*

Command Syntax and Usage
<p>[no] zoneset name <1-64 characters> <VLAN number></p> <p>Enter FC Zoneset configuration mode for the specified zone. If the zoneset doesn't exist, it is created.-</p> <p>The no form of the command erases the zoneset.</p> <p>Command mode: Global configuration</p>
<p>[no] zoneset activate name <1-64 characters> <VLAN number></p> <p>Activates or deactivates the zoneset. Only one zoneset can be active at any point in time. Activating a zoneset automatically deactivates any other zoneset currently active.</p> <p>Command mode: Global configuration</p>
<p>zoneset clone <selected_zoneset_name> <new_zoneset_name> <VLAN number></p> <p>Creates a new zoneset with the attributes of the selected zoneset.</p> <p>Command mode: Global configuration</p>
<p>zone copy active-zoneset running-config <VLAN number></p> <p>Copies the active zoneset database to the running configuration.</p> <p>Command mode: Global configuration</p>
<p>zoneset rename <current_name> <new_name> <VLAN number></p> <p>Renames the FC zoneset.</p> <p>Command mode: Global configuration</p>
<p>[no] member <1-64 characters></p> <p>Adds or removes a zone from the zoneset.</p> <p>Command mode: FC Zoneset configuration</p>

Fibre Channel over Ethernet Configuration

Fibre Channel over Ethernet (FCoE) transports Fibre Channel frames over an Ethernet fabric. The CEE features and FCoE features allow you to create a lossless Ethernet transport mechanism.

[Table 351](#) describes the FCoE configuration options.

Table 351. *FCoE Configuration Commands*

Command Syntax and Usage
[no] fcoe fips enable Globally enables or disables FIP Snooping on. Command mode: Global configuration
[no] fcoe fips timeout-acl Enables or disables ACL time-out removal. When enabled, ACLs associated with expired FCFs and FCoE connections are removed from the system. Command mode: Global configuration
[no] fcoe optimized-forwarding enable Enables or disables QLogic Fibre Channel optimized forwarding. The default value is enabled. Command mode: Global configuration
show fcoe information Displays the current FCoE parameters. Command mode: All
show fcoe optimized-acl vlan <1-4095> Displays optimized ACLs used for a specific VLAN. Command mode: All
show fcoe optimized-forwarding status Displays whether QLogic Fibre Channel optimized forwarding is enabled or not. Command mode: All

FIPS Port Configuration

FIP Snooping allows the switch to monitor FCoE Initialization Protocol (FIP) frames to gather discovery, initialization, and maintenance data. This data is used to automatically configure ACLs that provide FCoE connections and data security.

[Table 352](#) describes the port Fibre Channel over Ethernet Initialization Protocol (FIP) Snooping configuration options.

Table 352. *Port FIP Snooping Commands*

Command Syntax and Usage
<p>fcoe fips port <i><port alias or number></i> fcf-mode [auto on off]</p> <p>Configures FCoE Forwarding (FCF) on the port, as follows:</p> <ul style="list-style-type: none">o on: Configures the port as a Fibre Channel Forwarding (FCF) port.o off: Configures the port as an FCoE node (ENode).o auto: Automatically detect the configuration of the connected device, and configure this port to match. <p>Command mode: Global configuration</p>
<p>[no] fcoe fips port <i><port alias or number></i> enable</p> <p>Enables or disables FIP Snooping on the port.</p> <p>The default setting is enabled.</p> <p>Note: If IPv6 ACLs are assigned to the port, you cannot enable FCoE.</p> <p>Command mode: Global configuration</p>

Remote Monitoring Configuration

Remote Monitoring (RMON) allows you to monitor traffic flowing through the switch. The RMON MIB is described in RFC 1757.

The following sections describe the Remote Monitoring (RMON) configuration options.

- [“RMON History Configuration” on page 547](#)
- [“RMON Event Configuration” on page 548](#)
- [“RMON Alarm Configuration” on page 549](#)

RMON History Configuration

[Table 353](#) describes the RMON History commands.

Table 353. *RMON History Commands*

Command Syntax and Usage
<p>rmon history <1-65535> interface-oid <1-127 characters></p> <p>Configures the interface MIB Object Identifier. The IFOID must correspond to the standard interface OID, as follows:</p> <p>1.3.6.1.2.1.2.2.1.1.x, where x is the ifIndex.</p> <p>Command mode: Global configuration</p>
<p>rmon history <1-65535> owner <1-127 characters></p> <p>Enter a text string that identifies the person or entity that uses this History index.</p> <p>Command mode: Global configuration</p>
<p>rmon history <1-65535> polling-interval <1-3600></p> <p>Configures the time interval over which the data is sampled for each bucket. The default value is 1800.</p> <p>Command mode: Global configuration</p>
<p>rmon history <1-65535> requested-buckets <1-65535></p> <p>Configures the requested number of buckets, which is the number of discrete time intervals over which data is to be saved. The default value is 30.</p> <p>Note: The maximum number of buckets that can be granted is 50.</p> <p>Command mode: Global configuration</p>

Table 353. *RMON History Commands (continued)*

Command Syntax and Usage
no rmon history <1-65535> Deletes the selected History index. Command mode: Global configuration
show rmon history Displays the current RMON History parameters. Command mode: All

RMON Event Configuration

[Table 354](#) describes the RMON Event commands.

Table 354. *RMON Event Commands*

Command Syntax and Usage
rmon event <1-65535> description <1-127 characters> Enter a text string to describe the event. Command mode: Global configuration
rmon event <1-65535> owner <1-127 characters> Enter a text string that identifies the person or entity that uses this event index. Command mode: Global configuration
[no] rmon event <1-65535> type {log trap both} Selects the type of notification provided for this event. For log events, an entry is made in the log table and sent to the configured syslog host. For trap events, an SNMP trap is sent to the management station. Command mode: Global configuration
no rmon event <1-65535> Deletes the selected RMON Event index. Command mode: Global configuration
show rmon event Displays the current RMON Event parameters. Command mode: All

RMON Alarm Configuration

The Alarm RMON group can track rising or falling values for a MIB object. The MIB object must be a counter, gauge, integer, or time interval. Each alarm index must correspond to an event index that triggers once the alarm threshold is crossed.

[Table 355](#) describes the RMON Alarm commands.

Table 355. *RMON Alarm Commands*

Command Syntax and Usage
<p>rmon alarm <1-65535> alarm-type {rising falling either}</p> <p>Configures the alarm type as rising, falling, or either (rising or falling).</p> <p>Command mode: Global configuration</p>
<p>rmon alarm <1-65535> falling-crossing-index <1-65535></p> <p>Configures the falling alarm event index that is triggered when a falling threshold is crossed.</p> <p>Command mode: Global configuration</p>
<p>rmon alarm <1-65535> falling-limit <-2147483647 - 214748364></p> <p>Configures the falling threshold for the sampled statistic. When the current sampled value is less than or equal to this threshold, and the value at the last sampling interval was greater than this threshold, a single event is generated.</p> <p>Command mode: Global configuration</p>
<p>rmon alarm <1-65535> interval <1-65535></p> <p>Configures the time interval over which data is sampled and compared with the rising and falling thresholds.</p> <p>The default value is 1800.</p> <p>Command mode: Global configuration</p>
<p>rmon alarm <1-65535> oid <1-127 characters></p> <p>Configures an alarm MIB Object Identifier.</p> <p>Command mode: Global configuration</p>
<p>rmon alarm <1-65535> owner <1-127 characters></p> <p>Enter a text string that identifies the person or entity that uses this alarm index.</p> <p>Command mode: Global configuration</p>
<p>rmon alarm <1-65535> rising-crossing-index <1-65535></p> <p>Configures the rising alarm event index that is triggered when a rising threshold is crossed.</p> <p>Command mode: Global configuration</p>

Table 355. *RMON Alarm Commands (continued)*

Command Syntax and Usage
<p>rmon alarm <1-65535> rising-limit <-2147483647 - 2147483647></p> <p>Configures the rising threshold for the sampled statistic. When the current sampled value is greater than or equal to this threshold, and the value at the last sampling interval was less than this threshold, a single event is generated.</p> <p>Command mode: Global configuration</p>
<p>rmon alarm <1-65535> sample {abs delta}</p> <p>Configures the method of sampling the selected variable and calculating the value to be compared against the thresholds, as follows:</p> <ul style="list-style-type: none">o abs—absolute value, the value of the selected variable is compared directly with the thresholds at the end of the sampling interval.o delta—delta value, the value of the selected variable at the last sample is subtracted from the current value, and the difference compared with the thresholds. <p>Command mode: Global configuration</p>
<p>no rmon alarm <1-65535></p> <p>Deletes the selected RMON Alarm index.</p> <p>Command mode: Global configuration</p>
<p>show rmon alarm</p> <p>Displays the current RMON Alarm parameters.</p> <p>Command mode: All</p>

VMReady

Table 356 describes the VMReady configuration options.

Table 356. *VMReady Configuration Options*

Command Syntax and Usage
[no] virt enable Enables or disables VMReady. Note: The no form of this command deletes all configured VM groups. Command mode: Global configuration
virt vmcheck Configures VM Check validation settings. For command options, see page 556 . Command mode: Global configuration
virt vmgroup Configures VM Group settings. For command options, see page 553 . Command mode: Global configuration
virt vmpolicy vmbwidth Configures VM Bandwidth management settings. For command options, see page 552 . Command mode: Global configuration
virt vmprofile Configures VM Profile settings. For command options, see page 557 . Command mode: Global configuration
virt vmrmisc Configures Miscellaneous VMready settings. For command options, see page 559 . Command mode: Global configuration
virt vmware Configures VMware settings. For command options, see page 558 . Command mode: Global configuration
show virt Displays the current virtualization parameters. Command mode: All

VM Policy Bandwidth Management

Table 357 describes the bandwidth management options for the selected VM. Use these commands to limit the bandwidth used by each VM.

Table 357. VM Bandwidth Management Options

Command Syntax and Usage
<p>[no] virt vmpolicy vmbwidth [<i><MAC address></i> <i><UUID></i> <i><name></i> <i><IP address></i> <i><index number></i>] bwctrl</p> <p>Enables or disables bandwidth control on the VM policy.</p> <p>Command mode: Global configuration</p>
<p>virt vmpolicy vmbwidth [<i><MAC address></i> <i><UUID></i> <i><name></i> <i><IP address></i> <i><index number></i>] rxrate <i><0-4000000></i> <i><max. burst (0-4096)></i></p> <p>The first value configures Committed Rate—the amount of bandwidth available to traffic transmitted from the switch to the VM, in kilobits per second. Enter the value in multiples of 64.</p> <p>The second values configures the maximum burst size, in kilobits. Enter one of the following values: 0, 32, 64, 128, 256, 512, 1024, 2048, 4096.</p> <p>Command mode: Global configuration</p>
<p>virt vmpolicy vmbwidth [<i><MAC address></i> <i><UUID></i> <i><name></i> <i><IP address></i> <i><index number></i>] txrate <i><0-4000000></i> <i><max. burst (0-4096)></i> [<i><ACL number (1-640)></i>]</p> <p>The first value configures Committed Rate—the amount of bandwidth available to traffic transmitted from the VM to the switch, in kilobits per second. Enter the value in multiples of 64.</p> <p>The second values configures the maximum burst size, in kilobits. Enter one of the following values: 32, 64, 128, 256, 512, 1024, 2048, 4096.</p> <p>The third value represents the ACL assigned to the transmission rate. The ACL is automatically, in sequential order, if not specified by the user. If there are no available ACLs, the TXrate cannot be configured. Each TXrate configuration reduces the number of available ACLs by one.</p> <p>Command mode: Global configuration</p>
<p>no virt vmpolicy vmbwidth [<i><MAC address></i> <i><UUID></i> <i><name></i> <i><IP address></i> <i><index number></i>]</p> <p>Deletes the bandwidth management settings from this VM policy.</p> <p>Command mode: Global configuration</p>
<p>show virt vmpolicy vmbwidth [<i><MAC address></i> <i><UUID></i> <i><name></i> <i><IP address></i> <i><index number></i>]</p> <p>Displays the current VM bandwidth management parameters.</p> <p>Command mode: All</p>

VM Group Configuration

Table 358 describes the VM group configuration options. A VM group is a collection of members, such as VMs, ports, or LAGs. Members of a VM group share certain properties, including VLAN membership, ACLs (VMAP), and VM profiles.

Table 358. *VM Group Commands*

Command Syntax and Usage
<p>virt vmgroup <1-4096> cpu</p> <p>Enables or disables sending unregistered IPMC traffic to CPU.</p> <p>Command mode: Global configuration</p>
<p>virt vmgroup <1-4096> flood</p> <p>Enables or disables flooding unregistered IPMC traffic.</p> <p>Command mode: Global configuration</p>
<p>[no] virt vmgroup <1-4096> key <1-65535></p> <p>Adds or removes an LACP <i>admin key</i> to the VM group. LACP LAGs formed with this <i>admin key</i> will be included in the VM group.</p> <p>Command mode: Global configuration</p>
<p>virt vmgroup <1-4096> optflood</p> <p>Enables or disables optimized flooding.</p> <p>Command mode: Global configuration</p>
<p>[no] virt vmgroup <1-4096> port <port number or alias></p> <p>Adds or removes the selected port to the VM group.</p> <p>Note: A port can be added to a VM group only if no VMs on that port are members of the VM group.</p> <p>Command mode: Global configuration</p>
<p>[no] virt vmgroup <1-4096> portchannel <LAG number></p> <p>Adds or removes the selected LAG to the VM group.</p> <p>Command mode: Global configuration</p>
<p>virt vmgroup <1-4096> profile <profile name (1-39 characters)></p> <p>Adds the selected VM profile to the VM group.</p> <p>Command mode: Global configuration</p>
<p>no virt vmgroup <1-4096> profile</p> <p>Removes the VM profile assigned to the VM group.</p> <p>Note: This command can only be used if the VM group is empty (only has the profile assigned).</p> <p>Command mode: Global configuration</p>
<p>virt vmgroup <1-4096> stg <STG number></p> <p>Assigns the VM group VLAN to a Spanning Tree Group (STG).</p> <p>Command mode: Global configuration</p>

Table 358. VM Group Commands (continued)

Command Syntax and Usage	
<p>[no] virt vmgroup <1-4096> tag</p> <p>Enables or disables VLAN tagging on ports in this VM group.</p> <p>Command mode: Global configuration</p>	
<p>virt vmgroup <1-4096> validate [basic advanced]</p> <p>Enables MAC address spoof prevention for the specified VM group. Default setting is disabled.</p> <ul style="list-style-type: none"> o basic validation ensures lightweight port-based protection by cross-checking the VM MAC address, switch port and switch ID between the switch and the hypervisor. Applicable for “trusted” hypervisors, which are not susceptible to duplicating or reusing MAC addresses on virtual machines. o advanced validation ensures heavyweight VM-based protection by cross-checking the VM MAC address, VM UUID, switch port and switch ID between the switch and the hypervisor. Applicable for “untrusted” hypervisors, which are susceptible to duplicating or reusing MAC addresses on virtual machines. <p>Command mode: Global configuration</p>	
<p>no virt vmgroup <1-4096> validate</p> <p>Disables MAC address spoof prevention for the specified VM group.</p> <p>Command mode: Global configuration</p>	
<p>[no] virt vmgroup <1-4096> vm [<MAC address> <UUID> <name> <IP address> <index number>]</p> <p>Adds or removes a VM to the VM group. Enter a unique identifier to select a VM. The UUID and name parameters apply only if Virtual Center information is configured (virt vmware vcspec). The VM index number is found in the VM information dump (show virt vm).</p> <p>Note: If the VM is connected to a port that is contained within the VM group, do not add the VM to the VM group.</p> <p>Command mode: Global configuration</p>	
<p>[no] virt vmgroup <1-4096> vmap <VMAP number> {intports extports}</p> <p>Assigns the selected VLAN Map to this group. You can choose to limit operation of the VLAN Map to internal ports only or external ports only. If you do not select a port type, the VMAP is applied to the entire VM Group.</p> <p>For more information about configuring VLAN Maps, see “VMAP Configuration” on page 381.</p> <p>Command mode: Global configuration</p>	
<p>[no] virt vmgroup <1-4096> vport <virtual port alias or number></p> <p>Adds or removes the selected virtual port to the VM group.</p> <p>Command mode: Global configuration</p>	

Table 358. *VM Group Commands (continued)*

Command Syntax and Usage
<p>virt vmgroup <1-4096> vlan <VLAN number></p> <p>Assigns a VLAN to this VM group. If you do not assign a VLAN to the VM group, the switch automatically assigns an unused VLAN when adding a port or a VM to the VM Group.</p> <p>Note: If you add a VM profile to this group, the group will use the VLAN assigned to the profile.</p> <p>Command mode: Global configuration</p>
<p>no virt vmgroup <1-4096></p> <p>Deletes the VM group.</p> <p>Command mode: Global configuration</p>
<p>show virt vmgroup <1-4096></p> <p>Displays the current VM group parameters.</p> <p>Command mode: All</p>

VM Check Configuration

Table 359 describes the VM Check validation options used for MAC address spoof prevention.

Table 359. *VM Check Configuration Options*

Command Syntax and Usage
virt vmcheck acls max <1-640> Configures the maximum number of ACLs that can be set up for MAC address spoofing prevention in advanced validation mode. The default value is 50. Command mode: Global configuration
no virt vmcheck acls Disables ACL-based MAC address spoofing prevention in advanced validation mode. Command mode: Global configuration
virt vmcheck action advanced {acl link log} Sets up action taken when detecting MAC address spoofing in advanced validation mode: <ul style="list-style-type: none">o acl registers a syslog entry and installs an ACL to drop traffic incoming on the corresponding switch port originating from the spoofed MAC addresso link registers a syslog entry and disables the corresponding switch porto log registers a syslog entry The default setting is acl . Command mode: Global configuration
virt vmcheck action basic {link log} Sets up action taken when detecting MAC address spoofing in basic validation mode: <ul style="list-style-type: none">o link registers a syslog entry and disables the corresponding switch porto log registers a syslog entry The default setting is link . Command mode: Global configuration
[no] virt vmcheck trust <ports> Enables or disables trusted ports for VM communication. By default, all ports are disabled. Command mode: Global configuration
show virt vmcheck Displays the current VM Check settings. See page 157 for sample output. Command mode: Global configuration

VM Profile Configuration

Table 360 describes the VM Profiles configuration options.

Table 360. VM Profiles Commands

Command Syntax and Usage
<p>virt vmprofile <profile name (1-39 characters)> Defines a name for the VM profile. Command mode: Global configuration</p>
<p>no virt vmprofile <profile name (1-39 characters)> Deletes the selected VM profile. Command mode: Global configuration</p>
<p>[no] virt vmprofile edit <profile name (1-39 characters)> eshaping [<average (1-1000000000)> <burst (1-1000000000)> <peak (1-1000000000)>] Configures traffic egress shaping parameters implemented in the hypervisor, as follows:</p> <ul style="list-style-type: none"> o Average traffic, in Kilobits per second o Maximum burst size, in Kilobytes o Peak traffic, in Kilobits per second o Delete traffic shaping parameters. <p>Command mode: Global configuration</p>
<p>[no] virt vmprofile edit <profile name (1-39 characters)> shaping [<average (1-1000000000)> <burst (1-1000000000)> <peak (1-1000000000)>] Configures traffic shaping parameters implemented in the hypervisor, as follows:</p> <ul style="list-style-type: none"> o Average traffic, in Kilobits per second o Maximum burst size, in Kilobytes o Peak traffic, in Kilobits per second o Delete traffic shaping parameters. <p>Command mode: Global configuration</p>
<p>virt vmprofile edit <profile name (1-39 characters)> vlan <VLAN number> Assigns a VLAN to the VM profile. Command mode: Global configuration</p>
<p>show virt vmprofile [<profile name>] Displays the current VM Profile parameters. Command mode: All</p>

VMWare Configuration

Table 361 describes the VMware configuration options. When the user configures the VMware Virtual Center, the VM Agent module in the switch can perform advanced functionality by communicating with the VMware management console. The Virtual Center provides VM and Host names, IP addresses, Virtual Switch and port group information. The VM Agent on the switch communicates with the Virtual Center to synchronize VM profiles between the switch and the VMware virtual switch.

Note: VM Profiles and Hello cannot be configured or enabled unless the Virtual Center is configured.

Table 361. *VM Ware Commands*

Command Syntax and Usage
<p>virt vmware hbport <1-65535></p> <p>Configures the UDP port number used for heartbeat communication from the VM host to the Virtual Center.</p> <p>The default value is port 902.</p> <p>Command mode: Global configuration</p>
<p>virt vmware hello [enable haddr <IP_address> hport <port_no> htimer <1-60>]</p> <p>Configures CDP (Cisco Discovery Protocol) advertisements sent periodically to VMware ESX hypervisors. Exchanging CDP message with ESX hypervisors facilitates MAC address spoof prevention.</p> <p>Default setting is disabled.</p> <ul style="list-style-type: none"> o enable enables CDP advertisements transmission. o haddr advertises a specific IP address instead of the default management IP. o hport enables ports on which CDP advertisements are sent. o htimer sets the number of seconds between successive CDP advertisements. Default value is 30. <p>Command mode: Global configuration</p>
<p>no virt vmware hello [enable hport <port_no>]</p> <p>Disables CDP advertisement transmissions completely or only on specific ports.</p> <p>Command mode: Global configuration</p>
<p>[no] virt vmware vcspec <IP address> <username> [noauth]</p> <p>Defines the Virtual Center credentials on the switch. Once you configure the Virtual Center, VM Agent functionality is enabled across the system. You are prompted for the following information:</p> <ul style="list-style-type: none"> – IP address of the Virtual Center – User name and password for the Virtual Center – Whether to authenticate the SSL security certificate (yes or no) <p>Command mode: Global configuration</p>

Table 361. *VM Ware Commands*

Command Syntax and Usage
show virt vmware Displays the current VMware parameters. Command mode: All

Miscellaneous VMready Configuration

You can pre-configure MAC addresses as VM Organization Unique Identifiers (OUIs). These configuration commands are only available using the Enterprise NOS CLI, ISCLI and the Miscellaneous VMready Configuration Menu. [Table 361](#) describes the VMready configuration options.

Table 362. *VMware Miscellaneous Options*

Command Syntax and Usage
[no] virt vmrmisc lmac Enables or disables the switch to treat locally administered MAC addresses as VMs. Command mode: Global configuration
[no] virt vmrmisc oui <3 byte VM MAC OUI> <Vendor Name> Adds or removes a MAC OUI. Command mode: Global configuration
show virt oui Displays all the configured MAC OUIs. Command mode: All

Virtual NIC Configuration

Table 363 describes the Virtual NIC (vNIC) configuration options.

Table 363. *Virtual NIC options*

Command Syntax and Usage
[no] vnic egress-bw-meter Enables or disables vNIC bandwidth metering. When enabled, any bandwidth which is not used by the vNIC to which it is allocated is shared with other vNICs. In all cases, the configured values for minimum bandwidth are honored. Only the excess bandwidth is shared. Command mode: Global configuration
[no] vnic enable Globally enables or disables vNIC. Command mode: Global configuration
[no] vnic uplink-share Enable or disable vNIC shared mode. When enabled, multiple vNIC groups can be assigned to the same uplink port. Command mode: Global configuration
show vnic Displays the current vNIC parameters. Command mode: All

Virtual NIC Group Configuration

Table 364 describes the Virtual NIC (vNIC) Group configuration options.

Table 364. *vNIC Group Commands*

Command Syntax and Usage
vnic vnicgroup <1-32> Enters vNIC Group Configuration mode. Command mode: Global Configuration
[no] enable Enables or disables the vNIC Group. Command mode: vNIC Group configuration
[no] failover Enables or disables uplink failover for the vNIC Group. Uplink Failover for the vNIC Group will disable all vNIC and non-vNIC ports in the group. Other port functions continue to operate normally. The default setting is disabled . Command mode: vNIC Group configuration

Table 364. *vNIC Group Commands (continued)*

Command Syntax and Usage	
[no] key <LAG number>	Adds or removes the uplink LACP LAG to the vNIC Group. Command mode: vNIC Group configuration
[no] member <vNIC number>	Adds or removes a vNIC to the vNIC Group. The vNIC ID is comprised of the port number and the vNIC number. For example: 1 . 1 . Command mode: vNIC Group configuration
[no] port <port number or alias>	Adds or removes the non-vNIC port or uplink port to the vNIC Group. Command mode: vNIC Group configuration
[no] trunk <LAG number>	Adds or removes the uplink LAG to the vNIC Group. Command mode: vNIC Group configuration
vlan <VLAN number>	Assigns a VLAN to the vNIC Group. Command mode: vNIC Group configuration
no vnic vnicgroup <1-32>	Deletes the selected vNIC Group. Command mode: Global configuration
show vnicgroup	Displays the current vNIC Group parameters. Command mode: All

vNIC Port Configuration

Table 365 describes the Virtual NIC (vNIC) port configuration options.

Table 365. *vNIC Port Commands*

Command Syntax and Usage
<p>vnic port <port alias or number> index <1-4></p> <p>Enters vNIC Configuration mode.</p> <p>Note: This command is valid for internal server ports only.</p> <p>Command mode: Global configuration</p>
<p>bandwidth <1-100></p> <p>Configures the maximum bandwidth allocated to this vNIC, in increments of 100 Mbps. For example:</p> <ul style="list-style-type: none">- 1 = 100 Mbps- 10 = 1000 Mbps <p>Command mode: vNIC configuration</p>
<p>[no] enable</p> <p>Enables or disables the vNIC.</p> <p>Command mode: vNIC configuration</p>

UFP Configuration

Table 366 describes the Unified Fabric Port (UFP) configuration options. UFP allows defining up to 8 virtual ports per physical port. Each virtual port can be set up to operate in a specific mode (access, trunk, tunnel, FCoE, auto) and within predefined bandwidth limits.

Note: vNIC and UFP are mutually exclusive. Only one of them can be globally enabled at any point in time.

Table 366. *UFP Commands*

Command Syntax and Usage
<p>[no] ufp enable Globally enables or disables UFP. Command mode: Global configuration</p>
<p>[no] ufp port <port_no.> enable Enables or disables UFP on the specified physical ports. Command mode: Global configuration</p>
<p>[no] ufp port <port_no.> qos-mode [bw ets] Sets the UFP QoS mode: bandwidth or ETS. Command mode: Global configuration</p>
<p>ufp port <port_no.> vport <1-8> Enters UFP Virtual Port Configuration mode. Command mode: Global configuration</p>
<p>no ufp port <port_no.> [vport <1-8>] Disables UFP settings on the specified physical or virtual port. Command mode: Global configuration</p>
<p>[no] enable Enables or disables the virtual port. Command mode: UFP Virtual Port Configuration</p>
<p>evb profile <1-16> Applies the specified EVB profile for the virtual port. Command mode: UFP Virtual Port Configuration</p>
<p>no evb profile Disables the specified EVB profile for the virtual port. Command mode: UFP Virtual Port Configuration</p>

Table 366. UFP Commands (continued)

<p>Command Syntax and Usage</p>
<p>network {default-tag default-vlan <2-4094>}</p> <p>Configures the virtual port network configuration settings:</p> <ul style="list-style-type: none"> o <code>default-tag</code> enables tagging egress frames with the default VLAN ID when the virtual port is in access or trunk mode and <code>default-vlan</code> is defined. Default setting is disabled. o <code>default-vlan</code> configures the default VLAN ID for the virtual port. <p>Note: VLANs 4002-4009 cannot be used as customer VLANs.</p> <p>Note: A customer VLAN cannot be configured on multiple virtual ports of the same physical port.</p> <p>Command mode: UFP Virtual Port Configuration</p>
<p>no network default-tag</p> <p>Disables default VLAN ID tagging on the virtual port.</p> <p>Command mode: UFP Virtual Port Configuration</p>
<p>network mode {access auto fcoe trunk tunnel}</p> <p>Configures the virtual port's operating mode:</p> <ul style="list-style-type: none"> o <code>access</code> allows the virtual port to associate only with the default customer VLAN, as defined by the <code>network default-vlan</code> command. o <code>auto</code> integrates UFP with VMReady/802.1qbg. This mode allows dynamic vlan creation for the vport. o <code>fcoe</code> configures the virtual port to carry Fibre Channel over Ethernet traffic when linked to a Fibre Channel virtual Host Bus Adapter. Setting a virtual port in <code>fcoe</code> mode enables Priority Flow Control on the physical port. o <code>trunk</code> allows the virtual port to associate with up to 1024 customer VLANs. o <code>tunnel</code> makes the virtual port VLAN agnostic. This is the default setting. <p>Command mode: UFP Virtual Port Configuration</p>
<p>network private-vlan {host trunk promiscuous}</p> <p>Configures the virtual port's private VLAN mode:</p> <ul style="list-style-type: none"> o <code>host</code> allows only ONE secondary VLAN. In case of network trunk mode, the other VLANs will be in different Private VLAN domain. o <code>trunk</code> allows both primary and secondary VLAN as well as non-Private VLAN domains. The Isolate-VLAN is also allowed to pass through this port type. o <code>promiscuous</code> allows private VLAN promiscuous mode <p>Command mode: UFP Virtual Port Configuration</p>
<p>no network private-vlan</p> <p>Disables private-VLAN mode on the virtual port.</p> <p>Command mode: UFP Virtual Port Configuration</p>

Table 366. UFP Commands (continued)

Command Syntax and Usage
<p>qos bandwidth {max <10-100> min <10-100>}</p> <p>Configures bandwidth allocation for the virtual port:</p> <ul style="list-style-type: none">o Configures the minimum bandwidth guaranteed for the virtual port as a percentage of the physical port's bandwidth. The default value is 25.o Configures the maximum bandwidth allowed for this virtual port as a percentage of the physical port's bandwidth. The default value is 100. <p>Note: The aggregated minimum bandwidth guaranteed for all the virtual ports within a physical port cannot exceed 100.</p> <p>Command mode: UFP Virtual Port Configuration</p>
<p>qos ets [host-control priority <0-7>]</p> <p>Configures ETS bandwidth allocation for the virtual port:</p> <ul style="list-style-type: none">o Enables or disables host COS control.o Configures 802.1p priority value for the specific vPort. <p>Note: The aggregated minimum bandwidth guaranteed for all the virtual ports within a physical port cannot exceed 100.</p> <p>Command mode: UFP Virtual Port Configuration</p>

Edge Virtual Bridge Configuration

You can configure your switch to use Edge Virtual Bridging (EVB). [Table 367](#) describes the EVB configuration options.

Table 367. *Edge Virtual Bridge Configuration Options*

Command Syntax and Usage
virt evb vsidb <VSIDB_number> Enter Virtual Station Interface Database configuration mode. Command mode: Global configuration
virt evb update vsidb <VSIDB_number> Update VSI types from the VSI database. Command mode: All
filename <file name> Sets the Virtual Station Interface Type database document name. Command mode: VSI Database
no filename Removes the Virtual Station Interface Type database document name. Command mode: VSI Database
filepath <file path> Sets the Virtual Station Interface Type database document path. Command mode: VSI Database
no filepath Removes the Virtual Station Interface Type database document path. Command mode: VSI Database
host <IP address> [mgt-port extm-port data-port] Sets the Virtual Station Interface Type database manager IPv4/IPv6 address and the port used for the connection. By default, the management port is used. Command mode: VSI Database
port <1-65534> Sets the Virtual Station Interface Type database manager port. Command mode: VSI Database
protocol {http https} Sets the Virtual Station Interface Type database transport protocol. The default setting is HTTP. Command mode: VSI Database

Table 367. Edge Virtual Bridge Configuration Options

Command Syntax and Usage
<p>update-interval <5-300></p> <p>Sets the Virtual Station Interface Type database update interval in seconds.</p> <p>Command mode: VSI Database</p>
<p>no update-interval <5-300></p> <p>Disables periodic updates.</p> <p>Command mode: VSI Database</p>
<p>no virt evb vsidb <VSIDB_number></p> <p>Resets the Virtual Station Interface Type database information to the default values.</p> <p>Command mode: Global configuration</p>
<p>clear virt evb vsi [mac-address port <port alias or number> type-id <1-16777215> vlan <1-4094>]</p> <p>Clears VSI database associations.</p> <p>Command mode: All</p>
<p>clear virt evb vsidb [manager-id <0-255> type-id <1-16777215> version <0-255>]</p> <p>Clears local VSI types cache.</p> <p>Command mode: All</p>
<p>show virt evb vsitypes [mgrid <0-255> typeid <1-16777215> version <0-255>]</p> <p>Displays the current Virtual Station Interface Type database parameters.</p> <p>Command mode: All</p>
<p>show virt evb vsidb <VSIDB_number></p> <p>Displays the current Virtual Station Interface database information.</p> <p>Command mode: All</p>

Edge Virtual Bridge Profile Configuration

Table 368 describes the Edge Virtual Bridge profile configuration options.

Table 368. *Edge Virtual Bridge VSI Type Profile Configuration Options*

Command Syntax and Usage
<p>virt evb profile <profile_number> Enter Virtual Station Interface type profile configuration mode. Command mode: Global configuration</p>
<p>[no] reflective-relay Enables or disables VEPA mode (Reflective Relay capability). Command mode: EVB Profile</p>
<p>[no] vsi-discovery Enables or disables VSI Discovery (ECP and VDP). Command mode: EVB Profile</p>
<p>no virt evb profile <profile_number> Deletes the specified EVB profile. Command mode: Global configuration</p>
<p>evb profile <1-16> Applies the specified EVB profile for the port. Automatically enables LLDP EVB TLV on the corresponding port. Command mode: Interface port/UFP Virtual port</p>
<p>no evb profile Resets EVB profile for the port. Automatically disables LLDP, EVB, and TLV on the corresponding port. Command mode: Interface port/UFP Virtual port</p>
<p>show virt evb profile [<1-16>] Displays the current EVB profile parameters. Command mode: All</p>

Switch Partition (SPAR) Configuration

Switch partitions (SPARs) divide the data plane inside a physical switch into independent switching domains. Switch partitions do not communicate with each other, forcing hosts on different SPARs to bridge traffic over an upstream link, even if they belong to the same VLAN.

Up to 8 SPARs can be defined on a switch. Each SPAR supports up to 32 local VLANs, for further partitioning flexibility.

Table 369. *SPAR Configuration Options*

Command Syntax and Usage
spar <1-8> Enters SPAR Configuration mode. Command mode: Global configuration
no spar <1-8> Deletes the specified SPAR. Command mode: Global configuration
[no] enable Enables or disables the SPAR. Command mode: SPAR Configuration
name Configures the SPAR name. Command mode: SPAR Configuration
domain default {vlan <2-4094> member <port no.>} Configures the SPAR's default domain settings: <ul style="list-style-type: none">o vlan configures the default SPAR VLAN ID. A unique factory default VLAN ID is assigned to each SPAR as "408x", where x is the SPAR ID <1-8>. This option provides an override if conflicts arise with a customer VLAN ID on the upstream network.o member adds server ports to the SPAR. Command mode: SPAR Configuration
no domain default member <port no.> Removes server ports from the SPAR. Command mode: SPAR Configuration

Table 369. SPAR Configuration Options (continued)

Command Syntax and Usage
<p>domain local <1-32> {enable member <port no.> name <text> vlan <2-4094>}</p> <p>Configures the SPAR's local domains:</p> <ul style="list-style-type: none"> o enable enables the SPAR local domains o member adds server ports to the SPAR local domains o name configures the SPAR local domains names o vlan applies a VLAN ID to the SPAR local domains. The default value is 0. <p>Command mode: SPAR Configuration</p>
<p>no domain local <1-32> [enable member <port no.> vlan]</p> <p>Deletes the SPAR local VLAN domains:</p> <ul style="list-style-type: none"> o enable disables the SPAR local domains o member deletes SPAR local domains server ports o vlan deletes SPAR local domains vlan. <p>Command mode: SPAR Configuration</p>
<p>domain mode {passthrough local}</p> <p>Configures the SPAR domain mode:</p> <ul style="list-style-type: none"> o passthrough references member ports only by the SPAR default VLAN. This provides VLAN-unaware uplink connectivity via pass-through tunnel domain switching for SPAR member ports. The default value is passthrough. o local references member ports by both SPAR default VLAN and SPAR local domain VLANs. This provides VLAN-aware uplink connectivity via local domain switching for SPAR member ports <p>Command mode: SPAR Configuration</p>
<p>[no] uplink {port <port no.> portchannel <1-64> adminkey <1-65535>}</p> <p>Enables or disables uplink connectivity for the SPAR. A single external port, portchannel, or LACP channel can be used for uplink. All uplinks within a SPAR are automatically assigned to the SPAR domain's default VLAN and to any SPAR local VLANs.</p> <p>Command mode: SPAR Configuration</p>
<p>show spar <1-8> [domain [default local <1-32>]] uplink]</p> <p>Displays the SPAR settings:</p> <ul style="list-style-type: none"> o domain filters only the SPAR domain related settings <ul style="list-style-type: none"> • default filters only SPAR default domain settings • local <1-32> filters only SPAR local domains settings o uplink filters only SPAR uplink settings <p>Command mode: All</p>

Service Location Protocol Configuration

Service Location Protocol (SLP) enables networked devices to request/announce services over a local area network without prior configuration. In an SLP environment, devices may have the following roles:

- User Agents (UA) are devices requesting services.
- Service Agents (SA) are devices providing services.
- Directory Agents (DA) are devices caching services provided by SAs. When present in an SLA setup, DAs mediate all communication between UAs and SAs.

When SLP is enabled, the CN4093 10 Gb Converged Scalable Switch behaves as a Service Agent providing systems management services.

Table 370. *Service Location Protocol Options*

Command Syntax and Usage
[no] ip slp enable Enables or disables SLP. The default value is disabled. Command mode: Global configuration
[no] ip slp active-da-discovery enable Enables or disables active directory agent discovery. The default value is disabled. Command mode: Global configuration
ip slp active-da-discovery-start-wait-time <1-10> Number of seconds to wait after enabling SLP before attempting active DA discovery, if active DA discovery is enabled. The default value is 3. Command mode: Global configuration
clear ip slp directory-agents Clears directory agents discovered. Command mode: Privileged EXEC
clear ip slp counters Clears Service Location Protocol counters. Command mode: Privileged EXEC

Configuration Dump

The dump program writes the current switch configuration to the terminal screen. To start the dump program, at the prompt, enter:

```
CN 4093(config)# show running-config
```

The configuration is displayed with parameters that have been changed from the default values. The screen display can be captured, edited, and placed in a script file, which can be used to configure other switches through a Telnet connection. When using Telnet to configure a new switch, paste the configuration commands from the script file at the command line prompt of the switch. The active configuration can also be saved or loaded via FTP/TFTP, as described on [page 574](#).

Saving the Active Switch Configuration

When the **copy running-config {ftp|tftp|sftp}** command is used, the switch's active configuration commands (as displayed using **show running-config**) will be uploaded to the specified script configuration file on the FTP/TFTP/SFTP server. To start the switch configuration upload, at the prompt, enter:

```
CN 4093(config)# copy running-config ftp [data-port|extm-port|mgt-port]
```

or:

```
CN 4093(config)# copy running-config tftp [data-port|extm-port|mgt-port]
```

or:

```
CN 4093(config)# copy running-config sftp [data-port|extm-port|mgt-port]
```

Select a port, or press **Enter** to use the default (management port). The switch prompts you for the server address and filename.

Notes:

- The output file is formatted with line-breaks but no carriage returns—the file cannot be viewed with editors that require carriage returns (such as Microsoft Notepad).
- If the FTP/TFTP server is running SunOS or the Solaris operating system, the specified configuration file must exist prior to executing the **copy running-config** command and must be writable (set with proper permission, and not locked by any application). The contents of the specified file will be replaced with the current configuration data.

Restoring the Active Switch Configuration

When the **copy {ftp|tftp|sftp} running-config** command is used, the active configuration will be replaced with the commands found in the specified configuration file. The file can contain a full switch configuration or a partial switch configuration.

To start the switch configuration download, at the prompt, enter:

```
CN 4093(config)# copy ftp running-config [data-port|extm-port|mgt-port]
```

or:

```
CN 4093(config)# copy tftp running-config [data-port|extm-port|mgt-port]
```

or:

```
CN 4093(config)# copy sftp running-config [data-port|extm-port|mgt-port]
```

Select a port, or press **Enter** to use the default (management port). The switch prompts you for the server address and filename.

Chapter 5. Operations Commands

Operations commands generally affect switch performance immediately, but do not alter permanent switch configurations. For example, you can use Operations commands to immediately disable a port (without the need to apply or save the change), with the understanding that when the switch is reset, the port returns to its normally configured operation.

These commands enable you to alter switch operational characteristics without affecting switch configuration.

Table 371. *General Operations Commands*

Command Syntax and Usage
<p>password <1-128 characters></p> <p>Allows the user to change the password. You must enter the current password in use for validation. The switch prompts for a new password between 1-128 characters.</p> <p>Command Mode: Privileged EXEC</p>
<p>clear logging</p> <p>Clears all Syslog messages.</p> <p>Command Mode: Privileged EXEC</p>
<p>ntp send</p> <p>Allows the user to send requests to the NTP server.</p> <p>Command Mode: Privileged EXEC</p>

Operations-Level Port Commands

Operations-level port options are used for temporarily disabling or enabling a port, and for re-setting the port.

Table 372. *Port Operations Commands*

Command Syntax and Usage
<p>no interface port <port number or alias> shutdown</p> <p>Temporarily enables the port. The port will be returned to its configured operation mode when the switch is reset.</p> <p>Command Mode: Privileged EXEC</p>
<p>interface port <port number or alias> shutdown</p> <p>Temporarily disables the port. The port will be returned to its configured operation mode when the switch is reset.</p> <p>Command Mode: Privileged EXEC</p>
<p>[no] interface portchannel <1-128> shutdown</p> <p>Temporarily enables or disables the specified port channel. The port channel will be returned to its configured operation mode when the switch is reset.</p> <p>Command Mode: Privileged EXEC</p>
<p>[no] interface portchannel lacp <1-65535> shutdown</p> <p>Temporarily enables or disables specified LACP trunk groups.</p> <p>Command Mode: Privileged EXEC</p>
<p>show interface port <port number or alias> operation</p> <p>Displays the port interface operational state.</p> <p>Command Mode: Privileged EXEC</p>

Operations-Level Port 802.1X Commands

Operations-level port 802.1X options are used to temporarily set 802.1X parameters for a port.

Table 373. *802.1X Operations Commands*

Command Syntax and Usage
<p>interface port <i><port number or alias></i> dot1x init</p> <p>Re-initializes the 802.1X access-control parameters for the port. The following actions take place, depending on the 802.1X port configuration:</p> <ul style="list-style-type: none">o force unauth: the port is placed in unauthorized state, and traffic is blocked.o auto: the port is placed in unauthorized state, then authentication is initiated.o force auth: the port is placed in authorized state, and authentication is not required. <p>Command Mode: Privileged EXEC</p>
<p>interface port <i><port number or alias></i> dot1x re-authenticate</p> <p>Re-authenticates the supplicant (client) attached to the port. This command only applies if the port's 802.1X mode is configured as auto.</p> <p>Command Mode: Privileged EXEC</p>

Operations-Level VRRP Commands

The following table displays Virtual Router Redundancy operations commands.

Table 374. *Virtual Router Redundancy Operations Commands*

Command Syntax and Usage
<p>router vrrp backup <virtual router number (1-255)></p> <p>Forces the specified master virtual router on this switch into backup mode. This is generally used for passing master control back to a preferred switch once the preferred switch has been returned to service after a failure. When this command is executed, the current master gives up control and initiates a new election by temporarily advertising its own priority level as 0 (lowest). After the new election, the virtual router forced into backup mode by this command will resume master control in the following cases:</p> <ul style="list-style-type: none">o This switch owns the virtual router (the IP addresses of the virtual router and its IP interface are the same)o This switch's virtual router has a higher priority and preemption is enabled.o There are no other virtual routers available to take master control. <p>Command Mode: Privileged EXEC</p>

Operations-Level BGP Commands

The following table displays IP BGP operations commands.

Table 375. *IP BGP Operations Commands*

Command Syntax and Usage
router bgp start <1-12> Starts the peer session. Command Mode: Privileged EXEC
router bgp stop <1-12> Stops the peer session. Command Mode: Privileged EXEC
show ip bgp state Displays the current BGP operational state. Command Mode: Privileged EXEC

Protected Mode Options

Protected Mode is used to secure certain switch management options, so they cannot be changed by the management module.

Table 376. *Protected Mode Options*

Command Syntax and Usage
<p>[no] protected-mode enable</p> <p>Enables or disables Protected Mode. When Protected Mode is enabled, the switch takes exclusive local control of all enabled options. When Protected Mode is disabled, the switch relinquishes exclusive local control of all enabled options.</p> <p>Command Mode: Global Configuration</p>
<p>[no] protected-mode external-management</p> <p>Enables exclusive local control of switch management. When Protected Mode is set to on, the management module cannot be used to disable external management on the switch.</p> <p>The default value is enabled.</p> <p>Note: Due to current management module implementation, this setting cannot be disabled.</p> <p>Command Mode: Global Configuration</p>
<p>[no] protected-mode external-ports</p> <p>Enables exclusive local control of external ports. When Protected Mode is set to on, the management module cannot be used to disable external ports on the switch.</p> <p>The default value is enabled.</p> <p>Note: Due to current management module implementation, this setting cannot be disabled.</p> <p>Command Mode: Global Configuration</p>
<p>[no] protected-mode factory-default</p> <p>Enables exclusive local control of factory default resets. When Protected Mode is set to on, the management module cannot be used to reset the switch software to factory default values.</p> <p>The default value is enabled.</p> <p>Note: Due to current management module implementation, this setting cannot be disabled.</p> <p>Command Mode: Global Configuration</p>

Table 376. *Protected Mode Options (continued)*

Command Syntax and Usage
<p>[no] protected-mode management-vlan-interface</p> <p>Enables exclusive local control of the management interface. When Protected Mode is set to on, the management module cannot be used to configure parameters for the management interface.</p> <p>The default value is enabled.</p> <p>Note: Due to current management module implementation, this setting cannot be disabled.</p> <p>Command Mode: Global Configuration</p>
<p>show protected-mode</p> <p>Displays the current Protected Mode configuration.</p> <p>Command Mode: Global Configuration</p>

VMware Operations

Use these commands to perform minor adjustments to the VMware operation. Use these commands to perform Virtual Switch operations directly from the switch. Note that these commands require the configuration of Virtual Center access information (**virt vmware vcspec**).

Table 377. *VMware Operations Commands*

Command Syntax and Usage
<p>virt vmware pg [<i><Port Group name></i> <i><host ID></i> <i><VSwitch name></i> <i><VLAN number></i> <i><shaping-enabled></i> <i><average-Kbps></i> <i><burst-KB></i> <i><peak-Kbps></i>]</p> <p>Adds a Port Group to a VMware host. You are prompted for the following information:</p> <ul style="list-style-type: none">o Port Group nameo VMware host ID (Use host UUID, host IP address, or host name.)o Virtual Switch nameo VLAN ID of the Port Groupo Whether to enable the traffic-shaping profile (1 or 0). If you choose 1 (yes), you are prompted to enter the traffic shaping parameters. <p>Command Mode: All</p>
<p>no virt vmware pg <i><Port Group name></i> <i><host ID></i></p> <p>Removes a Port Group from a VMware host. Use one of the following identifiers to specify the host:</p> <ul style="list-style-type: none">o UUIDo IP addresso Host name <p>Command Mode: All</p>
<p>[no] virt vmware vsw <i><host ID></i> <i><Virtual Switch name></i></p> <p>Adds or removes a Virtual Switch to a VMware host. Use one of the following identifiers to specify the host:</p> <ul style="list-style-type: none">o UUIDo IP addresso Host name <p>Command Mode: All</p>

Table 377. *VMware Operations Commands (continued)*

Command Syntax and Usage
<p>virt vmware export <i><VM profile name></i> <i><VMware host ID></i> <i><Virtual Switch name></i></p> <p>Exports a VM Profile to a VMware host.</p> <p>Use one of the following identifiers to specify each host:</p> <ul style="list-style-type: none">o UUIDo IP addresso Host name <p>You may enter a Virtual Switch name, or enter a new name to create a new Virtual Switch.</p> <p>Command Mode: All</p>
<p>virt vmware scan</p> <p>Performs a scan of the VM Agent, and updates VM information.</p> <p>Command Mode: All</p>
<p>virt vmware vmacpg <i><MAC address></i> <i><Port Group name></i></p> <p>Changes a VM NIC's configured Port Group.</p> <p>Command Mode: All</p>
<p>virt vmware updp <i><Port Group name></i> <i><host ID></i> <i><VLAN number></i> <i>[<shaping enabled> <average Kbps> <burst KB> <peak Kbps>]</i></p> <p>Updates a VMware host's Port Group parameters.</p> <p>Command Mode: All</p>

VMware Distributed Virtual Switch Operations

Use these commands to administer a VMware Distributed Virtual Switch (dvSwitch).

Table 378. *VMware dvSwitch Operations (loper/virt/vmware/dvswitch)*

Command Syntax and Usage
<p>virt vmware dvswitch add <datacenter name> <dvSwitch name> <dvSwitch version></p> <p>Adds the specified dvSwitch to the specified DataCenter.</p> <p>Command Mode: All</p>
<p>virt vmware dvswitch del <datacenter name> <dvSwitch name></p> <p>Removes the specified dvSwitch from the specified DataCenter.</p> <p>Command Mode: All</p>
<p>virt vmware dvswitch addhost <dvSwitch name> {<host UUID IP address host name>}</p> <p>Adds the specified host to the specified dvSwitch. Use one of the following identifiers to specify the host:</p> <ul style="list-style-type: none"> o UUID o IP address o Host name <p>Command Mode: All</p>
<p>virt vmware dvswitch remhost <dvSwitch name> {<host UUID IP address host name>}</p> <p>Removes the specified host from the specified dvSwitch. Use one of the following identifiers to specify the host:</p> <ul style="list-style-type: none"> o UUID o IP address o Host name <p>Command Mode: All</p>
<p>virt vmware dvswitch addUplink <dvSwitch name> <host ID> <uplink name></p> <p>Adds the specified physical NIC to the specified dvSwitch uplink ports.</p> <p>Command Mode: All</p>
<p>virt vmware dvswitch remUplink <dvSwitch name> <host ID> <uplink name></p> <p>Removes the specified physical NIC from the specified dvSwitch uplink ports.</p> <p>Command Mode: All</p>

VMware Distributed Port Group Operations

Use these commands to administer a VMware distributed port group.

Table 379. VMware Distributed Port Group Operations (*/oper/virt/vmware/dpg*)

Command Syntax and Usage
<p>virt vmware dpg add <i><port group name></i> <i><dvSwitch name></i> <i><VLAN ID></i> [ishaping <i><bandwidth></i> <i><burst size></i> <i><peak bandwidth></i>] [eshaping <i><bandwidth></i> <i><burst size></i> <i><peak bandwidth></i>]</p> <p>Adds the specified port group to the specified dvSwitch. You may enter the following parameters:</p> <ul style="list-style-type: none"> o ishaping: Enables ingress shaping. Supply the following information: <ul style="list-style-type: none"> • average bandwidth in KB per second • burst size in KB • peak bandwidth in KB per second o eshaping: Enables egress shaping. Supply the following information: <ul style="list-style-type: none"> • average bandwidth in KB per second • burst size in KB • peak bandwidth in KB per second <p>Command Mode: All</p>
<p>virt vmware dpg vmac <i><VNIC MAC></i> <i><port group name></i></p> <p>Adds the specified VM NIC to the specified port group.</p> <p>Command Mode: All</p>
<p>virt vmware dpg update <i><port group name></i> <i><dvSwitch name></i> <i><VLAN ID></i> [ishaping <i><bandwidth></i> <i><burst size></i> <i><peak bandwidth></i>] [eshaping <i><bandwidth></i> <i><burst size></i> <i><peak bandwidth></i>]</p> <p>Updates the specified port group on the specified dvSwitch. You may enter the following parameters:</p> <ul style="list-style-type: none"> o ishaping: Enables ingress shaping. Supply the following information: <ul style="list-style-type: none"> • average bandwidth in KB per second • burst size in KB • peak bandwidth in KB per second o eshaping: Enables egress shaping. Supply the following information: <ul style="list-style-type: none"> • average bandwidth in KB per second • burst size in KB • peak bandwidth in KB per second <p>Command Mode: All</p>
<p>virt vmware dpg del <i><port group name></i> <i><dvSwitch name></i></p> <p>Removes the specified port group from the specified dvSwitch.</p> <p>Command Mode: All</p>

Edge Virtual Bridge Operations

Edge Virtual Bridge operations commands are listed in the following table:

Table 380. *Edge Virtual Bridge Operations Commands*

Command Syntax and Usage
virt evb update vsidb <VSIDB_number> Update VSI types from the VSI database. Command mode: All
clear virt evb vsidb [mgrid <0-255> typeid <1-16777215> version <0-255>] Clears local VSI types cache. Command mode: Privileged EXEC
clear virt evb vsi [mac-address port <port alias or number> type-id <1-16777215> vlan <1-4094>] Clears VSI database associations. Command mode: Privileged EXEC

Feature on Demand Key Options

Use the license key to upgrade the port mode. Base port mode is the default. To upgrade the port mode, you must obtain a software license key.

After selecting a port mode, you must reset the switch for the change to take affect. Use the following command to verify the port configuration:

show interface information

Table 381. *Feature on Demand Key Options*

Command Syntax and Usage
<p>software-key</p> <p>Enter FOD Key mode.</p> <p>Command mode: Privileged EXEC</p>
<p>enakey address <i><hostname or IP address></i> keyfile <i><file name></i> protocol {tftp sftp} mgt</p> <p>Unlocks the software port expansion feature. You are prompted to enter the host name or IP address of the server where the license key is stored, and the license key file name, as follows:</p> <ul style="list-style-type: none">o 46Porto 64Port <p>Note: You must upgrade to 46Port port mode before you can upgrade to 64Port port mode.</p> <p>Command mode: FOD Key mode</p> <p>Use the following command to perform the same action, regardless the command mode:</p> <p>copy tftp software-key address <i><hostname or IP address></i> keyfile <i><file name></i> mgt</p>
<p>ptkey address <i><hostname or IP address></i> key <i><feature name></i> protocol {tftp sftp} file <i><file name></i> mgt</p> <p>Loads the specified key file to a server.</p> <p>Command mode: FOD Key mode</p> <p>Use the following command to perform the same action, regardless the command mode:</p> <p>copy software-key address <i><hostname or IP address></i> key <i><file name></i> protocol {tftp sftp} file <i><file name></i> mgt</p>

Table 381. *Feature on Demand Key Options*

Command Syntax and Usage
<p>invkeys address <i><hostname or IP address></i> invfile <i><file name></i> protocol {tftp sftp} mgt</p> <p>Loads key code inventory information to a server.</p> <p>Command mode: FOD Key mode</p> <p>Use the following command to perform the same action, regardless the command mode:</p> <p>copy invkeys address <i><hostname or IP address></i> invfile <i><file name></i> protocol {tftp sftp} mgt</p>
<p>rmkey key <i><feature name></i></p> <p>Removes the specified software feature.</p> <p>Command mode: FOD Key mode</p>
<p>exit</p> <p>Exit from Feature on Demand Key mode.</p> <p>Command mode: FOD Key mode</p>
<p>show software-key</p> <p>Shows software licensing keys.</p> <p>Command mode: All</p>

Chapter 6. Boot Options

To use the Boot Options commands, you must be logged in to the switch as the administrator. The Boot Options commands provide options for:

- Selecting a switch software image to be used when the switch is next reset
- Selecting a configuration block to be used when the switch is next reset
- Downloading or uploading a new software image to the switch via FTP/TFTP

In addition to the Boot commands, you can use a Web browser or SNMP to work with switch image and configuration files. To use SNMP, refer to “Working with Switch Images and Configuration Files” in the *Command Reference*.

The boot options are discussed in the following sections.

Stacking Boot Options

The Stacking Boot options are used to define the role of the switch in a stack: either as the Master that controls the stack, or as a participating Member switch. Options are available for loading stack software to individual Member switches, and to configure the VLAN that is reserved for inter-switch stacking communications.

You must enable Stacking and reset the switch to enter Stacking mode. When the switch enters Stacking mode, the Stacking configuration menu appears. For more information, see [“Stacking Configuration” on page 360](#).

[Table 382](#) lists the Boot Stacking command options.

Table 382. *Boot Stacking Options*

Command Syntax and Usage
<p>boot stack mode [master member] [<1-16> all backup master]</p> <p>Configures the Stacking mode for the selected switch. This can be applied for:</p> <ul style="list-style-type: none"> o a specific switch <1-16> o all switches o backup switch o master switch <p>Command mode: Global configuration</p>
<p>boot stack higr-trunk <list of ports></p> <p>Configures the ports used to connect the switch to the stack.</p> <p>Command mode: Global configuration</p>
<p>boot stack vlan <VLAN number></p> <p>Configures the VLAN used for Stacking control communication.</p> <p>Command mode: Global configuration</p>
<p>default boot stack [master backup <asnum (1-16)> all]</p> <p>Resets the Stacking boot parameters to their default values.</p> <p>Command mode: Global configuration</p>
<p>boot stack push-image {image1 image2 boot} <asnum (1-16)></p> <p>Pushes the selected software file from the master to the selected switch.</p> <p>Command mode: Global configuration</p>
<p>boot stack enable</p> <p>Enables the switch stack.</p> <p>Command mode: Global configuration</p>

Table 382. *Boot Stacking Options (continued)*

Command Syntax and Usage
no boot stack enable Disables the switch stack. Command mode: Global configuration
show boot stack [master backup <asnum (1-16)> all] Displays current Stacking boot parameters. Command mode: All

When in stacking mode, the following stand-alone features are not supported:

- Border Gateway Protocol (BGP)
- Ethernet Operation, Administration and Maintenance (OAM)
- Internet Group Management Protocol version 3 (IGMPv3)
- Internet Group Management Protocol (IGMP) Querier
- Internet Group Management Protocol (IGMP) Relay
- Internet Key Exchange version 2 (IKEv2)
- IP Security (IPsec)
- Internet Protocol version 6 (IPv6)
- Loopback Interfaces
- MAC address notification
- Multicast Listener Discovery (MLD)
- Network Configuration (NETCONF) Protocol
- Open Shortest Path First (OSPF)
- Open Shortest Path First version 3 (OSPFv3)
- Port flood blocking
- EasyConnect (EZC)
- Protocol-based VLANs
- Router IDs
- Route maps
- Routing Information Protocol (RIP)
- sFlow port monitoring
- Spanning Tree Protocol (STP) Root Guard and Loop Guard
- Static MAC address adding
- Static Multicast Routes
- Storm control
- Switch Partition (SPAR)
- Uni-Directional Link Detection (UDLD)

- Virtual Link Aggregation Groups (VLAG)
- Virtual Router Redundancy Protocol (VRRP)

Switch menus and commands for unsupported features may be unavailable, or may have no effect on switch operation.

Scheduled Reboot

This feature allows you to schedule a reboot to occur at a particular time in the future. This feature is particularly helpful if the user needs to perform switch upgrades during off-peak hours. You can set the reboot time, cancel a previously scheduled reboot, and check the time of the currently set reboot schedule.

Table 383. *Boot Scheduling Options*

Command Syntax and Usage
boot schedule <i><day of week></i> <i><time of day></i> Defines the reboot schedule. Enter the day of the week, followed by the time of day (in hh:mm format). For example: <code>boot schedule monday 11:30</code> Command mode: Global configuration
no boot schedule Cancels the next pending scheduled reboot. Command mode: Global configuration
show boot Displays the current reboot scheduling parameters. Command mode: All

Netboot Configuration

Netboot allows the switch to automatically download its configuration file over the network during switch reboot, and apply the new configuration. Upon reboot, the switch includes the following options in its DHCP requests:

- Option 66 (TFTP server address)
- Option 67 (file path)

If the DHCP server returns the information, the switch initiates a TFTP file transfer, and loads the configuration file into the active configuration block. As the switch boots up, it applies the new configuration file. Note that the option 66 TFTP server address must be specified in IP-address format (host name is not supported).

If DHCP is not enabled, or the DHCP server does not return the required information, the switch uses the manually-configured TFTP server address and file path.

Table 384. *Netboot Options (/boot/netboot)*

Command Syntax and Usage
<p>[no] boot netboot enable</p> <p>Enables or disables Netboot. When enabled, the switch boots into factory-default configuration, and attempts to download a new configuration file.</p> <p>Command mode: Global configuration</p>
<p>[no] boot netboot tftp <IP address></p> <p>Configures the IP address of the TFTP server used for manual configuration. This server is used if DHCP is disabled, or if the DHCP server does not return the required information.</p> <p>Command mode: Global configuration</p>
<p>[no] boot netboot cfgfile <1-31 characters></p> <p>Defines the file path for the configuration file on the TFTP server. For example: /directory/sub/config.cfg</p> <p>Command mode: Global configuration</p>
<p>show boot</p> <p>Displays the current Netboot parameters.</p> <p>Command mode: All</p>

Flexible Port Mapping

Depending on the license keys installed on the switch, only a limited number of physical ports might be active. Flexible Port Mapping allows you to alter the default configuration set up by the license, by manually setting up which ports are active or inactive.

Active ports may not collectively exceed the bandwidth limit imposed by the current license level.

[Table 385](#) lists the Flexible Port Mapping command options.

Table 385. *Flexible Port Mapping Options*

Command Syntax and Usage
[no] boot port-map <i><port number or range></i> Enables or disables the specified ports. Command mode: Global configuration
default boot port-map Reverts the port mapping to the default licensed configuration. Command mode: Global configuration
show boot port-map Displays the total bandwidth available, current port mapping and configured port mapping. Command mode: All

QSFP Port Configuration

Quad Small Form-factor Pluggable Plus (QSFP+) ports are designed to handle high-intensity traffic. Use the following commands to configure QSFP+ ports.

Table 386. *Netboot Options (/boot/qsfp-40Gports)*

Command Syntax and Usage
[no] boot qsfp-40Gports <ports> Enables or disables 40GbE mode on the selected QSFP+ ports. When enabled, each QSFP+ port is set as a single 40GbE port. When disabled, each QSFP+ port is configured to breakout into four 10GbE ports. You must reboot the switch for this change to take effect. Command mode: Global configuration
show boot qsfp-port-modes Displays the current QSFP port settings. Command mode: All

SIOM Configuration

The Secure Input/Output Module (SIOM) enables you to determine which protocols can be enabled. The SIOM only allows secured traffic and secured authentication management. Use the following commands to configure QSFP+ ports.

Table 387. *SIOM Options*

Command Syntax and Usage
<p>[no] boot siom</p> <p>Enables or disables SIOM on the switch.</p> <p>You must reboot the switch for this change to take effect.</p> <p>Command mode: Global configuration</p>
<p>show boot siom</p> <p>Displays the current SIOM setting and the SIOM setting that will take effect after reboot.</p> <p>Command mode: All</p>

Configuring the Number of Spanning Tree Groups

The maximum number of Spanning Tree Groups (STGs) available on the switch can be configured to be either 128 or 256.

Table 388. *Configuring the Maximum Number of STGs Command Options*

Command Syntax and Usage
<p>boot spanning-tree max-instances {128 256}</p> <p>Configures the maximum number of Spanning Tree Groups (STGs) that can be used on the switch.</p> <p>The default value is 128.</p> <p>Note: The switch needs to be reloaded for the configuration to take effect.</p> <p>Command mode: Global configuration</p>
<p>no boot spanning-tree max-instances</p> <p>Reset the maximum number of STGs available on the switch to the default value of 128.</p> <p>Note: The switch needs to be reloaded for the configuration to take effect.</p> <p>Command mode: Global configuration</p>
<p>show boot spanning-tree</p> <p>Displays the maximum number of currently available STGs on the switch and the maximum number of available STGs after the switch reloads.</p> <p>Command mode: All</p>

The following command displays the current maximum limit of STGs on the switch and the maximum limit configured after the switch reloads:

show boot spanning-tree

Command mode: All

```
Bootup Max PVRST Instances: 128
Saved Max PVRST Instances: 256
```

NOTE: A Reboot is required for the new settings to take effect. When switching from 256 to 128 STP instances, please remove any extra configuration for STP instance 128 and above, then save the configuration; otherwise, all STP instance configuration may be lost after reload.

Updating the Switch Software Image

The switch software image is the executable code running on the CN4093 10 Gb Converged Scalable Switch. A version of the image ships with the switch, and comes pre-installed on the device. As new versions of the image are released, you can upgrade the software running on your switch.

Use the following command to determine the current software version: **show boot**

Upgrading the software image on your switch requires the following:

- Loading the new image onto a FTP, SFTP or TFTP server on your network
- Transferring the new image from the FTP, SFTP or TFTP server to your switch
- Selecting the new software image to be loaded into switch memory the next time the switch is reset

Loading New Software to Your Switch

The switch can store up to two different software images, called `image1` and `image2`, as well as boot software, called `boot`. When you load new software, you must specify where it should be placed: either into `image1`, `image2`, or `boot`.

For example, if your active image is currently loaded into `image1`, you would probably load the new image software into `image2`. This lets you test the new software and reload the original active image (stored in `image1`), if needed.

To load a new software image to your switch, you need the following:

- The image or boot software loaded on an FTP/SFTP/TFTP server on your network
- The hostname or IP address of the FTP/SFTP/TFTP server
- The name of the new software image or boot file

Note: The DNS parameters must be configured if specifying hostnames.

When the above requirements are met, use the following procedure to download the new software to your switch.

1. In Privileged EXEC mode, enter the following command:

```
CN 4093# copy {ftp|tftp|sftp} {image1|image2|boot-image} [extm-port |  
mgt-port |data-port]
```

Select a port, or press <Enter> to use the default (management port).

2. Enter the hostname or IP address of the FTP, SFTP or TFTP server.

```
Address or name of remote host: <IP address or hostname>
```

3. Enter the name of the new software file on the server.

```
Source file name: <filename>
```

The exact form of the name will vary by server. However, the file location is normally relative to the FTP, SFTP, or TFTP directory (usually `tftpboot`).

4. Enter your username and password for the server, if applicable.

```
User name: {<username>|<Enter>}
```

5. The system prompts you to confirm your request.

Next, select a software image to run, as described in the following section.

Selecting a Software Image to Run

You can select which software image (`image1` or `image2`) you want to run in switch memory for the next reboot.

1. In Global Configuration mode, enter:

```
CN 4093(config)# boot image {image1|image2}
```

2. Enter the name of the image you want the switch to use upon the next boot.

The system informs you of which image set to be loaded at the next reset:

```
Next boot will use switch software image1 instead of image2.
```

Uploading a Software Image from Your Switch

You can upload a software image from the switch to a FTP, SFTP or TFTP server.

1. In Privileged EXEC mode, enter:

```
CN 4093# copy {image1|image2|boot-image} {ftp|tftp|sftp}
[extm-port|mgt-port|data-port|staggered-upgrade]
```

Select a port, or press <Enter> to use the default (management port).

2. Enter the name or the IP address of the FTP, SFTP or TFTP server:

```
Address or name of remote host: <IP address or hostname>
```

3. Enter the name of the file into which the image will be uploaded on the FTP, SFTP or TFTP server:

```
Destination file name: <filename>
```

4. Enter your username and password for the server, if applicable.

```
User name: {<username>|<Enter>}
```


5. The system then requests confirmation of what you have entered. To have the file uploaded, enter **Y**.

```
image2 currently contains Software Version 6.5.0
that was downloaded at 0:23:39 Thu Jan 1, 2010
Upload will transfer image2 (2788535 bytes) to file "image1"
on FTP/TFTP server 1.90.90.95.
Confirm upload operation (y/n) ? y
```

Selecting a Configuration Block

When you make configuration changes to the CN4093 10 Gb Converged Scalable Switch, you must save the changes so that they are retained beyond the next time the switch is reset. When you perform a save operation (`copy running-config startup-config`), your new configuration changes are placed in the *active* configuration block. The previous configuration is copied into the *backup* configuration block.

There is also a *factory* configuration block. This holds the default configuration set by the factory when your CN4093 10 Gb Converged Scalable Switch was manufactured. Under certain circumstances, it may be desirable to reset the switch configuration to the default. This can be useful when a custom-configured CN4093 10 Gb Converged Scalable Switch is moved to a network environment where it will be re-configured for a different purpose.

In Global Configuration mode, use the following command to set which configuration block you want the switch to load the next time it is reset:

```
CN 4093(config)# boot configuration-block {active|backup|factory}
```

Rebooting the Switch

You can reset the switch to make your software image file and configuration block changes occur.

Note: Resetting the switch causes the Spanning Tree Group to restart. This process can be lengthy, depending on the topology of your network.

Enter the following command to reset (reload) the switch:

```
CN 4093# reload
```

You are prompted to confirm your request.

```
Reset will use software "image2" and the active config block.  
>> Note that this will RESTART the Spanning Tree,  
>> which will likely cause an interruption in network service.  
Confirm reload (y/n) ?
```

In stacking mode, the following options are available:

- Reload master switch
- Reload without saving tech-dump
- Staggered reload
- Reload switch unit

Using the Boot Management Menu

The Boot Management menu allows you to switch the software image, reset the switch to factory defaults, or to recover from a failed software upgrade.

You can interrupt the boot process and enter the Boot Management menu from the serial console port. When the system displays Memory Test, press **<Shift + B>**. The Boot Management menu appears.

```
Resetting the System ...
Memory Test .....

Boot Management Menu
  I - Change booting image
  C - Change configuration block
  R - Boot in recovery mode (tftp and xmodem download of images to
recover switch)
  Q - Reboot
  E - Exit
Please choose your menu option:
```

The Boot Management menu allows you to perform the following actions:

- To change the booting image, press I and follow the screen prompts.
- To change the configuration block, press C and follow the screen prompts.
- To boot in recovery mode, press R. For more details, see [“Boot Recovery Mode” on page 605](#).
- To restart the boot process from the beginning, press Q.
- To exit the Boot Management menu, press E. The booting process continues.

Boot Recovery Mode

The Boot Recovery Mode allows you to recover from a failed software or boot image upgrade using TFTP or XModem download.

To enter Boot Recovery Mode you must select “Boot in recovery mode” option from the Boot Management Menu.

```
Entering Rescue Mode.  
Please select one of the following options:  
    T) Configure networking and tftp download an image  
    X) Use xmodem 1K to serial download an image  
    P) Physical presence (low security mode)  
    R) Reboot  
    E) Exit  
  
Option? :
```

The Boot Recovery Mode menu allows you to perform the following actions:

- To recover from a failed software or boot image upgrade using TFTP, press T and follow the screen prompts. For more details, see [“Recover from a Failed Image Upgrade using TFTP” on page 606](#).
- To recover from a failed software or boot image upgrade using XModem download, press X and follow the screen prompts. For more details, see [“Recovering from a Failed Image Upgrade using XModem Download” on page 608](#).
- To enable the loading of an unofficial image, press P and follow the screen prompts. For more details, see [“Physical Presence” on page 610](#).
- To restart the boot process from the beginning, press R.
- To exit Boot Recovery Mode menu, press E. The boot process continues.

Recover from a Failed Image Upgrade using TFTP

Use the following procedure to recover from a failed image upgrade using TFTP:

1. Connect a PC to the console port of the switch.
2. Open a terminal emulator program that supports Telnet protocol (for example, HyperTerminal, CRT, PuTTY) and input the proper hostname (IP address) and port to connect to the console port of the switch.
3. Boot the switch and access the Boot Management menu by pressing **<Shift + B>** while the Memory Test is in progress and the dots are being displayed.
4. Enter Boot Recovery Mode by selecting R. The Recovery Mode menu will appear.
5. To start the recovery process using TFTP, select T. The following message will appear:

```
Performing TFTP rescue. Please answer the following questions (enter 'q' to quit):
```

6. Enter the type of management port to be used:

```
Which mgmt port to be used? Internal/External:
```

7. Enter the IP address of the management port:

```
IP addr :
```

8. Enter the network mask of the management port:

```
Netmask :
```

9. Enter the gateway of the management port:

```
Gateway :
```

10. Enter the IP address of the TFTP server:

```
Server addr:
```

11. Enter the filename of the image:

```
Image Filename:
```

12. If the file is a software image, enter an image number:

```
Install image as image 1 or 2 (hit return to just boot image):
```

After the procedure is complete, the Recovery Mode menu will be re-displayed.

Below is an example of a successful recovery procedure using TFTP:

```
Entering Rescue Mode.
Please select one of the following options:
    T) Configure networking and tftp download an image
    X) Use xmodem 1K to serial download an image
    P) Physical presence (low security mode)
    R) Reboot
    E) Exit

Option? : t
Performing TFTP rescue. Please answer the following questions (enter 'q'
to quit):
Which mgmt port to be used? Internal/External: internal
IP addr :10.241.6.4
Netmask :255.255.255.128
Gateway :10.241.6.66
Server addr:10.72.97.135
Image Filename: CN4093-8.2.1.0_OS.img
    Netmask : 255.255.255.128
    Gateway : 10.241.6.66
Configuring management port.....
Installing image CN4093-8.2.1.0_OS.img from TFTP server 10.72.97.135

Extracting images ... Do *NOT* power cycle the switch.
Installing Application: Image signature verified. Install image as image
1 or 2 (hit return to just boot image): 2
Installing image as image2: 100%

Image2 updated succeeded
Updating install log. File CN4093-8.2.1.0_OS.img installed from
10.72.97.135 at 15:29:30 on 12-3-2015
Please select one of the following options:
    T) Configure networking and tftp download an image
    X) Use xmodem 1K to serial download an image
    P) Physical presence (low security mode)
    R) Reboot
    E) Exit

Option? :
```

Recovering from a Failed Image Upgrade using XModem Download

Use the following procedure to recover from a failed image upgrade.

1. Connect a PC to the serial port of the switch.
2. Open a terminal emulator program that supports Xmodem download (for example, HyperTerminal, CRT, PuTTY) and select the following serial port characteristics:
 - Speed: 9600 bps
 - Data Bits: 8
 - Stop Bits: 1
 - Parity: None
 - Flow Control: None
3. Boot the switch and access the Boot Management menu by pressing **<Shift + B>** while the Memory Test is in progress and the dots are being displayed.
4. Enter Boot Recovery Mode by selecting R. The Recovery Mode menu will appear.
5. Select X for Xmodem download. You will see the following display:

```
Running xmodem rescue.....
```

6. When you see the following message, change the Serial Port speed to 115200 bps:

```
Change the baud rate to 115200 bps and hit the <ENTER> key before  
initiating the download.
```

7. Press **<Enter>** to set the system into download accept mode. When the readiness meter displays (a series of "C" characters), start Xmodem on your terminal emulator. You will see a display similar to the following:

```
... Waiting for the <Enter> key to be hit before the download can start...  
CC
```

8. Select the image to download. Xmodem initiates the file transfer. When download is complete, you are asked to change the Serial Port speed back to 9600 bps:

```
Change the baud rate back to 9600 bps, hit the <ENTER> key
```

9. Press **<Enter>** to start installing the image. If the file is a software image, enter the image number:

```
Install image as image 1 or 2 (hit return to just boot image):
```


The image install will begin. After the procedure is complete, the Recovery Mode menu will be re-displayed.

```
Extracting images ... Do *NOT* power cycle the switch.
Installing Root Filesystem:
Image signature verified. 100%
Installing Kernel:
Image signature verified. 100%
Installing Device Tree:
Image signature verified. 100%
Installing Boot Loader: 100%
Updating install log. File image installed from xmodem at 18:06:02 on
13-3-2015
Please select one of the following options:
    T) Configure networking and tftp download an image
    X) Use xmodem 1K to serial download an image
    P) Physical presence (low security mode)
    R) Reboot
    E) Exit

Option? :
```

Boot image recovery is complete.

Physical Presence

Use the following procedure to enable the installation of unofficial images on the switch:

1. Connect a PC to the console port of the switch.
2. Open a terminal emulator program that supports Telnet protocol (for example, HyperTerminal, CRT, PuTTY) and input the proper hostname (IP address) and port to connect to the console port of the switch.
3. Boot the switch and access the Boot Management menu by pressing **<Shift + B>** while the Memory Test is in progress and the dots are being displayed.
4. Enter Boot Recovery Mode by selecting R. The Recovery Mode menu will appear.
5. To begin the Physical Presence procedure, select P. The following warning message will appear:

```
WARNING: the following test is used to determine physical presence and if
completed will put the switch in low security mode.
```

6. You will be prompted for confirmation:

```
Do you wish to continue y/n?
```

7. A security test will be performed. The system location (blue) LED will blink a number of times between 1 and 12. Enter that number:

```
Hit a key to start the test. The blue location LED will blink a number of
times.
.....
How many times did the LED blink?
```

8. After entering the correct number, the Recovery Mode menu will re-appear. To install an unofficial image use one of the following procedures:
 - TFTP (for details, see [page 606](#))
 - XModem Download (for details, see [page 608](#))

Notes:

- You have three attempts to successfully complete the security test. After three incorrect attempts, the switch will reboot.
- After the test is completed, the switch will be put in low security mode. This mode will allow you to install unofficial images on the switch. To revert to normal security mode, you must reboot the switch or press P again in the Recovery Mode menu.

Chapter 7. Maintenance Commands

The maintenance commands are used to manage dump information and forward database information. They also include debugging commands to help with troubleshooting.

Dump information contains internal switch state data that is written to flash memory on the CN4093 10 Gb Converged Scalable Switch after any one of the following occurs:

- The watchdog timer forces a switch reset. The purpose of the watchdog timer is to reboot the switch if the switch software freezes.
- The switch detects a hardware or software problem that requires a reboot.

To use the maintenance commands, you must be logged in to the switch as the administrator.

Table 389. *General Maintenance Commands*

Command Syntax and Usage
copy flash-dump ftp [data-port extm-port mgt-port] Saves the system dump information via FTP. For details, see page 629 . Command mode: All except User EXEC
copy flash-dump sftp [data-port extm-port mgt-port] Saves the system dump information via SFTP. For details, see page 629 . Command mode: All except User EXEC
copy flash-dump tftp [address data-port extm-port filename mgt-port] Saves the system dump information via TFTP. For details, see page 629 . Command mode: All except User EXEC
clear flash-dump Clears dump information from flash memory. Command mode: All except User EXEC
copy log sftp [data-port extm-port mgt-port] Saves the system log file (SYSLOG) via SFTP. Command mode: All except User EXEC
copy log tftp [address data-port filename mgt-port] Saves the system log file (SYSLOG) via TFTP. Command mode: All except User EXEC
copy sa1 sftp [data-port extm-port mgt-port] Saves the security audit log file via SFTP. Note: Not available in Stacking mode. Command mode: All except User EXEC

Table 389. *General Maintenance Commands*

Command Syntax and Usage
copy sal tftp [address data-port filename mgt-port] Saves the security audit log file via TFTP. Note: Not available in Stacking mode. Command mode: All except User EXEC
clear sal Clears the security audit log file. Note: Not available in Stacking mode. Command mode: All except User EXEC
copy tech-support ftp [data-port extm-port mgt-port] Redirects the technical support dump (tsdmp) to an external FTP server. Command mode: All except User EXEC
copy tech-support sftp [data-port extm-port mgt-port] Redirects the technical support dump (tsdump) to an external SFTP server. Commands mode: All except User EXEC
copy tech-support tftp [address data-port extm-port filename mgt-port] Redirects the technical support dump (tsdmp) to an external TFTP server. Command mode: All except User EXEC
show tech-support [12 13 link port] Dumps all CN4093 information, statistics, and configuration. Note: Some of the features displayed may not be supported on your switch. You can log the output (tsdmp) into a file. To filter the information, use the following options: <ul style="list-style-type: none">o 12 displays only Layer 2-related informationo 13 displays only Layer 3-related informationo link displays only link status-related informationo port displays only port-related information Command mode: All except User EXEC

Forwarding Database Maintenance

The Forwarding Database commands can be used to view information and to delete a MAC address from the forwarding database or to clear the entire forwarding database. This is helpful in identifying problems associated with MAC address learning and packet forwarding decisions.

Table 390. *FDB Manipulation Commands*

Command Syntax and Usage
<p>show mac-address-table address <MAC address></p> <p>Displays a single database entry by its MAC address. If not specified, you are prompted for the MAC address of the device. Enter the MAC address using one of the following formats:</p> <ul style="list-style-type: none">o xx:xx:xx:xx:xx:xx (such as 08:00:20:12:34:56)o xxxxxxxxxxxxxx (such as 080020123456) <p>Command mode: All</p>
<p>show mac-address-table configured-static</p> <p>Displays configured static entries in the FDB.</p> <p>Command mode: All</p>
<p>show mac-address-table interface port <port number or alias></p> <p>Displays all FDB entries for a particular port.</p> <p>Command mode: All</p>
<p>show mac-address-table multicast</p> <p>Displays all Multicast MAC entries in the FDB.</p> <p>Command mode: All</p>
<p>show mac-address-table portchannel <LAG number></p> <p>Displays all FDB entries for a particular LAG.</p> <p>Command mode: All</p>
<p>show mac-address-table private-vlan <VLAN number></p> <p>Displays all FDB entries on a single private VLAN.</p> <p>Command mode: All</p>
<p>show mac-address-table state {forward trunk unknown}</p> <p>Displays all FDB entries of a particular state.</p> <p>Command mode: All</p>
<p>show mac-address-table static</p> <p>Displays static entries in the FDB.</p> <p>Command mode: All</p>

Table 390. FDB Manipulation Commands (continued)

Command Syntax and Usage
show mac-address-table vlan <VLAN number> Displays all FDB entries on a single VLAN. Command mode: All
no mac-address-table <MAC address> <VLAN number> Removes the specified FDB entry from the selected VLAN. Command mode: Global configuration
no mac-address-table multicast {<MAC address> all} Removes static multicast FDB entries. Command mode: Global configuration
no mac-address-table static {<MAC address> all} Removes static FDB entries. Command mode: Global configuration
clear mac-address-table Clears the entire Forwarding Database from switch memory. Command mode: All except User EXEC

Debugging Commands

The Miscellaneous Debug Commands display trace buffer information about events that can be helpful in understanding switch operation. You can view the following information using the debug commands:

- Events traced by the Management Processor (MP)
- Events traced to a buffer area when a reset occurs

Note: Lenovo Enterprise Network Operating System debug commands are intended for advanced users. Use debug commands with caution as they can disrupt the operation of the switch under high load conditions. When debug is running under high load conditions, the CLI prompt may appear unresponsive. Before debugging, check the MP utilization to verify there is sufficient processing capacity available to perform the debug operation.

If the switch resets for any reason, the MP trace buffer is saved into the snap trace buffer area. The output from these commands can be interpreted by Technical Support personnel.

Table 391. *Miscellaneous Debug Commands*

Command Syntax and Usage
debug debug-flags This command sets the flags that are used for debugging purposes. Command mode: All except User EXEC
debug dumpbt Displays the backtrace log. Command mode: All except User EXEC
debug mp-snap Displays the Management Processor snap (or post-mortem) trace buffer. This buffer contains information traced at the time that a reset occurred. Command mode: All except User EXEC
debug mp-trace Displays the Management Processor trace buffer. Header information similar to the following is shown: MP trace buffer at 13:28:15 Fri May 25, 2001; mask: 0x2ffdf748 The buffer information is displayed after the header. Command mode: All except User EXEC

Table 391. *Miscellaneous Debug Commands*

Command Syntax and Usage
<p>[no] debug lacp packet {receive transmit both} port <i><port alias or numbers></i></p> <p>Enables/disables debugging for Link Aggregation Control Protocol (LACP) packets on specific ports running LACP.</p> <p>The following parameters are available:</p> <ul style="list-style-type: none"> o receive filters only LACP packets received o transmit filters only LACP packets sent o both filters LACP packets either sent or received <p>By default, LACP debugging is disabled.</p> <p>Command mode: All except User EXEC</p>
<p>[no] debug spanning-tree bpdu [receive transmit]</p> <p>Enables/disables debugging for Spanning Tree Protocol (STP) Bridge Protocol Data Unit (BPDU) frames sent or received.</p> <p>The following parameters are available:</p> <ul style="list-style-type: none"> o receive filters only BPDU frames received o transmit filters only BPDU frames sent <p>By default, STP BPDU debugging is disabled.</p> <p>Command mode: All except User EXEC</p>
<p>[no] debug spanning-tree tc</p> <p>Enables or disables the display of messages relating to STP topology changes.</p> <p>Command mode: Privileged EXEC</p>
<p>[no] debug ssh client {all state}</p> <p>Enables or disables SSH client based debug messages.</p> <ul style="list-style-type: none"> o all: Enables or disables all SSH client debug messages o state: Enables or disables SSH client state debug messages <p>Command mode: All except User EXEC</p>
<p>[no] debug ssh server {all disconnect msg packet state}</p> <p>Enables or disables SSH server based debug messages.</p> <ul style="list-style-type: none"> o all: Enables or disables all SSH server debug messages. o disconnect: Enables or disables SSH server disconnect debug messages o msg: Enables or disables SSH server type and protocol debug messages o packet: Enables or disables SSH server type, protocol and packet debug messages o state: Enables or disables SSH server state debug messages <p>Command mode: All except User EXEC</p>
<p>[no] debug tacacs-client</p> <p>Enables or disables TACACS+ client based debug messages.</p> <p>Command mode: All except User EXEC</p>

Table 391. *Miscellaneous Debug Commands*

Command Syntax and Usage
clear flash-config Deletes all flash configuration blocks. Command mode: All except User EXEC

IP Security Debugging

The following table describes the options available.

Table 392. *IP Security Debug Options*

Command Syntax and Usage
[no] debug sec all Enables or disables all IP security debug messages. Command mode: All except User EXEC
[no] debug sec crypto Enables or disables all IP security cryptographic debug messages. Command mode: All except User EXEC
[no] debug sec ike Enables or disables all IP security IKEv2 debug messages. Command mode: All except User EXEC
[no] debug sec info Displays the current security debug settings. Command mode: All except User EXEC
[no] debug sec ipsec Enables or disables all IPsec debug messages. Command mode: All except User EXEC

vLAG Debugging

The following table describes vLAG debugging commands.

Table 393. *vLAG Debugging Options*

Command Syntax and Usage
[no] debug vlag cfg Enable or disables vLAG configuration debug messages. Command mode: Privileged EXEC
[no] debug vlag fdb-database Enable or disables vLAG Forwarding Database debug messages. Command mode: Privileged EXEC
[no] debug vlag ht1hchk Enable or disables vLAG Health Check debug messages. Command mode: Privileged EXEC
[no] debug vlag isl Enable or disables vLAG ISL debug messages. Command mode: Privileged EXEC
[no] debug vlag msg Enable or disables vLAG debug messages. Command mode: Privileged EXEC
[no] debug vlag portmgr Enable or disables vLAG Port Manager debug messages. Command mode: Privileged EXEC
[no] debug vlag sm Enable or disables vLAG State Machine debug messages. Command mode: Privileged EXEC
[no] debug vlag trunk Enable or disables vLAG aggregation debug messages. Command mode: Privileged EXEC
[no] debug vlag vrrp Enable or disables vLAG VRRP debug messages. Command mode: Privileged EXEC

ARP Cache Maintenance

The following table displays ARP Cache maintenance commands.

Table 394. *Address Resolution Protocol Maintenance Commands*

Command Syntax and Usage
show ip arp Shows all ARP entries. Command mode: All except User EXEC
show ip arp find <IP address> Shows a single ARP entry by IP address. Command mode: All except User EXEC
show ip arp interface port <port number or alias> Shows ARP entries on selected ports. Command mode: All except User EXEC
show ip arp reply Shows the list of IP addresses which the switch will respond to for ARP requests. Command mode: All except User EXEC
show ip arp vlan <VLAN number> Shows ARP entries on a single VLAN. Command mode: All except User EXEC
clear arp Clears the entire ARP list from switch memory. Command mode: All except User EXEC

Note: To display all or a portion of ARP entries currently held in the switch, you can also refer to “ARP Information” on [page 97](#).

IP Route Manipulation

The following table displays IP Route maintenance commands.

Table 395. *IP Route Manipulation Commands*

Command Syntax and Usage
show ip route [all] Shows all routes. Command mode: All
show ip route address <IP address> Shows a single route by destination IP address. Command mode: All
show ip route gateway <IP address> Shows routes to a default gateway. Command mode: All
show ip route interface <IP interface> Shows routes on a single interface. Command mode: All
show ip route tag {address bgp broadcast fixed martian multicast ospf rip static} Shows routes of a single tag. For a description of IP routing tags, see Table 42 on page 95 . Command mode: All
show ip route type {broadcast direct indirect local martian multicast} Shows routes of a single type. For a description of IP routing types, see Table 41 on page 95 . Command mode: All
clear ip route Clears the route table from switch memory. Command mode: All except User EXEC

Note: To display all routes, you can also refer to [“IP Routing Information” on page 94](#).

LLDP Cache Manipulation

[Table 396](#) describes the LLDP cache manipulation commands.

Table 396. *LLDP Cache Manipulation commands*

Command Syntax and Usage
show lldp [information] Displays all LLDP information. Command mode: All
show lldp port <port alias or number> Displays Link Layer Discovery Protocol (LLDP) port information. Command mode: All
show lldp receive Displays information about the LLDP receive state machine. Command mode: All
show lldp remote-device [<1-256> detail] Displays information received from LLDP -capable devices. For more information, see page 69 . Command mode: All
show lldp transmit Displays information about the LLDP transmit state machine. Command mode: All
clear lldp Clears the LLDP cache. Command mode: All except User EXEC

IGMP Group Maintenance

Table 397 describes the IGMP group maintenance commands.

Table 397. *IGMP Multicast Group Maintenance Commands*

Command Syntax and Usage
show ip igmp groups Displays information for all multicast groups. Command mode: All
show ip igmp groups address <IP address> Displays a single IGMP multicast group by its IP address. Command mode: All
show ip igmp groups detail <IP address> Displays detailed information about a single IGMP multicast group. Command mode: All
show ip igmp groups interface port <port number or alias> Displays all IGMP multicast groups on selected ports. Command mode: All
show ip igmp groups portchannel <LAG number> Displays all IGMP multicast groups on a single LAG. Command mode: All
show ip igmp groups vlan <VLAN number> Displays all IGMP multicast groups on a single VLAN. Command mode: All
clear ip igmp groups Clears the IGMP group table. Command mode: All except User EXEC

IGMP Multicast Routers Maintenance

The following table describes the maintenance commands for IGMP multicast routers (Mrouters).

Table 398. IGMP Multicast Router Maintenance Commands

Command Syntax and Usage
show ip igmp mrouter Displays information for all Mrouters. Command mode: All
show ip igmp mrouter dynamic Displays all dynamic multicast router ports installed. Command mode: All
show ip igmp mrouter information Displays IGMP snooping information for all Mrouters. Command mode: All
show ip igmp mrouter interface port <port alias or number> Displays all multicast router ports installed on a specific port. Command mode: All
show ip igmp mrouter portchannel <LAG number> Displays all multicast router ports installed on a specific portchannel group. Command mode: All
show ip igmp mrouter static Displays all static multicast router ports installed. Command mode: All
show ip igmp mrouter vlan <VLAN number> Displays IGMP Mrouter information for a single VLAN. Command mode: All
show ip igmp relay Displays IGMP relay information. Command mode: All
show ip igmp snoop [igmpv3] Displays IGMP snooping information. The igmpv3 option displays IGMPv3 snooping information. Command mode: All
clear ip igmp mrouter Clears the IGMP Mrouter port table. Command mode: All except User EXEC

MLD Multicast Group Manipulation

Table 399 describes the Multicast Listener Discovery (MLD) manipulation options.

Table 399. *MLD Maintenance*

Command Syntax and Usage
show ipv6 mld groups Shows all MLD groups. Command mode: All
show ipv6 mld interface <interface number> Shows MLD groups on the specified interface. Command mode: All
clear ipv6 mld dynamic Clears all dynamic MLD group tables. Command mode: All except User EXEC
clear ipv6 mld groups Clears all dynamic MLD registered group tables. Command mode: All except User EXEC
clear ipv6 mld mrouter Clears all dynamic MLD multicast router group tables. Command mode: All except User EXEC

IPv6 Neighbor Discovery Cache Manipulation

Table 400 describes the IPv6 Neighbor Discovery cache manipulation commands.

Table 400. *IPv6 Neighbor Discovery cache manipulation commands*

Command Syntax and Usage
show ipv6 neighbors Shows all IPv6 Neighbor Discovery cache entries. Command mode: All
show ipv6 neighbors counters Displays IPv6 Neighbor Cache statistics. Command mode: All
show ipv6 neighbors find <IPv6 address> Shows a single IPv6 Neighbor Discovery cache entry by IP address. Command mode: All
show ipv6 neighbors interface port <port number or alias> Shows IPv6 Neighbor Discovery cache entries on a single port. Command mode: All
show ipv6 neighbors static Shows static IPv6 Neighbor Discovery cache entries. Command mode: All
show ipv6 neighbors vlan <VLAN number> Shows IPv6 Neighbor Discovery cache entries on a single VLAN. Command mode: All
clear ipv6 neighbors Clears all IPv6 Neighbor Discovery cache entries from switch memory. Command mode: All except User EXEC
clear ipv6 neighbors counters Clears all IPv6 Neighbor Cache statistics from switch memory. Command mode: All except User EXEC

IPv6 Route Maintenance

Table 401 describes the IPv6 route maintenance commands.

Table 401. *IPv6 Route Maintenance Options*

Command Syntax and Usage
show ipv6 route Shows all IPv6 routes. Command mode: All
show ipv6 route address <IPv6 address> Show a single route by destination IP address. Command mode: All
show ipv6 route gateway <IPv6 gateway number> Show routes to a single gateway. Command mode: All
show ipv6 route interface <interface number> Show routes on a single IP interface. Command mode: All
show ipv6 route static Show static IPv6 routes. Command mode: All
show ipv6 route summary Shows a summary of IPv6 route information. Command mode: All
show ipv6 route type {connected static ospf} Show routes of a single type. Command mode: All
clear ipv6 route Clears all IPv6 routes. Command mode: All except User EXEC

Stacking Maintenance

The following table describes Stacking maintenance commands.

Table 402. *Stacking Maintenance Options*

Command Syntax and Usage
<p>show logging swn <i><configured switch number (1-8)></i> [messages] [severity <i><0-7></i>] [reverse] [include exclude section begin head <i><1-2000></i> last <i><1-2000></i>}]</p> <p>Displays the current syslog settings for the specified configured switch, followed by the most recent 2000 syslog messages.</p> <ul style="list-style-type: none">o messages displays the most recent 2000 syslog messages onlyo severity displays syslog messages of the specified severity levelo reverse displays syslog messages starting with the most recent messageo displays syslog messages that match one of the following filters:<ul style="list-style-type: none">• include displays syslog messages that match the specified expression• exclude displays syslog messages that don't match the specified expression• section displays syslog messages that match the specified section• begin displays syslog messages beginning from the first message that matches the specified expression• head displays the oldest syslog messages for the specified value• last displays the most recent syslog messages for the specified value <p>Note: This command is available only on the master switch.</p> <p>Command mode: All</p>
<p>copy log swn <i><configured switch number (1-8)></i> sftp</p> <p>Saves the system log file from the specified configured switch via SFTP.</p> <p>Note: This command is available only on the master switch.</p> <p>Command mode: All</p>
<p>copy log swn <i><configured switch number (1-8)></i> tftp [address <i><hostname or server IP address></i>] [filename <i><server-filename></i>] [data-port mgt-port]</p> <p>Saves the system log file from the specified configured switch via TFTP.</p> <p>Note: This command is available only on the master switch.</p> <p>Command mode: All</p>
<p>clear logging [master backup <i><attached switch number (1-16)></i>] all]</p> <p>Clears the system log file (SYSLOG) on the current switch. You can clear the syslog from the master switch, the backup switch or any attached switch. The all option will clear the system log files from all the switches in the stack.</p> <p>Note: The optional command elements are available only on the master switch.</p> <p>Command mode: Privileged EXEC</p>

TFTP, SFTP or FTP System Dump Copy

Use these commands to put (save) the system dump to a TFTP or FTP server.

Note: If the TFTP/FTP server is running SunOS or the Solaris operating system, the specified `copy flash-dump tftp` (or `ftp`) file must exist *prior* to executing the `copy flash-dump tftp` command (or `copy flash-dump ftp`), and must be writable (set with proper permission, and not locked by any application). The contents of the specified file will be replaced with the current dump data.

To save dump information via TFTP, enter:

```
CN 4093# copy flash-dump tftp [address|data-port|extm-port|filename|  
|mgt-port] <server filename>
```

You are prompted for the TFTP server IP address or hostname, and the *filename* of the target dump file.

To save dump information via SFTP, enter:

```
CN 4093# copy flash-dump sftp [data-port|extm-port|mgt-port]<server filename>
```

You are prompted for the SFTP server IP address or hostname, your *username* and *password*, and the *filename* of the target dump file.

To save dump information via FTP, enter:

```
CN 4093# copy flash-dump ftp [data-port|extm-port|mgt-port]<server filename>
```

You are prompted for the FTP server IP address or hostname, your *username* and *password*, and the *filename* of the target dump file.

Clearing Dump Information

To clear dump information from flash memory, enter:

```
CN 4093# clear flash-dump
```

The switch clears the dump region of flash memory and displays the following message:

```
FLASH dump region cleared.
```

If the flash dump region is already clear, the switch displays the following message:

```
FLASH dump region is already clear.
```

Appendix A. Enterprise NOS System Log Messages

The CN4093 10 Gb Converged Scalable Switch (CN4093) uses the following syntax when outputting system log (syslog) messages:

<Time stamp> <IP/Hostname> <Log Label> <Thread ID>: <Message>

The following parameters are used:

- *<Timestamp>*

The time of the message event is displayed in the following format:

<month (3 characters)> <day> <hour (1-24)>:<minute>:<second>

For example: Aug 19 14:20:30

- *<IP/Hostname>*

The hostname is displayed when configured.

For example: 1.1.1.1

- *<Log Label>*

The following types of log messages are recorded: LOG_CRIT, LOG_WARNING, LOG_ALERT, LOG_ERR, LOG_NOTICE and LOG_INFO.

- *<Thread ID>*

This is the software thread that reports the log message.

For example: stg, ip, console, telnet, vrrp, system, web server, ssh, bgp

- *<Message>*: The log message

Following is a list of potential syslog messages. To keep this list as short as possible, only the *<Thread ID>* and *<Message>* are shown. The messages are sorted by *<Log Label>*.

Where the *<Thread ID>* is listed as *mgmt*, one of the following may be shown: *console, telnet, web server, or ssh*.

LOG_ALERT

Thread	LOG_ALERT Message
	Possible buffer overrun attack detected!
BGP	session with <IP address> failed (bad event:<event>)
BGP	session with <IP address> failed <reason> Reasons: <ul style="list-style-type: none"> ● Connect Retry Expire ● Holdtime Expire ● Invalid ● Keepalive Expire ● Receive KEEPALIVE ● Receive NOTIFICATION ● Receive OPEN ● Receive UPDATE ● Start ● Stop ● Transport Conn Closed ● Transport Conn Failed ● Transport Conn Open ● Transport Fatal Error
HOTLINKS	LACP trunk <trunk ID> and <trunk ID> formed with admin key <key>
IP	cannot contact default gateway <IP address>
IP	Route table full
MGMT	Maximum number of login failures (<threshold>) has been exceeded.
OSPF	Interface IP <IP address>, Interface State {Down Loopback Waiting P To P DR BackupDR DR Other}; Interface down detached
OSPF	LS Database full: likely incorrect/missing routes or failed neighbors
OSPF	Neighbor Router ID <router ID>, Neighbor State {Down Attempt Init 2 Way ExStart Exchange Loading Full Loopback Waiting P To P DR BackupDR DR Other}
OSPF	OSPF Route table full: likely incorrect/missing routes
STP	CIST new root bridge
STP	CIST topology change detected
STP	own BPDU received from port <port>
STP	Port <port>, putting port into blocking state
STP	STG <STG>, new root bridge
STP	STG <STG>, topology change detected
SYSTEM	LACP trunk <trunk ID> and <trunk ID> formed with admin key <key>

Thread	LOG_ALERT Message (continued)
VRRP	Received <x> virtual routers instead of <y>
VRRP	received errored advertisement from <IP address>
VRRP	received incorrect addresses from <IP address>
VRRP	received incorrect advertisement interval <interval> from <IP address>
VRRP	received incorrect VRRP authentication type from <IP address>
VRRP	received incorrect VRRP password from <IP address>
VRRP	VRRP : received incorrect IP addresses list from <IP address>

LOG_CRIT

Thread	LOG_CRIT Message
AUDIT	NTP: cannot contact NTP server %s
AUDIT	NTP: System clock not updated. Authentication failed
AUDIT	VRRP: received incorrect VRRP authentication from %s
SSH	can't allocate memory in load_MP_INT()
SSH	currently not enough resource for loading RSA {private public key}
SYSTEM	System memory is at <n> percent

LOG_ERR

Thread	LOG_ERR Message
CFG	Configuration file is EMPTY
CFG	Configuration is too large
CFG	Default VLAN cannot be a private-VLAN.
CFG	Error writing active config to FLASH! Configuration is too large
CFG	Error writing active config to FLASH! Unknown error
CFG	TFTP {Copy cfgRcv} attempting to redirect a previously redirected output
DCBX	Ports <port alias or number> and <port alias or number> in trunk group <trunk number> have different DCBX APP advertise settings.
DCBX	Ports <port alias or number> and <port alias or number> in trunk group <trunk number> have different DCBX APP willing settings.
DCBX	Ports <port alias or number> and <port alias or number> in trunk group <trunk number> have different DCBX PFC advertise settings.
DCBX	Ports <port alias or number> and <port alias or number> in trunk group <trunk number> have different DCBX PFC willing settings.
DCBX	Ports <port alias or number> and <port alias or number> in trunk group <trunk number> have different DCBX PG advertise settings.
DCBX	Ports <port alias or number> and <port alias or number> in trunk group <trunk number> have different DCBX PG willing settings.
DCBX	Ports <port alias or number> and <port alias or number> in trunk group <trunk number> have different DCBX state settings.
MGMT	Apply is issued by another user. Try later
MGMT	Critical Error. Failed to add Interface <interface>
MGMT	Diff is issued by another user. Try later
MGMT	Dump is issued by another user. Try later
MGMT	Error: Apply not done
MGMT	Error: Save not done.
MGMT	Firmware download failed (insufficient memory
MGMT	Revert Apply is issued by another user. Try later
MGMT	Revert is issued by another user. Try later.
MGMT	Save is issued by another user. Try later

Thread	LOG_ERR Message (continued)
NTP	unable to listen to NTP port
PFC	Ports <port alias or number> and <port alias or number> in trunk group <trunk number> have different PFC settings.
PFC	Ports <port alias or number> and <port alias or number> in trunk group <trunk number> have different PFC settings for priority <priority number>.
STP	Cannot set "{Hello Time Max Age Forward Delay Aging}" (Switch is in MSTP mode)
SYSTEM	Error: BOOTP Offer was found incompatible with the other IP interfaces
SYSTEM	I2C device <ID> <description> set to access state <state> [from CLI]
SYSTEM	Not enough memory!

LOG_INFO

Thread	LOG_INFO Message
	System log cleared by user <username>.
	System log cleared via SNMP.
AUDIT	Audit log has been cleared by %s
AUDIT	Class of service for user %s is changed
AUDIT	HTTPS has been disabled
AUDIT	HTTPS has been enabled
AUDIT	IKEv2 has been changed on this switch. E.g. DH Group 12 change to DH Group 24
AUDIT	IPsec manual policy X has been applied to interface XX. Security mode:[ESP/AH] Integrity algorithm:[xx] Encryption algorithm:[xx] Protocol mode: [tunnel/transport]
AUDIT	IPsec manual policy X has been detached from interface XX
AUDIT	LDAP has been disabled
AUDIT	LDAP has been enabled
AUDIT	Password for %s changed by %, notifying admin to save
AUDIT	RADIUS has been disabled
AUDIT	RADIUS has been enabled
AUDIT	SSH server has been disabled
AUDIT	SSH server has been enabled
AUDIT	Successful user login(logout)
AUDIT	TACACS+ has been disabled
AUDIT	TACACS+ has been enabled
AUDIT	Test event initiated for snmpv3 account and path verify
AUDIT	User %s is created
HOTLINKS	"Error" is set to "{Active Standby}"
HOTLINKS	"Learning" is set to "{Active Standby}"
HOTLINKS	"None" is set to "{Active Standby}"
HOTLINKS	"Side Max" is set to "{Active Standby}"
HOTLINKS	has no "{Side Max None Learning Error}" interface

Thread	LOG_INFO Message (continued)
MGMT	/* Config changes at <time> by <username> */ <config diff> /* Done */
MGMT	<username> ejected from BBI
MGMT	<username>(<user type>) {logout ejected idle timeout connection closed} from {Console Telnet/SSH}
MGMT	<username>(<user type>) login {on Console from host <IP address>}
MGMT	boot kernel download completed. Now writing to flash.
MGMT	boot kernel downloaded {from host <hostname> via browser}, filename too long to be displayed, software version <version>
MGMT	boot kernel downloaded from host <hostname>, file '<filename>', software version <version>
MGMT	Can't downgrade to image with only single flash support
MGMT	Could not revert unsaved changes
MGMT	Download already currently in progress. Try again later via {Browser BBI}
MGMT	Error in setting the new config
MGMT	Failed to allocate buffer for diff track.
MGMT	Firmware download failed to {invalid image image1 image2 boot kernel undefined SP boot kernel}
MGMT	Firmware downloaded to {invalid image image1 image2 boot kernel undefined SP boot kernel}.
MGMT	Flash dump successfully tftp'd to <hostname>:<filename>
MGMT	FLASH ERROR - invalid address used
MGMT	Flash Read Error. Failed to read flash into holding structure. Quitting
MGMT	Flash Write Error
MGMT	Flash Write Error. Failed to allocate buffer. Quitting
MGMT	Flash Write Error. Trying again
MGMT	image1 2 download completed. Now writing to flash.
MGMT	image1 2 downloaded {from host <hostname> via browser}, filename too long to be displayed, software version <version>
MGMT	image1 2 downloaded from host <hostname>, file '<filename>', software version <version>
MGMT	Incorrect image being loaded
MGMT	Invalid diff track address. Continuing with apply()

Thread	LOG_INFO Message (continued)
MGMT	Invalid image being loaded for this switch type
MGMT	invalid image download completed. Now writing to flash.
MGMT	invalid image downloaded {from host <hostname> via browser}, filename too long to be displayed, software version <version>
MGMT	invalid image downloaded from host <hostname>, file '<filename>', software version <version>
MGMT	New config set
MGMT	new configuration applied [from BBI EM SCP SNMP Stacking Master]
MGMT	new configuration saved from {BBI ISCLI SNMP}
MGMT	scp <username>(<user type>) {logout ejected idle timeout connection closed} from {Console Telnet/SSH}
MGMT	scp <username>(<user type>) login {on Console from host <IP address>}
MGMT	SP boot kernel download completed. Now writing to flash.
MGMT	SP boot kernel downloaded {from host <hostname> via browser}, filename too long to be displayed, software version <version>
MGMT	SP boot kernel downloaded from host <hostname>, file '<filename>', software version <version>
MGMT	Starting Firmware download for {invalid image image1 image2 boot kernel undefined SP boot kernel}.
MGMT	Static FDB entry on disabled VLAN
MGMT	Tech support dump failed
MGMT	Tech support dump successfully tftp'd to <hostname>:<filename>
MGMT	Two Phase Apply Failed in Creating Backup Config Block.
MGMT	undefined download completed. Now writing to flash.
MGMT	undefined downloaded {from host <hostname> via browser}, filename too long to be displayed, software version <version>
MGMT	undefined downloaded from host <hostname>, file '<filename>', software version <version>
MGMT	unsaved changes reverted [from BBI from SNMP]
MGMT	Unsupported GBIC {accepted refused}
MGMT	user {SNMP user <username>} ejected from BBI
MGMT	Watchdog has been {enabled disabled}
MGMT	Watchdog timeout interval is now <seconds> seconds)

Thread	LOG_INFO Message (continued)
MGMT	Wrong config file type
SSH	<username><user type> {logout ejected idle timeout connection closed} from {Console Telnet/SSH}
SSH	<username><user type> login {on Console from host <IP address>}
SSH	Error in setting the new config
SSH	New config set
SSH	scp <username><user type> {logout ejected idle timeout connection closed} from {Console Telnet/SSH}
SSH	scp <username><user type> login {on Console from host <IP address>}
SSH	server key autogen {starts completes}
SSH	Wrong config file type
SYSTEM	booted version <version> from Flash image <image>, {active backup factory} config block

LOG_NOTICE

Thread	LOG_NOTICE Message
	ARP table is full.
	Current config successfully tftp'd <filename> from <hostname>
	Current config successfully tftp'd to <hostname>: <filename>
	Port <port> mode is changed to full duplex for 1000 Mbps operation.
AUDIT	DHCP: Offer was found invalid by ip configuration
CONSOLE	RADIUS: authentication timeout. Retrying...
CONSOLE	RADIUS: failed to contact primary secondary server
CONSOLE	RADIUS: No configured RADIUS server
CONSOLE	RADIUS: trying alternate server...
HOTLINKS	"Error" is set to "Standby Active"
HOTLINKS	"Learning" is set to "Standby Active"
HOTLINKS	"None" is set to "Standby Active"
HOTLINKS	"Side Max" is set to "Standby Active"
HOTLINKS	has no "{Side Max None Learning Error}" interface
MGMT	<username> automatically logged out from BBI because changing of authentication type
MGMT	<username>(<user type>) {logout ejected idle timeout connection closed} from {BBI Console Telnet/SSH}
MGMT	<username>(<user type>) login {on Console from host <IP address> from BBI}
MGMT	Authentication failed for backdoor.
MGMT	Authentication failed for backdoor. Password incorrect!
MGMT	Authentication failed for backdoor. Telnet disabled!
MGMT	boot config block changed
MGMT	boot image changed
MGMT	boot mode changed
MGMT	enable password changed
MGMT	Error in setting the new config
MGMT	Failed login attempt via {BBI TELNET} from host <IP address>.

Thread	LOG_NOTICE Message (continued)
MGMT	Failed login attempt via the CONSOLE
MGMT	FLASH Dump cleared from BBI
MGMT	New config set
MGMT	packet-buffer statistics cleared
MGMT	PANIC command from CLI
MGMT	PASSWORD FIX-UP MODE IN USE
MGMT	Password for {oper operator} changed by {SNMP user <username>}, notifying admin to save.
MGMT	QSFP: Port <port> changed to {10G 40G}, from {BBI SNMP CLI}.
MGMT	RADIUS server timeouts
MGMT	RADIUS: authentication timeout. Retrying...
MGMT	RADIUS: failed to contact {primary secondary} server
MGMT	RADIUS: No configured RADIUS server
MGMT	RADIUS: trying alternate server...
MGMT	scp <username>(<user type>) {logout ejected idle timeout connection closed} from {Console Telnet/SSH}
MGMT	scp <username>(<user type>) login {on Console from host <IP address>}
MGMT	second syslog host changed to {this host <IP address>}
MGMT	selectable [boot] mode changed
MGMT	STP BPDU statistics cleared
MGMT	switch reset from CLI
MGMT	syslog host changed to {this host <IP address>}
MGMT	System clock set to <time>.
MGMT	System date set to <date>.
MGMT	Terminating BBI connection from host <IP address>
MGMT	User <username> deleted by {SNMP user <username>}.
MGMT	User <username> is {deleted disabled} and will be ejected by {SNMP user <username>}
MGMT	User {oper operator} is disabled and will be ejected by {SNMP user <username>}.
MGMT	Wrong config file type
NTP	System clock updated

Thread	LOG_NOTICE Message (continued)
OSPF	Neighbor Router ID <router ID>, Neighbor State {Down Loopback Waiting P To P DR BackupDR DR Other Attempt Init 2 Way ExStart Exchange Loading Full}
SERVER	link {down up} on port <port>
SSH	(remote disconnect msg)
SSH	<username><user type> {logout ejected idle timeout connection closed} from {Console Telnet/SSH}
SSH	<username><user type> login {on Console from host <IP address>}
SSH	Error in setting the new config
SSH	Failed login attempt via SSH
SSH	New config set
SSH	scp <username><user type> {logout ejected idle timeout connection closed} from {Console Telnet/SSH}
SSH	scp <username><user type> login {on Console from host <IP address>}
SSH	Wrong config file type
SYSTEM	Change fiber GIG port <port> mode to full duplex
SYSTEM	Change fiber GIG port <port> speed to 1000
SYSTEM	Changed ARP entry for IP <IP address> to: MAC <MAC address>, Port <port>, VLAN <VLAN>
SYSTEM	Enable auto negotiation for copper GIG port: <port>
SYSTEM	I2C device <ID> <description> set to access state <state> [from CLI]
SYSTEM	Port <port> disabled
SYSTEM	Port <port> disabled due to reason code <reason code>

Thread	LOG_NOTICE Message (continued)
SYSTEM	rebooted (<reason>)[, administrator logged in] Reason: <ul style="list-style-type: none"> ● Boot watchdog reset ● console PANIC command ● console RESET KEY ● hard reset by SNMP ● hard reset by WEB-UI ● hard reset from console ● hard reset from Telnet ● low memory ● MM Cycled Power Domain ● power cycle ● Reset Button was pushed ● reset by SNMP ● reset by WEB-UI ● reset from console ● reset from EM ● reset from Telnet/SSH ● scheduled reboot ● SMS-64 found an over-voltage ● SMS-64 found an under-voltage ● software ASSERT ● software PANIC ● software VERIFY ● Telnet PANIC command ● unknown reason ● watchdog timer
SYSTEM	Received BOOTP Offer: IP: <IP address>, Mask: <netmask>, Broadcast <IP address>, GW: <IP address>
SYSTEM	Watchdog threshold changed from <old value> to <new value> seconds
SYSTEM	Watchdog timer has been enabled
TEAMING	error, action is undefined
TEAMING	is down, but teardown is blocked
TEAMING	is down, control ports are auto disabled
TEAMING	is up, control ports are auto controlled
VLAN	Default VLAN can not be deleted
VRRP	virtual router <IP address> is now {BACKUP MASTER}
WEB	<username> ejected from BBI
WEB	RSA host key is being saved to Flash ROM, please don't reboot the box immediately.

LOG_WARNING

Thread	LOG_WARNING Message
AUDIT	BGP: authentication receive error from %s
AUDIT	BGP: change neighbor %d password
AUDIT	BGP: delete BGP neighbor %d password
AUDIT	BGP: Password authentication fail
AUDIT	BGP: peer ttl set to %s
AUDIT	BGP: ttl-security on peer %s ignored packet
AUDIT	DHCP: disable
AUDIT	DHCP: enable
AUDIT	DHCP: Enabling DHCP will overwrite IP interface %d and IP gateway %d's configurations.
AUDIT	DHCP: on External Management Interface disabled with I2C Control Register
AUDIT	DHCP: on External Management Interface enabled with I2C Control Register
AUDIT	DHCP: Use factory default while requesting for a new DHCP offer.
AUDIT	Failed login attempt via the %s
AUDIT	IP: ARP table is full.
AUDIT	IP: Changed ARP entry for IP %s to:\tMAC %02x:%02x:%02x:%02x:%02x:%02x
AUDIT	IP: gateway %s is down
AUDIT	IP: gateway %s is up
AUDIT	IP: New Management Gateway %s configured
AUDIT	IP: New Management IP Address %s configured
AUDIT	IP: Route table full
AUDIT	LDAP security does not meet security strict mode requirements
AUDIT	OSPF: area %s authentication type is %s
AUDIT	OSPF: delete OSPF authentication key
AUDIT	OSPF: received incorrect authentication
AUDIT	OSPF: Route table full
AUDIT	OSPF: set OSPF authentication key %d

Thread	LOG_WARNING Message (continued)
AUDIT	OSPF: use OSPF authentication key
AUDIT	OSPFv3: authentication enable
AUDIT	OSPFv3: authentication reset to default
AUDIT	OSPFv3: authentication spi %d auth %s
AUDIT	OSPFv3: disable OSPFv3 authentication spi %d
AUDIT	OSPFv3: disable OSPFv3 encryption spi %d
AUDIT	OSPFv3: encryption enable
AUDIT	OSPFv3: encryption reset to default
AUDIT	OSPFv3: encryption spi %d esp auth %s encrypt %s
AUDIT	RADIUS security does not meet security strict mode requirements
AUDIT	RIP: change authentication key
AUDIT	RIP: delete RIP authentication
AUDIT	RIP: received incorrect authentication
AUDIT	TACACS+ security does not meet security strict mode requirements
CFG	Authentication should be disabled to run RIPv2 in RIPv1 compatibility mode on interface <interface>.
CFG	Multicast should be disabled to run RIPv2 in RIPv1 compatibility mode on interface <interface>.
HOTLINKS	"Error" is set to "Standby Active"
HOTLINKS	"Learning" is set to "Standby Active"
HOTLINKS	"None" is set to "Standby Active"
HOTLINKS	"Side Max" is set to "Standby Active"
HOTLINKS	has no "{Side Max None Learning Error}" interface
MGMT	The software demo license for Upgrade2 will expire in 10 days. The switch will automatically reset to the factory configuration after the license expires. Please backup your configuration or enter a valid license key so the configuration will not be lost.
NTP	cannot contact [primary secondary] NTP server <IP address>
SYSTEM	I2C device <ID> <description> set to access state <state> [from CLI]
TEAMING	error, action is undefined
TEAMING	is down, but teardown is blocked

Thread	LOG_WARNING Message (continued)
TEAMING	is down, control ports are auto disabled
TEAMING	is up, control ports are auto controlled

Appendix B. Getting help and technical assistance

If you need help, service, or technical assistance or just want more information about Lenovo products, you will find a wide variety of sources available from Lenovo to assist you.

Use this information to obtain additional information about Lenovo and Lenovo products, and determine what to do if you experience a problem with your Lenovo system or optional device.

Note: This section includes references to IBM web sites and information about obtaining service. IBM is Lenovo's preferred service provider for the System x, Flex System, and NeXtScale System products.

Before you call, make sure that you have taken these steps to try to solve the problem yourself.

If you believe that you require warranty service for your Lenovo product, the service technicians will be able to assist you more efficiently if you prepare before you call.

- Check all cables to make sure that they are connected.
- Check the power switches to make sure that the system and any optional devices are turned on.
- Check for updated software, firmware, and operating-system device drivers for your Lenovo product. The Lenovo Warranty terms and conditions state that you, the owner of the Lenovo product, are responsible for maintaining and updating all software and firmware for the product (unless it is covered by an additional maintenance contract). Your service technician will request that you upgrade your software and firmware if the problem has a documented solution within a software upgrade.
- If you have installed new hardware or software in your environment, check the [Lenovo ServerProven website](#) to make sure that the hardware and software is supported by your product.
- Go to the [Lenovo Support portal](#) to check for information to help you solve the problem.
- Gather the following information to provide to the service technician. This data will help the service technician quickly provide a solution to your problem and ensure that you receive the level of service for which you might have contracted.
 - Hardware and Software Maintenance agreement contract numbers, if applicable
 - Machine type number (Lenovo 4-digit machine identifier)
 - Model number
 - Serial number
 - Current system UEFI and firmware levels
 - Other pertinent information such as error messages and logs

- Start the process of determining a solution to your problem by making the pertinent information available to the service technicians. The IBM service technicians can start working on your solution as soon as you have completed and submitted an Electronic Service Request.

You can solve many problems without outside assistance by following the troubleshooting procedures that Lenovo provides in the online help or in the Lenovo product documentation. The Lenovo product documentation also describes the diagnostic tests that you can perform. The documentation for most systems, operating systems, and programs contains troubleshooting procedures and explanations of error messages and error codes. If you suspect a software problem, see the documentation for the operating system or program.

Appendix C. Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area.

Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Lenovo (United States), Inc.
1009 Think Place - Building One
Morrisville, NC 27560
U.S.A.

Attention: Lenovo Director of Licensing

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties.

Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Trademarks

Lenovo, the Lenovo logo, Flex System, System x, NeXtScale System, and X-Architecture are trademarks of Lenovo in the United States, other countries, or both.

Intel and Intel Xeon are trademarks of Intel Corporation in the United States, other countries, or both.

Internet Explorer, Microsoft, and Windows are trademarks of the Microsoft group of companies.

Linux is a registered trademark of Linus Torvalds.

Other company, product, or service names may be trademarks or service marks of others.

Important Notes

Processor speed indicates the internal clock speed of the microprocessor; other factors also affect application performance.

CD or DVD drive speed is the variable read rate. Actual speeds vary and are often less than the possible maximum.

When referring to processor storage, real and virtual storage, or channel volume, KB stands for 1 024 bytes, MB stands for 1 048 576 bytes, and GB stands for 1 073 741 824 bytes.

When referring to hard disk drive capacity or communications volume, MB stands for 1 000 000 bytes, and GB stands for 1 000 000 000 bytes. Total user-accessible capacity can vary depending on operating environments.

Maximum internal hard disk drive capacities assume the replacement of any standard hard disk drives and population of all hard-disk-drive bays with the largest currently supported drives that are available from Lenovo.

Maximum memory might require replacement of the standard memory with an optional memory module.

Each solid-state memory cell has an intrinsic, finite number of write cycles that the cell can incur. Therefore, a solid-state device has a maximum number of write cycles that it can be subjected to, expressed as total bytes written (TBW). A device that has exceeded this limit might fail to respond to system-generated commands or might be incapable of being written to. Lenovo is not responsible for replacement of a device that has exceeded its maximum guaranteed number of program/erase cycles, as documented in the Official Published Specifications for the device.

Lenovo makes no representations or warranties with respect to non-Lenovo products. Support (if any) for the non-Lenovo products is provided by the third party, not Lenovo.

Some software might differ from its retail version (if available) and might not include user manuals or all program functionality.

Recycling Information

Lenovo encourages owners of information technology (IT) equipment to responsibly recycle their equipment when it is no longer needed. Lenovo offers a variety of programs and services to assist equipment owners in recycling their IT products. For information on recycling Lenovo products, go to:

<http://www.lenovo.com/recycling>

Particulate Contamination

Attention: Airborne particulates (including metal flakes or particles) and reactive gases acting alone or in combination with other environmental factors such as humidity or temperature might pose a risk to the device that is described in this document.

Risks that are posed by the presence of excessive particulate levels or concentrations of harmful gases include damage that might cause the device to malfunction or cease functioning altogether. This specification sets forth limits for particulates and gases that are intended to avoid such damage. The limits must not be viewed or used as definitive limits, because numerous other factors, such as temperature or moisture content of the air, can influence the impact of particulates or environmental corrosives and gaseous contaminant transfer. In the absence of specific limits that are set forth in this document, you must implement practices that maintain particulate and gas levels that are consistent with the protection of human health and safety. If Lenovo determines that the levels of particulates or gases in your environment have caused damage to the device, Lenovo may condition provision of repair or replacement of devices or parts on implementation of appropriate remedial measures to mitigate such environmental contamination. Implementation of such remedial measures is a customer responsibility.

Contaminant	Limits
Particulate	<ul style="list-style-type: none"> The room air must be continuously filtered with 40% atmospheric dust spot efficiency (MERV 9) according to ASHRAE Standard 52.2¹. Air that enters a data center must be filtered to 99.97% efficiency or greater, using high-efficiency particulate air (HEPA) filters that meet MIL-STD-282. The deliquescent relative humidity of the particulate contamination must be more than 60%². The room must be free of conductive contamination such as zinc whiskers.
Gaseous	<ul style="list-style-type: none"> Copper: Class G1 as per ANSI/ISA 71.04-1985³ Silver: Corrosion rate of less than 300 Å in 30 days

¹ ASHRAE 52.2-2008 - *Method of Testing General Ventilation Air-Cleaning Devices for Removal Efficiency by Particle Size*. Atlanta: American Society of Heating, Refrigerating and Air-Conditioning Engineers, Inc.

² The deliquescent relative humidity of particulate contamination is the relative humidity at which the dust absorbs enough water to become wet and promote ionic conduction.

³ ANSI/ISA-71.04-1985. *Environmental conditions for process measurement and control systems: Airborne contaminants*. Instrument Society of America, Research Triangle Park, North Carolina, U.S.A.

Telecommunication Regulatory Statement

This product may not be certified in your country for connection by any means whatsoever to interfaces of public telecommunications networks. Further certification may be required by law prior to making any such connection. Contact a Lenovo representative or reseller for any questions.

Electronic Emission Notices

When you attach a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices that are supplied with the monitor.

Federal Communications Commission (FCC) Statement

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used to meet FCC emission limits. Lenovo is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that might cause undesired operation.

Industry Canada Class A Emission Compliance Statement

This Class A digital apparatus complies with Canadian ICES-003.

Avis de Conformité à la Réglementation d'Industrie Canada

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.


Australia and New Zealand Class A Statement

Attention: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

European Union - Compliance to the Electromagnetic Compatibility Directive

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC (until April 19, 2016) and EU Council Directive 2014/30/EU (from April 20, 2016) on the approximation of the laws of the Member States relating to electromagnetic compatibility. Lenovo cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the installation of option cards from other manufacturers.

This product has been tested and found to comply with the limits for Class A equipment according to European Standards harmonized in the Directives in compliance. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.

 Lenovo, Einsteinova 21, 851 01 Bratislava, Slovakia

Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Germany Class A Statement

Deutschsprachiger EU Hinweis:

Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2014/30/EU (früher 2004/108/EC) zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der Klasse A der Norm gemäß Richtlinie.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der Lenovo empfohlene Kabel angeschlossen werden. Lenovo übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung der Lenovo verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung der Lenovo gesteckt/eingebaut werden.

Deutschland:

Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Betriebsmitteln

Dieses Produkt entspricht dem „Gesetz über die elektromagnetische Verträglichkeit von Betriebsmitteln“ EMVG (früher „Gesetz über die elektromagnetische Verträglichkeit von Geräten“). Dies ist die Umsetzung der EU-Richtlinie 2014/30/EU (früher 2004/108/EC) in der Bundesrepublik Deutschland.

Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Betriebsmitteln, EMVG vom 20. Juli 2007 (früher Gesetz über die elektromagnetische Verträglichkeit von Geräten), bzw. der EMV EU Richtlinie 2014/30/EU (früher 2004/108/EC), für Geräte der Klasse A.

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen. Verantwortlich für die Konformitätserklärung nach Paragraph 5 des EMVG ist die Lenovo (Deutschland) GmbH, Meitnerstr. 9, D-70563 Stuttgart.

Informationen in Hinsicht EMVG Paragraph 4 Abs. (1) 4:

Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse A.

Nach der EN 55022: „Dies ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen durchzuführen und dafür aufzukommen.“

Nach dem EMVG: „Geräte dürfen an Orten, für die sie nicht ausreichend entstört sind, nur mit besonderer Genehmigung des Bundesministers für Post und Telekommunikation oder des Bundesamtes für Post und Telekommunikation betrieben werden. Die Genehmigung wird erteilt, wenn keine elektromagnetischen Störungen zu erwarten sind.“ (Auszug aus dem EMVG, Paragraph 3, Abs. 4). Dieses Genehmigungsverfahren ist nach Paragraph 9 EMVG in Verbindung mit der entsprechenden Kostenverordnung (Amtsblatt 14/93) kostenpflichtig.

Anmerkung: Um die Einhaltung des EMVG sicherzustellen sind die Geräte, wie in den Handbüchern angegeben, zu installieren und zu betreiben.

Japan VCCI Class A Statement

この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A

This is a Class A product based on the standard of the Voluntary Control Council for Interference (VCCI). If this equipment is used in a domestic environment, radio interference may occur, in which case the user may be required to take corrective actions.

Japan Electronics and Information Technology Industries Association (JEITA) Statement

高調波ガイドライン適合品

Japan Electronics and Information Technology Industries Association (JEITA)
Confirmed Harmonics Guidelines (products less than or equal to 20 A per phase)

高調波ガイドライン準用品

Japan Electronics and Information Technology Industries Association (JEITA)
Confirmed Harmonics Guidelines with Modifications (products greater than 20 A per phase).

Korea Communications Commission (KCC) Statement

이 기기는 업무용(A급)으로 전자파적합기기로
서 판매자 또는 사용자는 이 점을 주의하시기
바라며, 가정외의 지역에서 사용하는 것을 목
적으로 합니다.

This is electromagnetic wave compatibility equipment for business (Type A).
Sellers and users need to pay attention to it. This is for any areas other than home.

Russia Electromagnetic Interference (EMI) Class A Statement

ВНИМАНИЕ! Настоящее изделие относится к классу А.
В жилых помещениях оно может создавать радиопомехи, для
снижения которых необходимы дополнительные меры

People's Republic of China Class A electronic emission Statement

中华人民共和国“A类”警告声明

声明

此为A级产品，在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对其干扰采取切实可行的措施。

Taiwan Class A compliance Statement

警告使用者：
這是甲類的資訊產品，在
居住的環境中使用時，可
能會造成射頻干擾，在這種
情況下，使用者會被要求
採取某些適當的對策。

Index

Numerics

- 802.1p
 - and ETS 535
 - configuration 363, 388
 - DCBX PFC information 184
 - information 139, 140, 141, 187
 - PFC configuration 537
 - Priority Group mapping 187
 - priority level 347, 370, 381
 - IPv6 375
 - priority value 390
 - 802.1X
 - configuration 395
 - guest VLAN 397
 - information 57, 75
 - operations-level commands 577
 - port configuration 398
- ## A
- abbreviating commands (CLI) 28
 - access control
 - switch 338
 - user 339
 - Access Control List (see ACL) 142
 - ACL
 - add group 356
 - and VMAP 381
 - configuration 369
 - Ethernet matching criteria 371
 - filtering criteria 370
 - groups 369
 - information 142, 143
 - IPv4 matching criteria 372
 - IPv6 375
 - list of FIPS ACLs 189, 190
 - management ACL filtering 379
 - metering configuration 387
 - Packet Format matching criteria 374
 - port ACL configuration 356
 - port configuration commands 356
 - QoS parameters 356
 - re-marking 388
 - re-marking (IPv6) 378, 390
 - remove group 356
 - statistics 287, 288
 - TCP matching criteria 373
 - UDP matching criteria 373
 - active
 - configuration block 301, 602
 - IP interface 519
 - switch configuration
 - ptcfg 573
 - restoring 574

- saving and loading 574
 - VLAN port 519
- addr (IP route tag) 95
- administrator account 29
- aging (STP information) 83
- asnum (attached switch number) 362
- assistance, getting 649
- Australia Class A statement 658
- autonomous system filter path
 - action 458
 - as 458
 - aspath 458

B

- backup configuration block 602
- bandwidth allocation, Priority Groups 535
- BGP 95
 - aggregation configuration 488
 - configuration 485
 - eBGP 485
 - filters, aggregation configuration 488
 - iBGP 485
 - in route 487
 - IP address, border router 486
 - keep-alive time 488
 - operations-level commands 579
 - peer 486
 - peer configuration 486
 - redistribution configuration 490
 - remote autonomous system 487
 - router hops 487
- bgp (IP route tag) 95
- boot
 - options 589 to ??
- Boot Management menu 604
- BOOTP
 - configuration 511
 - relay broadcast domain configuration 511
- Bootstrap Protocol (see BOOTP) 511
- Border Gateway Protocol (see BGP) 23
- bridge priority 80, 84
- Bridge Protocol Data Unit (BPDU) 81, 84, 85, 408
- Bridge Spanning-Tree parameters 409
- broadcast (IP route tag) 96
- broadcast (IP route type) 95

C

- Canada Class A electronic emission statement 658
- CEE
 - configuration 534
 - DCBX 620
 - information 179
- China Class A electronic emission statement 661

- Cisco Ether Channel 418
- CIST information 86
- Class A electronic emission notice 658
- clear
 - ACL statistics 287
 - all defined management networks 338
 - all IPv4 statistics 234, 238
 - all IPv6 statistics 235, 243
 - ARP statistics 234
 - DNS statistics 234
 - dump information 630
 - FCoE statistics 289
 - Hot Links statistics 224
 - ICMP statistics 234
 - IGMP statistics 234
 - LACP statistics 223
 - MLD statistics 256
 - OSPF statistics 234
 - RIP statistics 234
 - static route 448
 - statistics for specific ports 202, 224
 - statistics on a specific trunk group 222
 - TCP statistics 235
 - UDP statistics 235
 - VRRP statistics 235
- commands
 - abbreviations 28
 - conventions used in this manual 18
 - help with 26
 - shortcuts 28
 - tab completion 28
- configuration
 - 802.1X 395
 - commands 299 to 574
 - default gateway interval, for health checks 446
 - default gateway IP address 446
 - dump command 572
 - failover 429
 - flow control 353, 359
 - IGMP 493
 - IP static route 448
 - port link speed 353
 - port mirroring 392
 - port trunking 418
 - RIP 459
 - RIP commands 459
 - save changes 301
 - SNMP 324
 - switch IP address 444
 - TACACS+ 315
 - VLAN default (PVID) 350
 - VLAN IP interface 445
 - VLAN tagging 349
 - VMware 558
 - VRRP 512

- configuration block
 - active 602
 - backup 602
 - factory 602
 - selection 602
- contamination, particulate and gaseous 656
- Control Plane Protection, configuration 365
- Converged Enhanced Ethernet (see CEE) 179
- COPP, configuration 365
- COS queue information 140
- cost
 - STP information 83
- cost (STP information) 80, 86
- CPU use
 - history 286
 - statistics 284, 286

D

- daylight saving time 303
- DCB Capability Exchange Protocol (see DCBX) 180
- DCBX
 - Application Protocol information 185
 - configuration 539
 - control information 181
 - debugging 620
 - ETS information 183
 - feature information 182
 - information 180
 - PFC information 184
- debugging 611
- default gateway
 - information 92
 - interval, for health checks 446
 - IPv6 526
- default password 29
- delete
 - ACL statistics 287
 - all defined management networks 338
 - all IPv4 statistics 234, 238
 - all IPv6 statistics 235, 243
 - ARP statistics 234
 - DNS statistics 234
 - dump information 630
 - Hot Links statistics 224
 - ICMP statistics 234
 - IGMP statistics 234
 - LACP statistics 223
 - MLD statistics 256
 - OSPF statistics 234
 - RIP statistics 234
 - static route 448
 - statistics for specific ports 202, 224
 - statistics on a specific trunk group 222
 - TCP statistics 235
 - UDP statistics 235
 - VRRP statistics 235

- DHCP
 - and BOOTP commands 511
 - and Netboot configuration 594
 - packets logged 279
 - Snooping 533
- DiffServ Code Point (see DSCP) 364
- direct (IP route type) 95
- directed broadcasts 453
- disconnect idle timeout 30
- downloading software 599
- DSCP
 - configuration 364
 - disable for in-profile traffic 389
 - re-mark for in-profile traffic 391
 - re-mark for out-profile traffic 391
 - re-marking configuration 347, 364
 - set value of in-profile packets 389
 - set value of out-profile packets 389
- dump
 - configuration command 572
 - maintenance 611
- duplex mode
 - interface status 31
 - link status 148
- Dynamic Host Configuration Protocol (see DHCP) 511
- dynamic routes 621

E

- ECMP route information 116
- ECN (Explicit Congestion Notification) 367
- Edge Virtual Bridging, configuration 566
- electronic emission Class A notice 658
- Enhanced Transmission Selection (see ETS) 187
- ENode 546
- Error Disable and Recovery
 - port 352
 - system 306
- EtherChannel, and port trunking 418
- ETS
 - configuration 535
 - information 180, 183, 187
 - Priority Group configuration 535
- European Union EMC Directive conformance statement 659
- EVB
 - configuration 566
 - configuration mode 25
 - information 163
- Explicit Congestion Notification (ECN) 367

F

- factory configuration block 602

- failover
 - auto monitor configuration 430
 - configuration 429
 - Layer 2 configuration 429
 - Layer 2 information 58, 64
 - manual monitor port configuration 431
 - trigger configuration 430
 - uplink, for vNIC group 560
- FCC Class A notice 658
- FCC, Class A 658
- FCF port 546
- FCoE
 - configuration 545
 - FIPS port configuration 546
 - forwarding 546
 - information 189
 - Initialization Protocol (see FIP) 546
 - statistics 289
- FDB
 - configuration 410
 - configuring static entries 413
 - hot links update 433
 - information 60
 - learning 348
 - maintenance 611, 613
 - troubleshooting 611, 613
- Fiber Channel Initialization Protocol (see FIP) 189
- Fibre Channel
 - configuration 25, 540
 - information 191
- Fibre Channel over Ethernet (see FCoE) 189
- FIP
 - Snooping (see FIPS) 546
 - snooping information 189
- FIPS
 - list of ACLs 189
 - port configuration 546
- fixed (IP route tag) 95
- flag field 98
- flow control
 - configuring 353, 359
 - configuring for port link 353
 - information 31, 148
 - Ingress Back Pressure 213
 - pause packets 211, 212
 - priority (see PFC) 184
- Forwarding Database (see FDB) 60
- forwarding state
 - (FWD) 80, 84, 85
- forwarding state (FWD) 61, 88
- FWD (port state) 61
- fwd (STP bridge option) 408
- FwdDel (forward delay), bridge port 80, 83, 84, 85

G

- gaseous contamination 656
- Germany Class A statement 659

getting help 649
gtcfg (TFTP load command) 574

H

health checks
 default gateway interval, retries 446
 retry, number of failed health checks 446
hello (STP information) 81, 83, 84, 85
help
 online 26
 sources of 649
help, getting 649
Hot Links configuration 433
hot-standby failover 517
http
 controlling access 336
 port 336
HTTPS 342

I

ICMP statistics 249
idle timeout, setting 30
IEEE standards
 802.1p 363
 802.1X 75
IGMP
 advanced parameters 500
 configuration 493
 filter definition commands 497
 filtering configuration 496
 filtering port configuration 497
 group information 120
 group maintenance 623
 mrouter maintenance commands 624
 multicast group information 117
 multicast
 group information 117
 multicast router information 121
 relay configuration 496
 relay mrouter configuration 498
 snooping configuration 494
 static mrouter configuration 499
 statistics 254
IGMPv3
 configuration 495
 information 120
 snooping information 624
 statistics 254

IKEv2
 configuration 503
 configuration mode 24
 debugging 618
 identification configuration 504
 information 91, 130
 information commands 129
 preshare key configuration 504
 proposal configuration 503
image
 downloading 599
 software, selecting 600
indirect (IP route type) 95
information
 VMware 159
Information Commands 31 to 198
Interface change stats 267
IP address
 ARP information 97
 configuring default gateway 446
IP forwarding
 configuration 453
 directed broadcasts 453
 information 92
IP Information 92, 128
IP interfaces 95
 active 519
 configuring address 444
 configuring VLANs 445
 information 92
 IP route tag 95
 priority increment value (ifs) for VRRP 521
IP network filter configuration 454
IP route
 manipulation 621
 tag parameters 95
IP Static Route commands 448
IP statistics 236
IPMC group information 121
IPsec
 configuration 505
 debugging 618
 dynamic policy configuration 506
 information 131
 Layer 3 configuration 479, 482
 manual policy configuration 507
 manual policy information 132
 traffic selector configuration 506
 transform set configuration 505
IPv6
 ACL configuration 375
 default gateway configuration 526
 interface information 126
 Neighbor Discovery
 cache configuration 528
 cache information 114
 cache information commands 114
 cache manipulation 626

- prefix configuration 528
- prefix information 115
- Path MTU
 - configuration 531
 - information 127
- re-mark configuration 378
- re-marking
 - configuration 390
 - in-profile configuration 391
 - out-of-profile configuration 391
- routing information 112, 113
- static route 527
- statistics 239
- IPv6 route 245
- ISCLI command modes 22
- ISCLI commands
 - basics 21 to ??

J

- Japan Class A electronic emission statement 660
- Japan Electronics and Information Technology Industries Association statement 661
- JEITA statement 661

K

- Korea Class A electronic emission statement 661

L

- LACP
 - add trunk to vNIC Group 561
 - admin key
 - add to Auto Monitor 430
 - add to Backup interface 436
 - add to Manual Monitor Control 432
 - add to Manual Monitor Port 431
 - add to Master interface 435
 - add to VM group 553
 - aggregator information 63
 - and trunk hash configuration 419
 - configuration 426
 - information 63
 - port configuration 427
 - port status information 63
 - remove trunk from vNIC group 561
 - statistics 223, 225
 - virtual (see vLAG) 423
- Layer 2 commands 57
- Layer 3 commands 91
- LDAP server configuration 319
- Lightweight Directory Access Protocol (see LDAP) 319
- Link Layer Discovery Protocol (see LLDP) 68
- link speed, configuring 353

- link status 31
 - command 148
 - duplex mode 31, 148
 - information 148
 - port speed 31, 148
- linkt (SNMP option) 325
- LLDP
 - cache manipulation commands 622
 - disable 414
 - enable 414
 - information 68
 - packets received 275
 - PDU's logged 280
 - remote device information 69
 - statistics 223, 227
 - TLV configuration 416
- local (IP route type) 95
- log, syslog messaging options 309
- LRN (port state) 80, 84, 85

M

- MAC address
 - ARP information 97
 - display 33
 - FDB information 60
 - FDB maintenance 613
 - multicast, configuring 412
 - switch management processor 46
- MAC address spoof prevention 556
- Maintenance commands 611
- Management Processor (see MP) 33
- manual style conventions 18
- martian
 - IP route tag (filtered) 96
 - IP route type (filtered out) 95
- MaxAge (STP information) 80, 83, 84, 85
- MD5
 - cryptographic authentication 463
 - key 466
 - key configuration, OSPF 470
- meter
 - ACL
 - configuring 387
 - current parameters 387
 - delete 387
 - port metering 383
 - configuring vNIC bandwidth 560
- Miscellaneous Debug commands 615
- MLD
 - configuration 491
 - configuration mode 24
 - global statistics 257
 - information 93, 122
 - mrouter information 123
 - statistics 256
- monitor port 392

MP

- display MAC address 33, 46
- packet statistics 272
- snap trace buffer 615
- statistics 271
- trace buffer 615

Mrouter information 121

MST

- configuration mode 24

MTU 531

multicast

- IP route type 95
- router information 121
- static MAC configuration 412

Multicast Listener Discovery protocol (see MLD) 24

multiple management VLANs 437

mxage (STP bridge option) 408

N

nbr change statistics 266

Neighbor Discovery

- cache configuration, IPv6 528
- cache manipulation, IPv6 626
- prefix 528

Neighbor Discovery prefix 528

New Zealand Class A statement 658

notes, important 654

notice 304

notices 651

NTP synchronization 321

O

OAM

- information 71
- statistics 202, 223, 229

online help 26

Operations commands 575

operations-level

- 802.1X port commands 577
- BGP commands 579
- port commands 576
- VRRP options 578

OSPF

- area index 463
- authentication key 466
- configuration 462
 - host entry 469
 - interface 466
 - MD5 key 470
 - route redistribution 470
 - summary range 465
 - virtual link 468
- cost of the selected path 466
- cost value of the host 469
- dead
 - declaring a silent router to be down 466
- health parameter of a hello packet 468
- export 470
- fixed routes 485
- general information 103
- hello, authentication parameter of a hello packet 468
- host routes 462
- information
 - commands 102
 - database 105
 - general 103
 - interface 104
 - interface loopback 104
 - route 104
- interface 462
- link state database 463, 471
- Not-So-Stubby Area 464, 474
- priority value of the switch interface 467
- range number 462
- SPF, shortest path first 463
- statistics
 - commands 259
 - delete 234
 - global 260
- stub area 464, 474
- transit area 464, 474
- transit delay 467
- type 464
- virtual link 462
- virtual neighbor, router ID 468

ospf (IP route tag) 95

OSPFv3

- configuration 471
 - area index 473
 - interface 477
 - virtual link 481

dead

- declaring a silent router to be down 477
- health parameter of a hello packet 481

hello, authentication parameter of a hello packet 481

information

- commands 107
- database 110
- dump of 108
- interface 109
- route 109

statistics

- commands 264
- global 265

type 474

virtual neighbor, router ID 481

P

parameters

- tag 95
- type 95

particulate contamination 656

- passwords 29
 - administrator account 29
 - changing 339
 - default 29
 - user account 29
- Path MTU 531
- path-cost (STP port option) 410
- People's Republic of China Class A electronic emission statement 661
- PFC configuration 537
- PIM mode 523
- ping 26
- poisoned reverse, as used with split horizon 460
- port
 - ACL configuration 356
 - configuration 347
 - disabling temporarily 353
 - Error Disable and Recovery 352
 - failover manual monitor configuration 431
 - FIPS configuration 546
 - HTTP 336
 - IGMP filtering configuration 497
 - information 150
 - LACP
 - configuration 427
 - status information 63
 - link configuration 353
 - link speed, configuring 353
 - management, configuring 359
 - membership of the VLAN 58, 90
 - mirroring, configuring 392
 - number 148
 - priority 80, 86
 - reference 61
 - speed 31, 148
 - state information 61
 - telnet 336
 - TFTP 336
 - trunking
 - configuration 418
 - description 418
 - VLAN ID 31, 150
- port ECN configuration 357
- port WRED configuration 357
- preemption
 - assuming VRRP master routing authority 516
 - hot links trigger, configuring 434
 - virtual router, configuring 514
 - VRRP, configuring 517
- Priority Flow Control 537
- Priority Groups
 - 802.1p mapping to 187
 - configuration 535
 - information 183
- Private VLAN 441
- Protected Mode 580
- Protocol-based VLAN (see PVLAN) 439
- ptcfg (TFTP save command) 573

- PVID (port VLAN ID) 31, 150
- PVLAN
 - configuration 438, 439
 - current parameters 440

Q

- QoS
 - ACL parameters 356
 - configuration 356, 363
 - control plane protection 365
 - DSCP configuration 364
 - ECN information 141
 - information 139
 - transmit-queue information 140
 - WRED information 141

R

- RADIUS server
 - 802.1X response timeout, setting 396
 - and 802.1X configuration 395
 - configuration commands 313
 - current parameters 314
 - packets logged 281
 - primary 313
 - shared secret 313
- receive flow control 353, 359
- reference ports 61
- re-mark
 - ACL
 - configuration 384, 388
 - parameters 143
 - DSCP
 - configuration 347
 - global configuration 364
 - in-profile
 - configuration 389
 - settings 384
 - IPv6 ACL 378
 - configuration 390
 - in-profile configuration 391
 - out-of-profile configuration 391
 - parameters 391
 - out-of-profile
 - configuration 389
 - settings 384
 - TOS precedence, configuring 384
 - user update priority 384
- Remote Monitoring (RMON) 547
- Rendezvous Point (RP) 523
- retries
 - health checks for default gateway 446
 - radius server 313
- RIP
 - configuration 459
 - BGP redistribution 490

- route redistribution 461
- configuration mode 24, 459
- information 111
 - interface 111
 - routes 111
 - user configuration 92, 111
- IPv4 route statistics 244
- packets logged 281
- poisoned reverse 460
- split horizon 460
- statistics 233, 234, 270
- version 461
- rip (IP route tag) 95
- RMON
 - configuration 547
 - information 144
- route statistics
 - IPv4 244
 - IPv6 245
- router hops 487
- Routing Information Protocol (see RIP) 24
- RSTP information 82
- Russia Class A electronic emission statement 661
- Rx/Tx statistics 260, 265

S

- save (global command) 301
- secret, RADIUS server 313
- Secure Shell 311
- service and support
 - before you call 649
- shortcuts (CLI) 28
- SLP
 - configuration 571
 - information 169
 - statistics 296
- snap trace buffer 615
- SNMP
 - configuration
 - commands 324
 - current 326
 - link traps 325
 - location 325
 - read community string 325
 - source interface for traps 325
 - system authentication trap 324
 - system contact 324
 - timeout 325
 - trap host server 324
 - version 327
 - write community string 325
 - options 324
 - statistics 290
- SNMPv3
 - configuration
 - access rights 326
 - commands 326

- community table 326, 332
 - destination 327
 - display 327
 - group 326, 331
 - MIB views 327
 - Notify table 335
 - parameters 327
 - target address table 333
 - target parameters 334
 - user access 330
 - user security 328
 - USM 327, 328
 - version 327
 - view 329
- information 44
 - access 39
 - commands 36
 - community table 40
 - group 40
 - Notify table 43
 - target address table 41
 - target parameters table 42
 - USM user table 37
 - View Table 38
- software
 - image 599
 - image file and version 33, 46
- SPAR. *See* Switch Partition.
- split horizon 460
- Stacking
 - boot options 590
 - configuration 360
- state (STP information) 80, 83, 86
- static (IP route tag) 95
- static multicast MAC 412
- static route
 - add 448
 - delete 448
 - IPv6 527

- statistics
 - 245
 - 802.1X 203
 - ACL 287
 - ARP 246
 - bridging 207
 - commands 199 to 297
 - CPU 284
 - DNS 248
 - ethernet 208
 - FCoE 289
 - hot links 226
 - ICMP 249
 - IGMP 254
 - interface 211
 - interface protocol 214
 - IPv4 236
 - IPv4 route 244
 - IPv6 239
 - LACP 225
 - Layer 2 223
 - Layer 3 232
 - link 214
 - LLDP 227
 - logged packet 279
 - management processor 271
 - MLD 256
 - NTP 294
 - OAM 229
 - OSPF 259
 - OSPFv3 264
 - port 201
 - RIP 270
 - RMON 215
 - SNMP 290
 - TCP 251, 283
 - trunk group 222
 - UDP 253, 284
 - VMAP 288
 - VRRP 268
- STG
 - information 57
- STP
 - and trunk groups 88
 - bridge parameters 409
 - bridge priority 80, 84
 - configuration 400
 - information 402
 - path-cost option 410
 - root bridge 80, 84, 409
 - RSTP/PVRST 406
 - switch reset effect 603
- switch
 - name and location 33, 46
 - resetting 603
- Switch Partition (SPAR)
 - configuration 569

- Switch Partition (SPAR)
 - configuration 25
- system
 - date and time 33, 46
 - information 33, 46
- System Error Disable and Recovery 306

T

- tab completion (CLI) 28
- TACACS+ 315
- Taiwan Class A electronic emission statement 661
- TCP statistics 251, 283
- technical assistance 649
- telnet
 - configuring switches using 572
 - controlling access 336
 - port 336
 - radius server 313, 314, 319
- text conventions 18
- TFTP 599
 - port 336
 - PUT and GET commands 573
 - server 573
- timeout
 - idle connection 30
 - radius server 314
- timers kickoff 263, 267
- TLV 416
- trace buffer 615
- traceroute 27
- trademarks 653
- transceiver status 151, 152
- transmit flow control 359
- Trunk group information 88
- trunk hash algorithm 419
- type of area
 - OSPF 464
 - OSPFv3 474
- type parameters 95
- typographic conventions, manual 18

U

- UCB statistics 284
- UDLD
 - configuration 354
 - information 70
 - statistics 274, 279
- UDP statistics 253
- UFP. *See* Unified Fabric Port.
- UFP. *See* Universal Fabric Port.
- Unified Fabric Port (UFP)
 - configuration 563
- United States FCC Class A notice 658
- Universal Fabric Port (UFP)
 - configuration 25
- unknown (UNK) port state 61

- upgrade
 - switch software 599
- user access control configuration 339
- user account 29

V

- Virtual Link Aggregation Control protocol (see vLAG) 423
- virtual router
 - description 514
 - increasing priority level of 516
 - priority increment values (vrs) for VRRP 521
 - tracking criteria 516
- virtual router group
 - configuration 517
 - priority tracking 519
- Virtual Router Redundancy Protocol (see VRRP) 24
- virtualization
 - configuration 551
 - information 153
- Virtualization Configuration 551
- vLAG
 - configuration 423
 - information 424
- VLAN
 - active port 519
 - ARP entry information 97
 - configuration 437
 - information 90
 - name 58, 90
 - Number 90
 - port membership 58, 90
 - setting access VLAN 350
 - setting default number (PVID) 350
 - tagging 150
 - port configuration 349
 - port restrictions 438
 - port use of 31
 - Type 90
- VLAN Map (see VMAP) 381
- VM
 - bandwidth management 552
 - Distributed Virtual Switch 584
 - Edge Virtual Bridge configuration 566
 - group configuration 553
 - information 157
 - policy configuration 552
 - profile configuration 557
 - VMready configuration 559
 - VMware
 - configuration 558
 - dvSwitch operations 584, 585
 - information 159
 - operations 582
- VM Check
 - configuration 554, 556, 558

- VMAP
 - configuration 381
 - definition 381
 - information 89, 142
 - statistics 288
 - VLAN statistics 287
 - VMAP statistics 287
- VMware
 - configuration 558
 - distributed port group operations 585
 - dvSwitch administration 584
 - information 159
 - operations 582
- VNIC
 - configuration 560
 - group configuration 560
 - information 167
- VRRP
 - authentication parameters for IP interfaces 520
 - configuration 512
 - configuration mode 24
 - information 124
 - interface configuration 520
 - master advertisements 515
 - master advertisements, time interval 517
 - operations-level options 578
 - priority tracking options 486, 516
 - statistics 268
 - tracking configuration 521
- VSI
 - configuration mode 24

W

- watchdog timer 611
- weight
 - COS queue 139, 363
 - COS scheduling 140
 - route map 456
 - setting virtual router priority values 521
 - VRRP priority 521
- Weighted Random Early Detection (WRED) 367
- WRED (Weighted Random Early Detection) 367

Lenovo[™]

Part Number: 00MY385

Printed in USA

(IP) P/N: 00MY385